


ALTERNATOR INTERCONNECTS

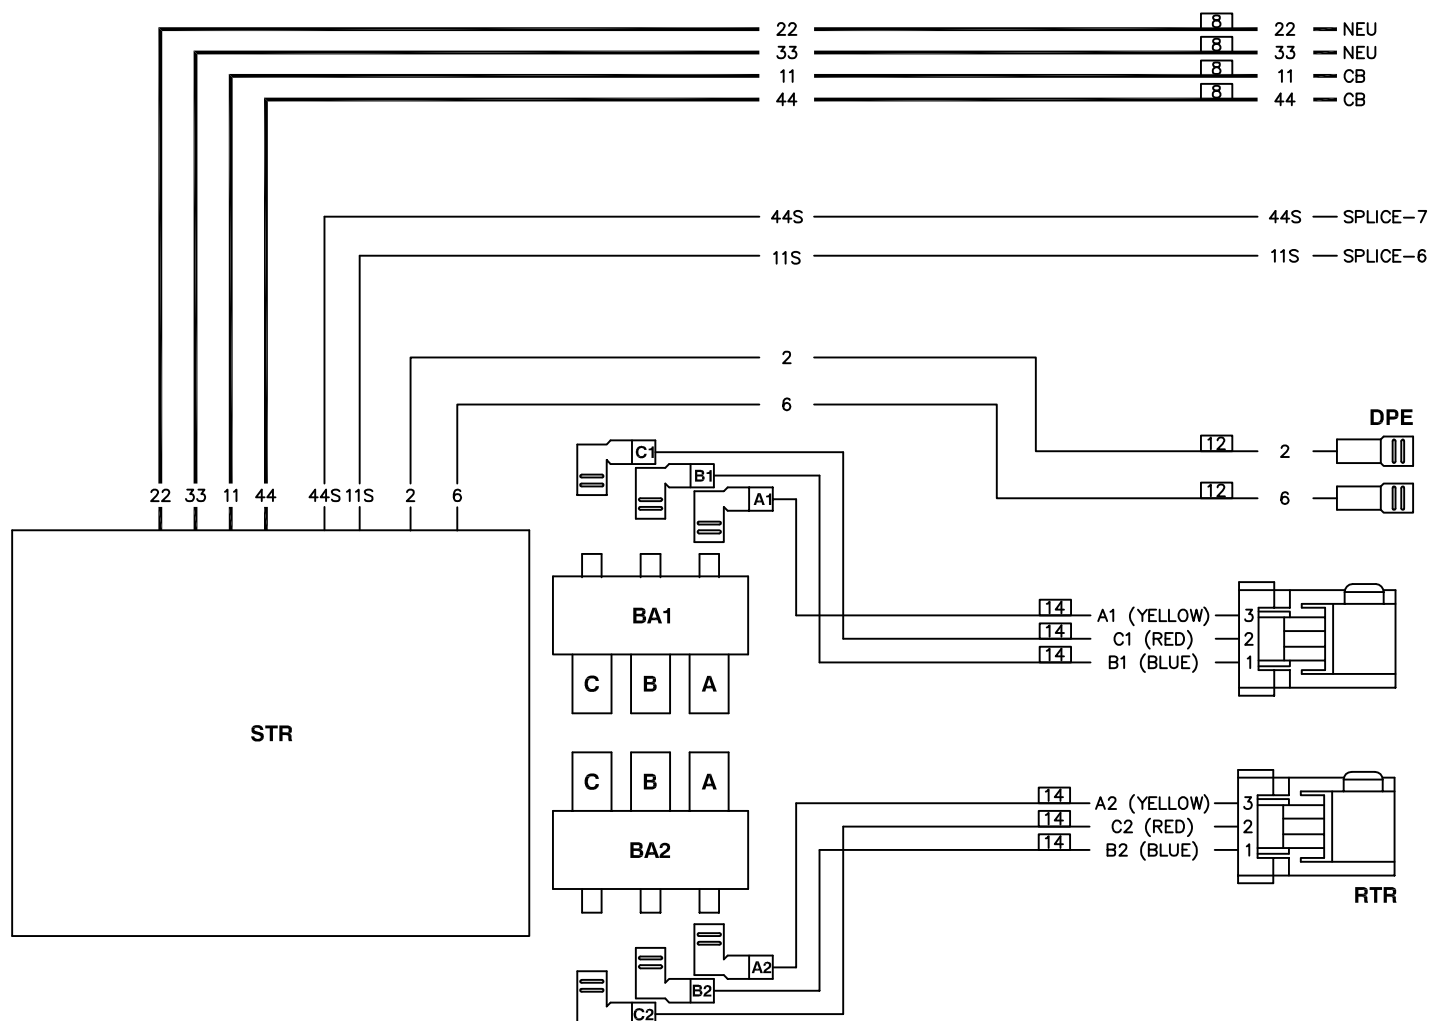


LEGEND


AVR — AUTOMATIC VOLTAGE REGULATOR	MAG — MAGNETO
BA_ — BRUSH ASSEMBLY	NEU — NEUTRAL
BCH — BATTERY CHARGER	P_ — VSCF AVR CONNECTIONS
CB — CIRCUIT BREAKER	PS — POWER SUPPLY
CT_ — CURRENT TRANSFORMER	R — RESISTOR
DPE — DISPLACED PHASE EXCITATION	RTR — ROTOR
FAN1 — AC FAN	SC — STARTER CONTACTOR
FAN2 — DC FAN	SCR — STARTER CONTROL RELAY
FS — FUEL SOLENOID	SHLD — SHIELD
GND — GROUND	SM — STARTER MOTOR
HOT — HIGH OIL TEMPERATURE SWITCH	SP_ — SPARK PLUG
IM_ — IGNITION MODULE	STR — STATOR
J_ — MAIN CONTROLLER CONNECTIONS	TB_ — TERMINAL BLOCK
LED — LED BOARD	TWS — TWO WIRE START
LOP — LOW OIL PRESSURE SWITCH	

NOTE: ALL WIRES 18 AWG
300V UL LISTED UNLESS
SHOWN OTHERWISE.


12 — AWG SIZE

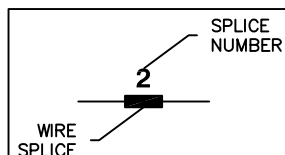


VSCF AVR INTERCONNECTS

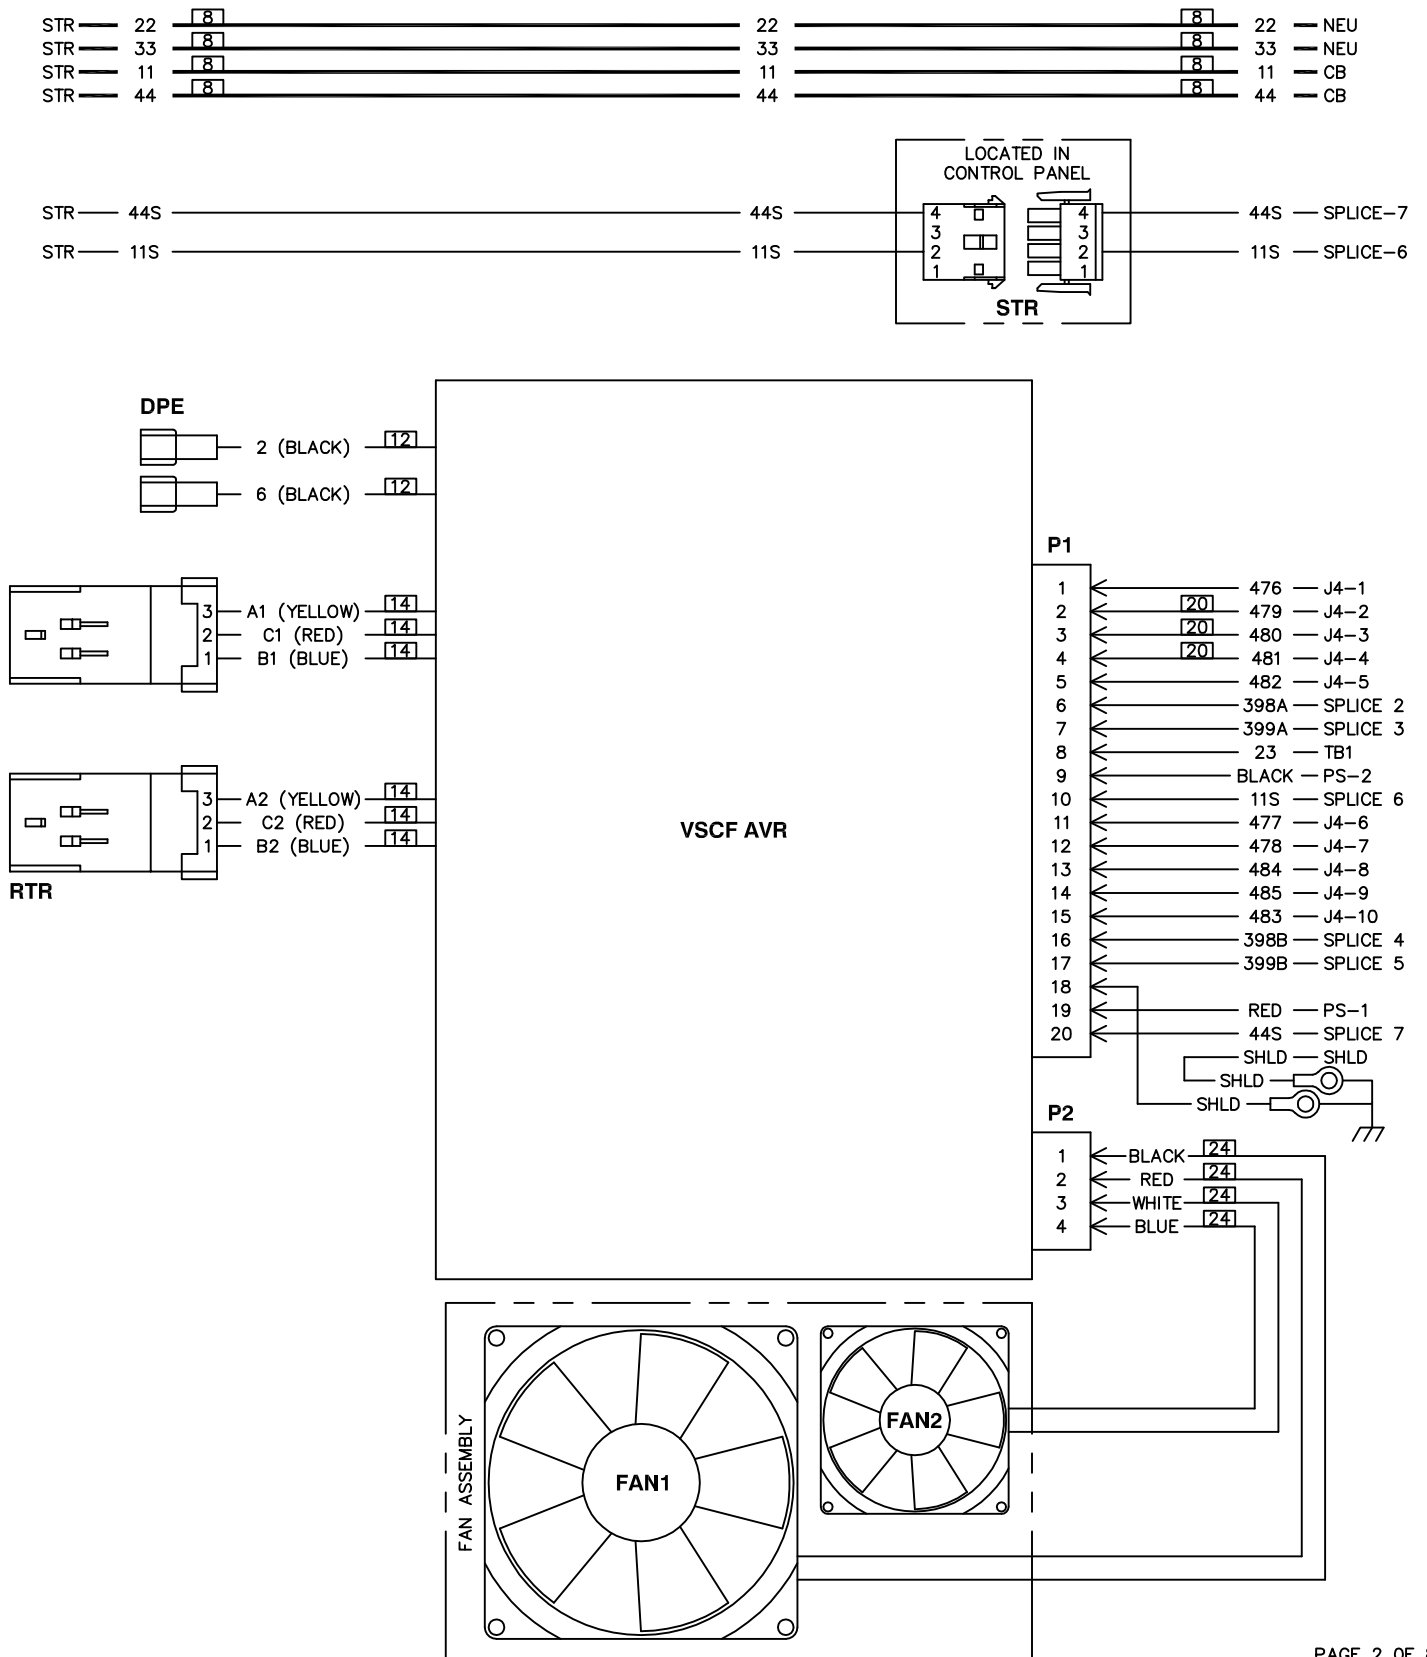


COMPONENTS LOCATED ON ENGINE

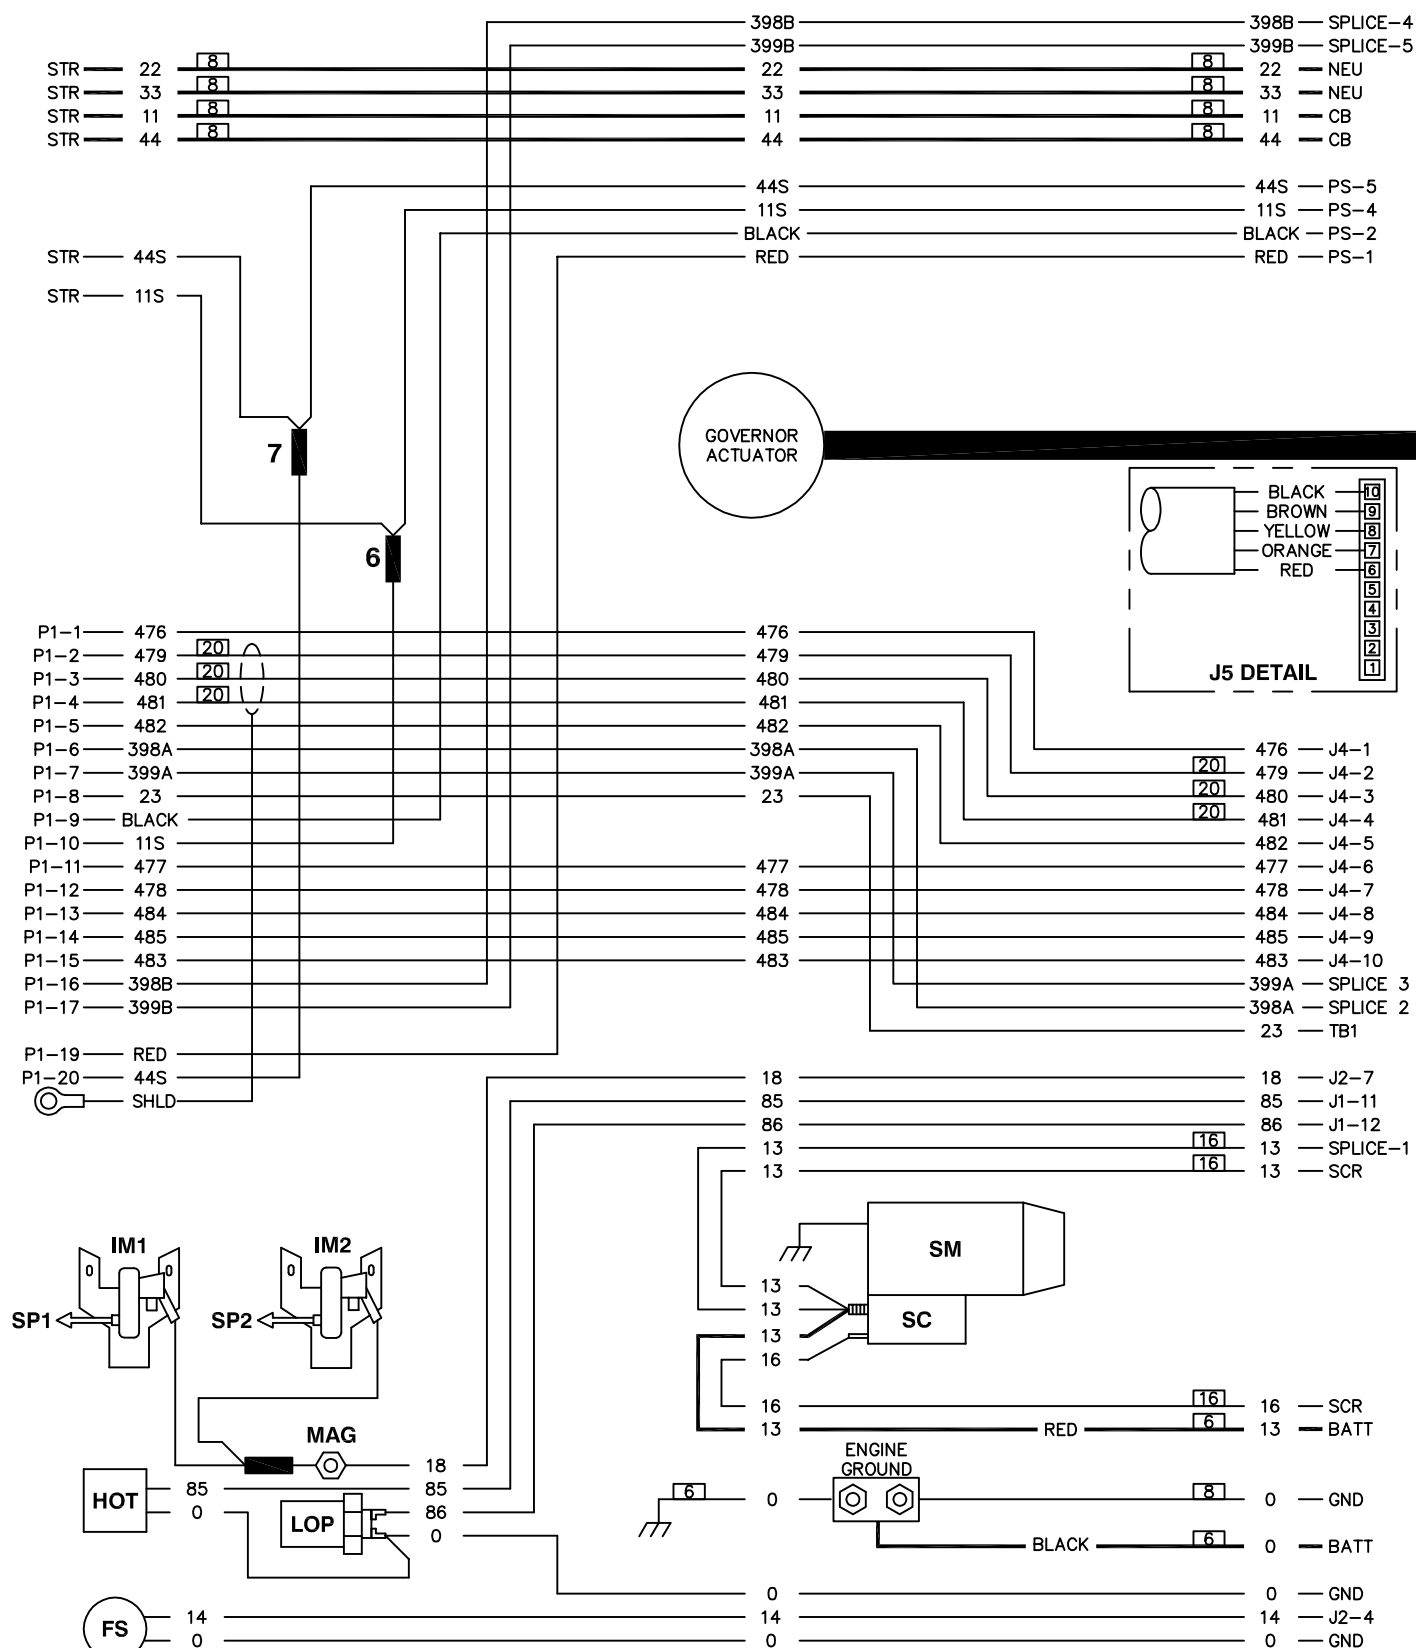

COMPONENTS LOCATED IN CONTROL PANEL

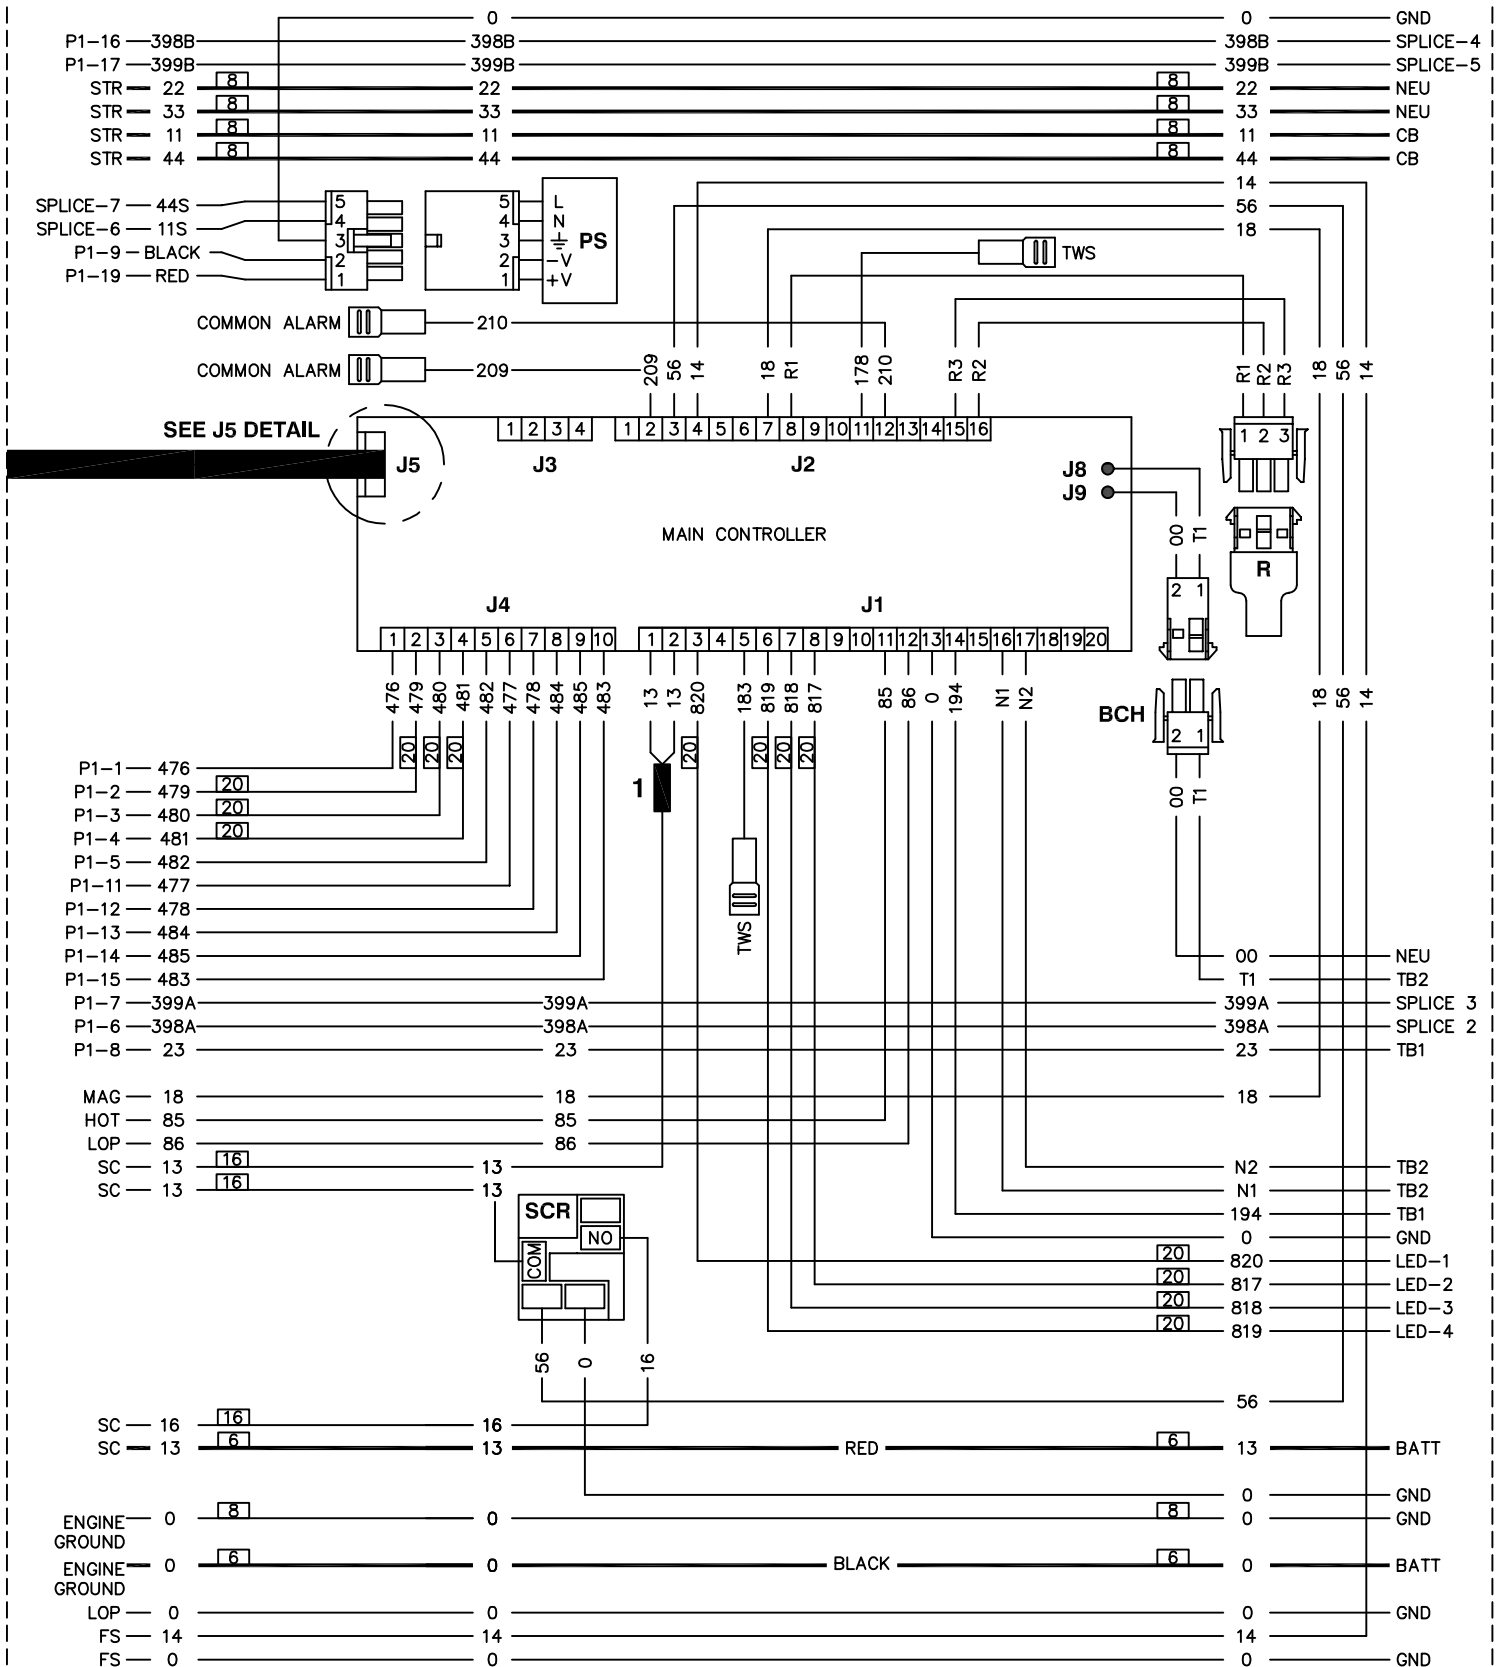

 

PAGE LEFT INTENTIONALLY BLANK

