
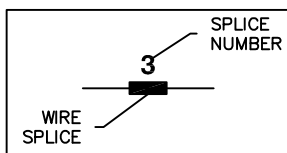
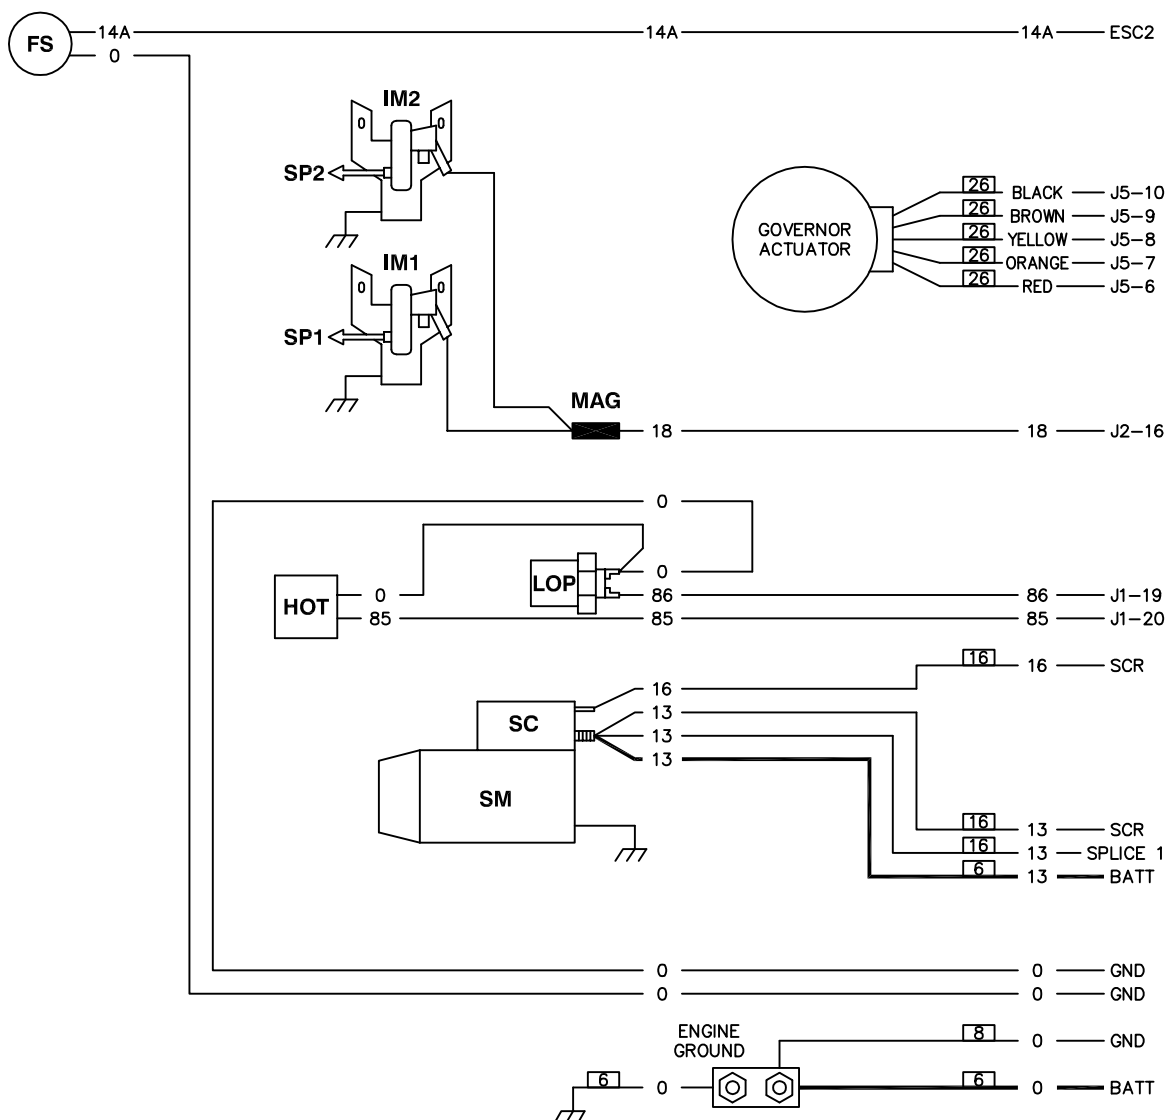


COMPONENTS LOCATED ON ENGINE

LEGEND:


BA	- BRUSH ASSEMBLY
BATT	- BATTERY
BCH	- BATTERY CHARGER
CB	- CIRCUIT BREAKER, MAIN OUTPUT
CT	- CURRENT TRANSFORMER
ESC	- EMERGENCY STOP CONTACT
FL1	- LINE FILTER, DPE
FL2	- LINE FILTER, BATTERY CHARGER
FS	- FUEL SOLENOID
GND	- GROUND
HOT	- HIGH OIL TEMP SWITCH
IM	- IGNITION MODULE
J	- MAIN CONTROLLER CONNECTIONS
J3F	- LINE FILTER BEFORE J3
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
MAG	- MAGNETO
N	- ALTERNATOR WINDING JUNCTION
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP	- SPARK PLUG
STR	- STATOR
TB	- TERMINAL BLOCK
WM	- WIRELESS MODULE

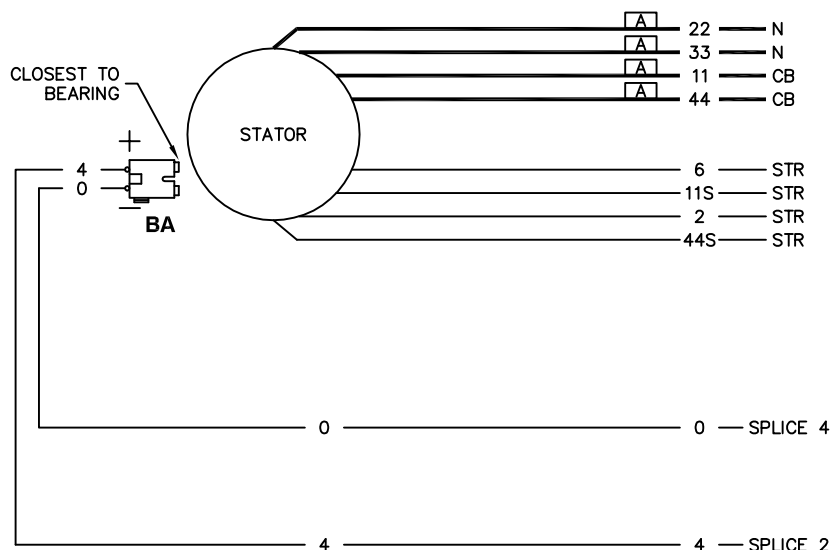










NOTE: ALL WIRES 18 AWG
300V UL LISTED UNLESS
SHOWN OTHERWISE.

	AWG SIZE	
[12]		
OR		
	AWG CHART LETTER REF.	
[XX]		
GENERATOR SIZE	AWG "A"	AWG "B"
8-10KVA	8	8
13KVA	8	4

      COMPONENTS LOCATED IN CONTROL PANEL

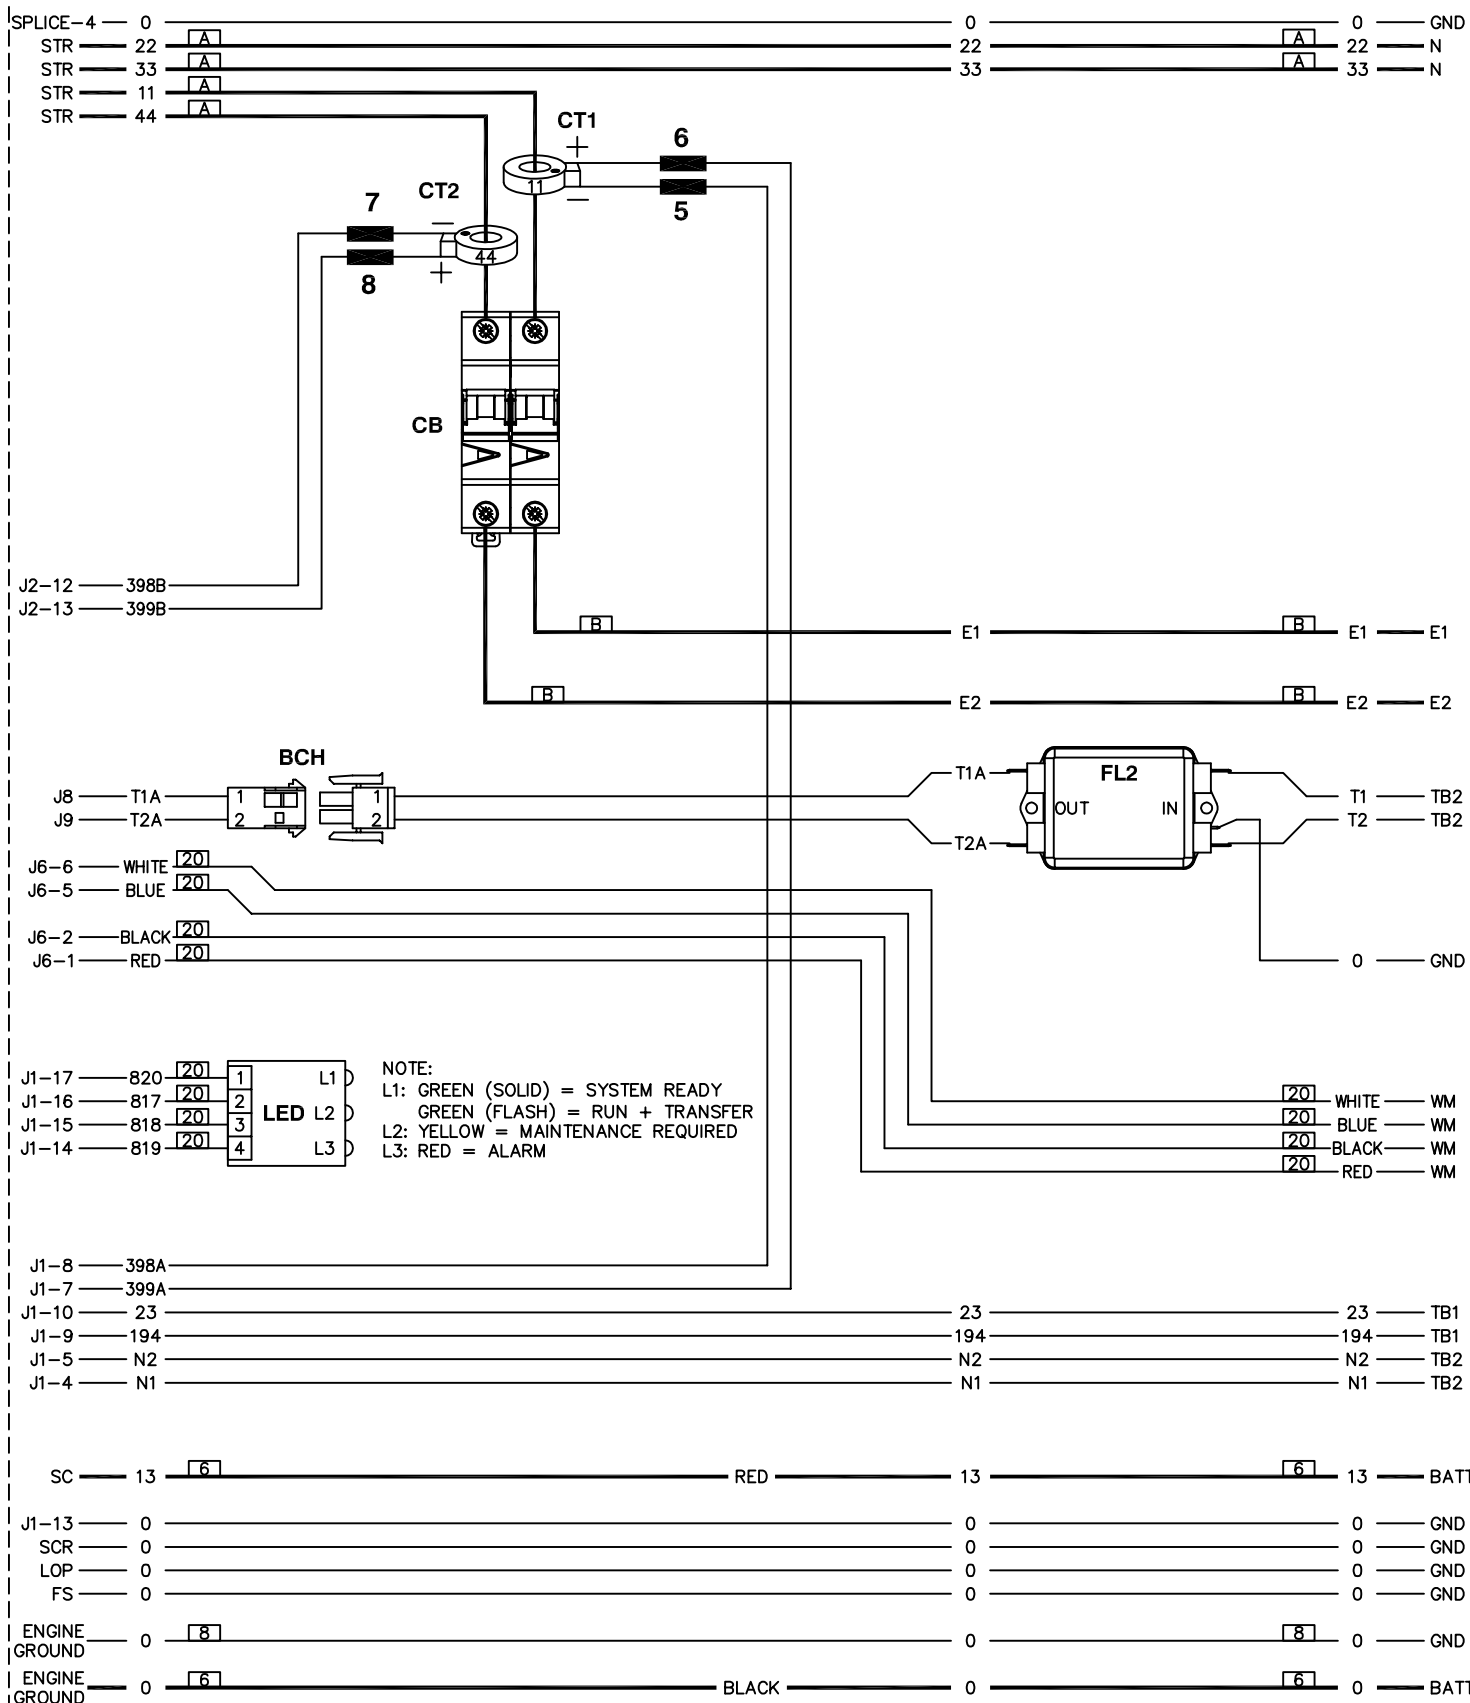

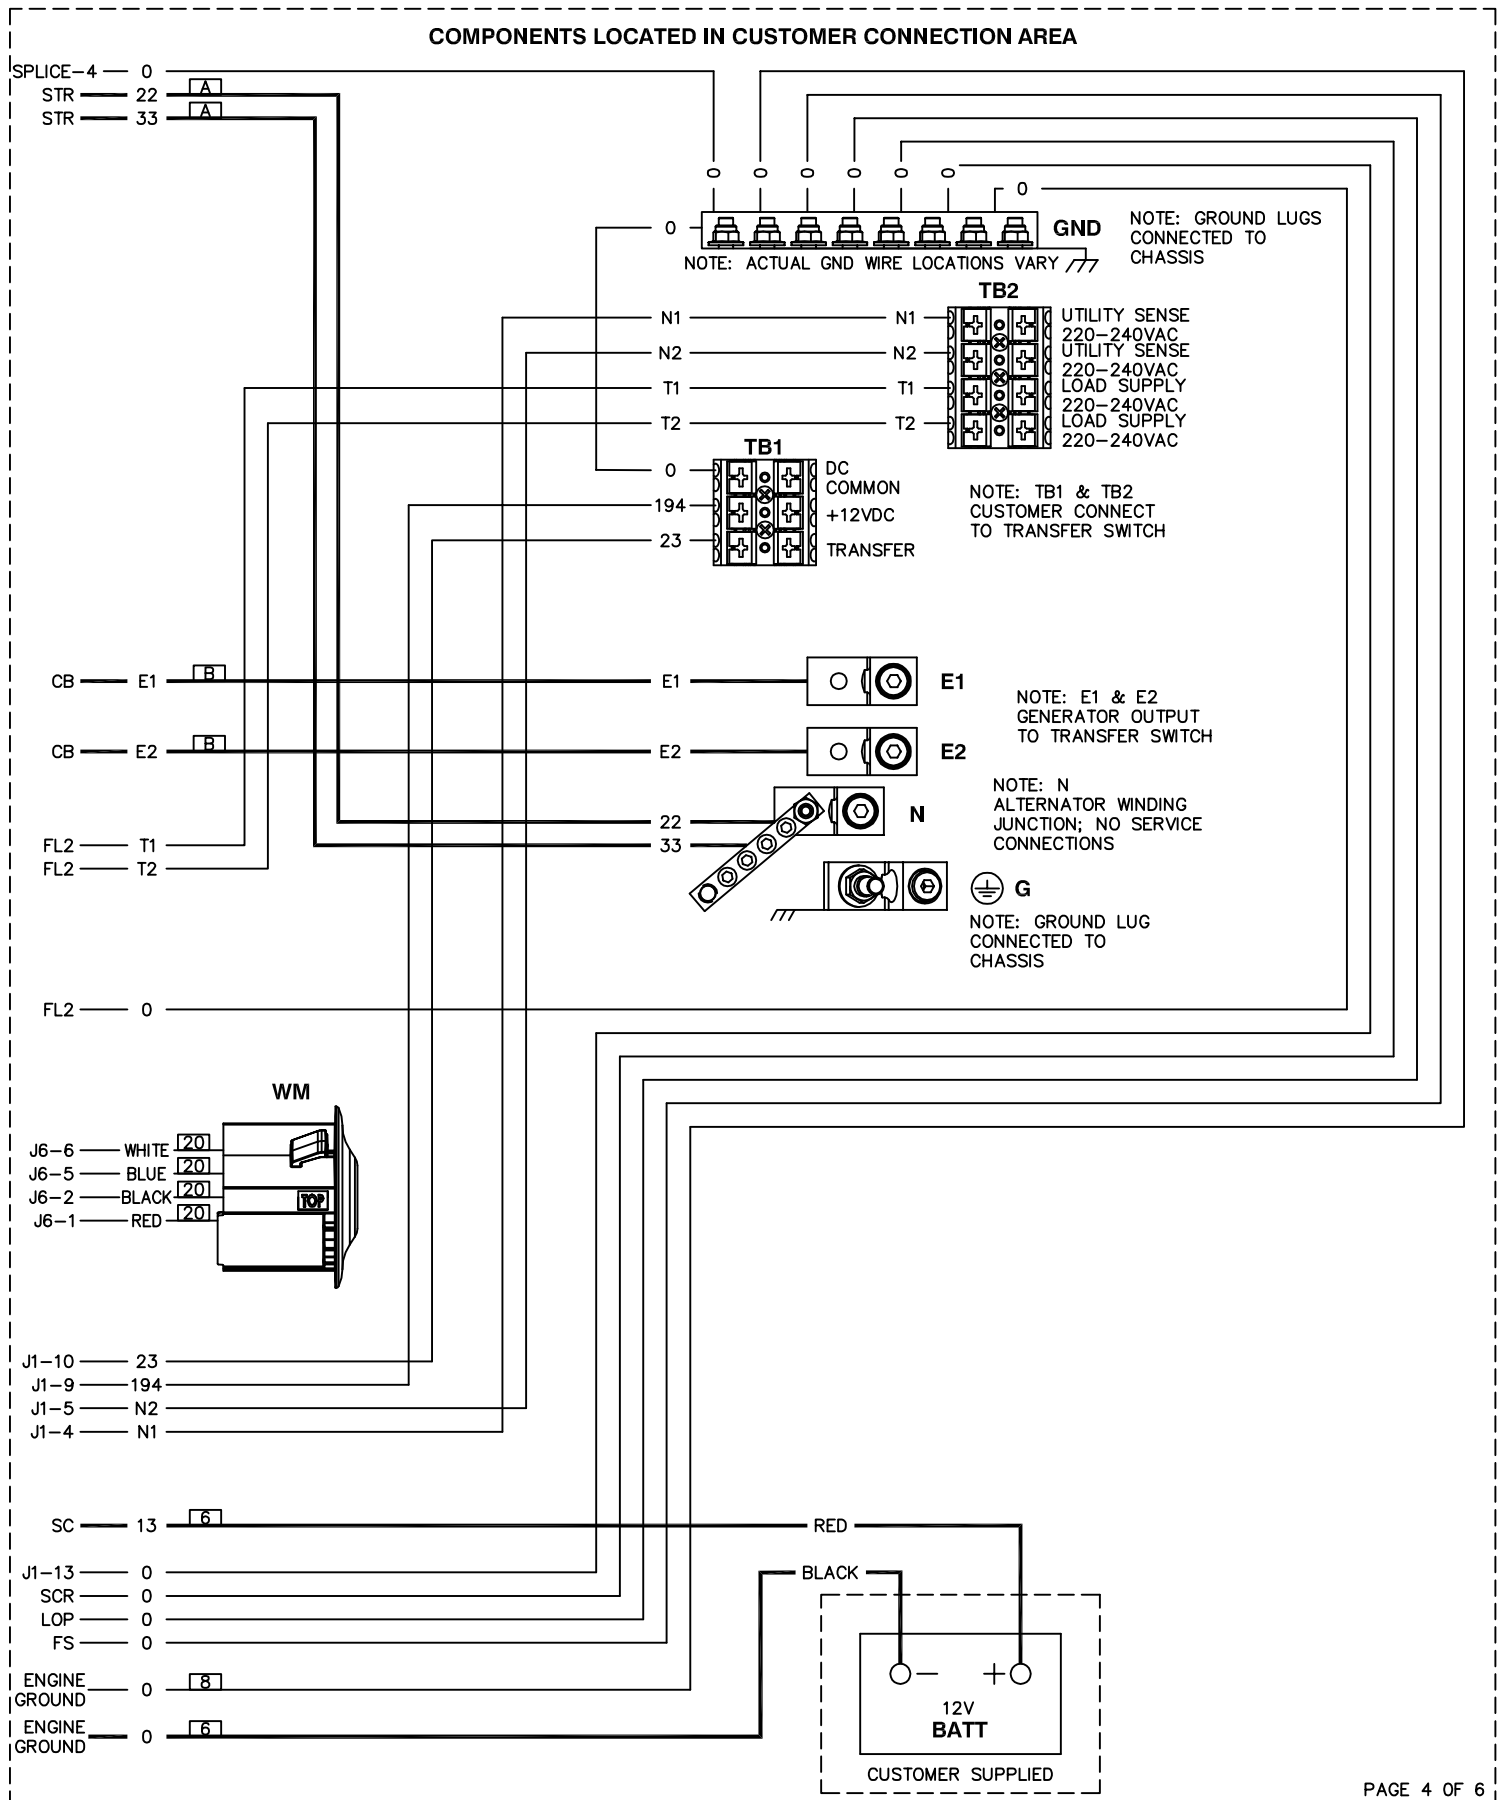

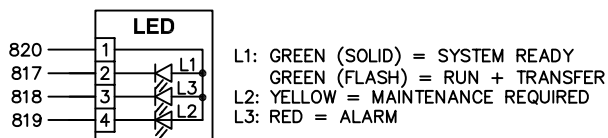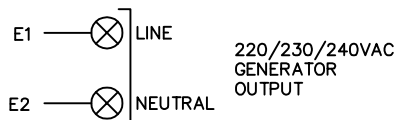

LEGEND:

BA	- BRUSH ASSEMBLY
CB	- CIRCUIT BREAKER, MAIN OUTPUT
CT_	- CURRENT TRANSFORMER
ESC_	- EMERGENCY STOP CONTACT
FL1	- LINE FILTER, DPE
FL2	- LINE FILTER, BATTERY CHARGER
FS	- FUEL SOLENOID
HOT	- HIGH OIL TEMP SWITCH
IM_	- IGNITION MODULE
J_	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP_	- SPARK PLUG
WM	- WIRELESS MODULE