
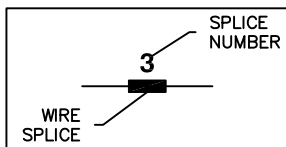
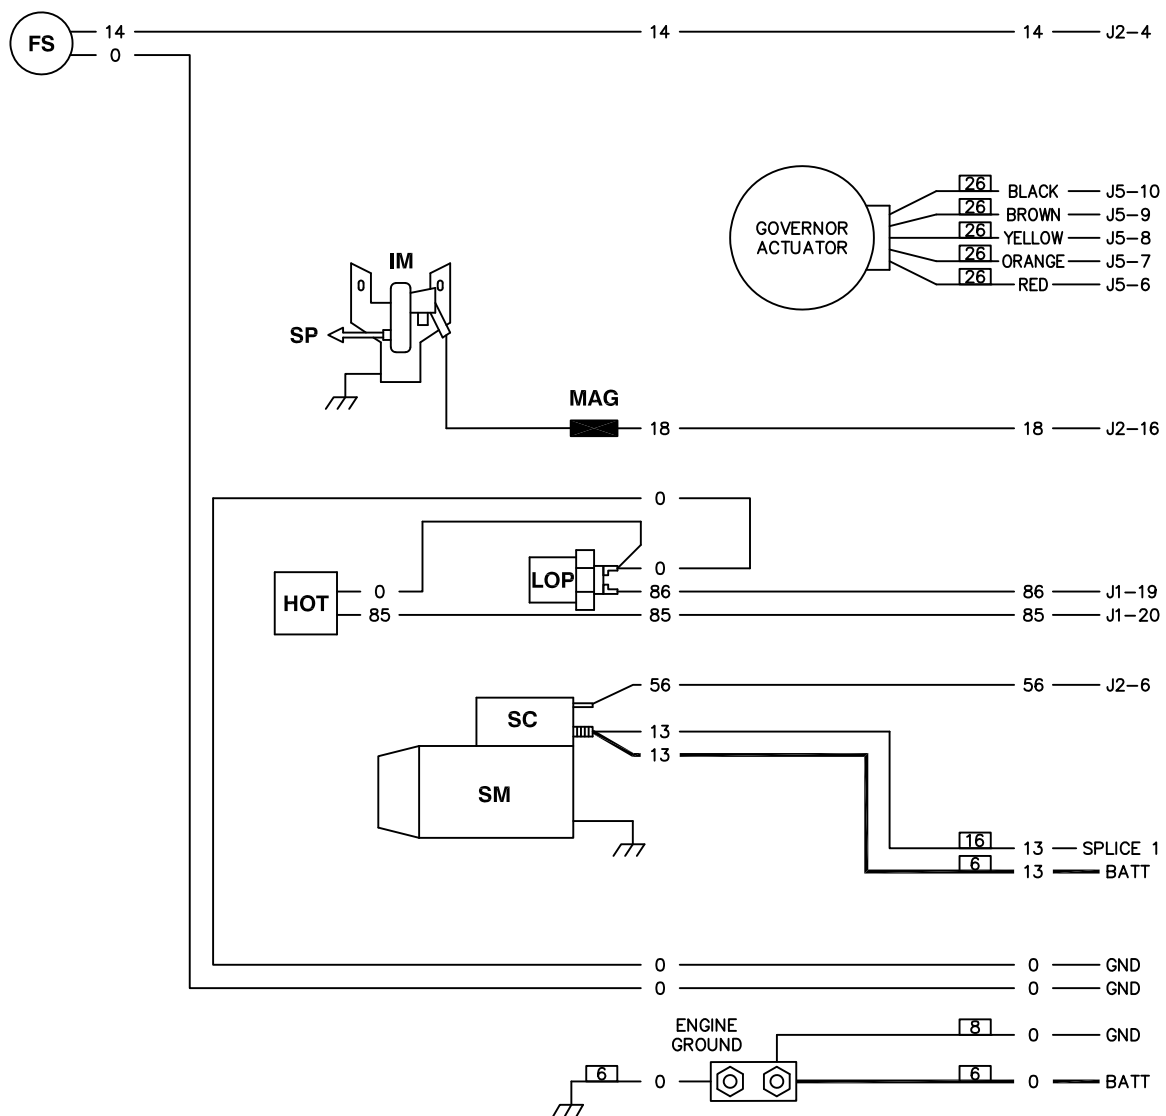


COMPONENTS LOCATED ON ENGINE

LEGEND:


AS	- AUXILIARY SHUTDOWN SWITCH
BA	- BRUSH ASSEMBLY
BATT	- BATTERY
BCH	- BATTERY CHARGER
CB	- CIRCUIT BREAKER, MAIN OUTPUT
CT	- CURRENT TRANSFORMER
FS	- FUEL SOLENOID
GND	- GROUND
HOT	- HIGH OIL TEMP SWITCH
IM	- IGNITION MODULE
J	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
MAG	- MAGNETO
NEU	- NEUTRAL
R	- RESISTOR
SC	- STARTER CONTACTOR
SM	- STARTER MOTOR
SP	- SPARK PLUG
STR	- STATOR
TB	- TERMINAL BLOCK
WM	- WIRELESS MODULE

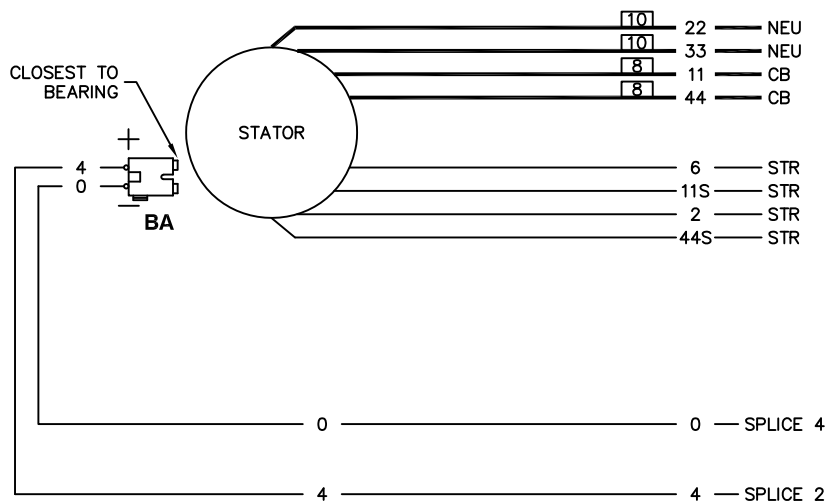


NOTE: ALL WIRES 18 AWG
300V UL LISTED UNLESS
SHOWN OTHERWISE.

AWG SIZE
12


COMPONENTS LOCATED IN CONTROL PANEL






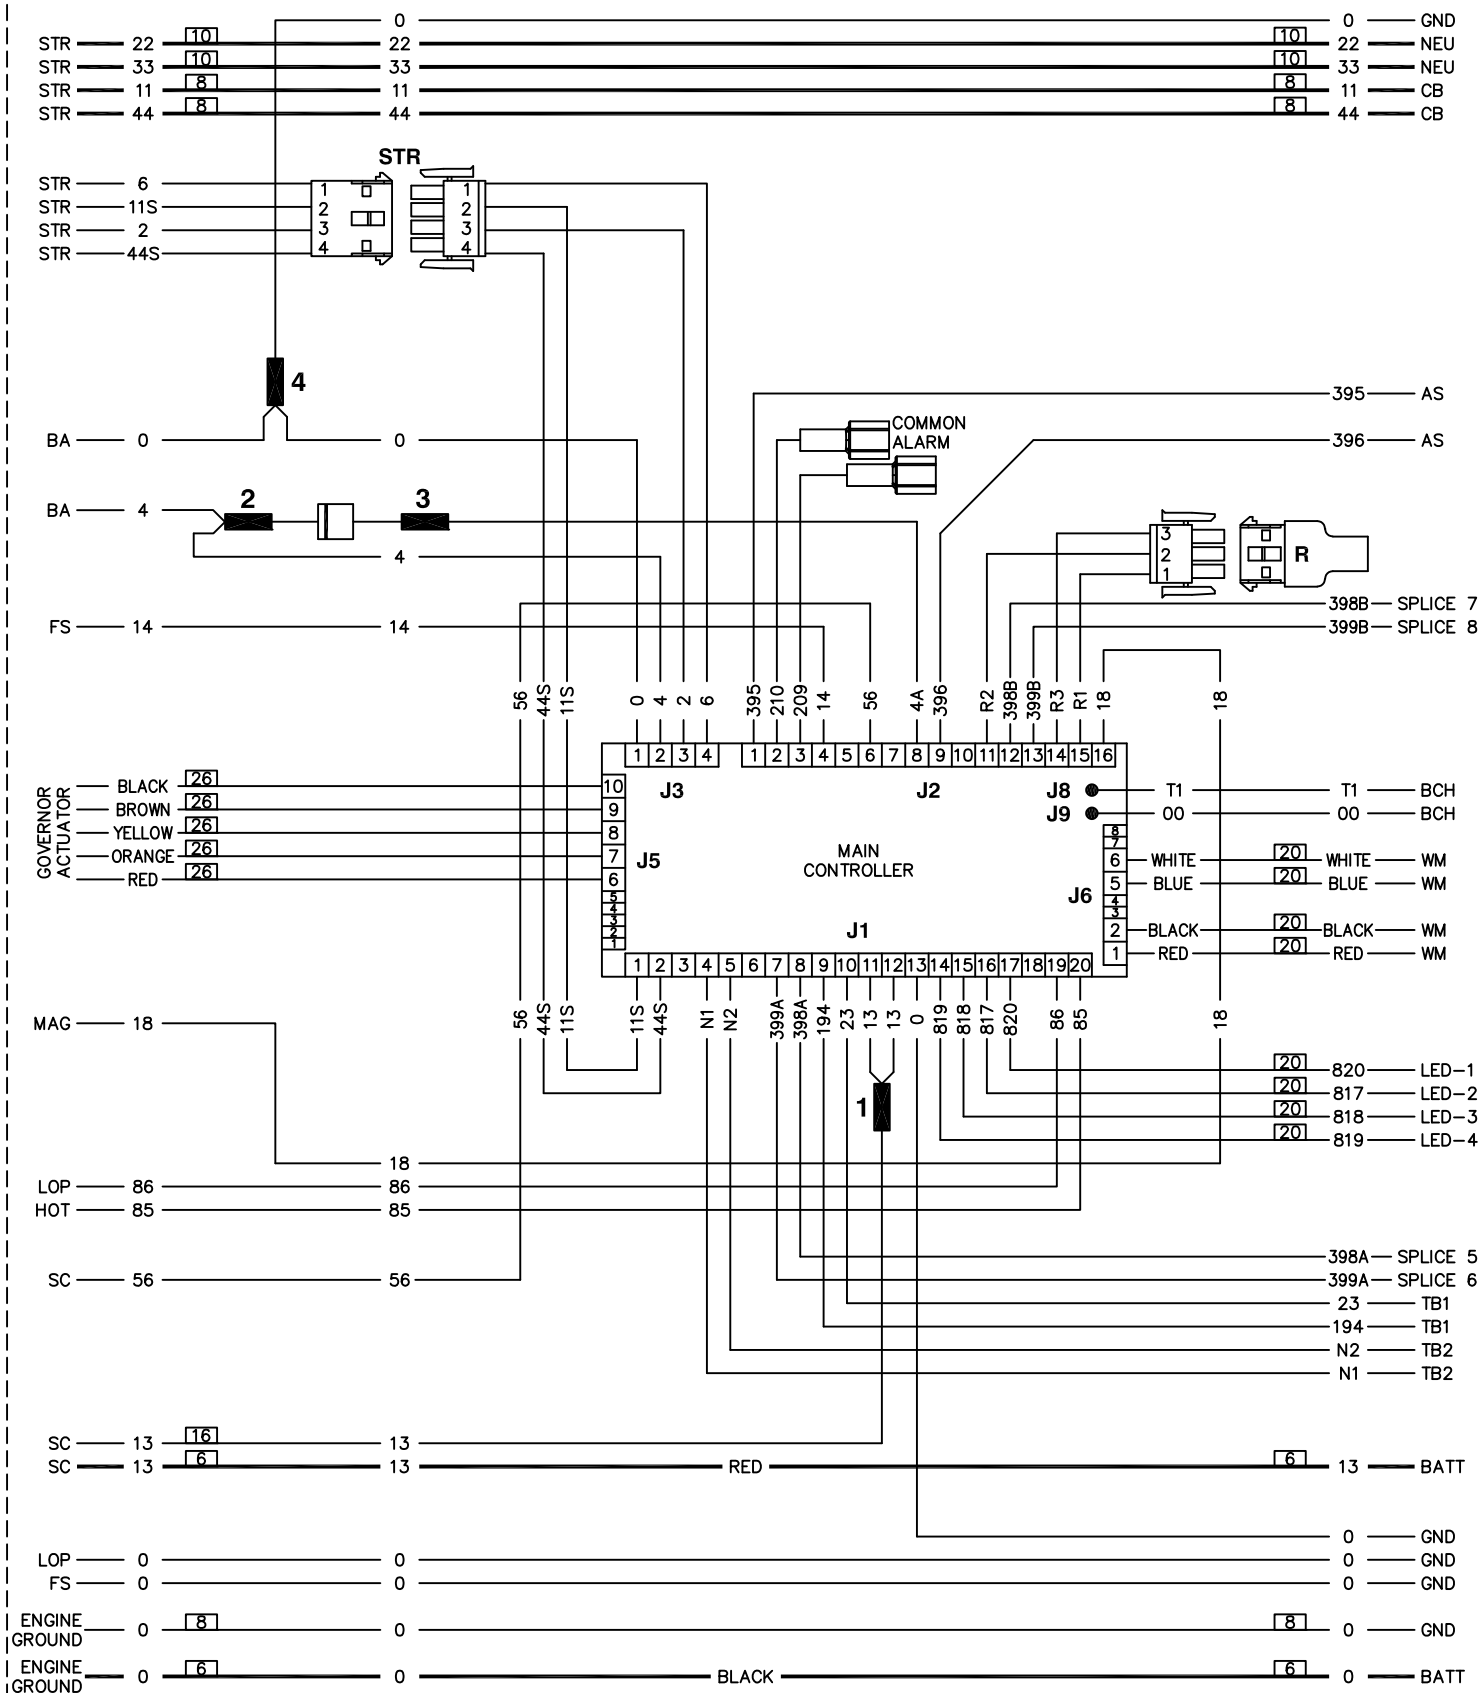


COMPONENTS LOCATED IN CONTROL PANEL

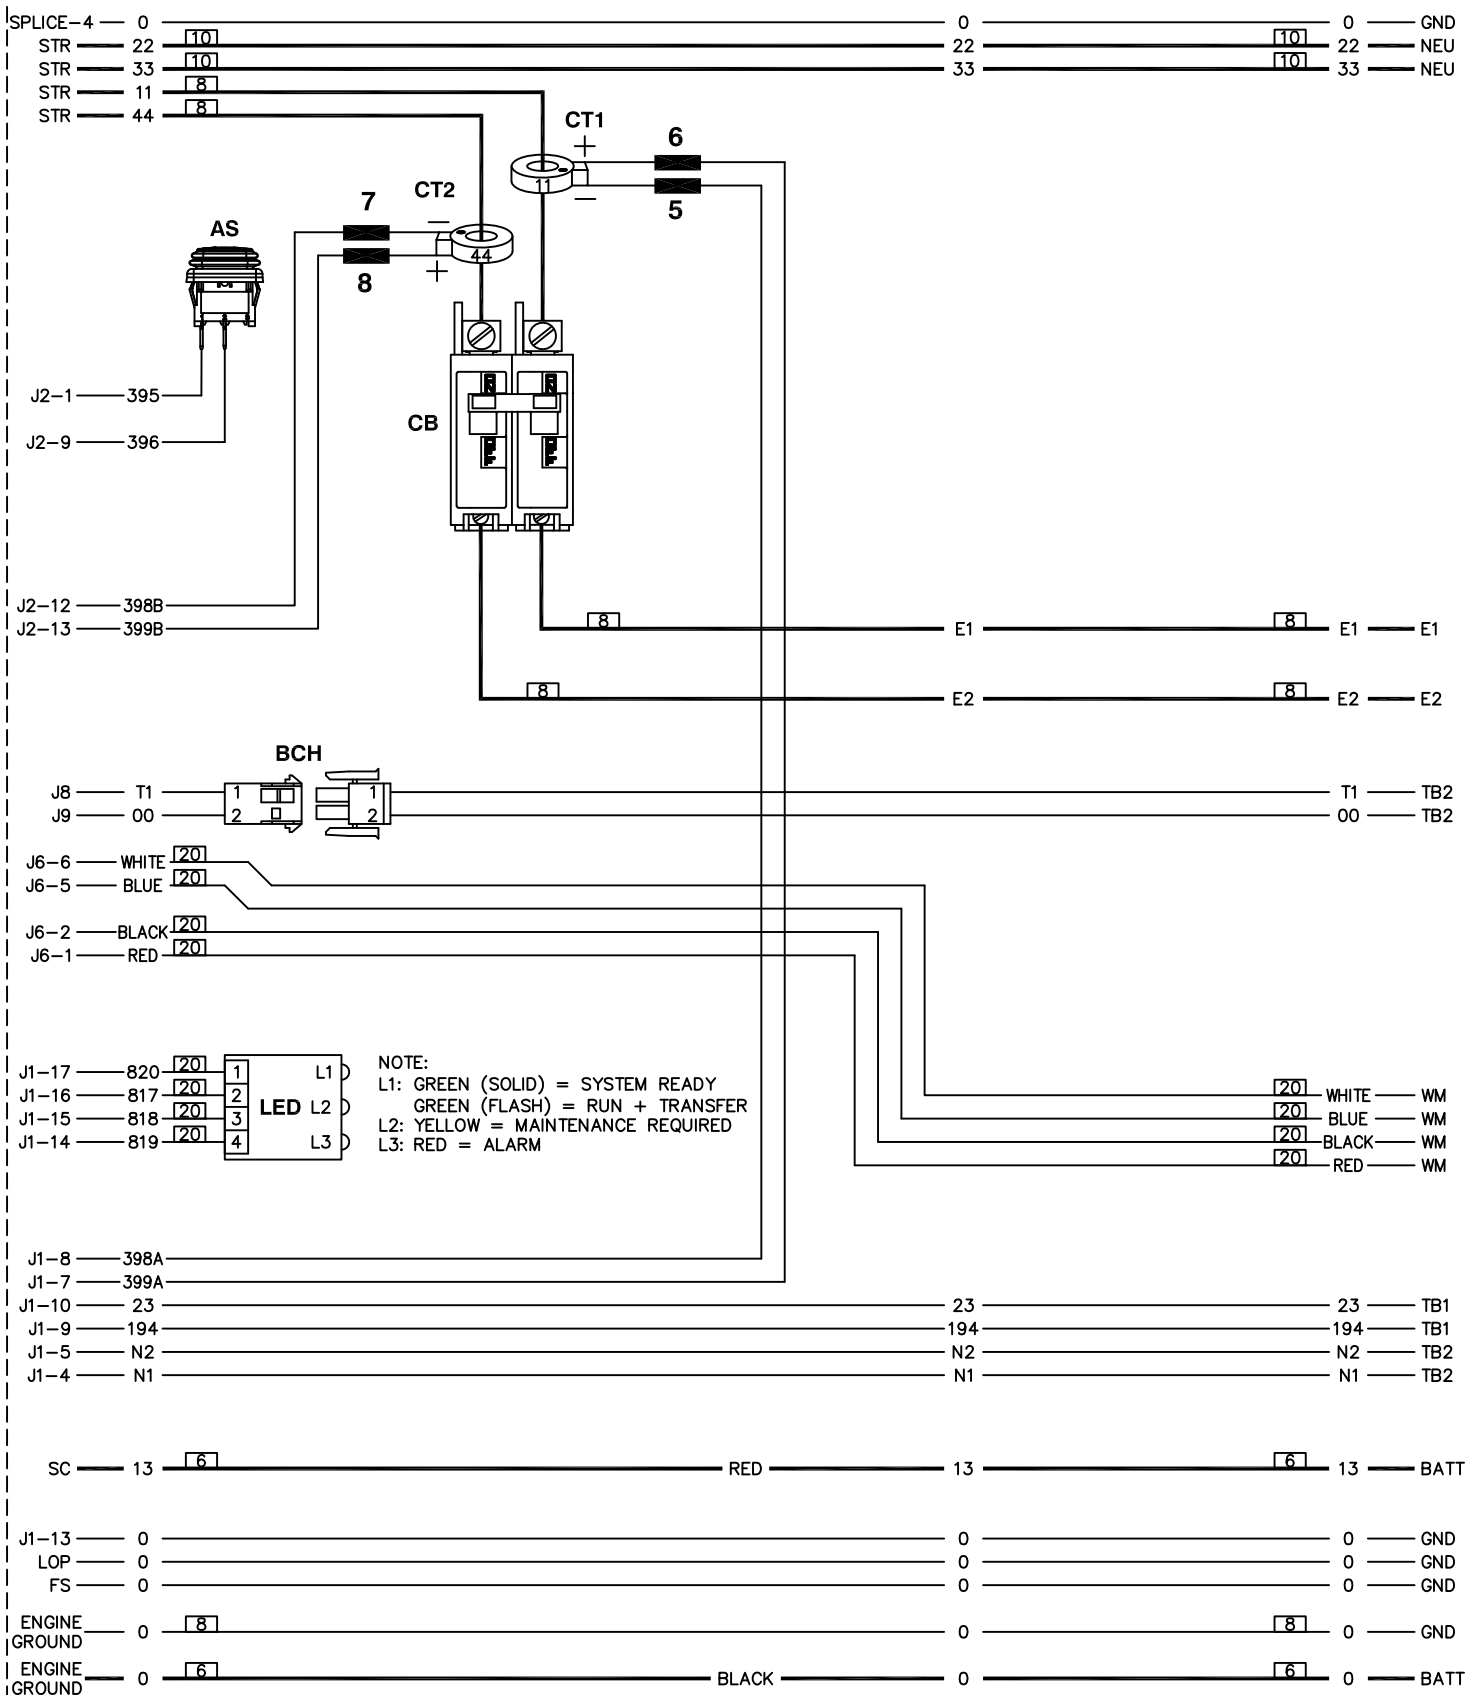

    COMPONENTS LOCATED IN CUSTOMER CONNECTION AREA

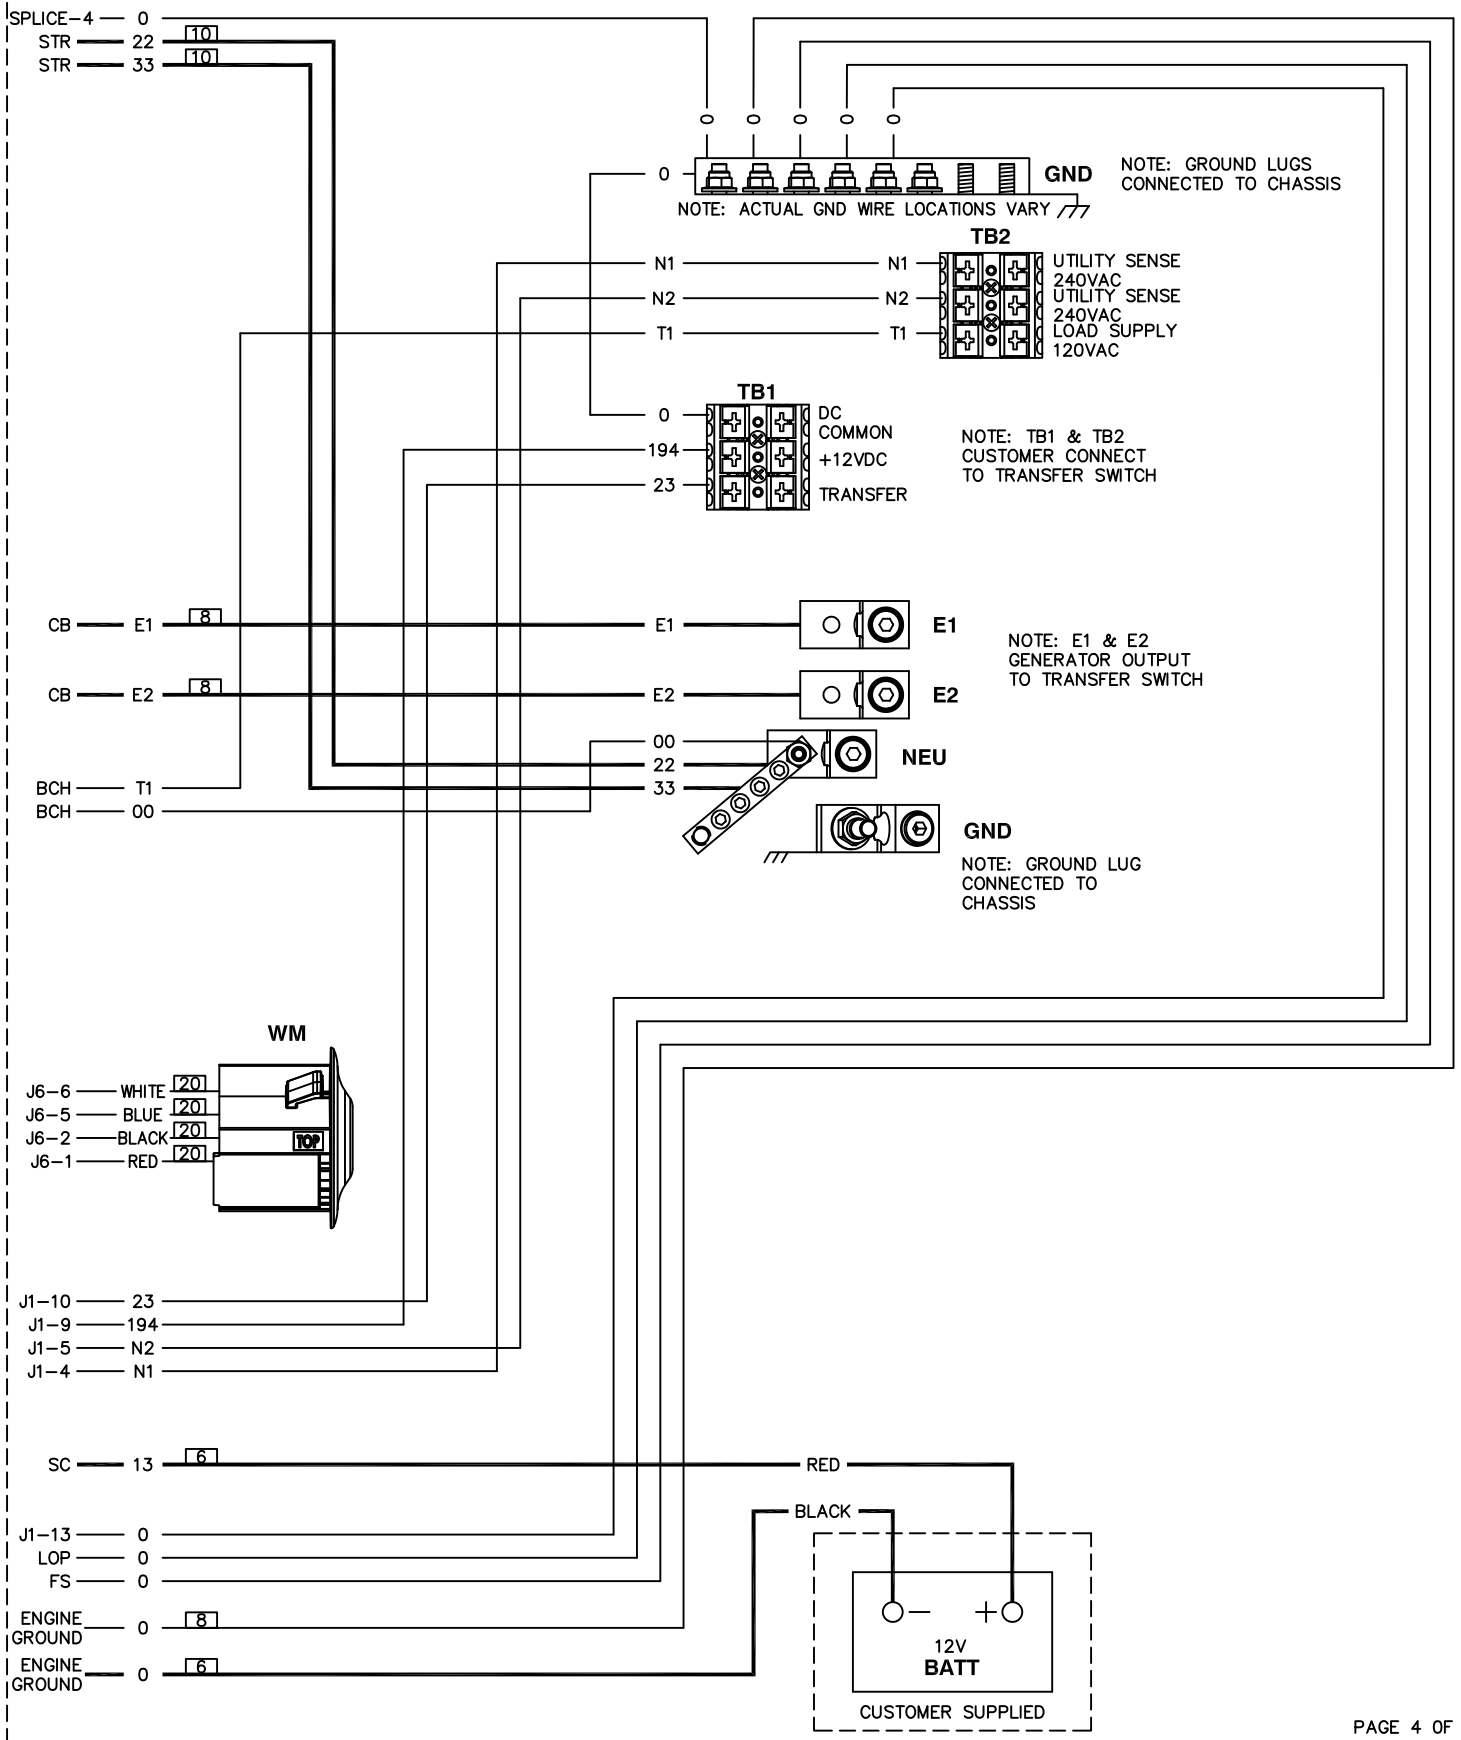

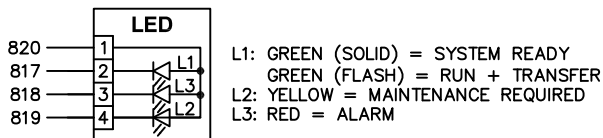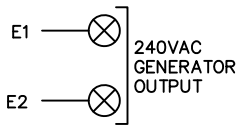

LEGEND:

AS	—	AUXILIARY SHUTDOWN SWITCH
BA	—	BRUSH ASSEMBLY
CB	—	CIRCUIT BREAKER, MAIN OUTPUT
CT	—	CURRENT TRANSFORMER
FS	—	FUEL SOLENOID
HOT	—	HIGH OIL TEMP SWITCH
IM	—	IGNITION MODULE
J	—	MAIN CONTROLLER CONNECTIONS
LED	—	LED BOARD
LOP	—	LOW OIL PRESSURE SWITCH
R	—	RESISTOR
SC	—	STARTER CONTACTOR
SM	—	STARTER MOTOR
SP	—	SPARK PLUG
WM	—	WIRELESS MODULE

