
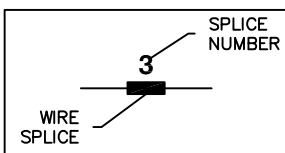
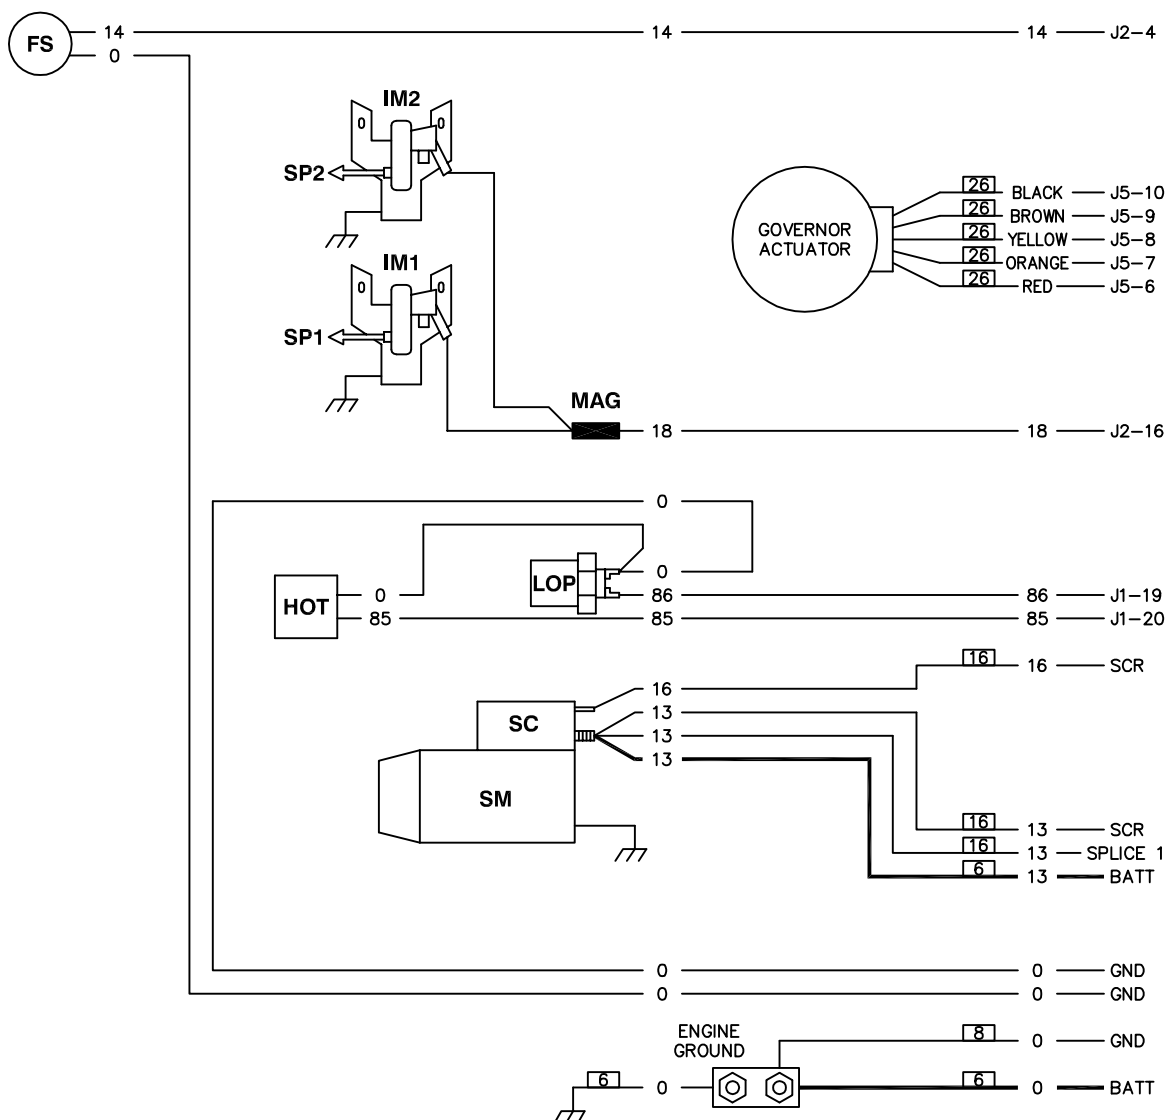


COMPONENTS LOCATED ON ENGINE

LEGEND:


AS_	- AUXILIARY SHUTDOWN SWITCH
BA	- BRUSH ASSEMBLY
BATT	- BATTERY
BCH	- BATTERY CHARGER
CB	- CIRCUIT BREAKER, MAIN OUTPUT
CT_	- CURRENT TRANSFORMER
FS	- FUEL SOLENOID
GND	- GROUND
HOT	- HIGH OIL TEMP SWITCH
IM_	- IGNITION MODULE
J_	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
MAG	- MAGNETO
NEU	- NEUTRAL
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP_	- SPARK PLUG
STR	- STATOR
TB_	- TERMINAL BLOCK
WM	- WIRELESS MODULE

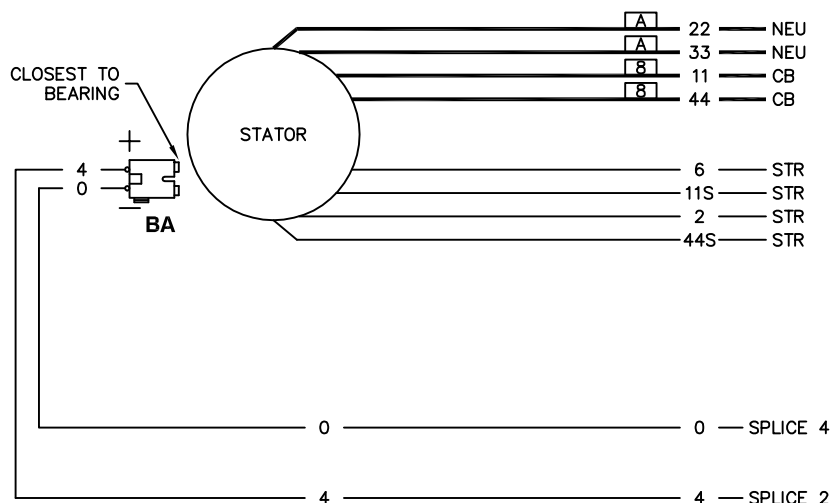


NOTE: ALL WIRES 18 AWG 300V UL LISTED UNLESS SHOWN OTHERWISE.

GENERATOR SIZE	AWG "A"	AWG "B"
16-17KW	10	4
20-22KW	8	3

COMPONENTS LOCATED IN CONTROL PANEL

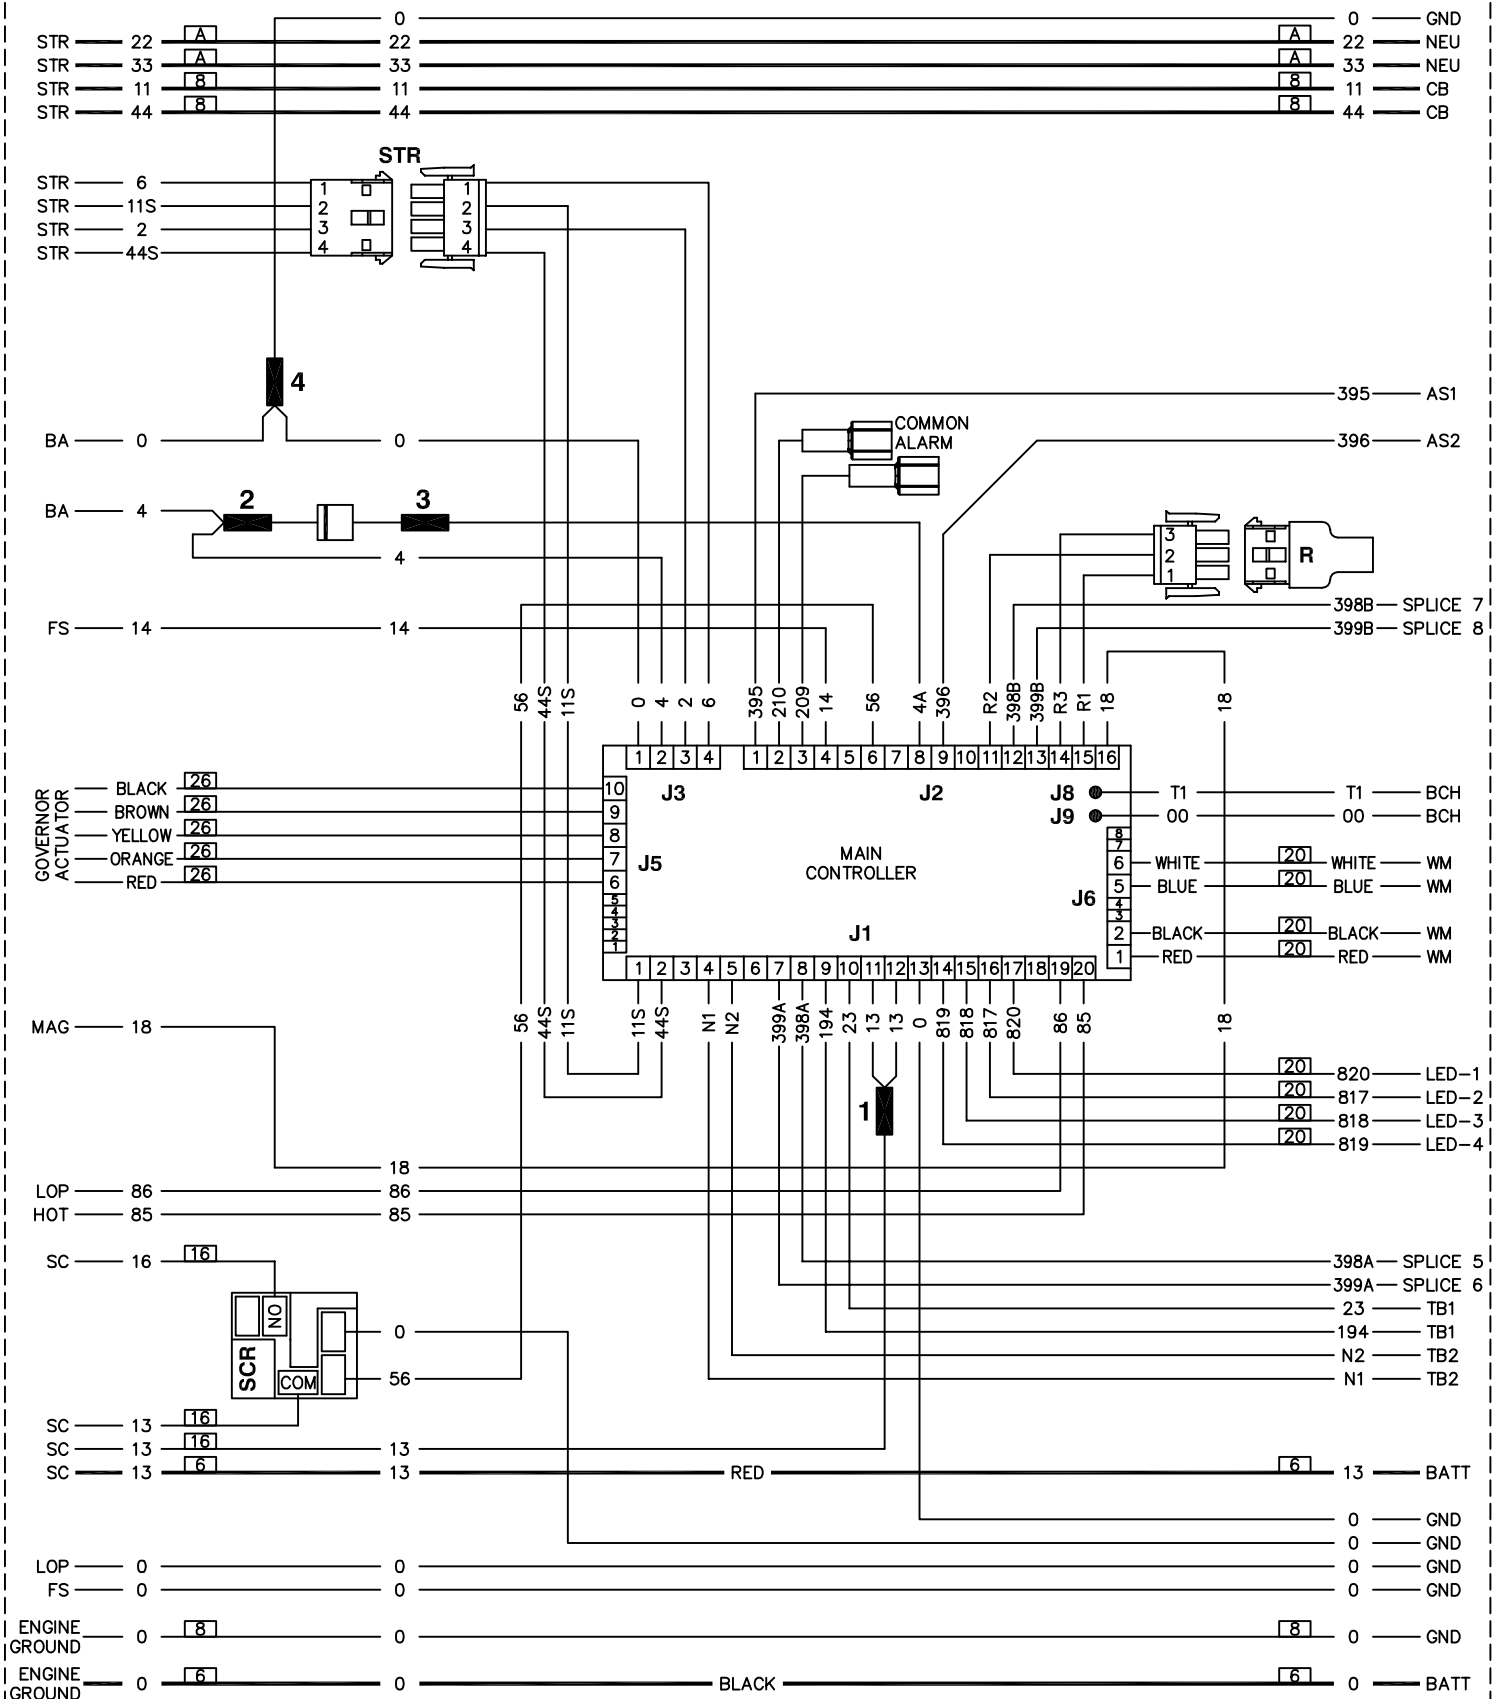

COMPONENTS LOCATED IN CONTROL PANEL

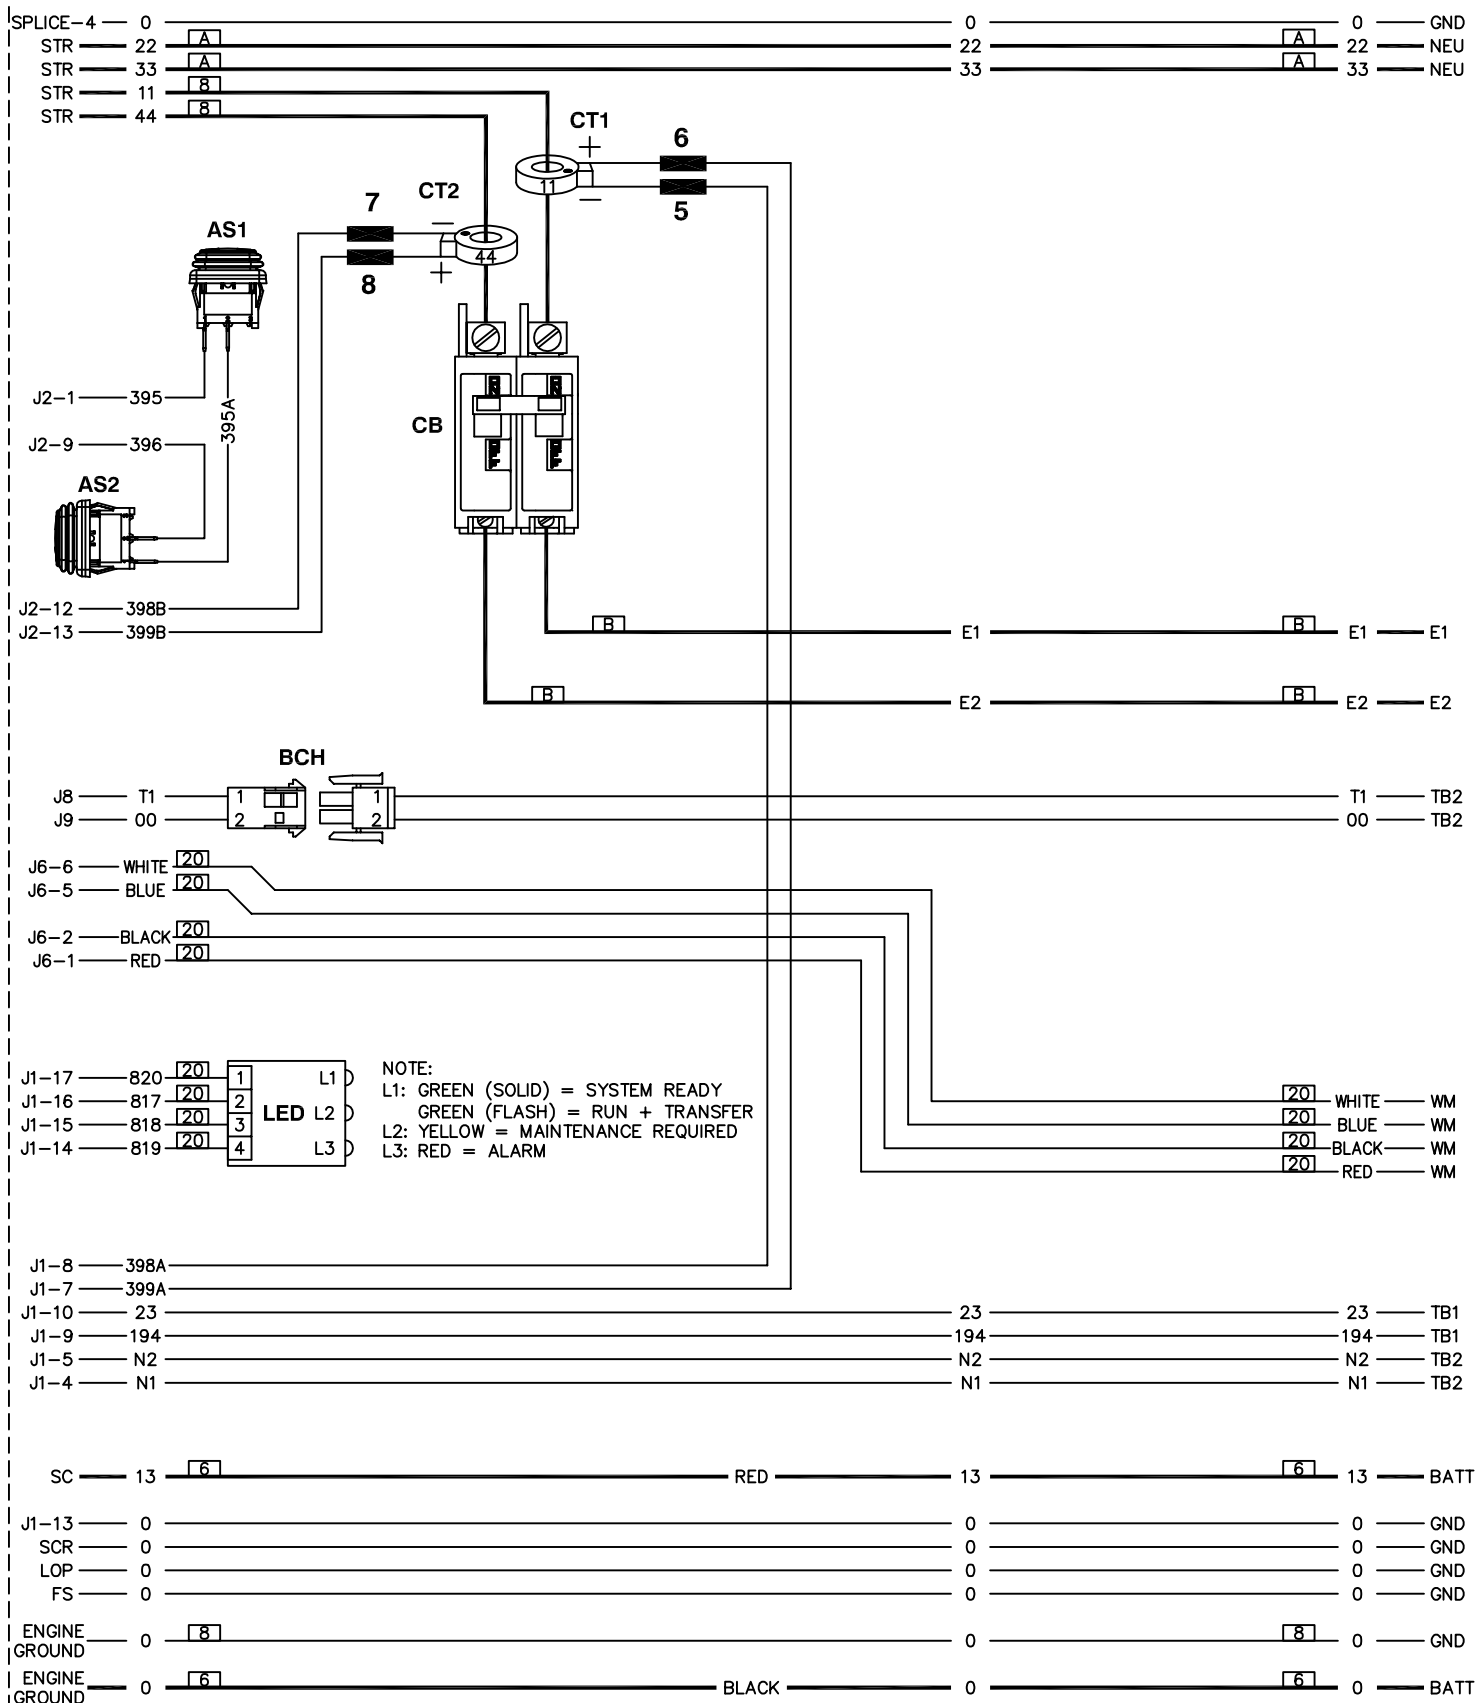

PAGE 3 OF 6

WIRING - DIAGRAM

AC HSB EVO2 60HZ 999

DRAWING #: 10000017243

REVISION: A
 DATE: 08/10/17

PAGE 3 OF 6

