
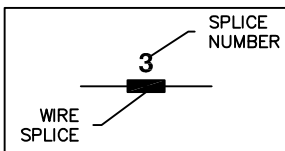
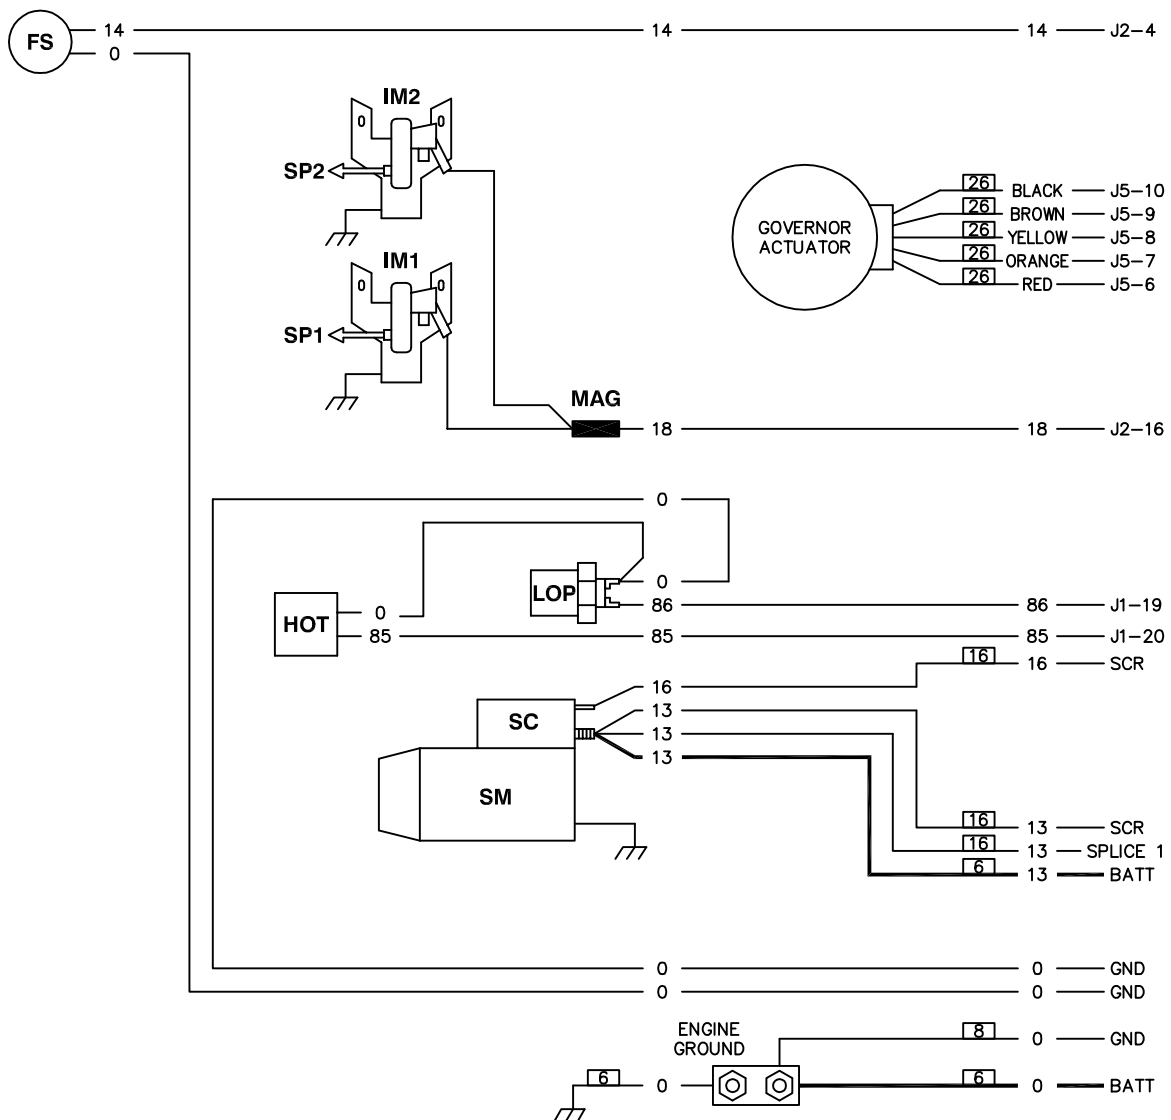


COMPONENTS LOCATED ON ENGINE

LEGEND:

BA	-	BRUSH ASSEMBLY
BATT	-	BATTERY
BCH	-	BATTERY CHARGER
CB	-	CIRCUIT BREAKER, MAIN OUTPUT
CT_	-	CURRENT TRANSFORMER
ESJ	-	EMERGENCY STOP JUMPER
FLD	-	FUEL FIELD KIT
FS	-	FUEL SOLENOID
GND	-	GROUND
HOT	-	HIGH OIL TEMP SWITCH
IM_	-	IGNITION MODULE
J_	-	MAIN CONTROLLER CONNECTIONS
LED	-	LED BOARD
LOP	-	LOW OIL PRESSURE SWITCH
MAG	-	MAGNETO
N	-	ALTERNATOR WINDING JUNCTION
R	-	RESISTOR
SC	-	STARTER CONTACTOR
SCR	-	STARTER CONTROL RELAY
SM	-	STARTER MOTOR
SP_	-	SPARK PLUG
STR	-	STATOR
TB_	-	TERMINAL BLOCK
TR	-	TIMER RELAY (FUEL FIELD KIT)
WM	-	WIRELESS MODULE

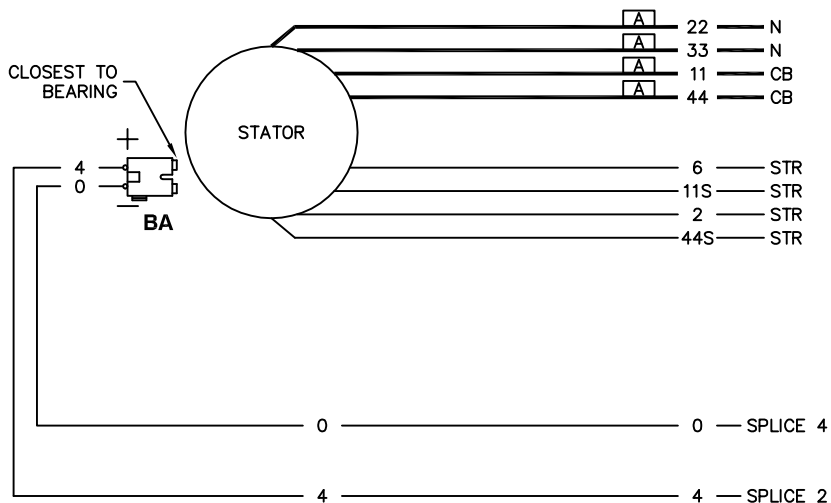

NOTE: ALL WIRES 18 AWG
300V UL LISTED UNLESS
SHOWN OTHERWISE.


AWG SIZE

OR -


- AWG CHART.
LETTER REF.

GENERATOR SIZE	AWG "A"	AWG "B"
8-10KVA	8	8


COMPONENTS LOCATED IN CONTROL PANEL











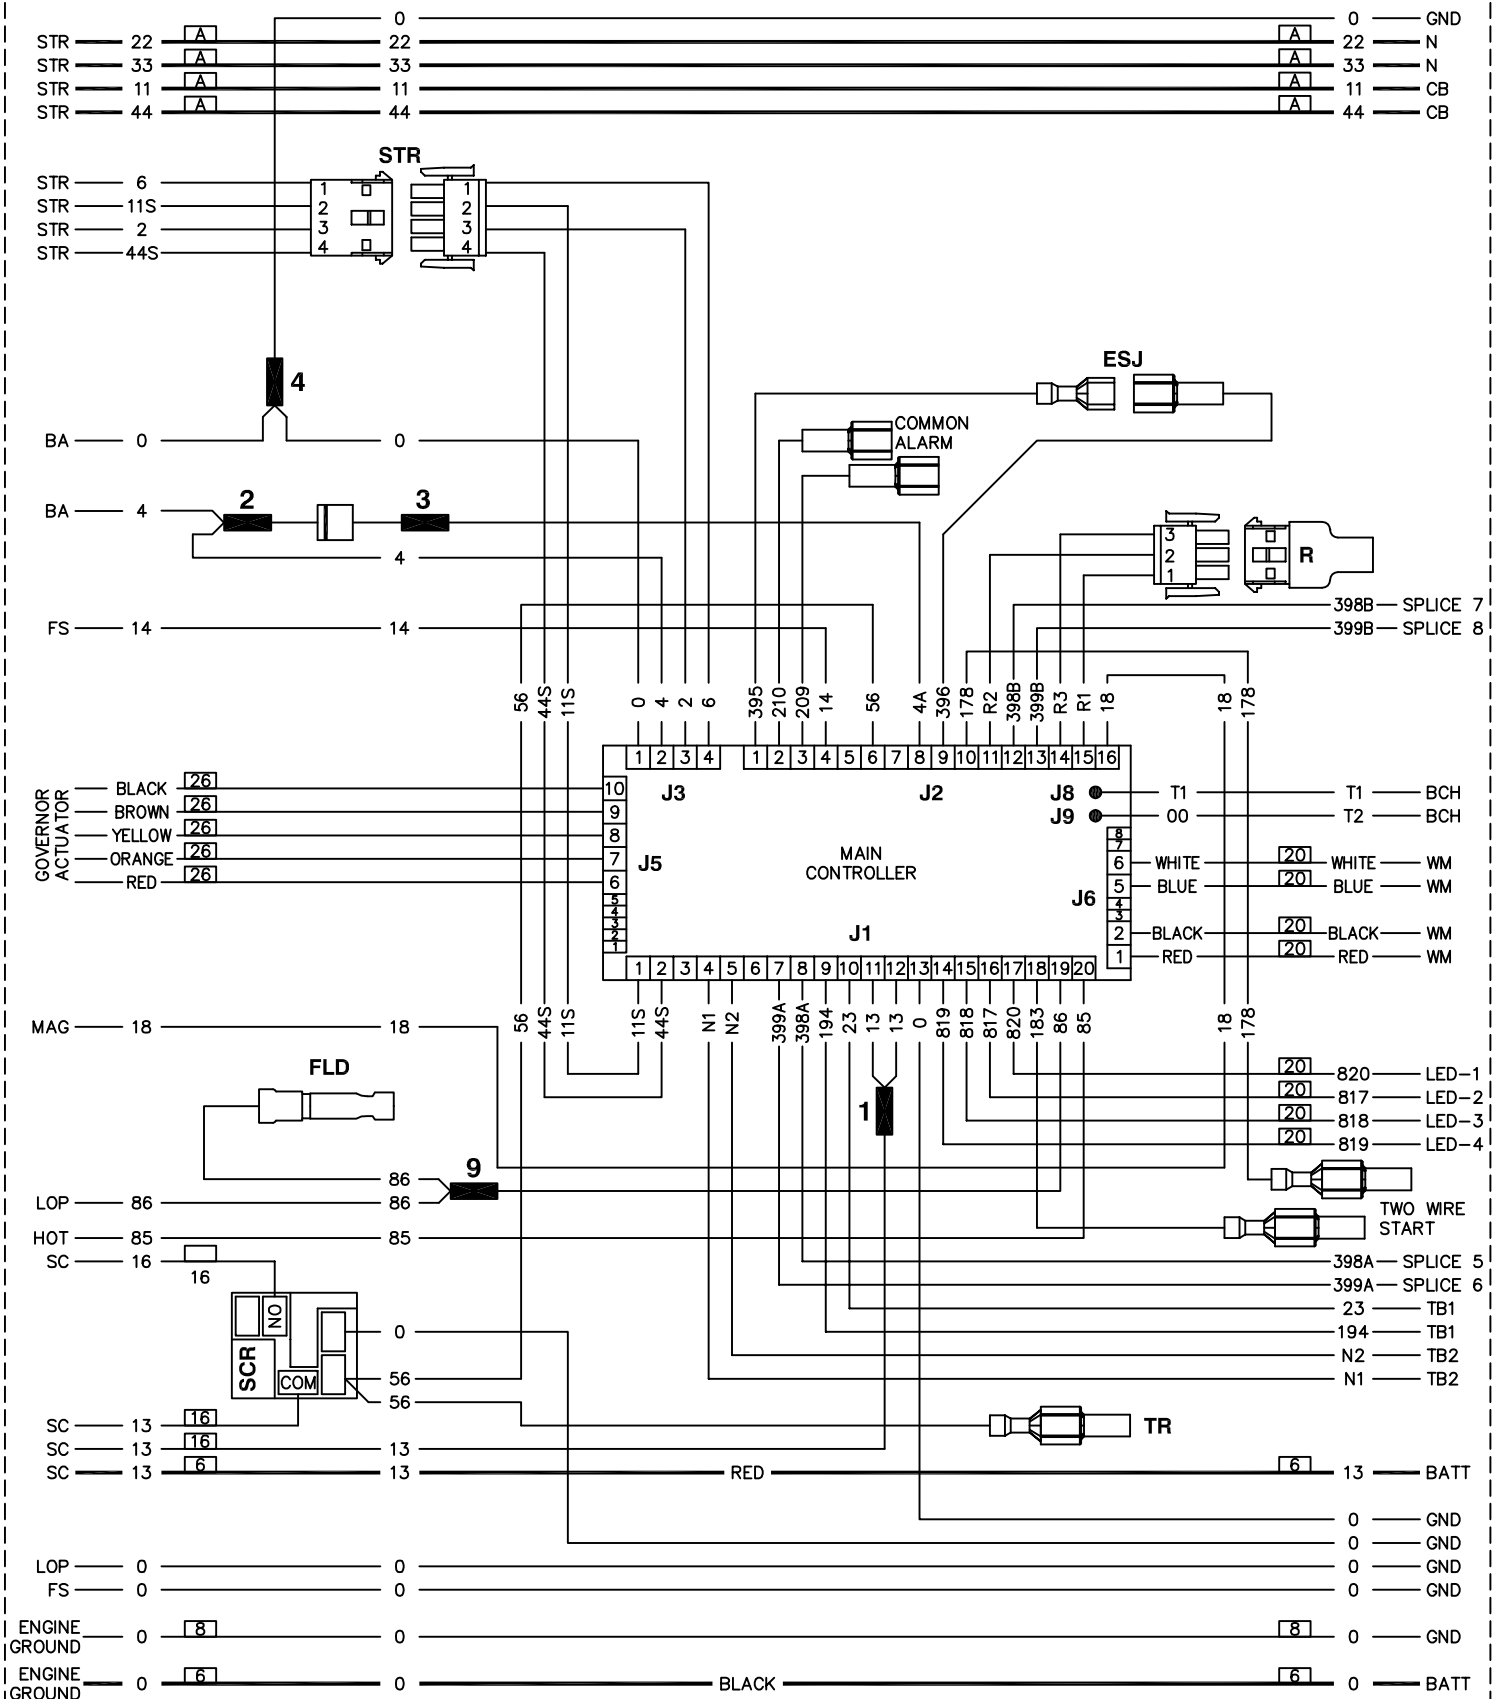


COMPONENTS LOCATED IN CONTROL PANEL

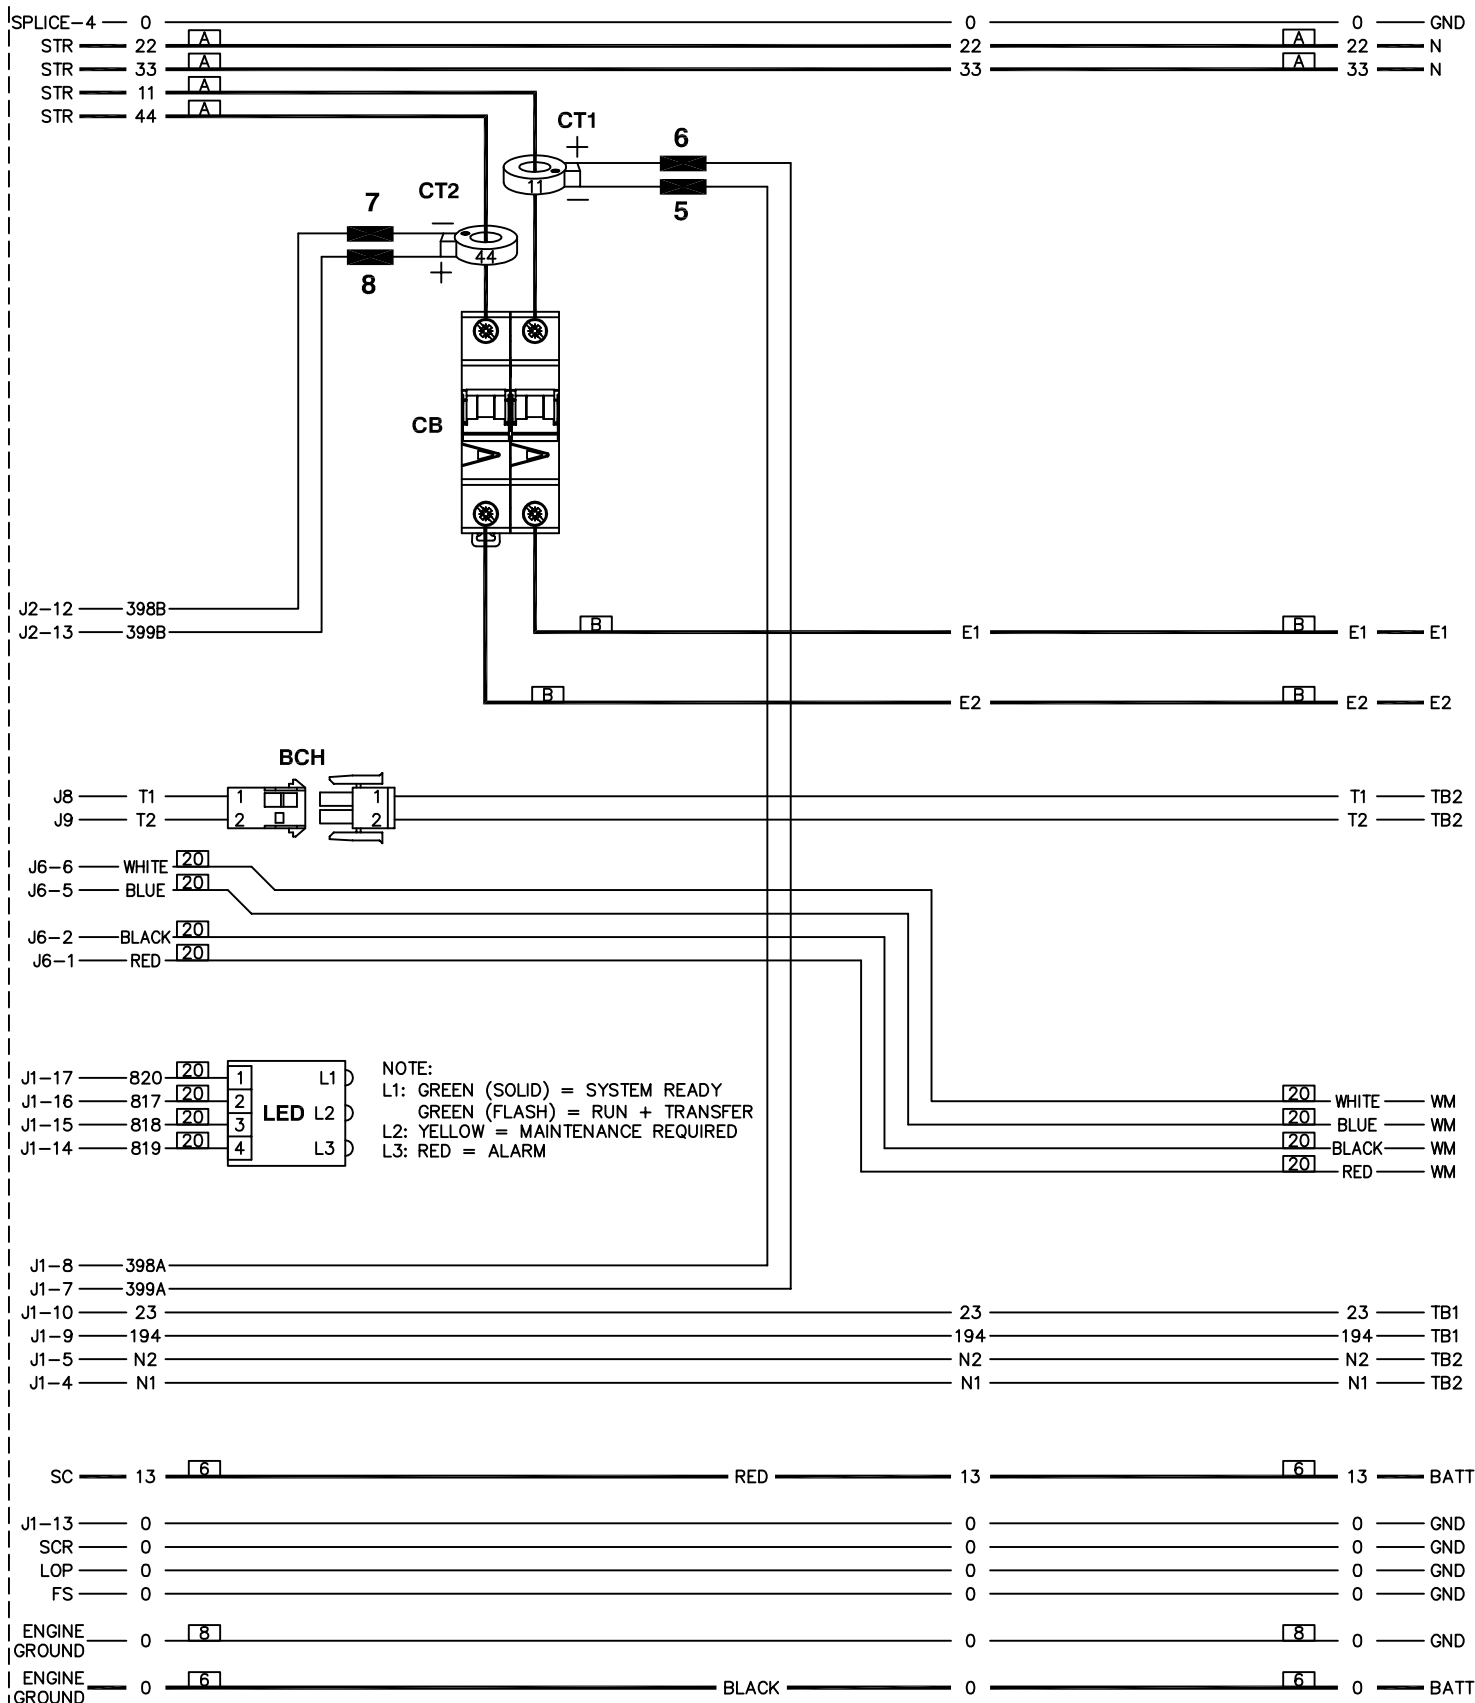

PAGE 3 OF 6

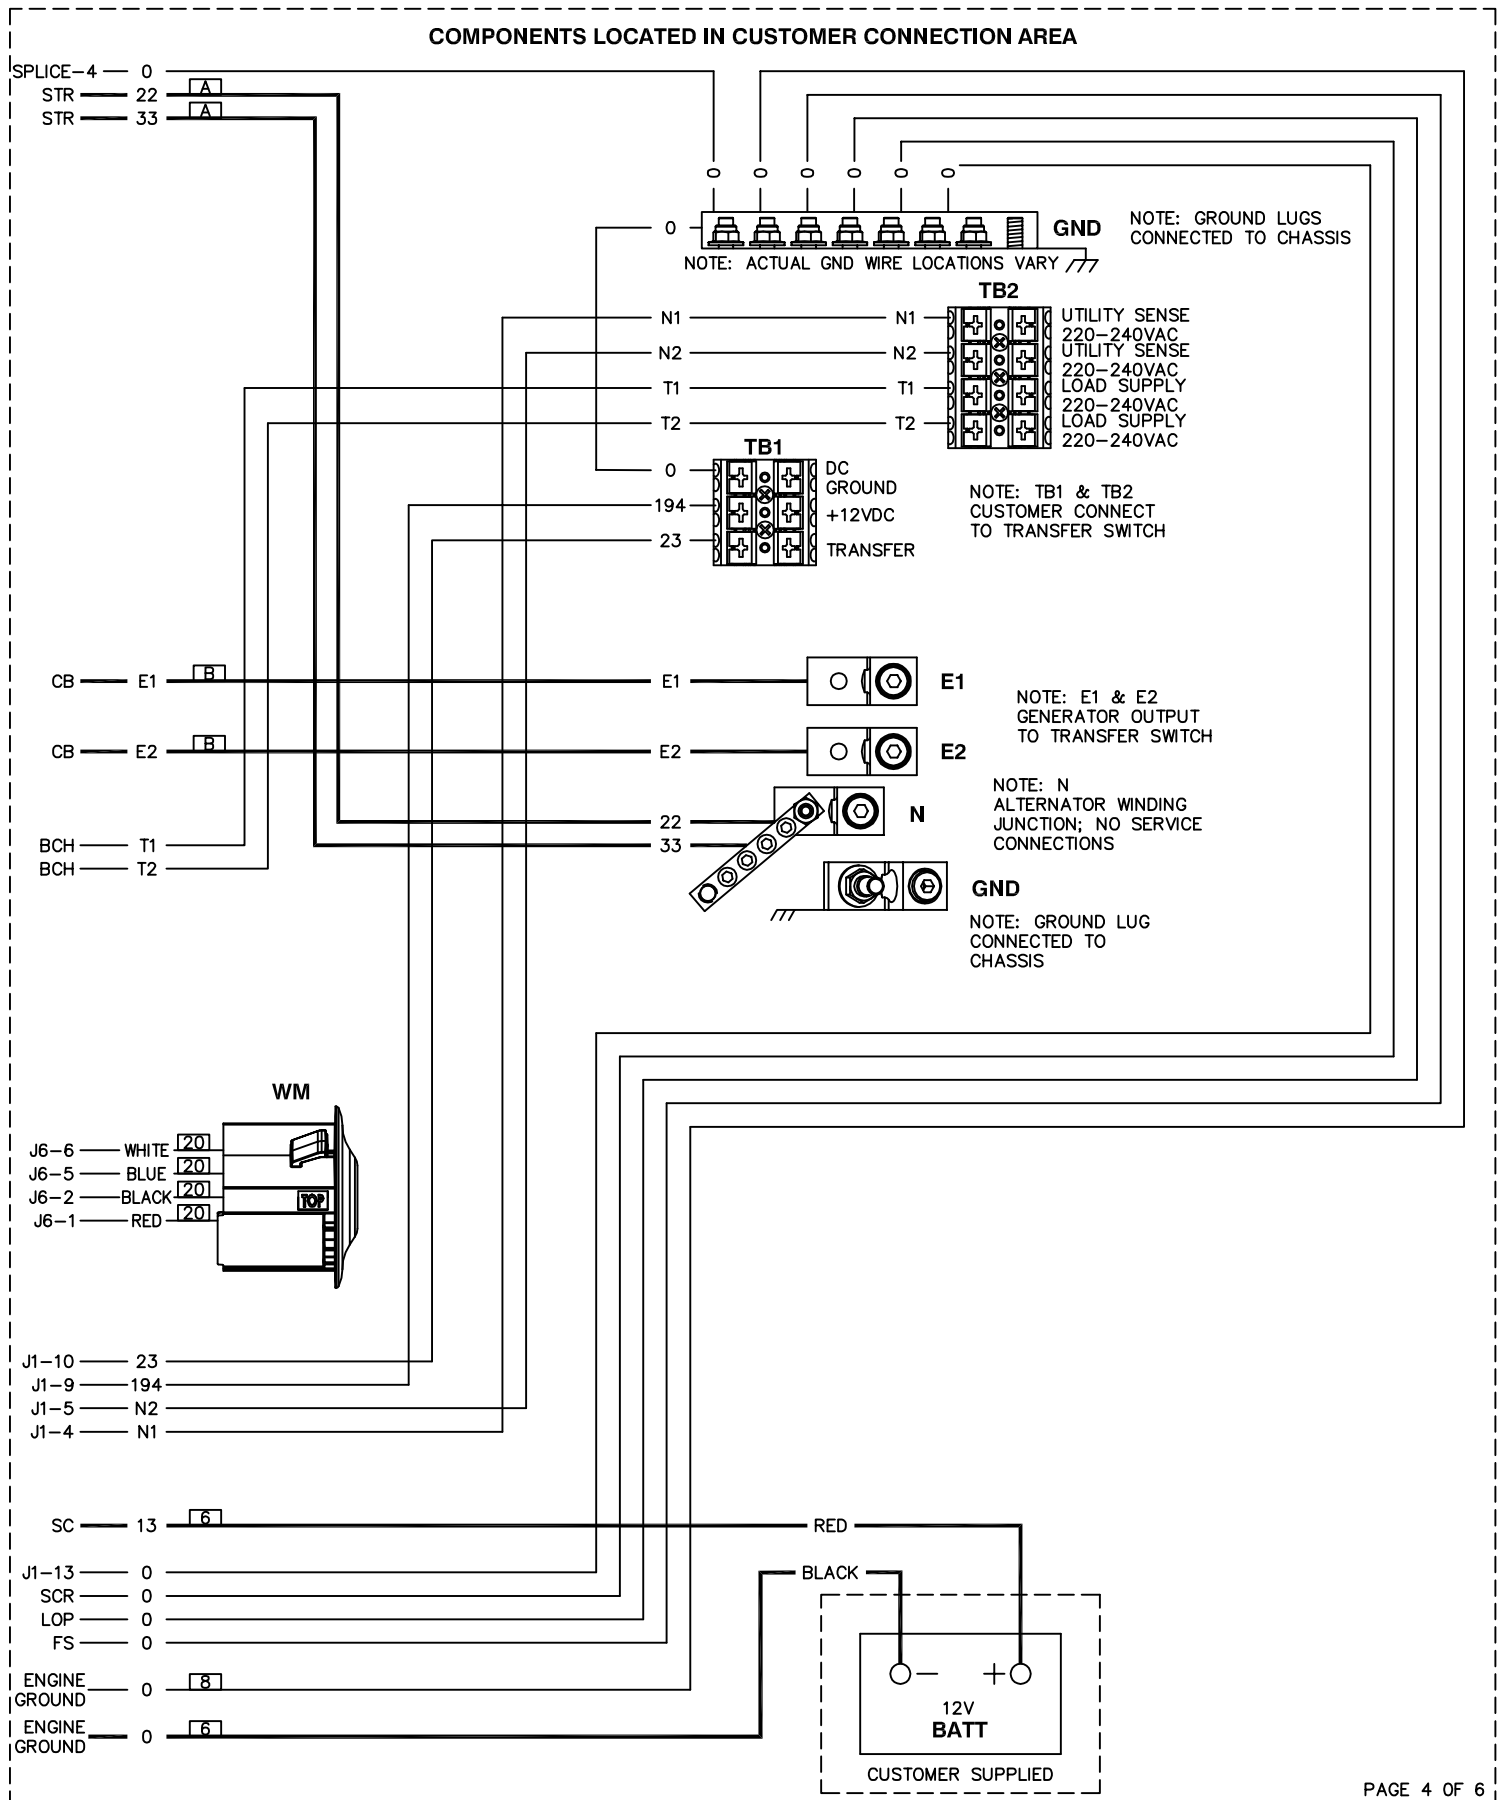

   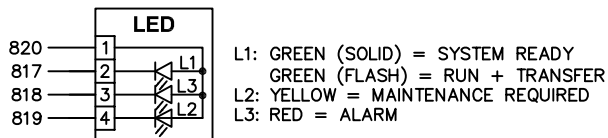       

LEGEND:

BA	- BRUSH ASSEMBLY
CB	- CIRCUIT BREAKER, MAIN OUTPUT
CT_	- CURRENT TRANSFORMER
FLD	- FUEL FIELD KIT
FS	- FUEL SOLENOID
HOT	- HIGH OIL TEMP SWITCH
IM_	- IGNITION MODULE
J_	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP_	- SPARK PLUG
TR	- TIMER RELAY (FUEL FIELD KIT)
WM	- WIRELESS MODULE