


CONTROL PANEL LEGEND

AVR	- AUTOMATIC VOLTAGE REGULATOR
BCH	- BATTERY CHARGER
BR1	- BRIDGE RECTIFIER
CB2	- CIRCUIT BREAKER (EXCITATION)
F1	- FUSE, BAT POWER (15A ATO TYPE)
J2	- CONNECTOR 2 (ON PCB)
R0	- ZERO OHM JUMPER
RL1	- RELAY 1 (START RELAY)
RL2	- RELAY 2 (ENGINE RUN)
SW1	- AUTO/OFF/MANUAL SWITCH
SW2	- SET EXERCISER SWITCH
TR1	- TRANSFORMER (6VA UTIL/16 VAC)

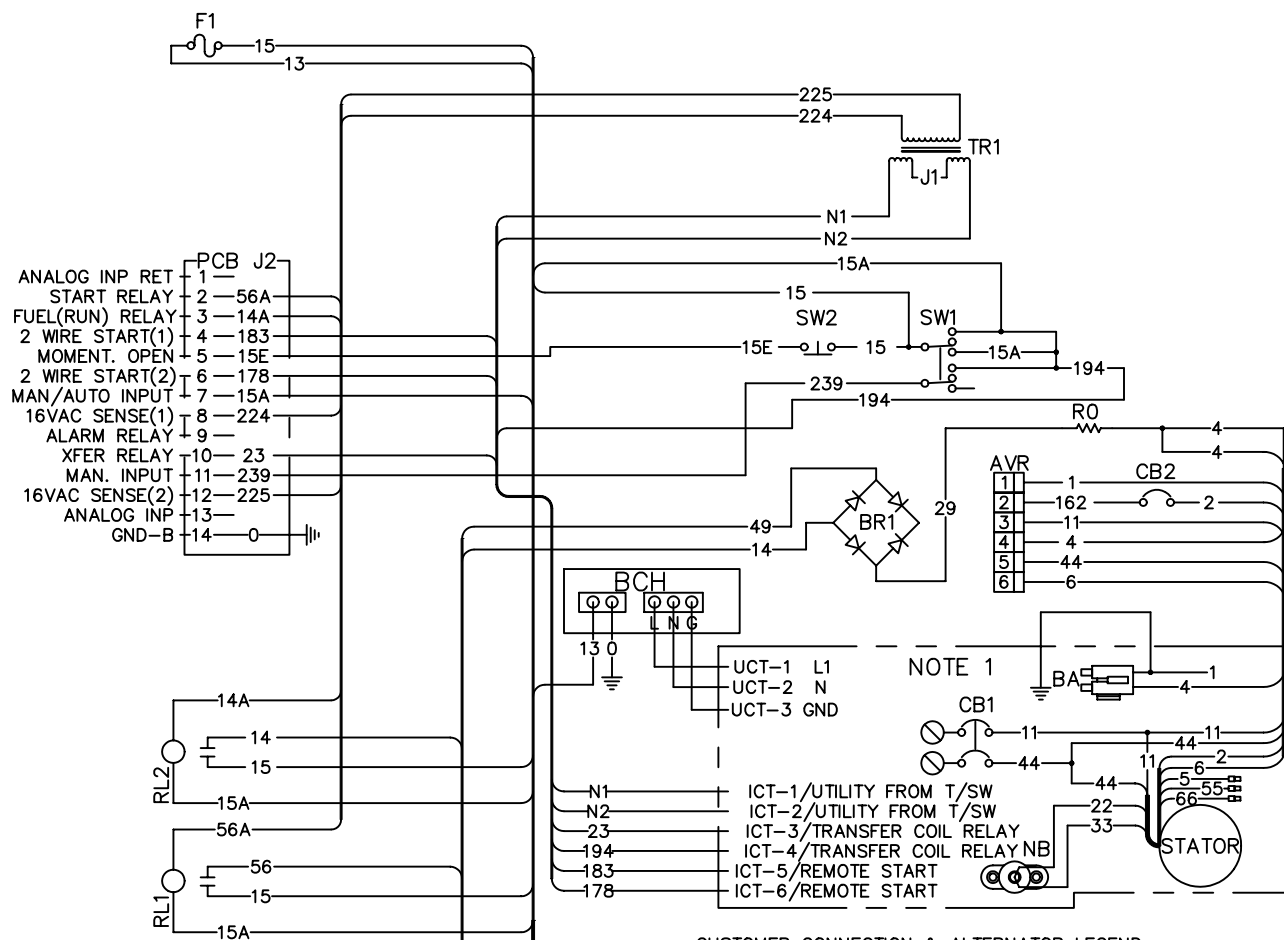

CUSTOMER CONNECTION & ALTERNATOR LEGEND


BA	- BRUSH ASSEMBLY (GENERATOR)
CB1	- MAINLINE CIRCUIT BREAKER
	240V OUTPUT TO TRANSFER SWITCH
ICT	- INTERCONNECT TERMINAL BLOCK
NB	- NEUTRAL BLOCK
UCT	- UTILITY CONNECT TERMINAL BLOCK

NOTE 1: WIRING SHOWN FOR CB1, NB, BA AND STATOR IS TYPICAL FOR SINGLE PHASE. FOR 3-PHASE, SEE DWG. 0F6839.

SCHEMATIC - DIAGRAM

3.9L COMM PROD LINE

DRAWING #: 0F4277

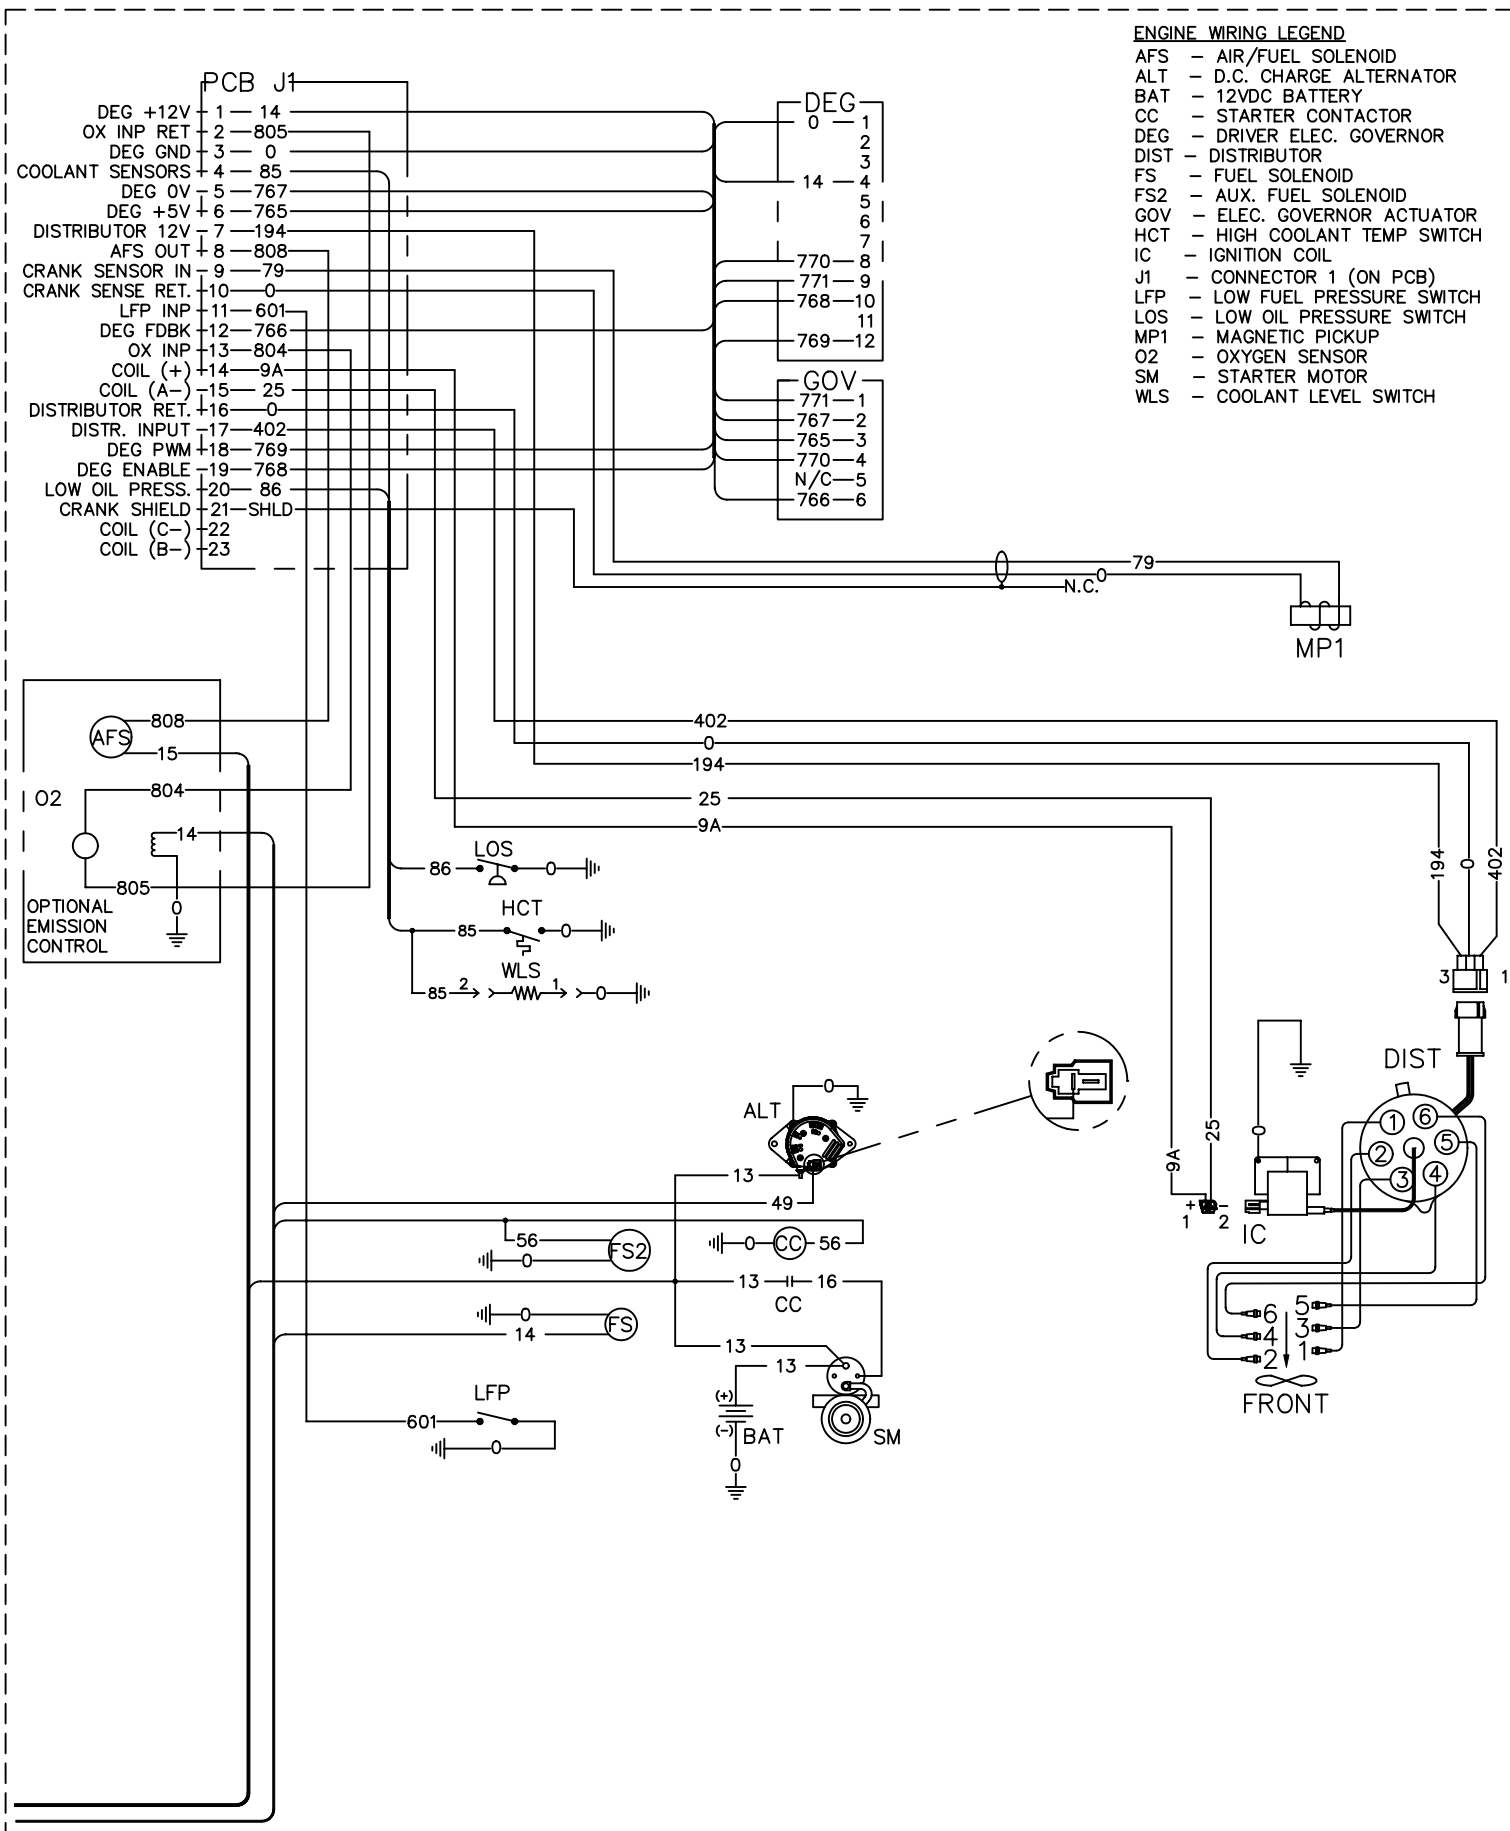

SCHEMATIC - DIAGRAM

3.9L COMM PROD LINE

DRAWING #: 0F4277