


CONTROL PANEL LEGEND

AVR	-	AUTOMATIC VOLTAGE REGULATOR
BCH	-	BATTERY CHARGER
BR1	-	BRIDGE RECTIFIER
CB2	-	CIRCUIT BREAKER (EXCITATION)
F1	-	FUSE, BAT POWER (15A ATO TYPE)
J2	-	CONNECTOR 2 (ON PCB)
R0	-	ZERO OHM JUMPER
RL1	-	RELAY 1 (START RELAY)
RL2	-	RELAY 2 (ENGINE RUN)
SW1	-	AUTO/OFF/MANUAL SWITCH
SW2	-	SET EXERCISER SWITCH
TR1	-	TRANSFORMER (6VA UTIL/16 VAC)

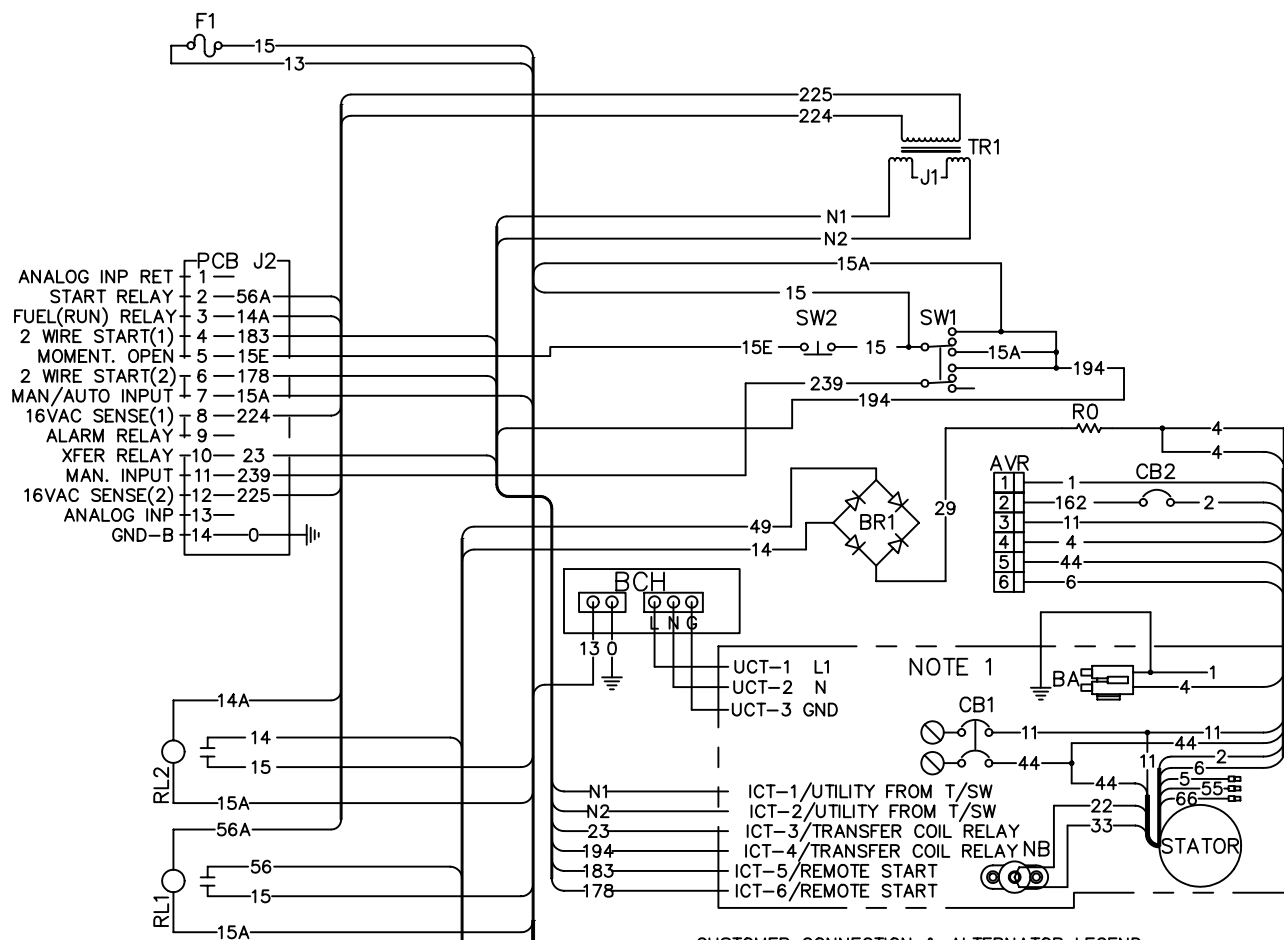

CUSTOMER CONNECTION & ALTERNATOR LEGEND


BA	-	BRUSH ASSEMBLY (GENERATOR)
CB1	-	MAINLINE CIRCUIT BREAKER
	-	240V OUTPUT TO TRANSFER SWITCH
ICT	-	INTERCONNECT TERMINAL BLOCK
NB	-	NEUTRAL BLOCK
UCT	-	UTILITY CONNECT TERMINAL BLOCK

NOTE 1: WIRING SHOWN FOR CB1, NB, BA AND STATOR IS TYPICAL FOR SINGLE PHASE. FOR 3-PHASE, SEE DWG. 0F6839.

SCHEMATIC - DIAGRAM

3.9L COMM PROD LINE

DRAWING #: 0F4277

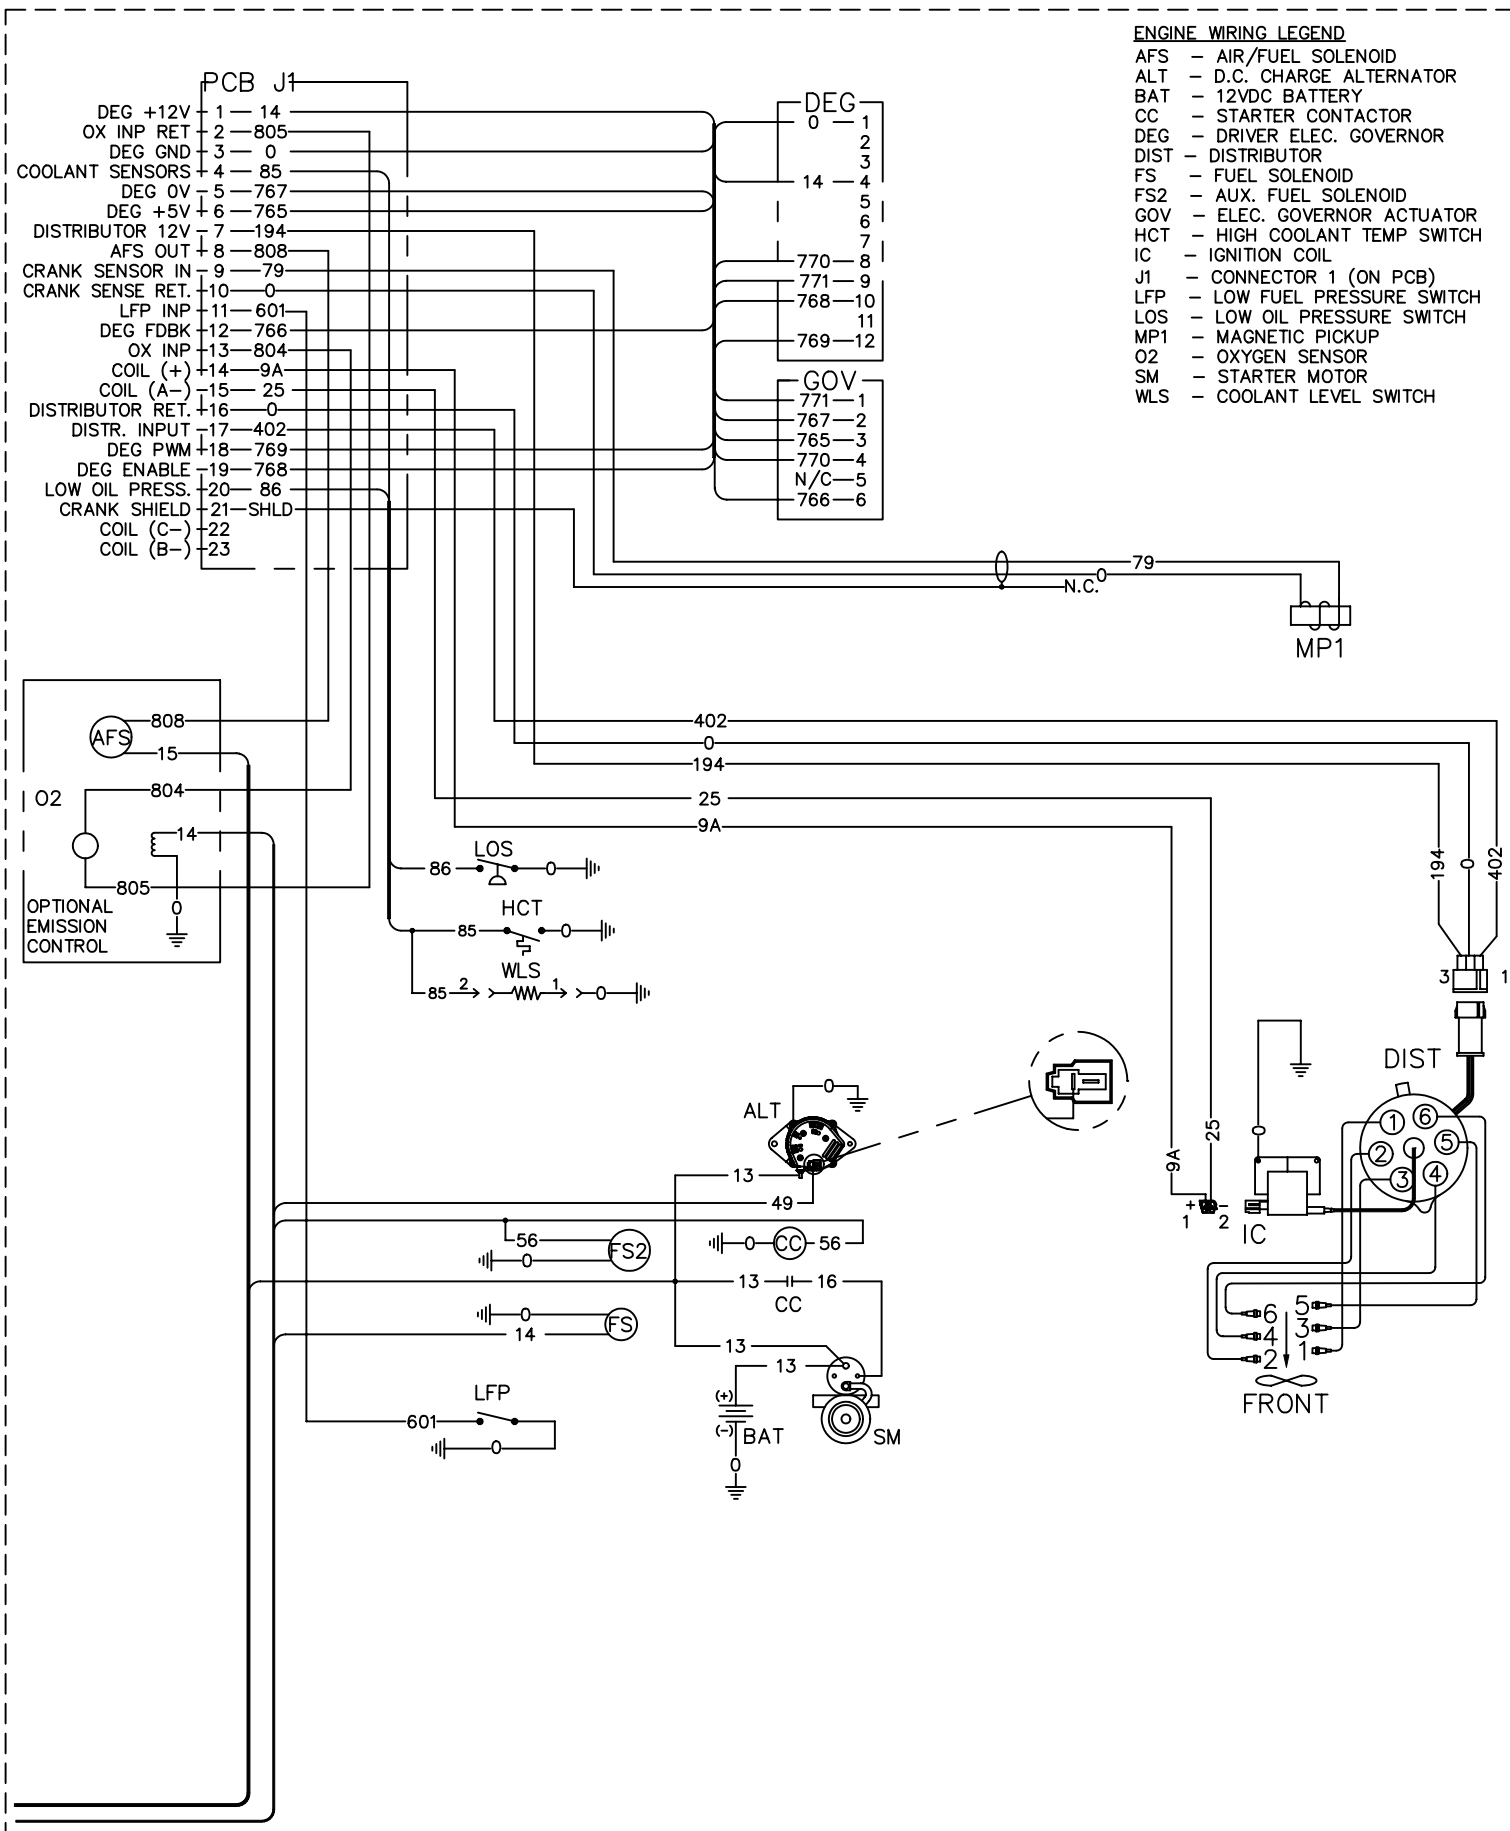

SCHEMATIC - DIAGRAM

3.9L COMM PROD LINE

DRAWING #: 0F4277