



COMPONENTS LOCATED ON ENGINE

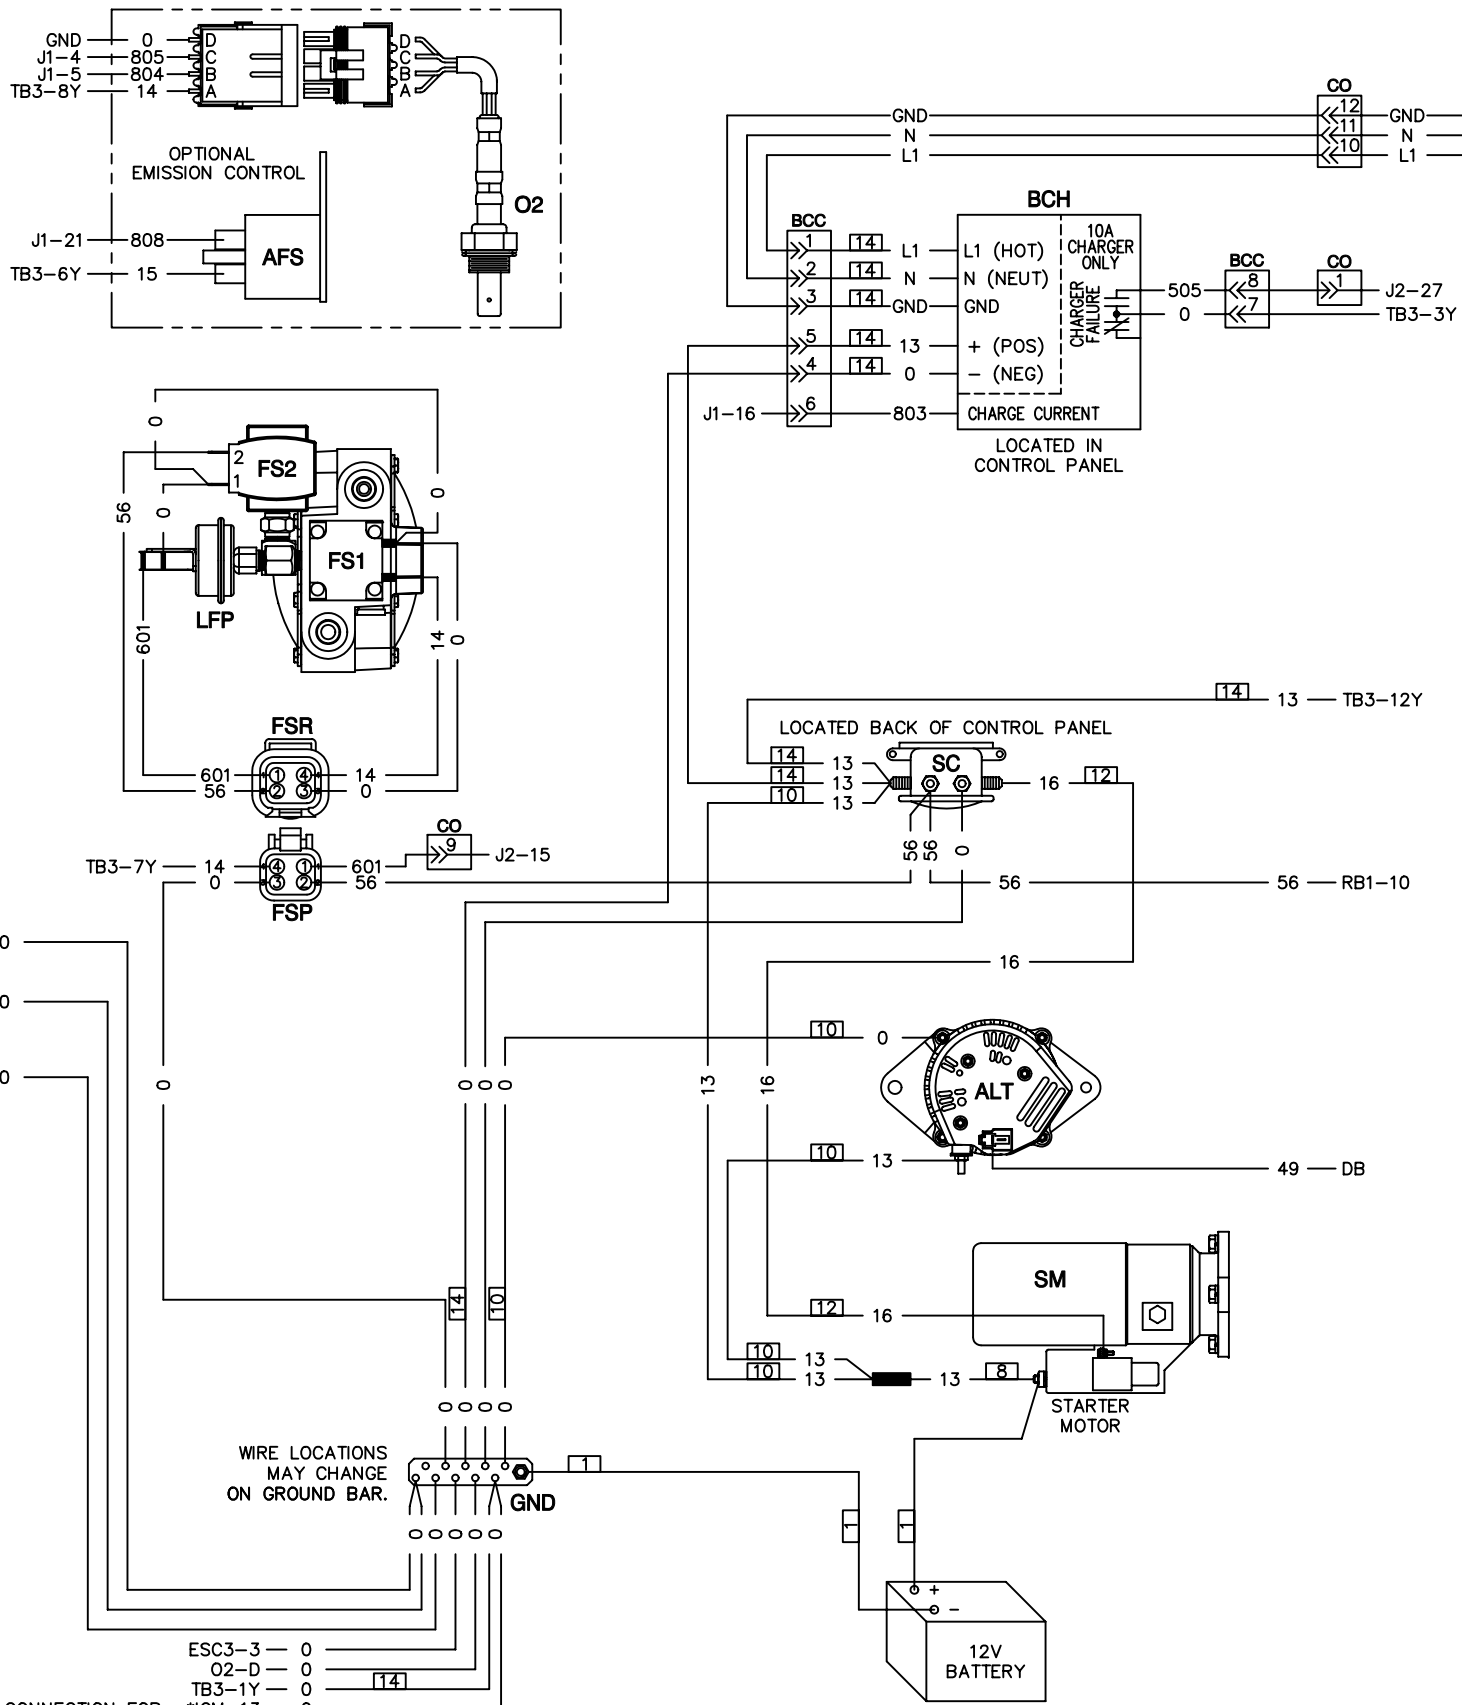




COMPONENTS LOCATED IN ALTERNATOR CONNECTION BOX

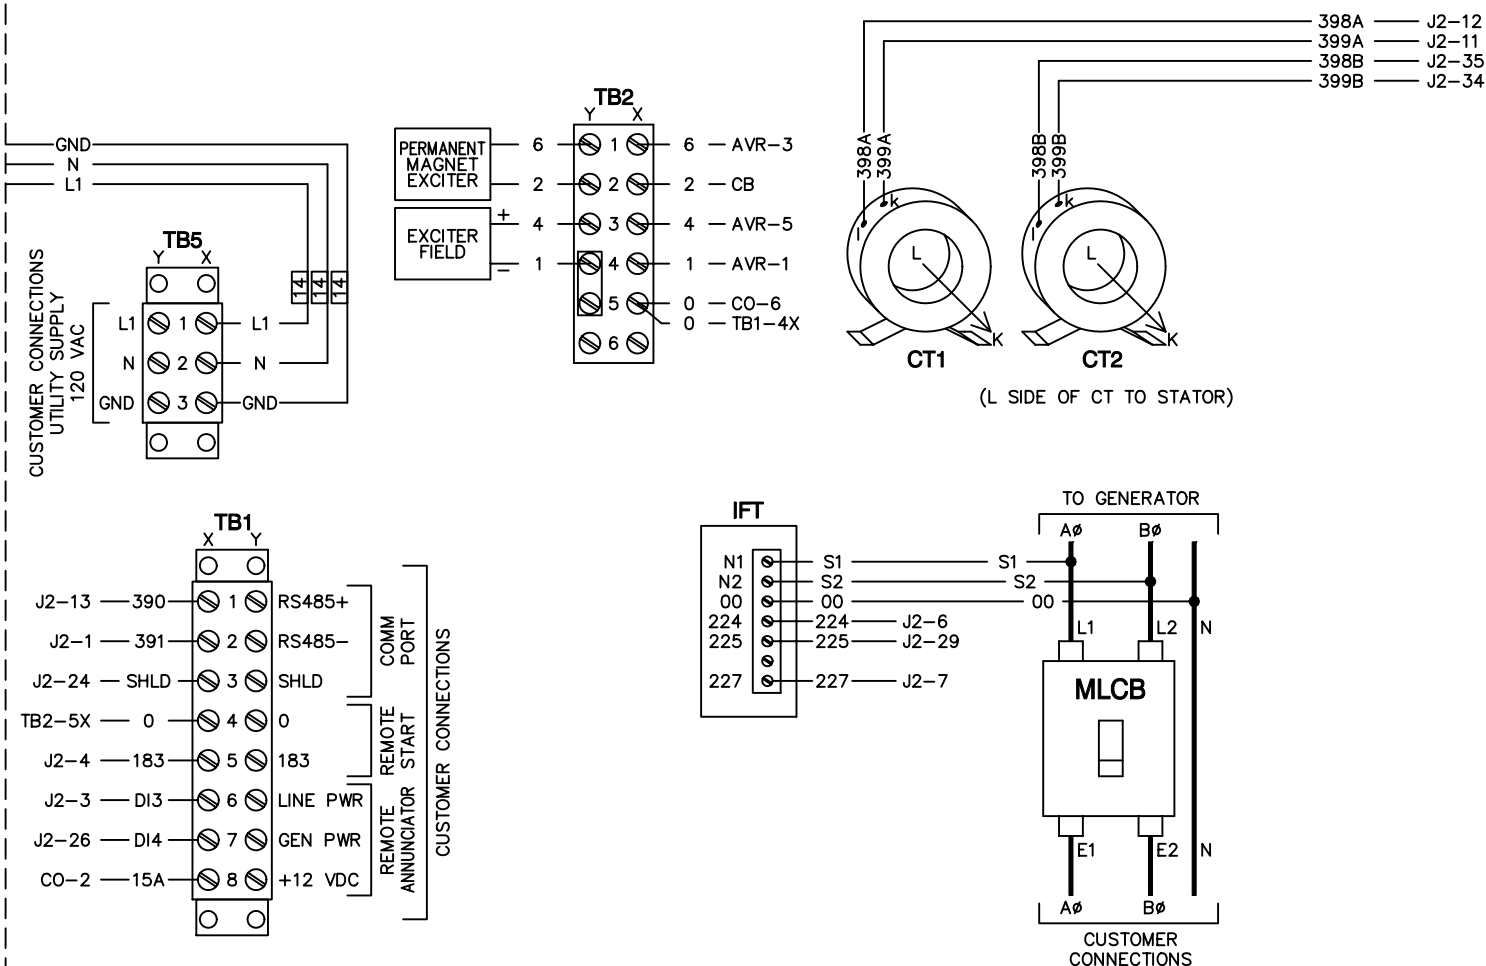


LEGEND

AFS - AIR/FUEL SOLENOID	GD - GOVERNOR DRIVER
AH1 - ALARM HORN	GND - GROUND BAR CONNECTION
ALT - DC CHARGE ALTERNATOR	ICM - IGNITION CONTROL MODULE
AVR - AUTOMATIC VOLTAGE REGULATOR	IFT - INTERFACE TRANSFORMER
BCC - BATTERY CHARGER CONNECTOR	J_ - ELECTRONIC CONTROL MODULE CONNECTIONS
BCH - BATTERY CHARGER	LFP - LOW FUEL PRESSURE SWITCH
CAM - CAMSHAFT SENSOR	MLCB - MAIN LINE CIRCUIT BREAKER
CB - CIRCUIT BREAKER, DPE	MOD - MODEM CONNECTOR
CO - CROSSOVER CONNECTOR	MPU1 - MAG. PICK UP
COM - COMMUNICATIONS PORT (9 PIN D-SUB)	O2 - OXYGEN SENSOR
CSS - CRANKSHAFT SENSOR	OPS1 - OIL PRESSURE SENDER
CT_ - CURRENT TRANSFORMER	OTS1 - OIL TEMP. SENDER
CYL_ - CYLINDER IGNITION COIL	R1 - RESISTOR
DB - DIODE BRIDGE	RB1 - RELAY BOARD
ECM - ELECTRONIC CONTROL MODULE (H-100)	RB1A - RELAY BOARD CONNECTOR
ES1 - EMERGENCY STOP SWITCH	SC - START CONTACTOR
ESC_ - ELECTRONIC SIGNAL CONDITIONER	SM - STARTER MOTOR CONNECTIONS
F_ - FUSE	SW1 - AUTO/MANUAL SELECT SWITCH
FS_ - FUEL SOLENOID	SWC - OPERATOR SWITCH CONNECTOR
FSP - FUEL SOLENOID PLUG	TB_ - TERMINAL BLOCKS
FSR - FUEL SOLENOID RECEPTACLE	WLS1 - COOLANT LEVEL SENDER
GA1 - GOVERNOR ACTUATOR	WTS1 - COOLANT TEMP. SENDER

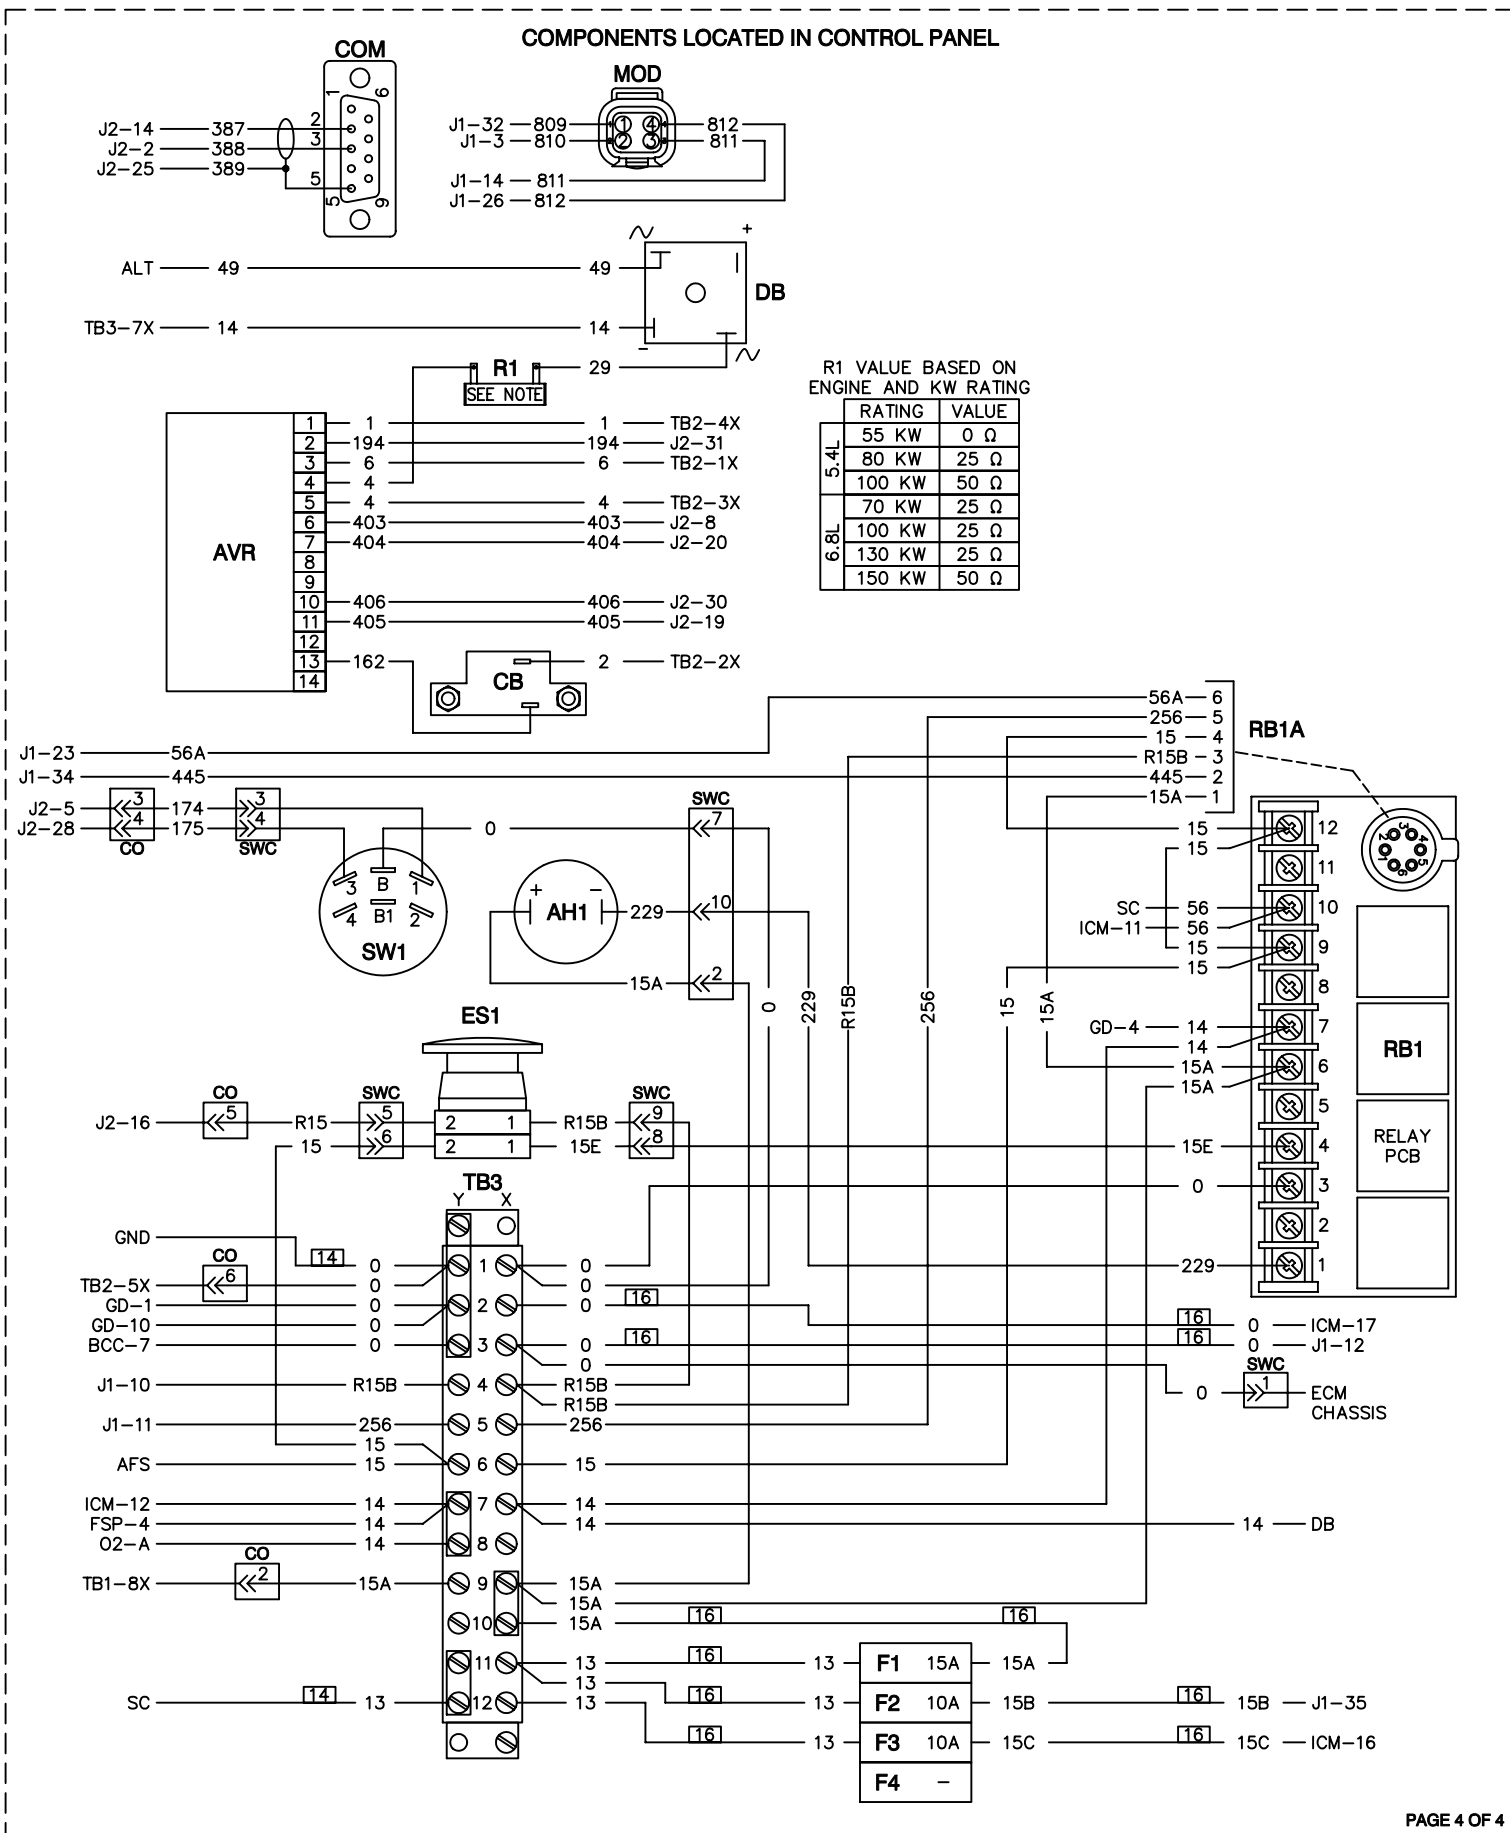

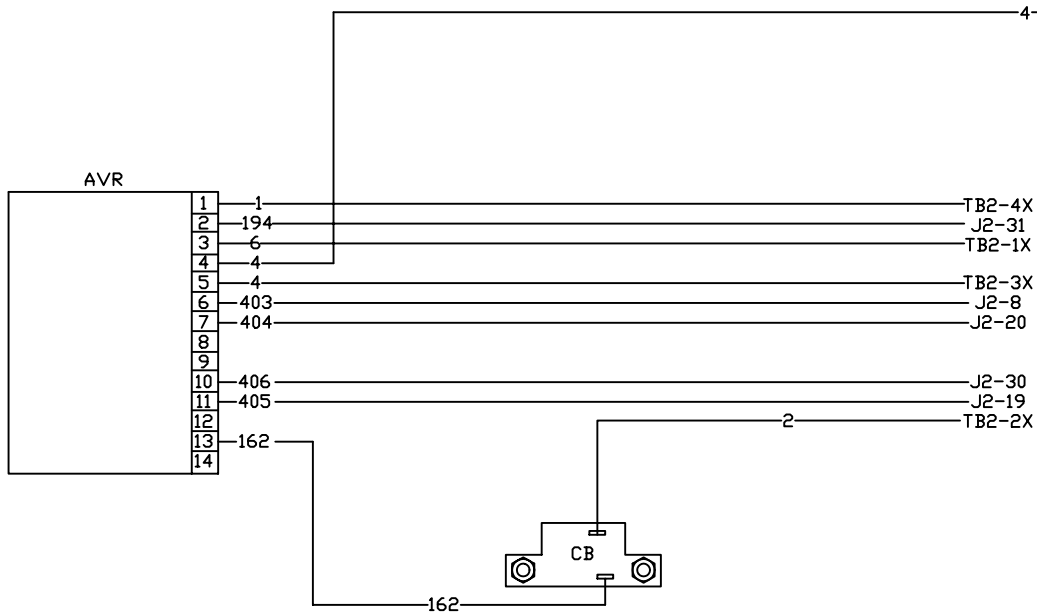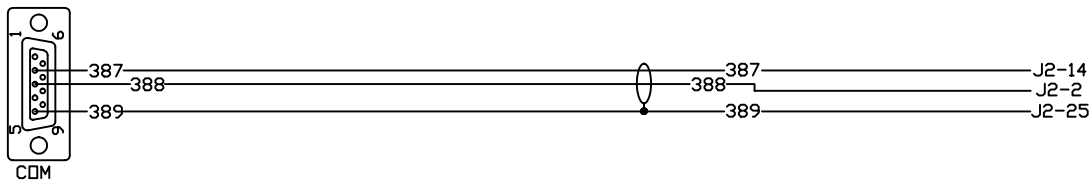

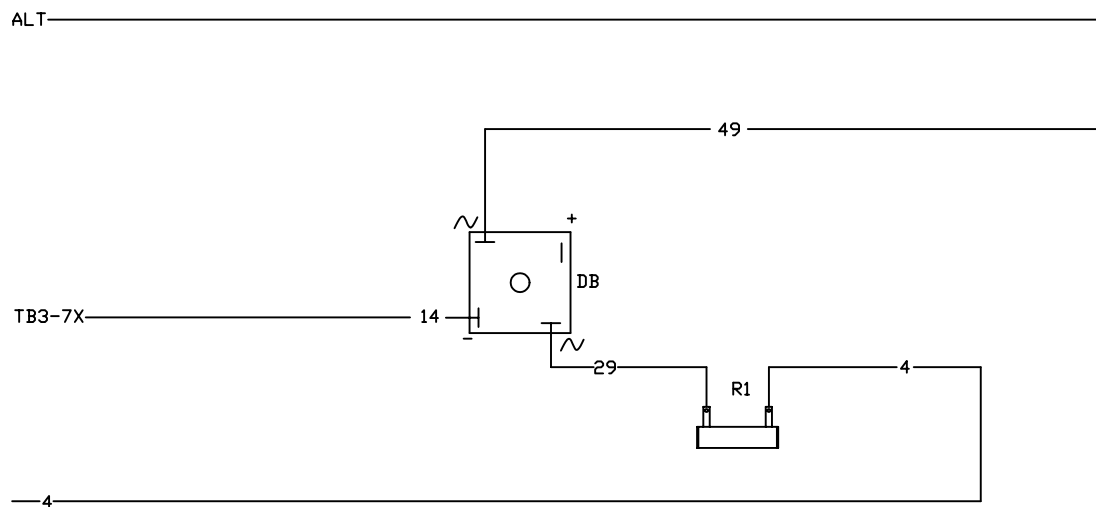

LEGEND	
AFS - AIR/FUEL SOLENOID	LFP - LOW FUEL PRESSURE SWITCH
AH1 - ALARM HORN	MCB_ - CIRCUIT BREAKER CONNECTIONS
ALT - DC CHARGE ALTERNATOR	MPU_ - MAG. PICK UP
AVR - AUTOMATIC VOLTAGE REGULATOR	O2_ - OXYGEN SENSOR
BCH - BATTERY CHARGER	OPS_ - OIL PRESSURE SENDER
CB - CIRCUIT BREAKER, DPE	OTS_ - OIL TEMP. SENDER
CDM - COMMUNICATIONS PORT (9 PIN D-SUB)	R_ - RESISTOR
CT1 - CT AØ	RB_ - RELAY BOARD
CT2 - CT BØ	RB_A - RELAY BOARD CONNECTOR
CT3 - CT CØ	SC - START CONTACTOR
DB - DIODE BRIDGE	SM - STARTER MOTOR CONNECTIONS
ES1 - EMERGENCY STOP SWITCH	SW1 - AUTO/MANUAL SELECT SWITCH
ESC - ELECTRONIC SIGNAL CONDITIONER	TB_ - TERMINAL BLOCKS
F_ - FUSE	WLS_ - COOLANT LEVEL SENDER
FS - FUEL SOLENOID	WTS_ - COOLANT TEMP. SENDER
FS2 - AUX. FUEL SOLENOID	
GA_ - GAS ACTUATOR	
GD - GAS DRIVER (14 PIN)	
GND - GROUND STUD CONNECTION	
ICM - IGNITION CONTROL MODULE	
J_- ELECTRONIC CONTROL MODULE CONNECTIONS	

GROUP G

