




GROUP G

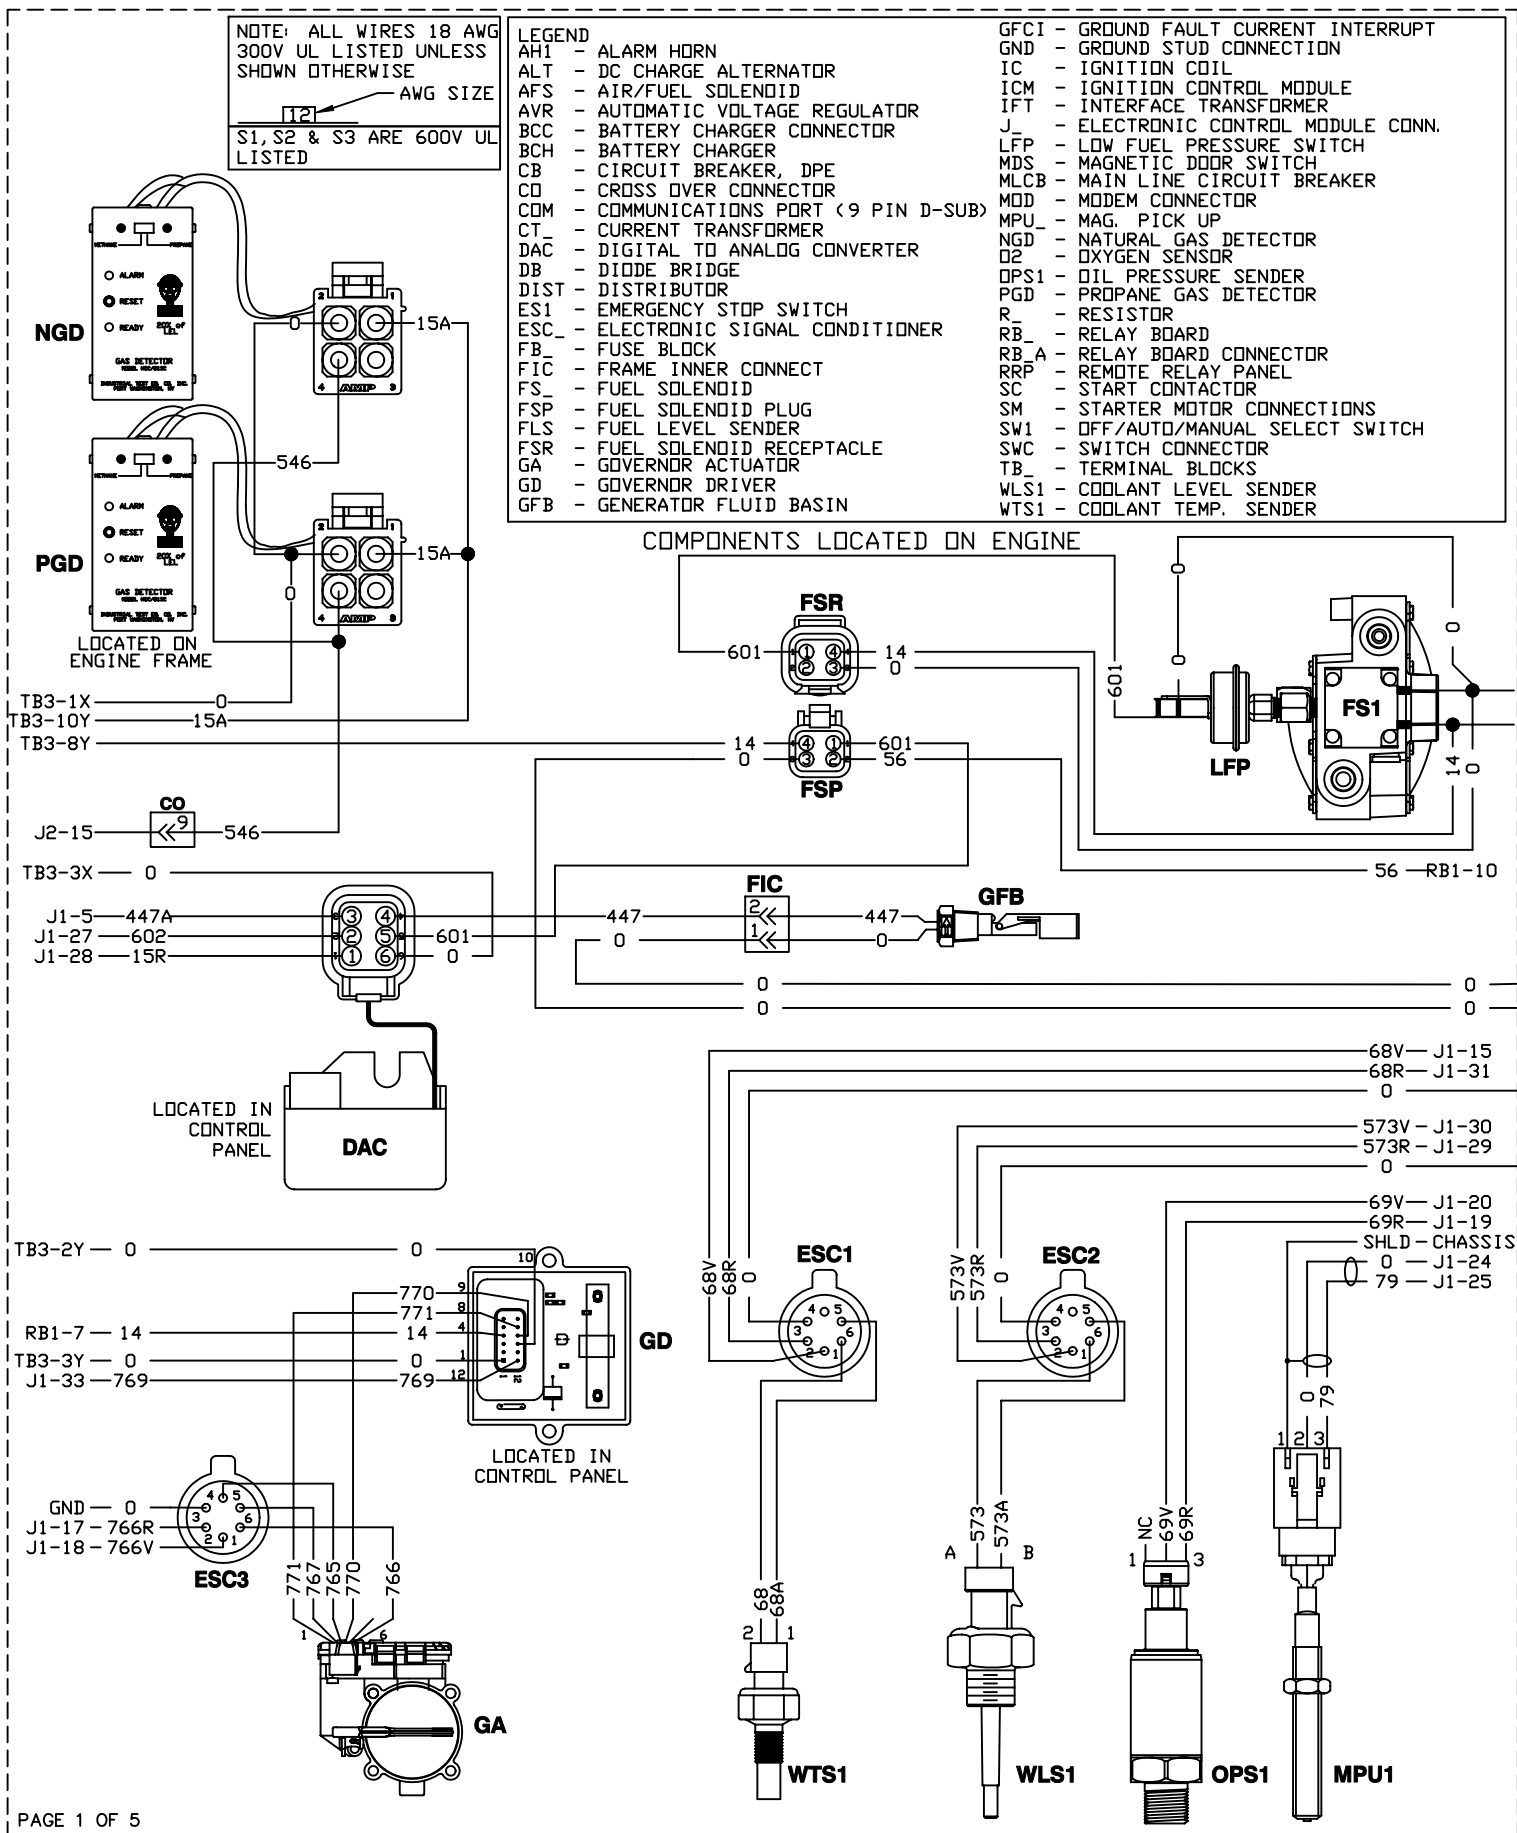


COMPONENTS LOCATED ON ENGINE

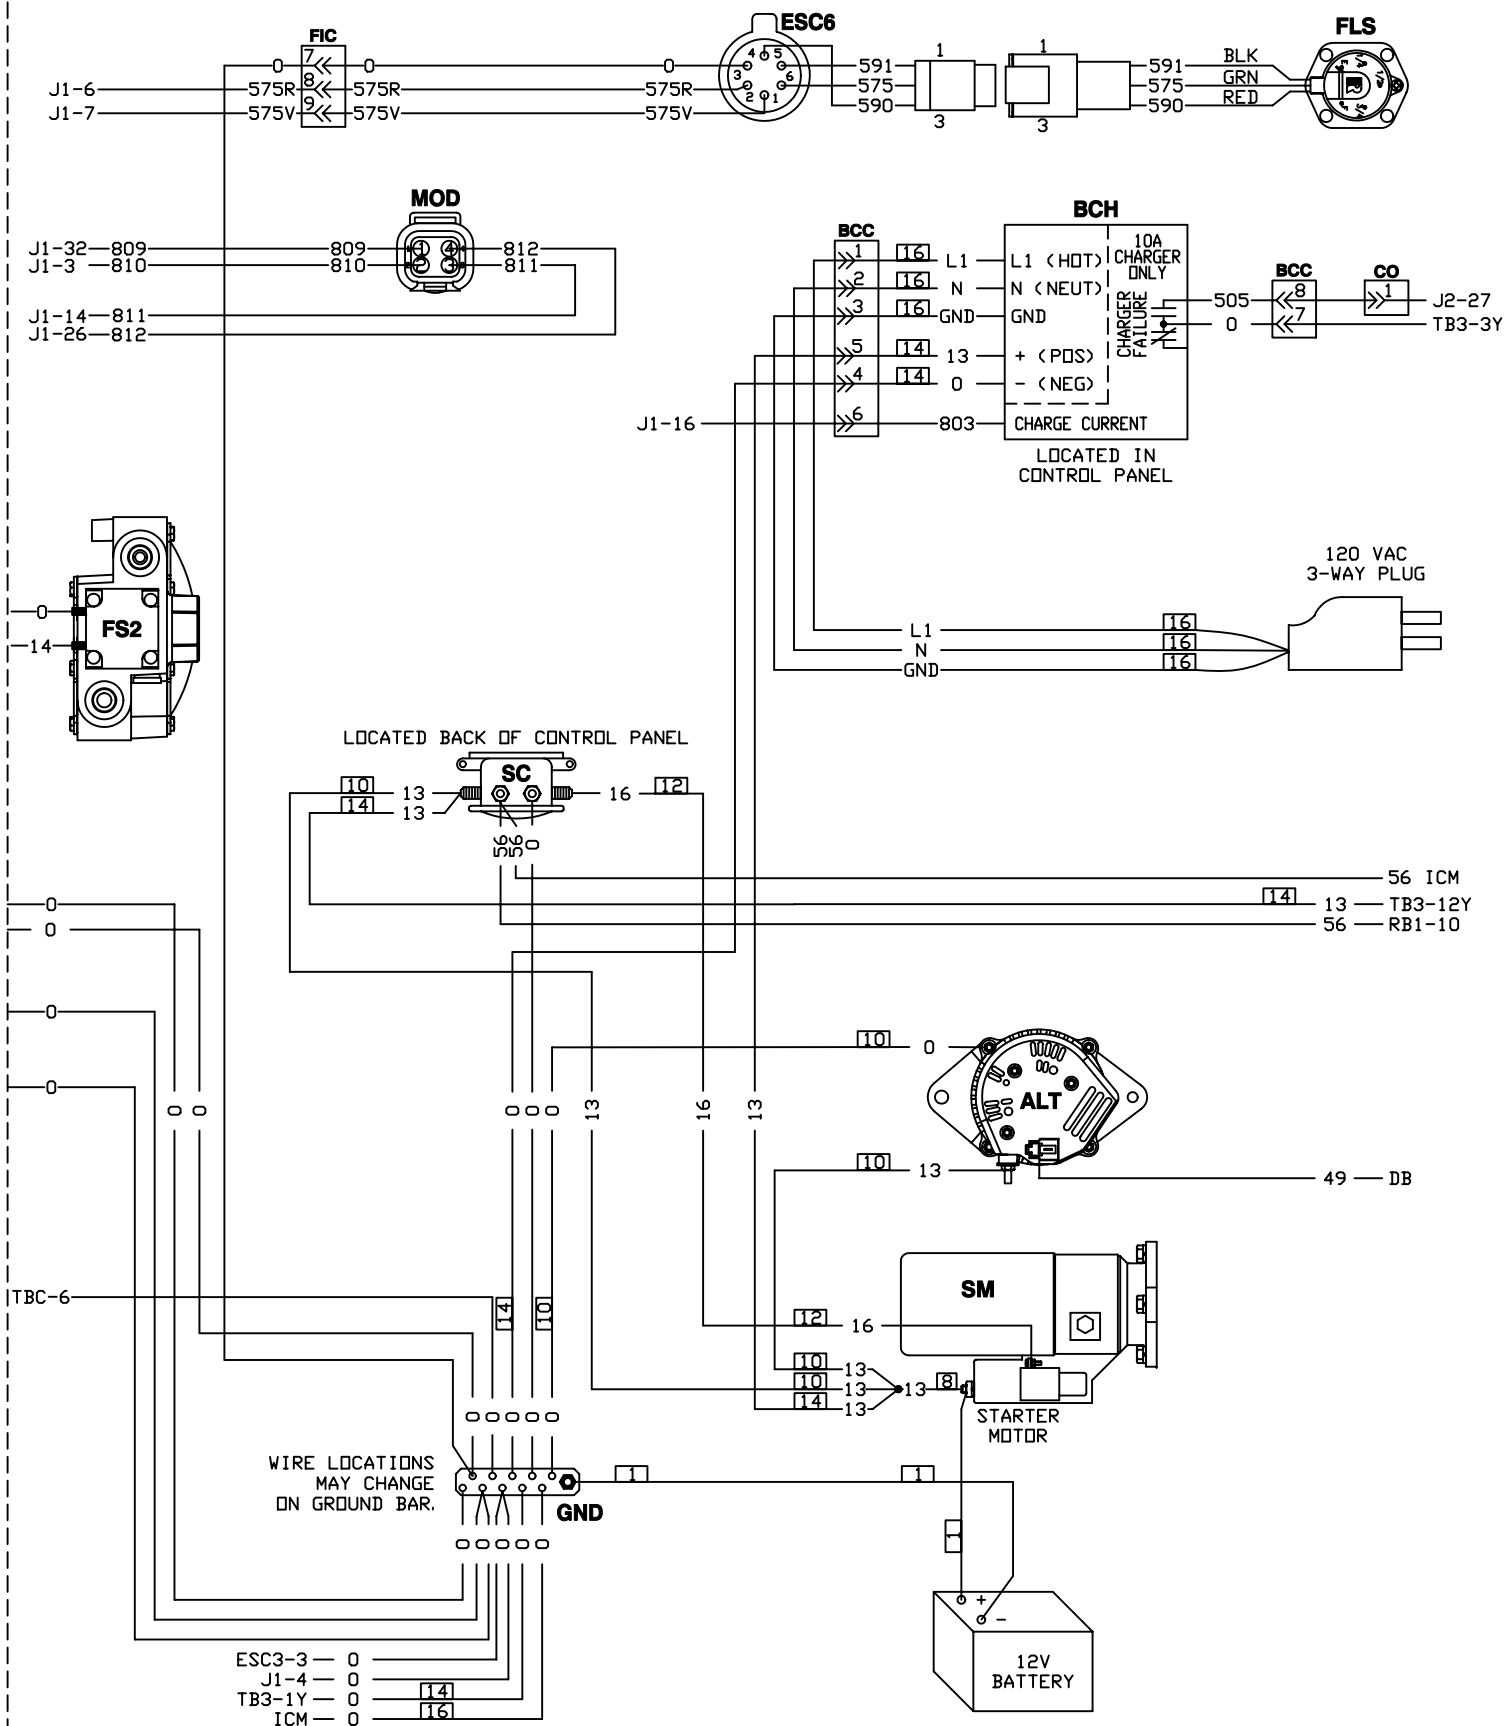

COMPONENTS LOCATED IN ALTERNATOR CONNECTION BOX

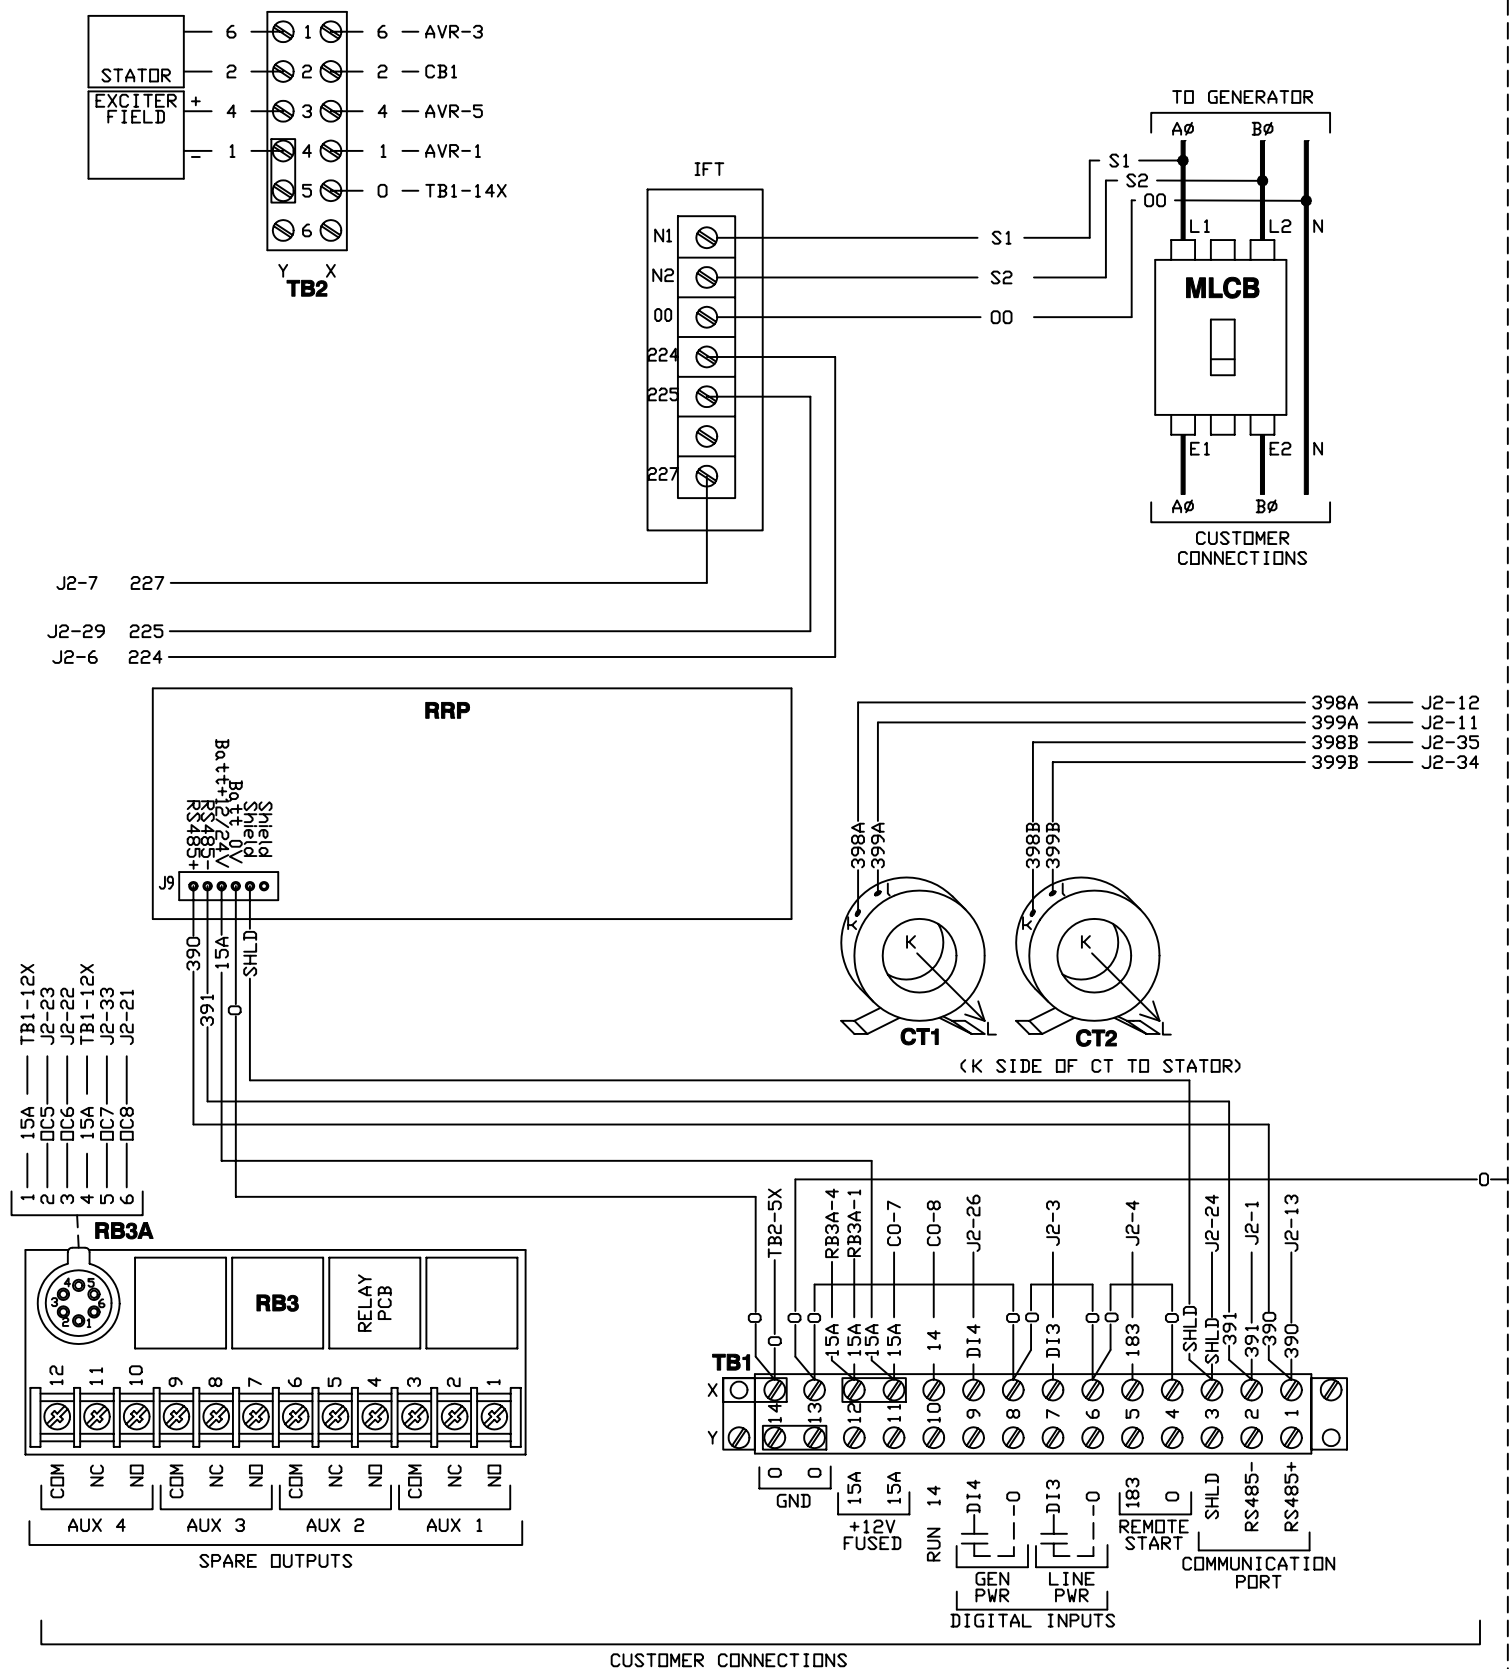

COMPONENTS LOCATED IN CONTROL PANEL

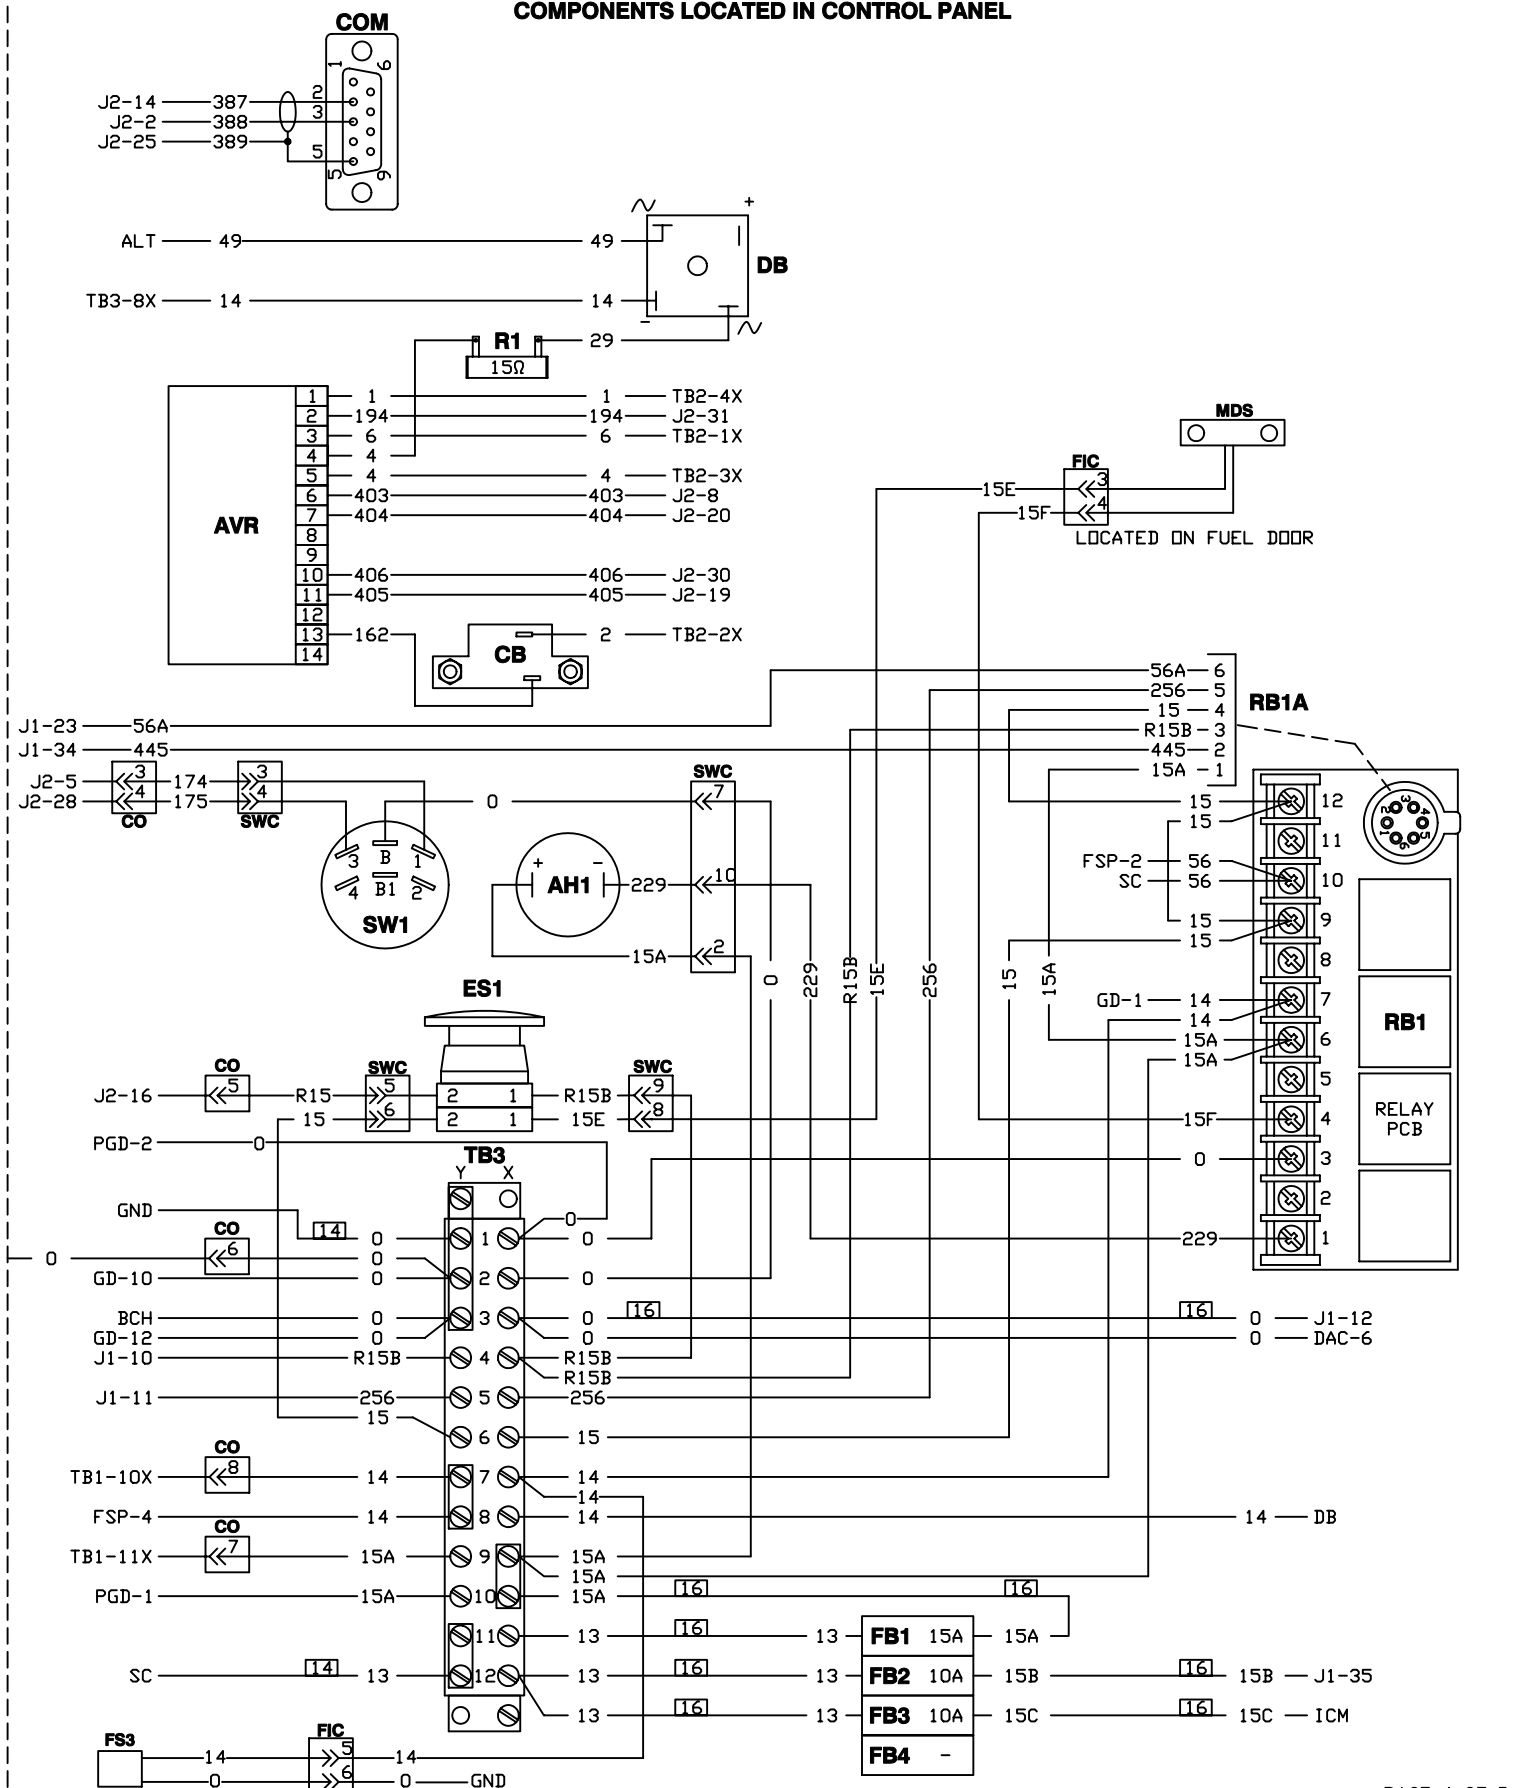

COMPONENTS LOCATED ON ENGINE

