


COMPONENTS LOCATED ON ENGINE

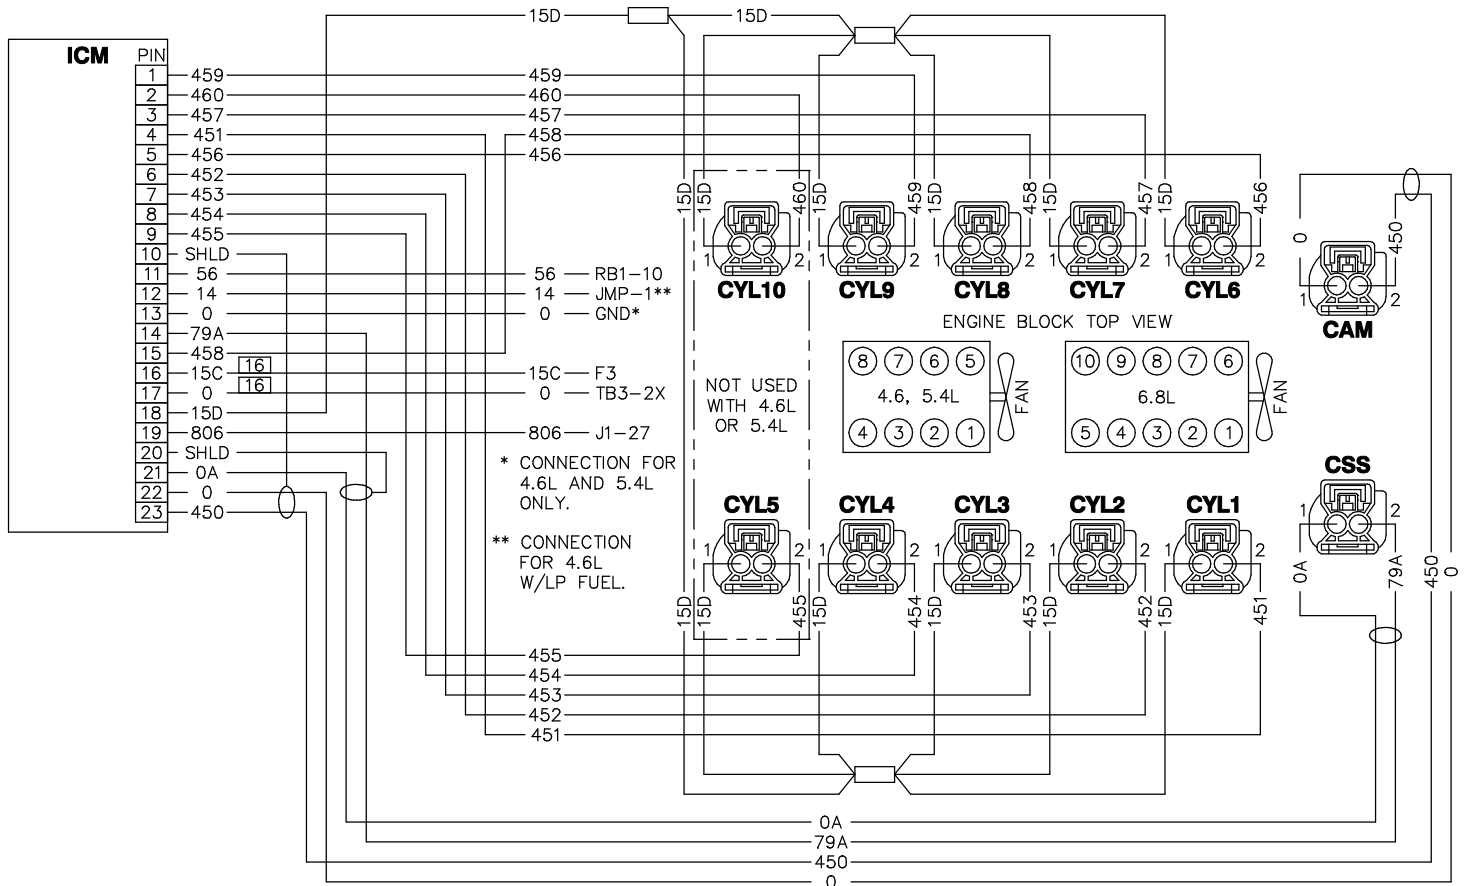

NOTE: ALL WIRES 18 AWG 300V UL LISTED UNLESS SHOWN OTHERWISE

AWG SIZE

S1,S2 & S3 ARE 600V UL LISTED

OPTION NOT AVAILABLE ON CPL UNITS

OTS1

TB3-2Y — 0

RB1-7 — 14

TB3-2Y — 0


J1-33 — 769

GND — 0

J1-17 — 766R

J1-18 — 766V

ESC3

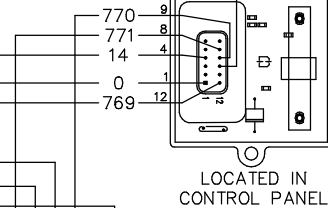

GA1

ESC1

ESC2


WTS1

WLS1

OPS1

MPU1


COMPONENTS LOCATED ON ENGINE

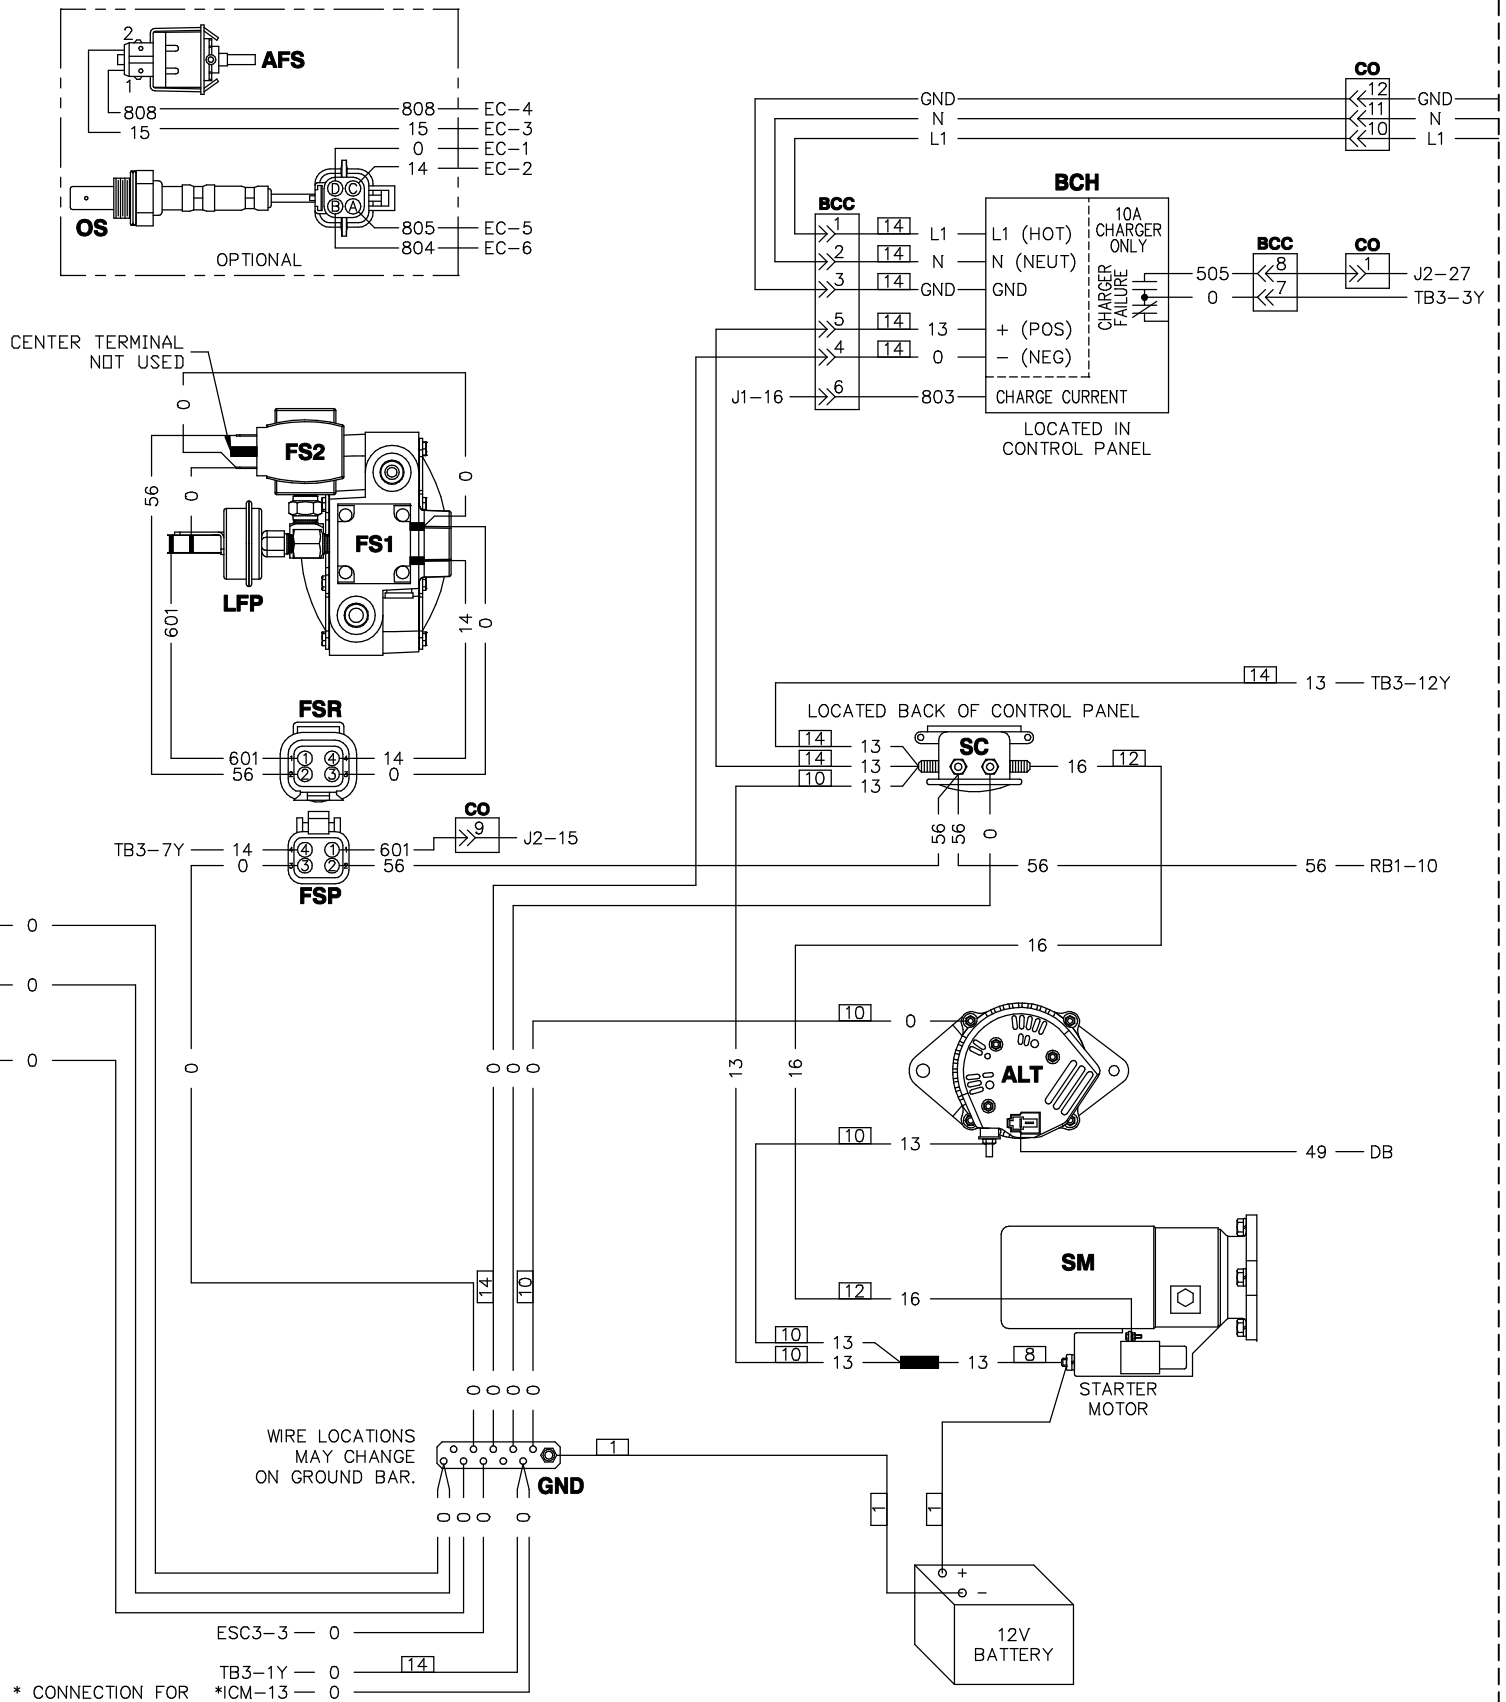

PAGE 2 OF 4

WIRING - DIAGRAM
4.6L, 5.4L & 6.8L H-PANEL
DRAWING #: 0F2576

COMPONENTS LOCATED IN ALTERNATOR CONNECTION BOX

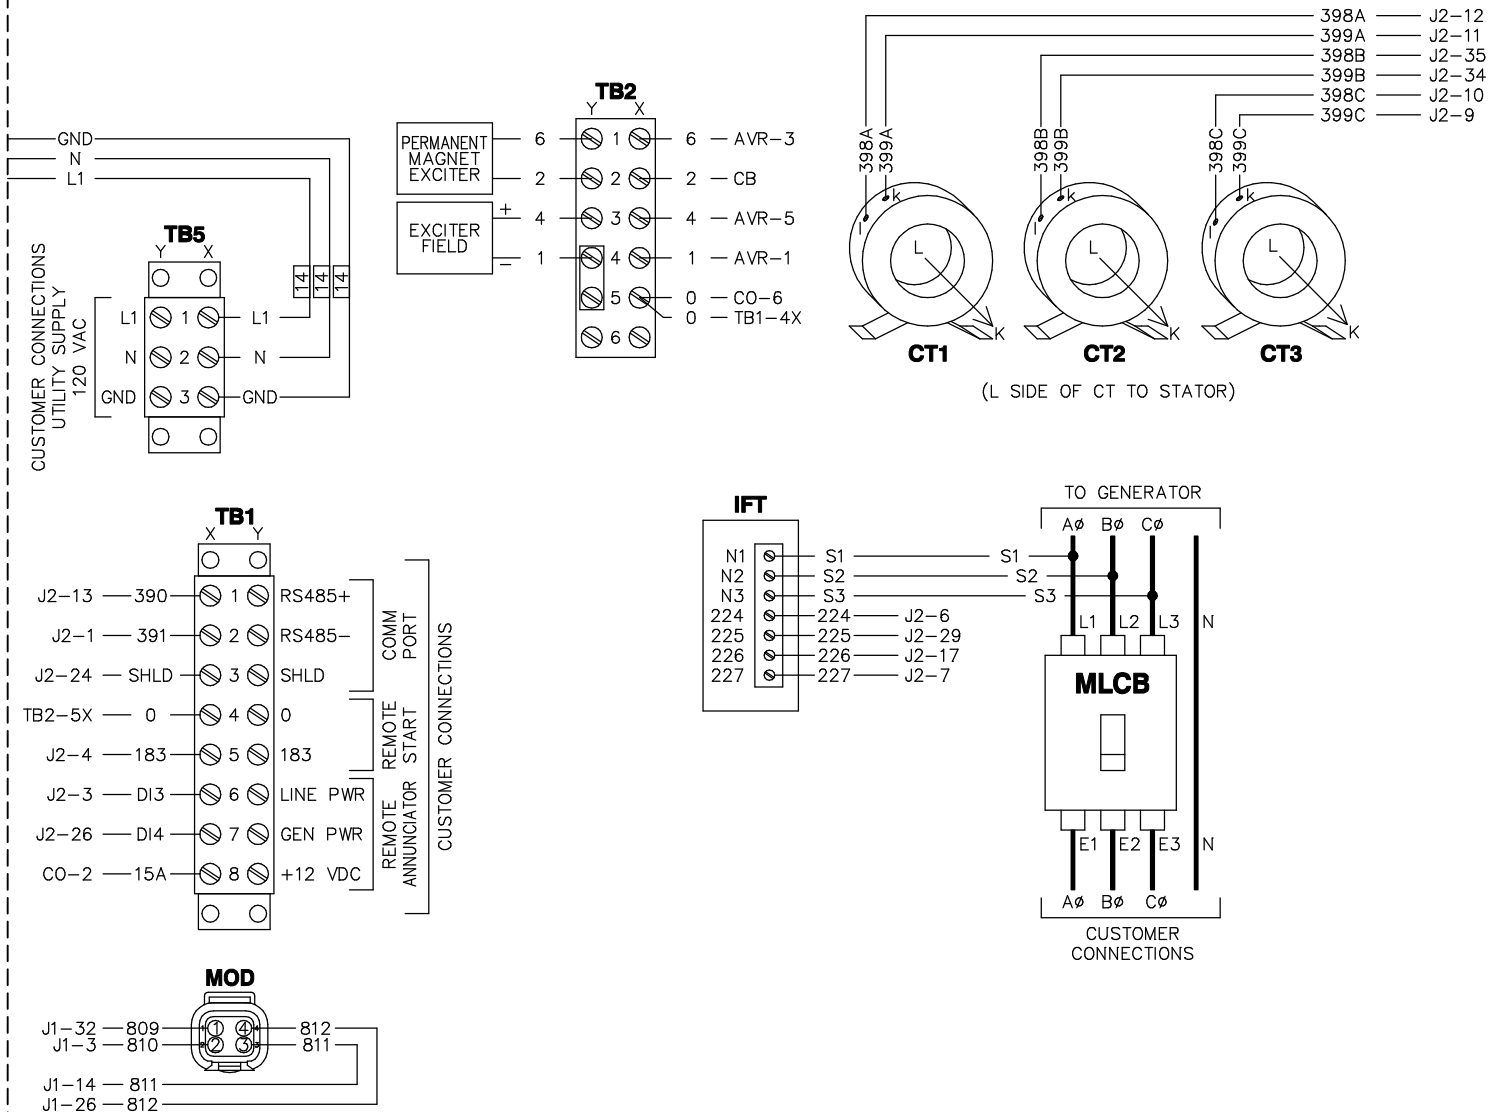

LEGEND

AFS — AIR/FUEL SOLENOID	GD — GOVERNOR DRIVER
AH1 — ALARM HORN	GND — GROUND BAR CONNECTION
ALT — DC CHARGE ALTERNATOR	ICM — IGNITION CONTROL MODULE
AVR — AUTOMATIC VOLTAGE REGULATOR	IFT — INTERFACE TRANSFORMER
BCC — BATTERY CHARGER CONNECTOR	J_ — ELECTRONIC CONTROL MODULE CONNECTIONS
BCH — BATTERY CHARGER	JMP — JUMPER CONNECTION FOR NATURAL GAS
CAM — CAMSHAFT SENSOR	LFP — LOW FUEL PRESSURE SWITCH
CB — CIRCUIT BREAKER, DPE	MLCB — MAIN LINE CIRCUIT BREAKER
CO — CROSSOVER CONNECTOR	MOD — MODEM CONNECTOR
COM — COMMUNICATIONS PORT (9 PIN D-SUB)	MPU1 — MAG. PICK UP
CSS — CRANKSHAFT SENSOR	OPS1 — OIL PRESSURE SENDER
CT_ — CURRENT TRANSFORMER	OS — OXYGEN SENSOR
CYL_ — CYLINDER IGNITION COIL	OTS1 — OIL TEMP. SENDER
DB — DIODE BRIDGE	R1 — RESISTOR
EC — EMISSIONS CONNECTOR	RB1 — RELAY BOARD
ECM — ELECTRONIC CONTROL MODULE (H-100)	RB1A — RELAY BOARD CONNECTOR
ES1 — EMERGENCY STOP SWITCH	SC — START CONTACTOR
ESC_ — ELECTRONIC SIGNAL CONDITIONER	SM — STARTER MOTOR CONNECTIONS
F_ — FUSE	SW1 — AUTO/MANUAL SELECT SWITCH
FS_ — FUEL SOLENOID	SWC — OPERATOR SWITCH CONNECTOR
FSP — FUEL SOLENOID PLUG	TB_ — TERMINAL BLOCKS
FSR — FUEL SOLENOID RECEPTACLE	WLS1 — COOLANT LEVEL SENDER
GA1 — GOVERNOR ACTUATOR	WTS1 — COOLANT TEMP. SENDER

COMPONENTS LOCATED IN CONTROL PANEL

