


WEIGHT DATA				
ENGINE/KW	ENCLOSURE MATERIAL	WEIGHT (GENSET ONLY) KG (LBS)	WEIGHT (WOODEN SHIPPING CRATE/SKID) KG (LBS)	SHIPPING WEIGHT (SKID AND GENSET) KG (LBS)
5. 4L/80KW	STEEL	1167 [2573]	79 [175]	1246 [2748]
	ALUMINUM	1088 [2399]	79 [175]	1168 [2574]
5. 4L/100KW	STEEL	1048 [2311]	79 [175]	1127 [2486]
	ALUMINUM	969 [2137]	79 [175]	1049 [2312]
6. 8L 100KW	STEEL	1227 [2705]	79 [175]	1306 [2880]
	ALUMINUM	1148 [2531]	79 [175]	1227 [2706]
6. 8L 130KW	STEEL	1287 [2837]	79 [175]	1383 [3048]
	ALUMINUM	1224 [2699]	79 [175]	1304 [2874]
6. 8L 150KW	STEEL	1209 [2666]	79 [175]	1289 [2841]
	ALUMINUM	1130 [2492]	79 [175]	1210 [2667]

NOTES:

- 1) MINIMUM RECOMMENDED CONCRETE PAD SIZE: 1240(48.8') WIDE X 3230 (127.2') LONG.
REFERENCE INSTALLATION GUIDE SUPPLIED WITH UNIT FOR CONCRETE PAD GUIDELINES.
- 2) ALLOW SUFFICIENT ROOM ON ALL SIDES OF THE GENERATOR FOR MAINTENANCE AND SERVICING. THIS UNIT MUST BE INSTALLED IN ACCORDANCE WITH CURRENT APPLICABLE NFPA 37 AND NFPA 70 STANDARDS AS WELL AS ANY OTHER FEDERAL, STATE AND LOCAL CODES FOR MINIMUM DISTANCES FROM OTHER STRUCTURES.
- 3) CIRCUIT BREAKER INFORMATION:
SEE SPECIFICATION SHEET WITHIN OWNERS MANUAL.
- 4) INSIDE STUB-UP AREA FOR AC LOAD LEAD CONDUIT CONNECTION, NEUTRAL CONNECTION, BATTERY CHARGER 120 VOLT AC (.5 AMP MAX.) CONNECTION, AND ACCESS TO TRANSFER SWITCH CONTROL WIRES. REMOVE FRONT COVER FOR ACCESS.
- 4A) FIELD CUT HOLE IS ONLY REQUIRED FOR MOUNTING OF GENERATOR ON AN EXISTING PAD.
- 5) REFERENCE OWNERS MANUAL FOR LIFTING WARNINGS.
- 6) REMOVE EITHER LEFT OR RIGHT HAND SIDE PANEL TO ACCESS EXHAUST MUFFLERS AND FAN BELT.

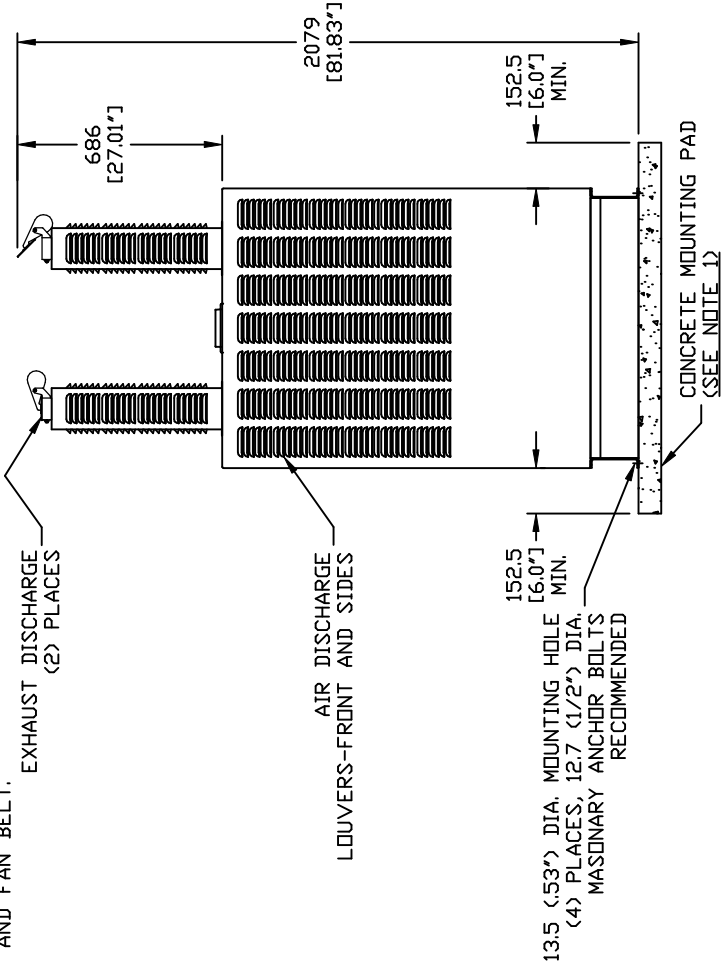

EXPLODED VIEW:
INSTALL CPL 5.4L/6.8L
DRAWING #: 0F6289



GROUP G

CENTER OF GRAVITY	
1310 (51.6")	- 80KW 5.4L
1405 (55.3")	- 100KW 5.4L
1275 (50.2")	- 100KW 6.8L
1230 (48.4")	- 130KW 6.8L
1315 (51.8")	- 150KW 6.8L

SERVICE ITEM ACCESSIBILITY CHART

SERVICE ITEM	ACCESS		
	80KW 5.4L	100KW 5.4L	130KW 150KW 6.8L 150KW 6.8L
OIL FILL CAP	THRU RIGHT FRONT DOOR	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR
OIL DIP STICK	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR
OIL FILTER	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR
OIL DRAIN HOSE	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR
RADIATOR DRAIN HOSE	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR	THRU LEFT FRONT DOOR
AIR CLEANER ELEMENT	EITHER FRONT DOORS	EITHER FRONT DOORS	EITHER FRONT DOORS
SPARK PLUGS	BOTH FRONT DOORS	BOTH FRONT DOORS	BOTH FRONT DOORS
MUFFLERS	SEE NOTE 6	SEE NOTE 6	SEE NOTE 6
FAN BELT	SEE NOTE 6	SEE NOTE 6	SEE NOTE 6
BATTERY	THRU RIGHT REAR DOOR	THRU RIGHT REAR DOOR	THRU RIGHT REAR DOOR
*GEARBOX FILL & DRAIN	THRU RIGHT REAR DOOR	THRU RIGHT REAR DOOR	THRU RIGHT REAR DOOR

*NOTE: EXCLUDING 5.4L 100KW & 6.8L 150KW UNITS
REFERENCE OWNERS MANUAL FOR PERIODIC
REPLACEMENT PART LISTINGS

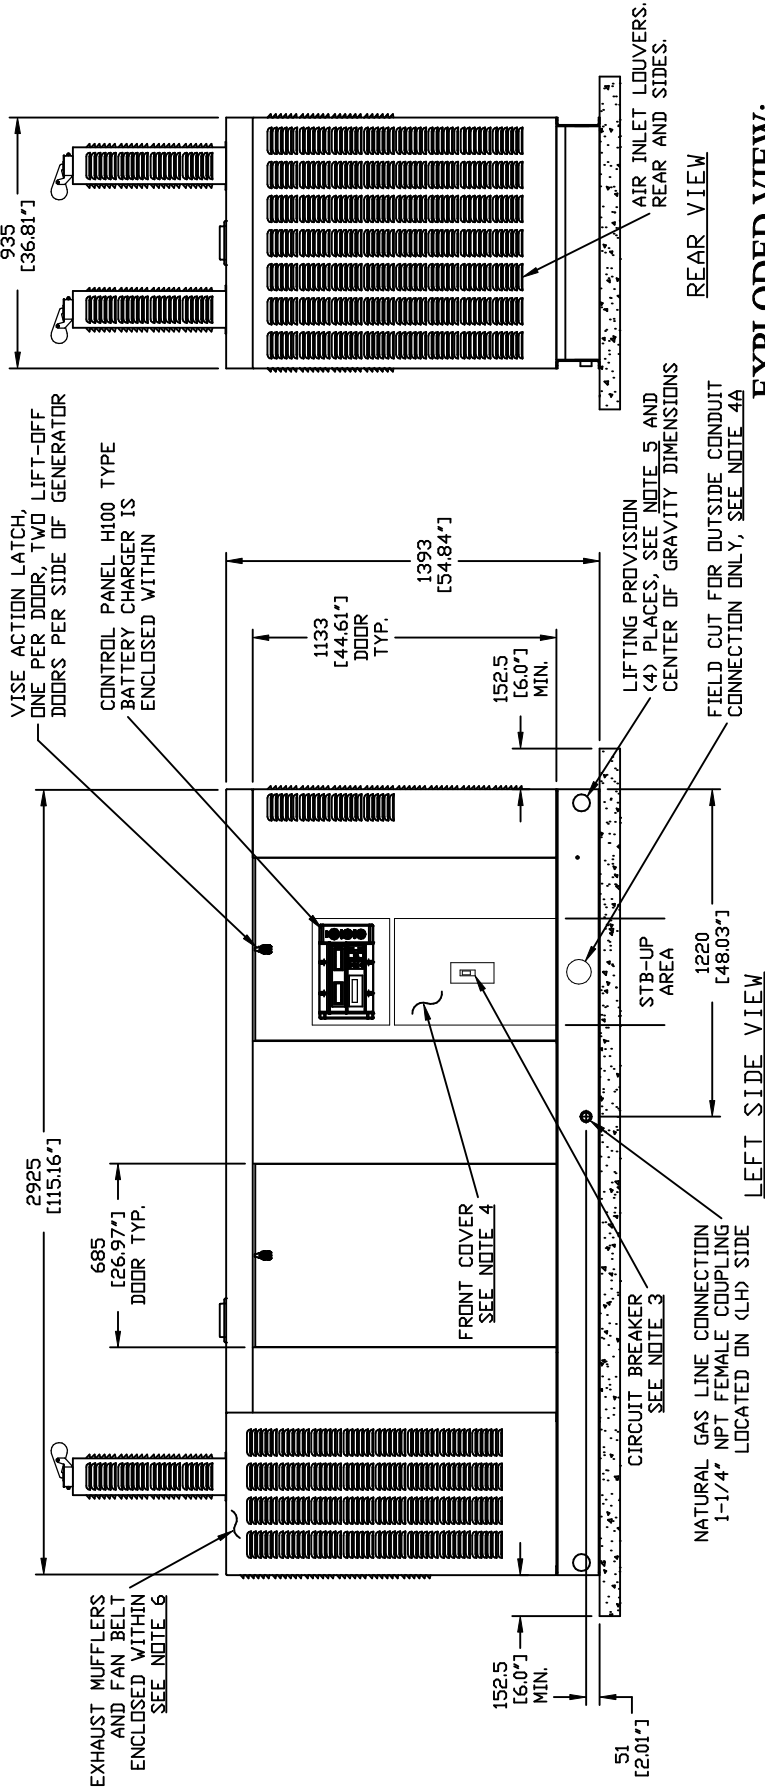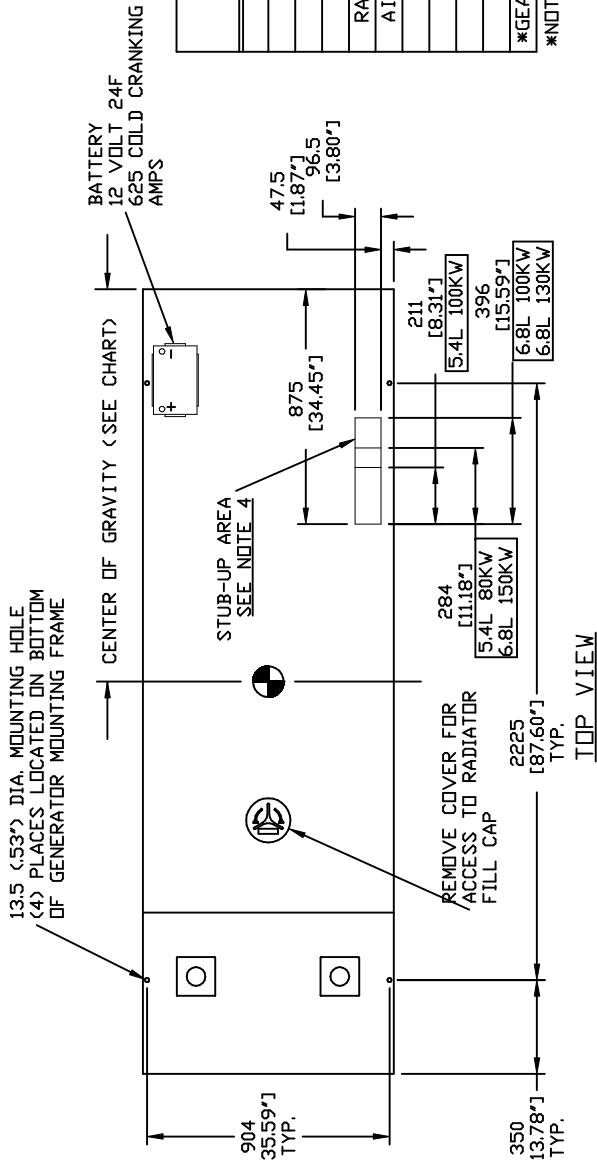

EXPLODED VIEW:
INSTALL CPL 5.4L/6.8L
DRAWING #: 0F6289