


```
BA - BRUSH ASSEMBLY
BCR - BATTERY CHARGE RELAY
CB - MAIN OUTPUT BREAKER
C1 - ENGINE HARNESS
C2 - ALTERNATOR HARNESS
CS - CHOKE SOLENOID
FS - FUEL SOLENOID
F1 - FUSE 15 AMP
GRD 1 - GROUND CONNECTIONS IN CONTROL PANEL
GRD 2 - GROUND CONNECTIONS AT ENGINE
HTO - HIGH OIL TEMPERATURE SWITCH
IC - INLINE CONNECTOR
ICT - INTERCONNECTION TERMINALS
IM - IGNITION MODULE
LOP - LOW OIL PRESSURE SWITCH
SC - STARTER CONTACTOR
SM - STARTER MOTOR
SP - SPARK PLUG
SW1 - AUTO / OFF / MANUAL SWITCH
SW2 - SET EXERCISE SWITCH
TB - INSULATED TERMINAL BLOCK, 4 TAB
TS - INSULATED TERMINAL STRIP, 4 POSITION
TX - TRANSFORMER, 16 Vac 56 VA & 16 Vac 1
```

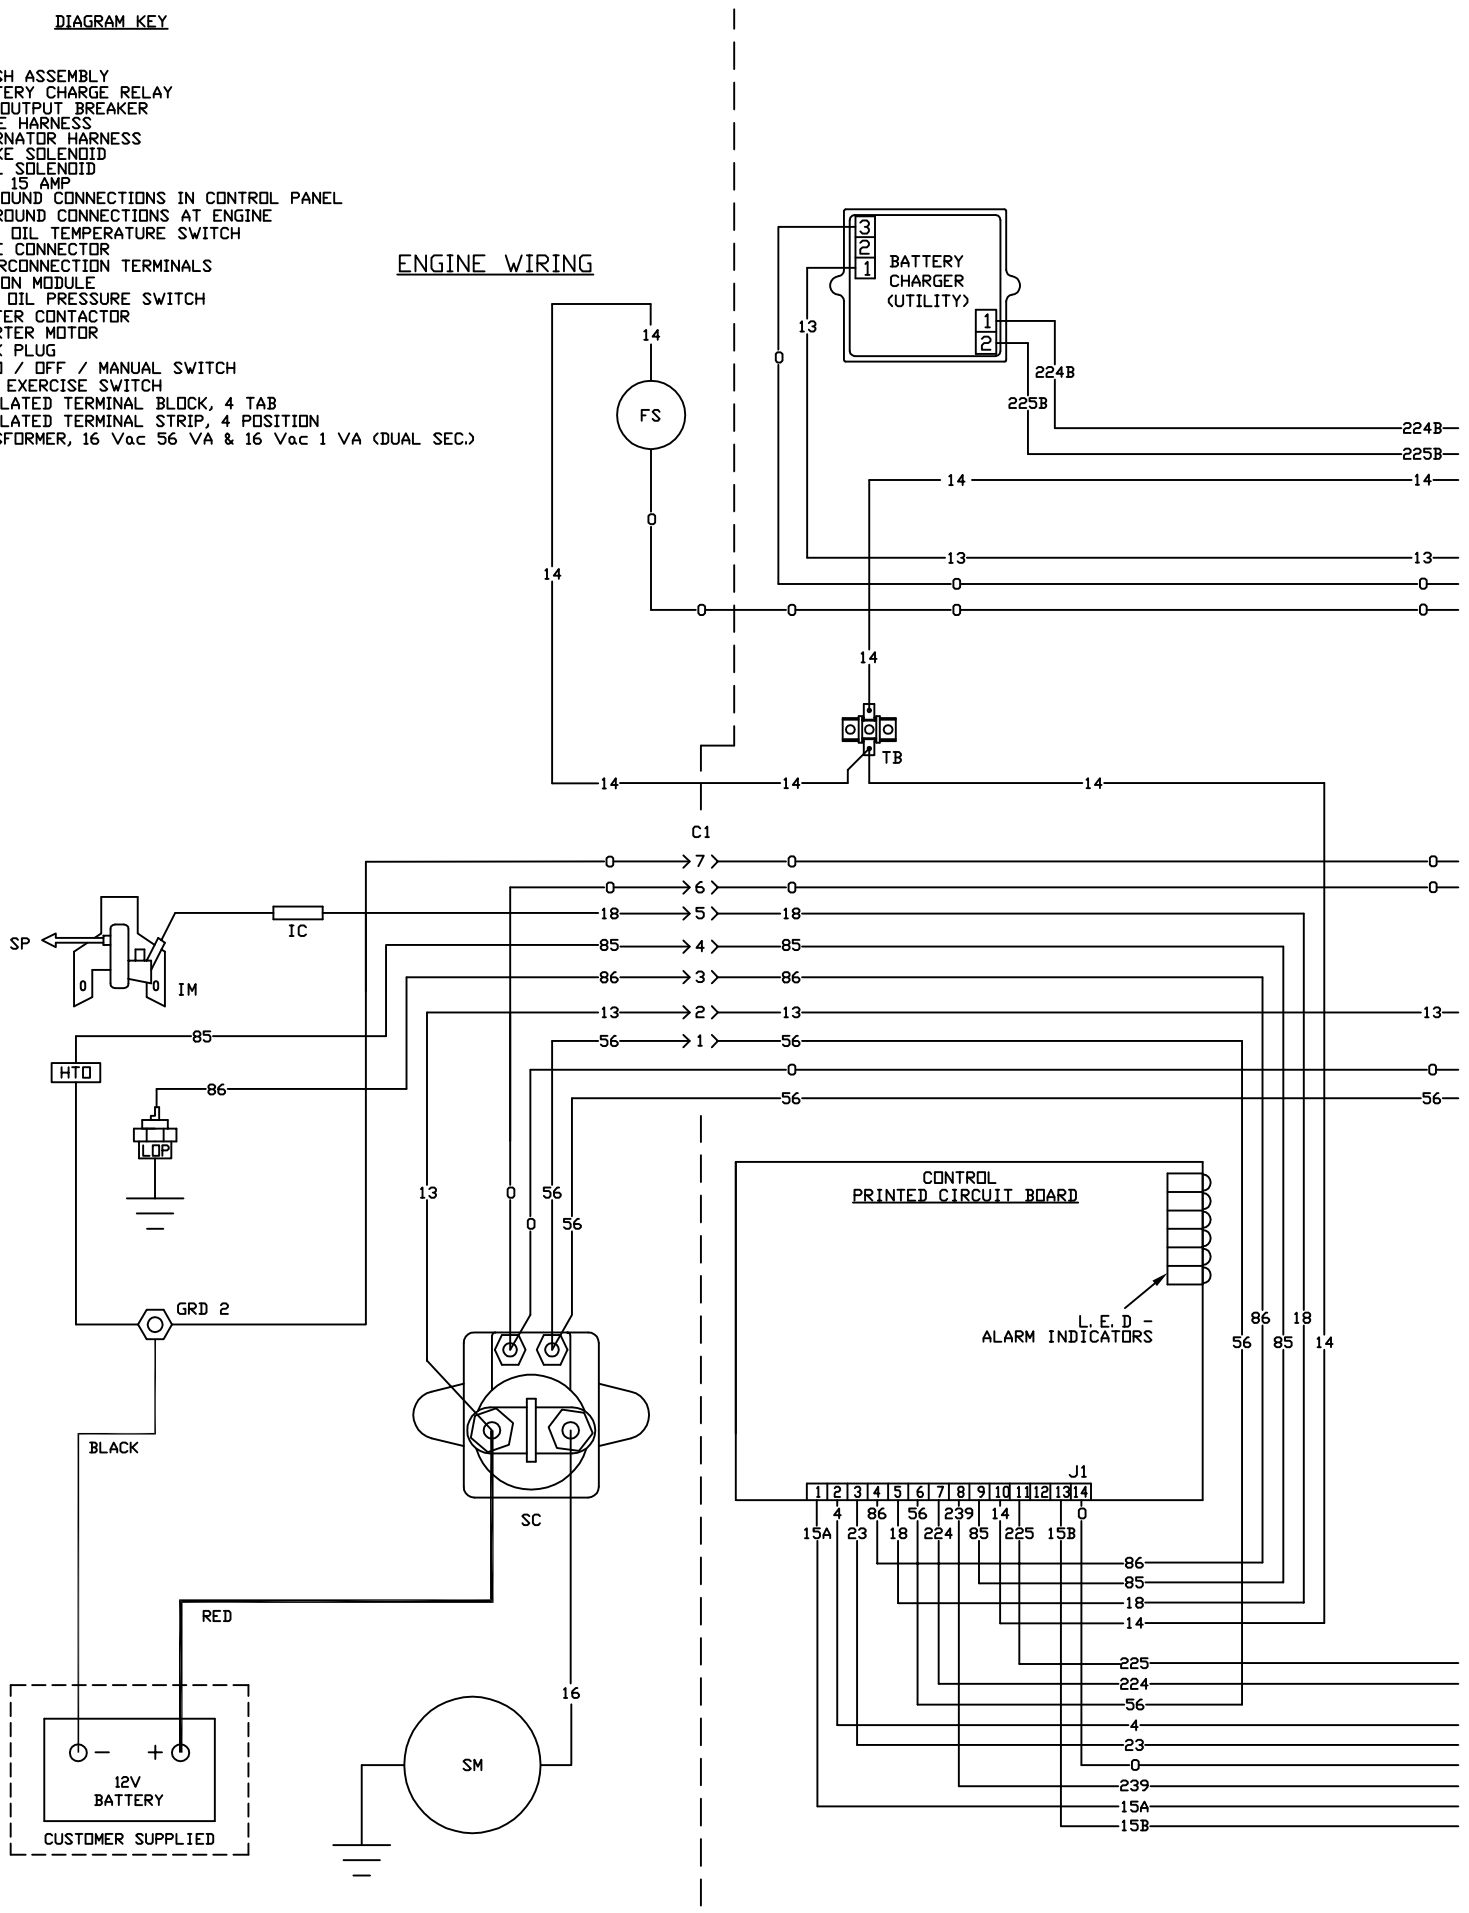

CONTROL PANEL BOX

