




COMPONENTS LOCATED ON ENGINE

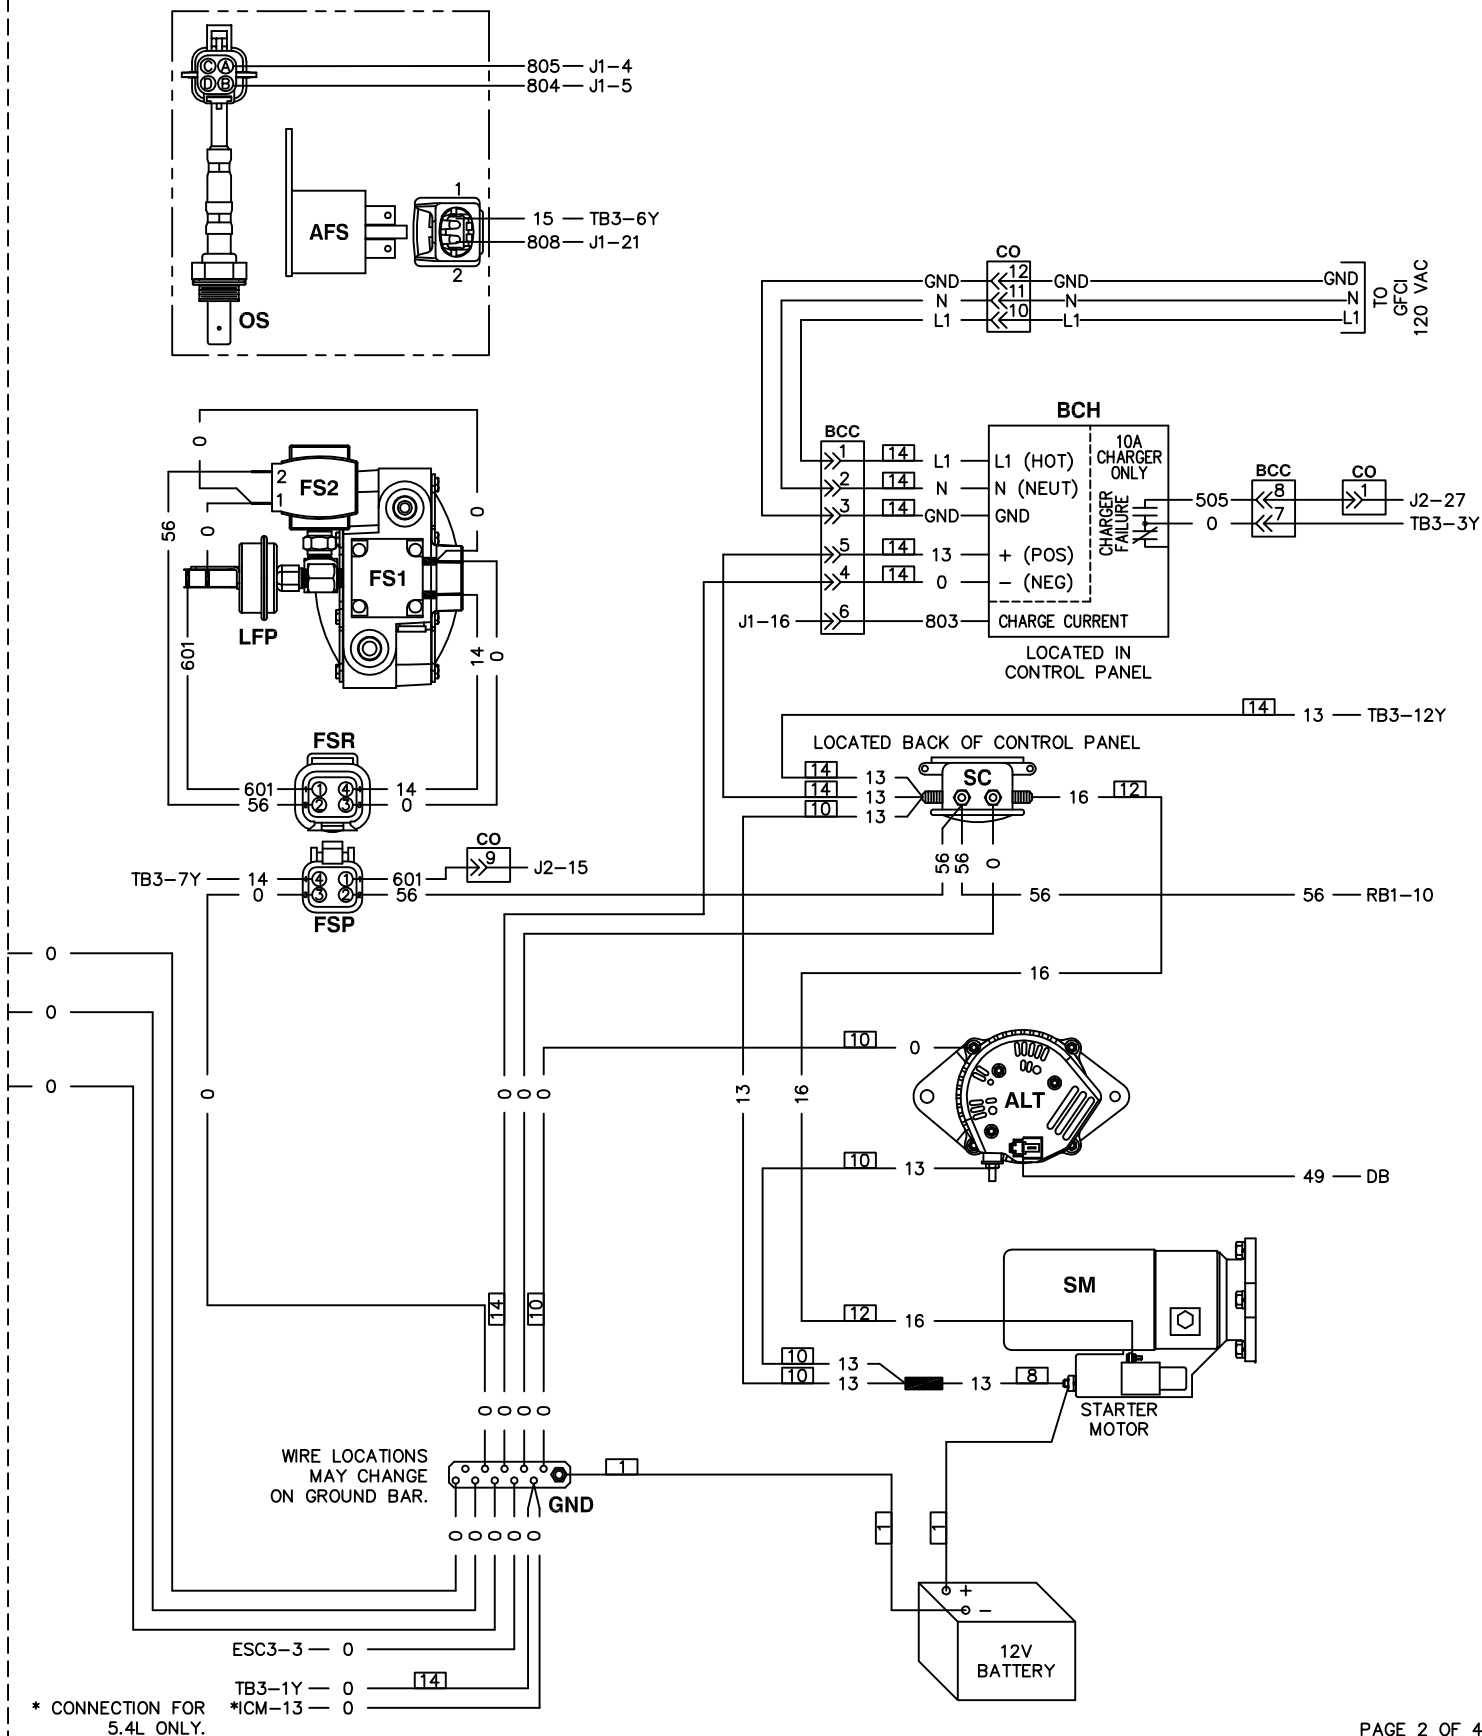


COMPONENTS LOCATED IN CIRCUIT BREAKER STAND

CONNECTIONS FOR 1Ø UNIT


CONNECTIONS FOR 3Ø UNIT

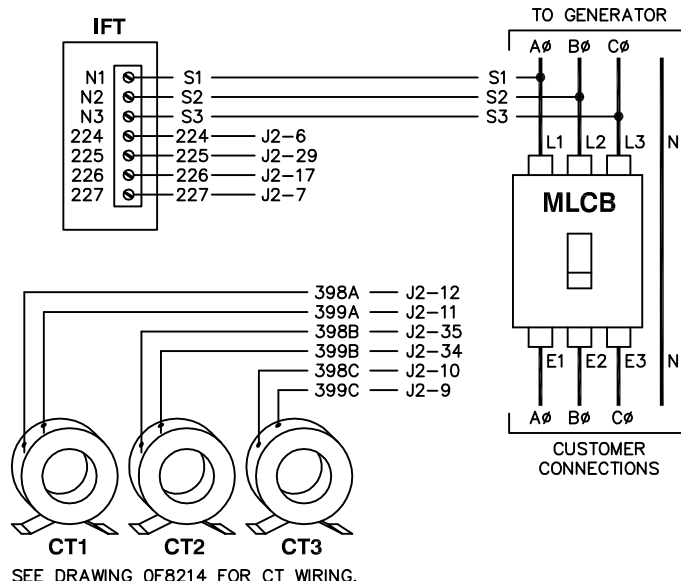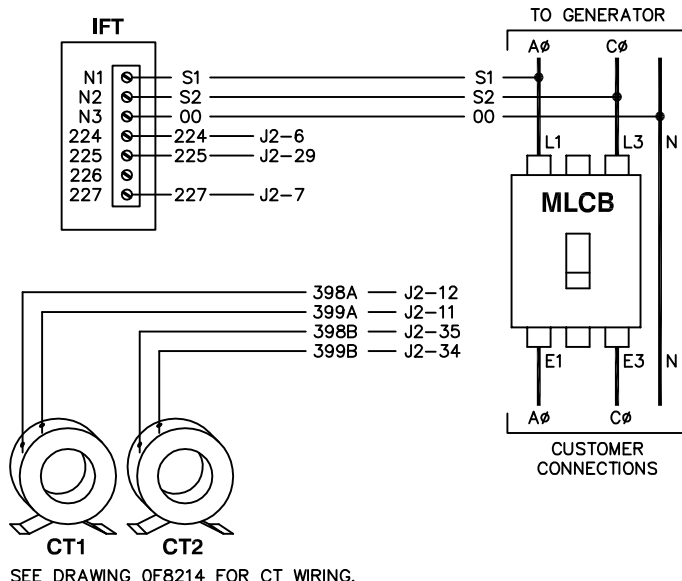


COMPONENTS LOCATED IN CIRCUIT BREAKER STAND

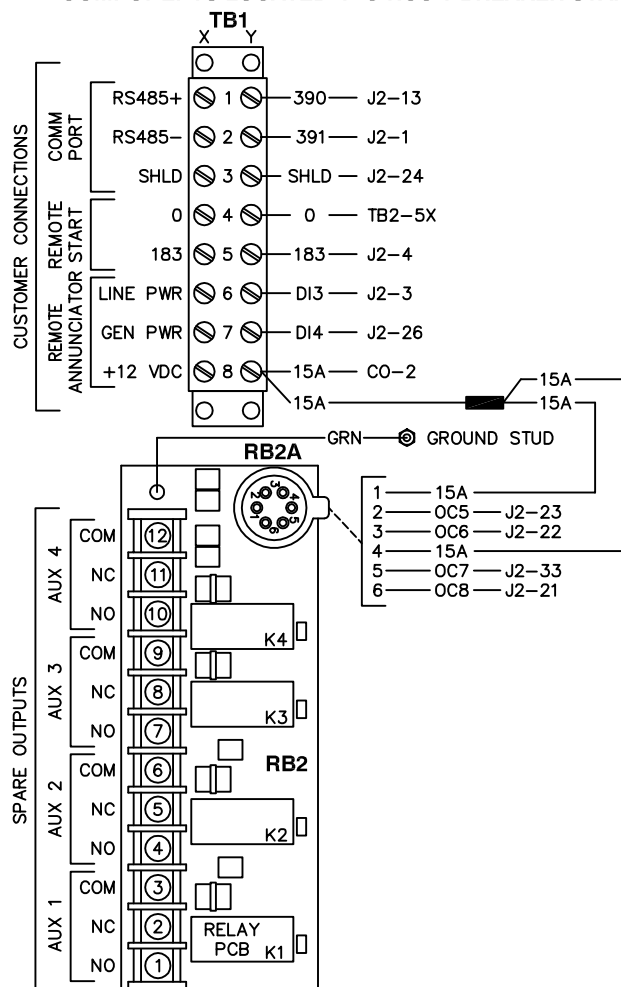

COMPONENTS LOCATED IN EXCITER SHIELD

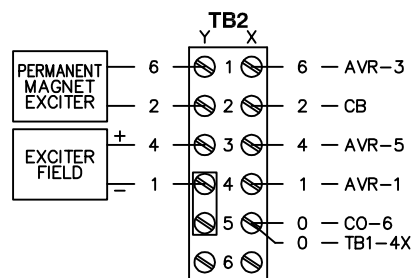

COMPONENTS LOCATED RIGHT SIDE OF ALT. CONN BOX ON THE FRAME RAIL.

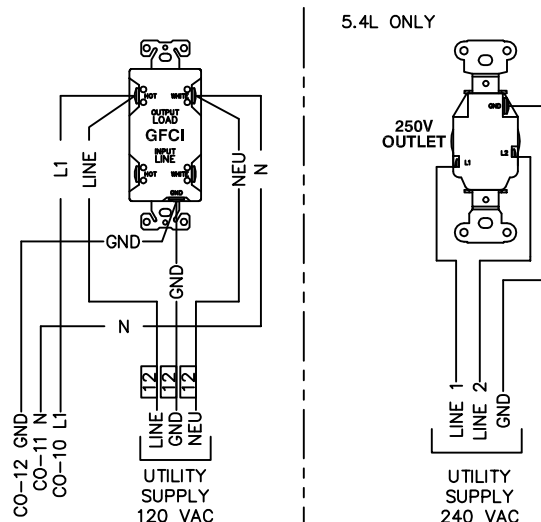

COMPONENTS LOCATED IN CONTROL PANEL

