


WEIGHT DATA				
ENGINE/KW	ENCLOSURE MATERIAL	WEIGHT (GENSET ONLY) KG (LBS)	WEIGHT (WOODEN SHIPPING CRATE/SKID) KG (LBS)	SHIPPING WEIGHT (SKID AND GENSET) KG (LBS)
5. 4L/80KW	STEEL	1167 [2573]	79 [175]	1246 [2748]
	ALUMINUM	1088 [2399]	79 [175]	1168 [2574]
5. 4L/100KW	STEEL	1048 [2311]	79 [175]	1127 [2486]
	ALUMINUM	969 [2137]	79 [175]	1049 [2312]
6. 8L 100KW	STEEL	1227 [2705]	79 [175]	1306 [2880]
	ALUMINUM	1148 [2531]	79 [175]	1227 [2706]
6. 8L 130KW	STEEL	1287 [2837]	79 [175]	1383 [3048]
	ALUMINUM	1224 [2699]	79 [175]	1304 [2874]
6. 8L 150KW	STEEL	1209 [2666]	79 [175]	1289 [2841]
	ALUMINUM	1130 [2492]	79 [175]	1210 [2667]

NOTES:

- 1) MINIMUM RECOMMENDED CONCRETE PAD SIZE: 1240(48.8') WIDE X 3230 (127.2') LONG.
REFERENCE INSTALLATION GUIDE SUPPLIED WITH UNIT FOR CONCRETE PAD GUIDELINES.
- 2) ALLOW SUFFICIENT ROOM ON ALL SIDES OF THE GENERATOR FOR MAINTENANCE AND SERVICING. THIS UNIT MUST BE INSTALLED IN ACCORDANCE WITH CURRENT APPLICABLE NFPA 37 AND NFPA 70 STANDARDS AS WELL AS ANY OTHER FEDERAL, STATE AND LOCAL CODES FOR MINIMUM DISTANCES FROM OTHER STRUCTURES.
- 3) CIRCUIT BREAKER INFORMATION:
SEE SPECIFICATION SHEET WITHIN OWNERS MANUAL.
- 4) INSIDE STUB-UP AREA FOR AC LOAD LEAD CONDUIT CONNECTION, NEUTRAL CONNECTION, BATTERY CHARGER 120 VOLT AC (.5 AMP MAX.) CONNECTION, AND ACCESS TO TRANSFER SWITCH CONTROL WIRES. REMOVE FRONT COVER FOR ACCESS.
- 4A) FIELD CUT HOLE IS ONLY REQUIRED FOR MOUNTING OF GENERATOR ON AN EXISTING PAD.
- 5) REFERENCE OWNERS MANUAL FOR LIFTING WARNINGS.
- 6) REMOVE EITHER LEFT OR RIGHT HAND SIDE PANEL TO ACCESS EXHAUST MUFFLERS AND FAN BELT.

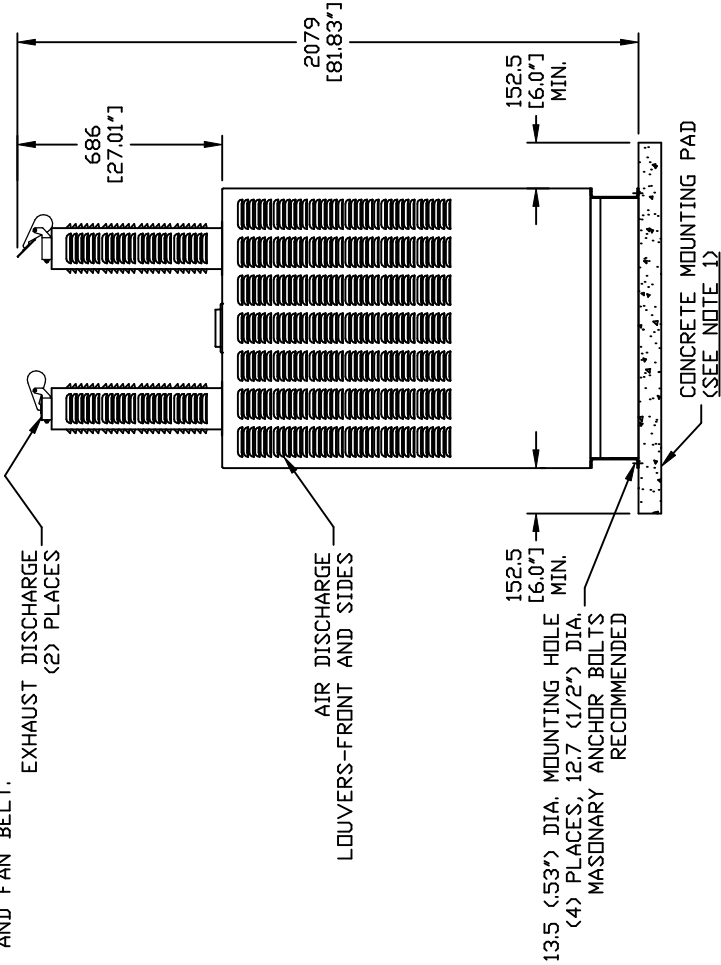

EXPLODED VIEW:
INSTALL CPL 5.4L/6.8L
DRAWING #: 0F6289


GROUP G

CENTER OF GRAVITY			
1310 (51.6")	- 80KW 5.4L		
1405 (55.3")	- 100KW 5.4L		
1275 (50.2")	- 100KW 6.8L		
1230 (48.4")	- 130KW 6.8L		
1315 (51.8")	- 150KW 6.8L		

SERVICE ITEM ACCESSIBILITY CHART


SERVICE ITEM	ACCESS			
	80KW 5.4L	100KW 5.4L	130KW 6.8L	150KW 6.8L
OIL FILL CAP		THRU RIGHT FRONT DOOR		
OIL DIP STICK		THRU LEFT FRONT DOOR		
OIL FILTER		THRU LEFT FRONT DOOR		
OIL DRAIN HOSE		THRU RIGHT FRONT DOOR		
RADIATOR DRAIN HOSE		THRU LEFT FRONT DOOR		
AIR CLEANER ELEMENT		EITHER FRONT DOORS		
SPARK PLUGS		BOTH FRONT DOORS		
MUFFLERS		SEE NOTE 6		
FAN BELT		SEE NOTE 6		
BATTERY		THRU RIGHT REAR DOOR		
*GEARBOX FILL & DRAIN		THRU RIGHT REAR DOOR		

*NOTE: EXCLUDING 5.4L 100KW & 6.8L 150KW UNITS
REFERENCE OWNERS MANUAL FOR PERIODIC
REPLACEMENT PART LISTINGS

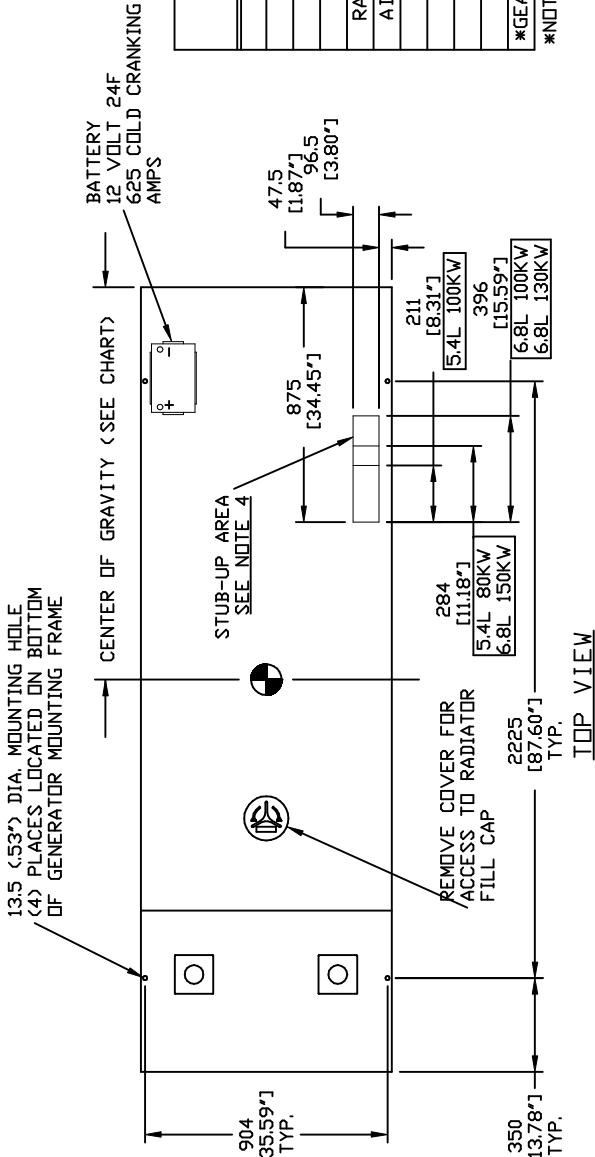

WISE ACTION LATCH,
ONE PER DOOR, TWO LIFT-OFF
DOORS PER SIDE OF GENERATOR

CONTROL PANEL H100 TYPE
BATTERY CHARGER IS
ENCLOSED WITHIN

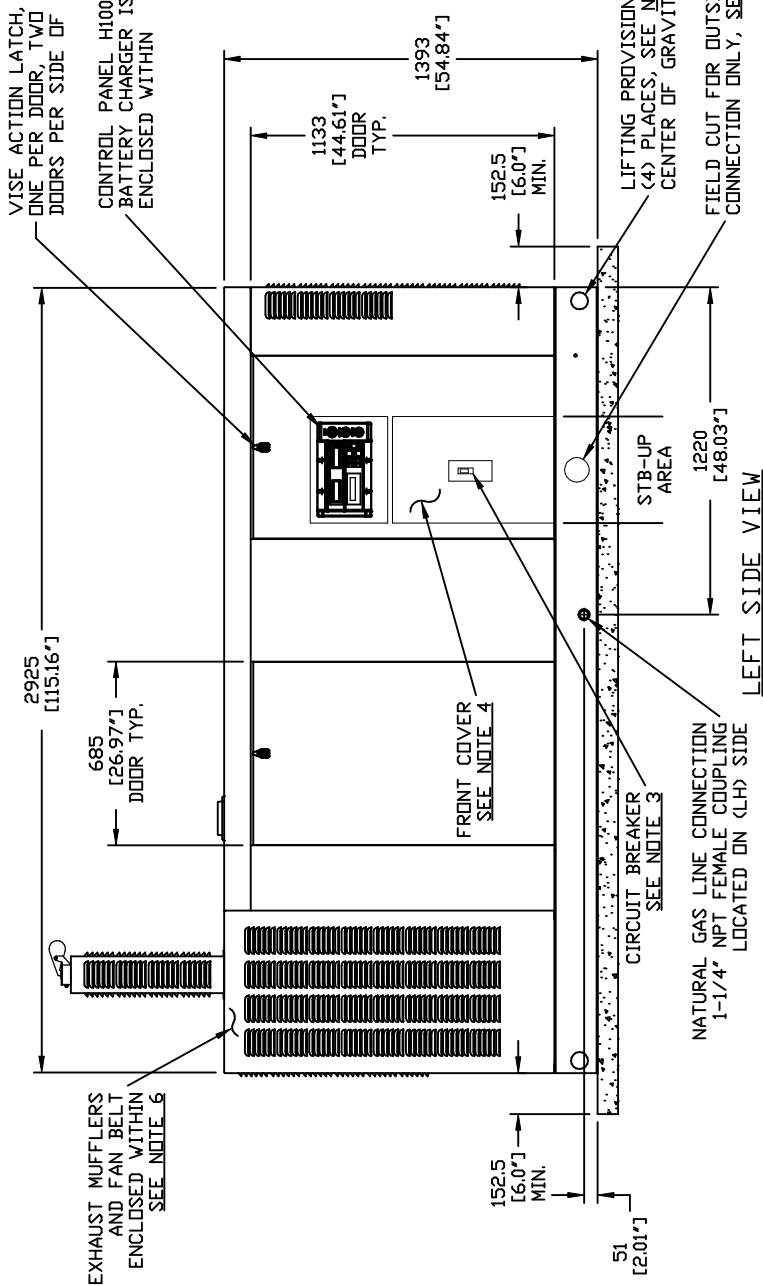

EXPLODED VIEW:
INSTALL CPL 5.4L/6.8L
DRAWING #: 0F6289