

GD CONNECTOR

PIN	WIRE	TO	FUNCTION
1	0	GND	NOTE 1
4	14	RB1-7	NOTE 3
8	771	GA1-1	THROTTLE DRIVE LO
9	770	GA1-4	THROTTLE DRIVE HI
10	0	GND	NOTE 1
12	769	J1-33	THROTTLE PWM

AVR CONNECTOR

PIN	WIRE	TO	FUNCTION
1	1	FIELD	- FIELD
2	194	J2-31	+12VDC
3	6	PME	PME OUTPUT
4	4	R1/FIELD	+ FIELD
5	4	R1/FIELD	+ FIELD
6	403	J2-8	GATE TRIGGER B
7	404	J2-20	GATE TRIGGER A
10	406	J2-30	ZERO CROSSING I/P
11	405	J2-19	GROUND (ISO)
13	162	CB1	PME OUTPUT (AFTER CB)

ICM - IGNITION MODULE CONNECTOR

PIN	WIRE	TO	FUNCTION
1	25A	CP-C	IGNITION COIL DRIVE A
3	25B	CP-A	IGNITION COIL DRIVE B
10	194A	CIM-3	CIM POWER
11	56	RB1-10	STARTER RELAY OUT
12	56	JMP-1	STARTER RELAY OUT (# SEE NOTE)
13	JMP1	ICM-15	2.4L ENGINE SEL RETURN
14	79A	MPU1-3	FLYWHEEL SENSOR +
15	JMP1	ICM-13	2.4L ENGINE SELECT
16	15C	F3	NOTE 7
17	0	GND	NOTE 1
18	15R	CP-B	IGNITION COIL PWR
19	BLU	IM	FLYWHEEL SIGNAL OUT
20	SHLDA	MPU1-1	FLYWHEEL SENSOR DRAIN
21	0A	MPU1-2	FLYWHEEL SENSOR -
22	0	CIM-2	CIM PWR RETURN
23	402	CIM-1	CAM SIGNAL

#NOTE: DISCONNECT JMP WHEN USING LP FUEL.

ENGINE CONTROL MODULE CONNECTIONS**J1**

PIN	WIRE	TO	FUNCTION
3	810	MOD-2	MODEM SIGNAL RETURN
4	805	OS-A	OXYGEN SENSOR RTN (OPTION)
5	804	OS-B	OXYGEN SENSOR + (OPTION)
9	RED	IM	+12VDC
10	R15B	RB1A-3/ES1	OVERSPEED/WATCHDOG
11	256	RB1A-5	FUEL RELAY
12	0	GND	NOTE 1
14	811	MOD-3	MODEM DATA CARRIER DETECT
15	68V	ESC1-1	COOLANT TEMP +
16	803	BCH	BAT CHARGER CURRENT
17	766R	ESC3-2	THROTTLE POS RTN
18	766V	ESC3-1	THROTTLE POS +
19	69R	OPS1-3	OIL PRESS RTN
20	69V	OPS1-2	OIL PRESS +
21	808	AFS-2	AIR/FUEL SOLENOID (OPTION)
23	56A	RB1A-6	STARTER RELAY
24	BLK	IM	MPU1 SIGNAL -
25	BLU	IM	MPU1 SIGNAL +
26	812	MOD-4	MODEM ENABLE
29	573R	ESC2-2	COOLANT LVL RTN
30	573V	ESC2-1	COOLANT LVL +
31	68R	ESC1-2	COOLANT TEMP RTN
32	809	MOD-1	MODEM 12V POWER
33	769	GD-12	THROTTLE PWM
34	445	RB1A-2	ALARM RELAY
35	15B	F2	NOTE 6



J2


PIN	WIRE	TO	FUNCTION
1	391	CUST CON	RS485- (XFER SW)
2	388	COM-3	RS232 TX (GENLINK)
3	D13	CUST CON	LINE POWER SIGNAL
4	183	CUST CON	REMOTE START
5	174	SW1	"AUTO" START
6	224	IFT	V SENSE GEN A PH
7	227	IFT	V SENSE RTN
8	403	AVR-6	AVR GATE TRIGGER B
9	399C	CT3	GEN C PH CURRENT -
10	398C	CT3	GEN C PH CURRENT +
11	399A	CT1	GEN A PH CURRENT -
12	398A	CT1	GEN A PH CURRENT +
13	390	CUST CON	RS485+ (XFER SW)
14	387	COM-2	RS232 RX (GENLINK)
15	601	LFP	LOW FUEL PRESSURE
16	R15	ES1	EMERGENCY STOP
17	226	IFT	V SENSE GEN C PH
19	405	AVR-11	AVR GROUND
20	404	AVR-7	AVR GATE TRIGGER A
21	OC8	RB2A-6	SPARE OUTPUT 4
22	OC6	RB2A-3	SPARE OUTPUT 2
23	OC5	RB2A-2	SPARE OUTPUT 1
24	SHLD	CUST CON	RS485 DRAIN (XFER SW)
25	389	COM-5	RS232 COM (GENLINK)
26	D14	CUST CON	GEN POWER SIGNAL
27	505	BCH	BAT CHARGER FAIL
28	175	SW1	"MANUAL" START
29	225	IFT	V SENSE GEN B PH
30	406	AVR-10	AVR ZERO CROSSING I/P
31	194	AVR-2	AVR +12VDC
33	OC7	RB2A-5	SPARE OUTPUT 3
34	399B	CT2	GEN B PH CURRENT-
35	398B	CT2	GEN B PH CURRENT+

* - CONNECTIONS NOT USED IN 1Ø UNITS.


NOTES:

- 1) WIRE# 0 IS CHASSIS GROUND (BATTERY-) UNLESS NOTED OTHERWISE.
- 2) WIRE# 13 IS UNFUSED +12VDC (BATTERY+)
- 3) WIRE# 14 IS FUSED +12VDC WHEN GENERATOR IS CRANKING OR RUNNING.
- 4) WIRE# 15 IS FUSED +12VDC WHEN E-STOP IS NOT ACTIVATED.
- 5) WIRE# 15A IS FUSED +12VDC FOR GENERAL USE.
- 6) WIRE# 15B IS FUSED +12VDC FOR THE ENGINE CONTROL MODULE .
- 7) WIRE# 15C IS FUSED +12VDC FOR THE IGNITION

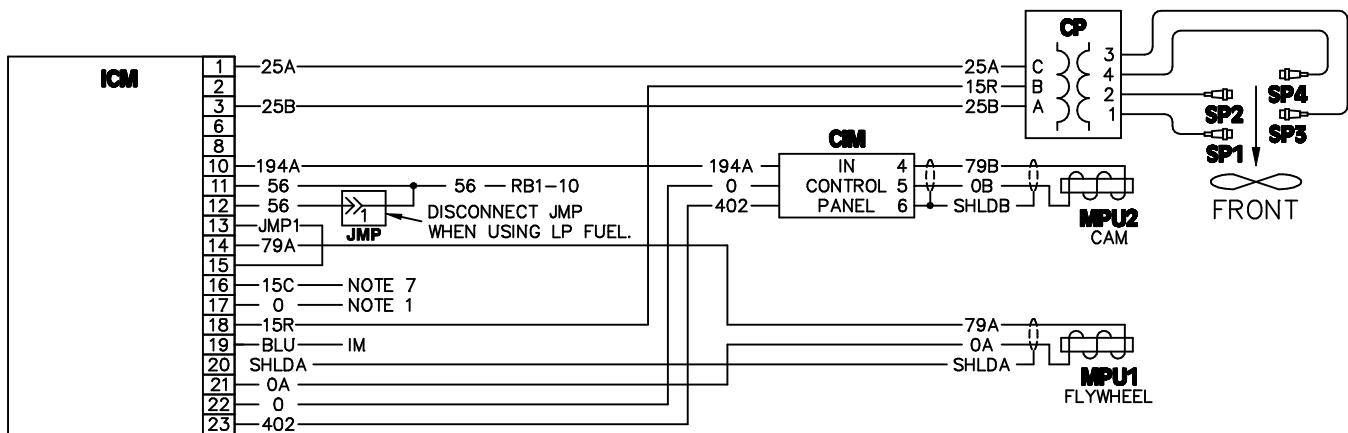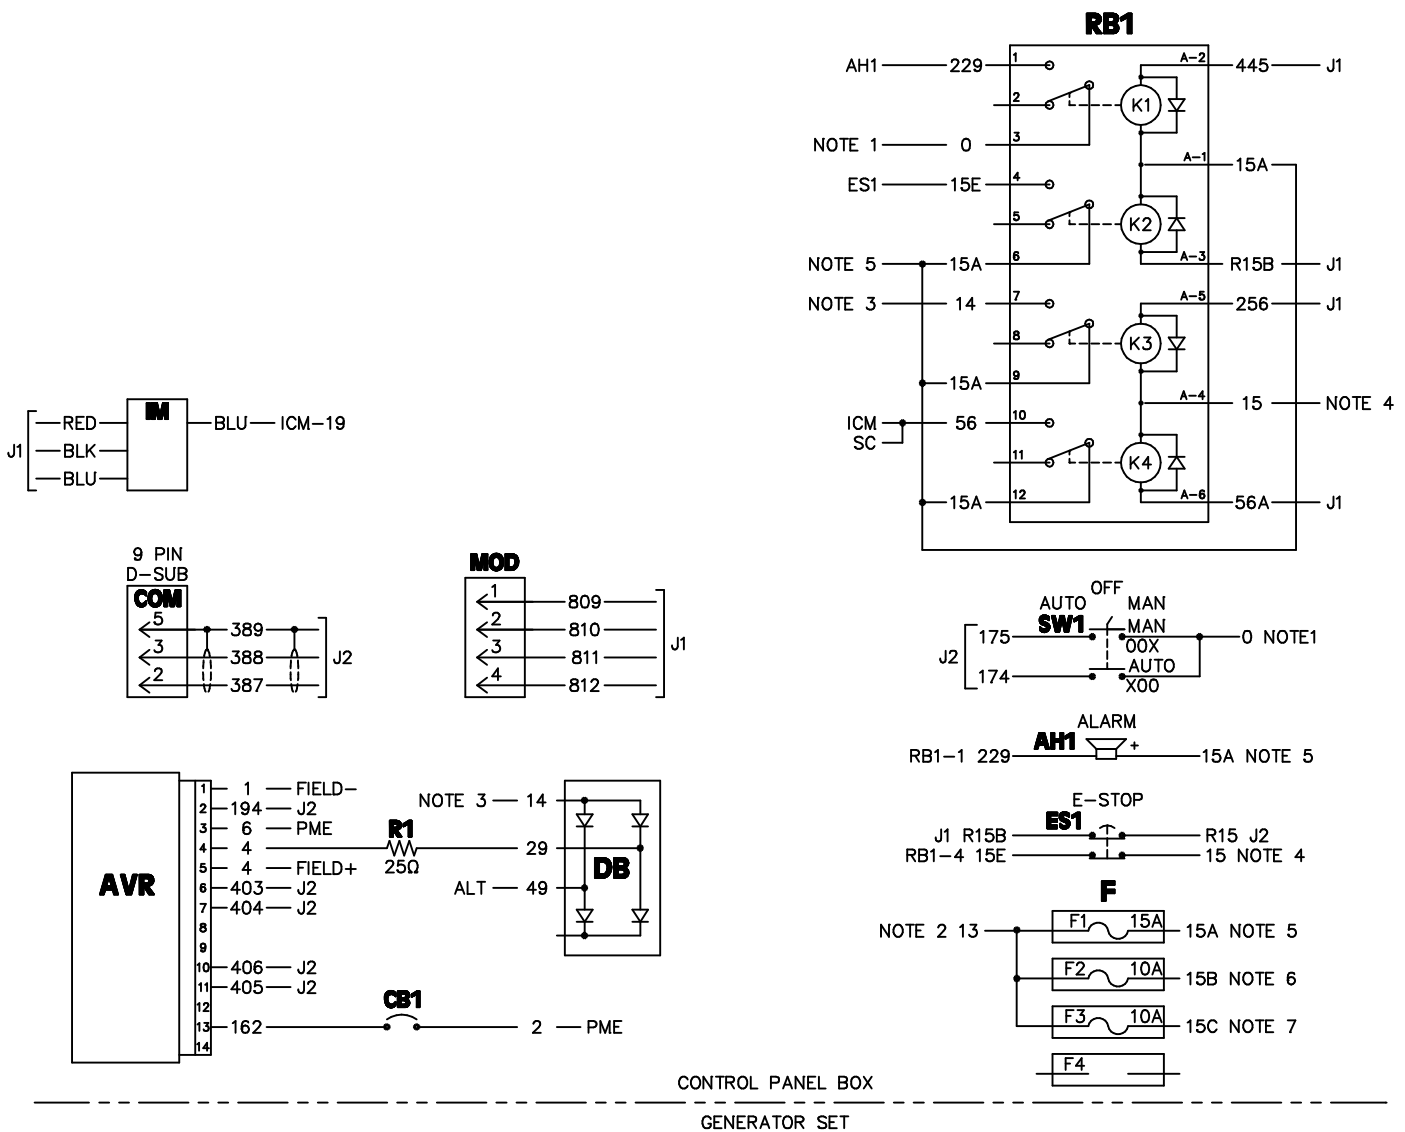

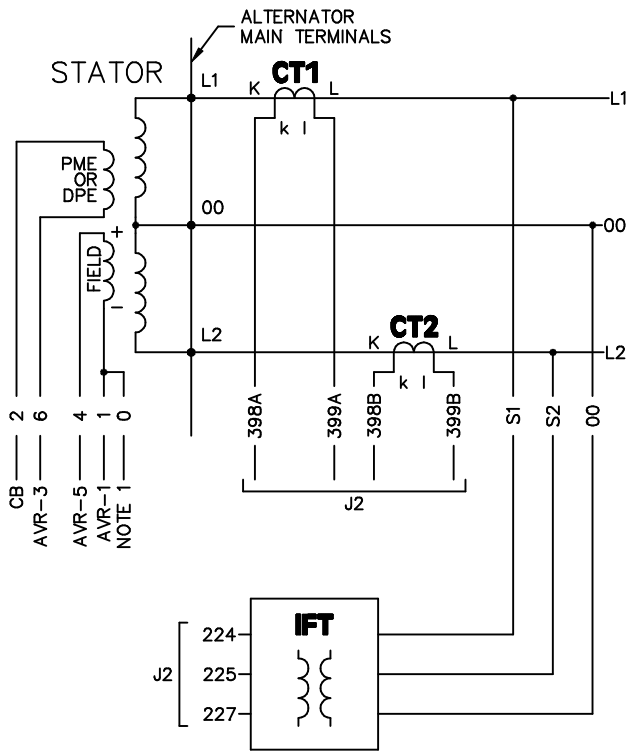


ALTERNATOR CONNECTIONS FOR 1 ϕ UNITS

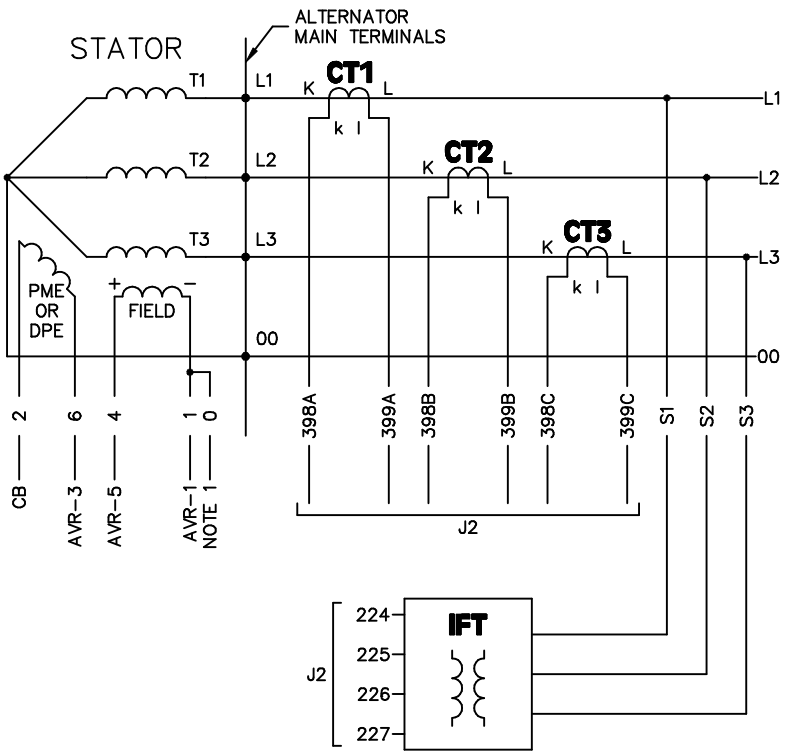


ALTERNATOR CONNECTIONS FOR 3 ϕ UNITS

ALTERNATOR CONNECTION BOX

GENERATOR SET

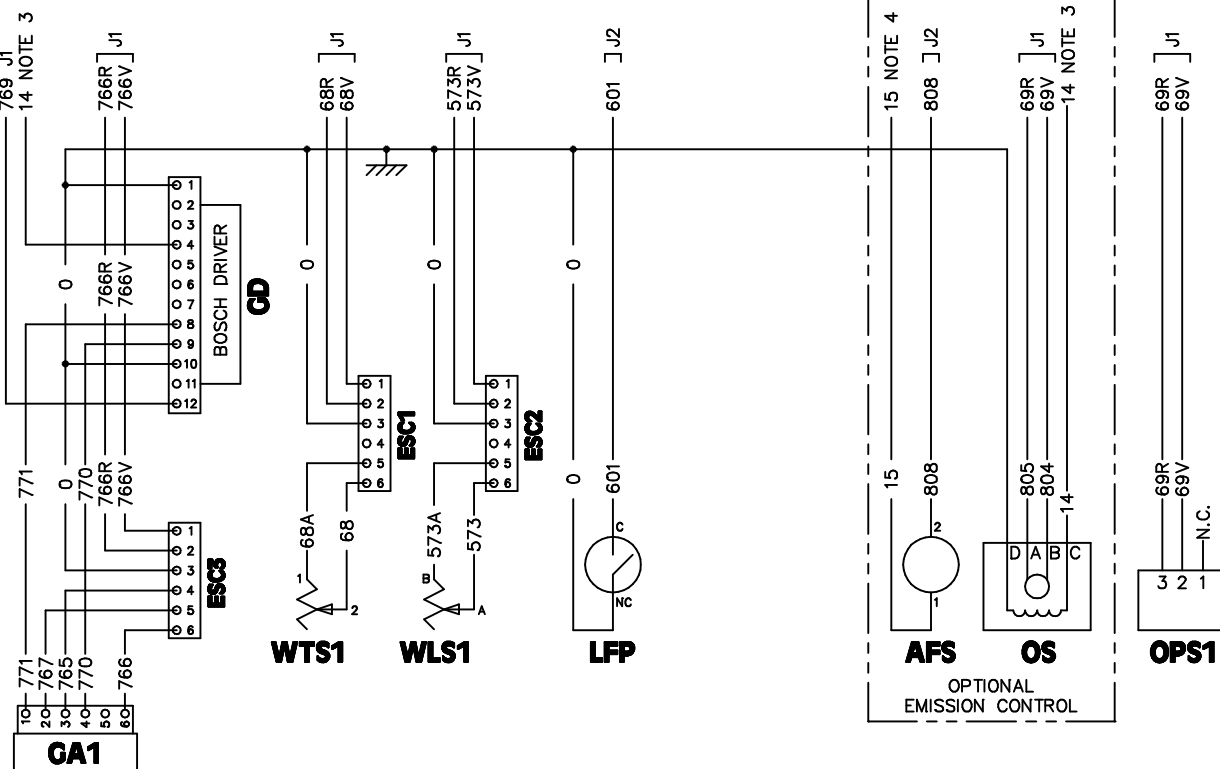

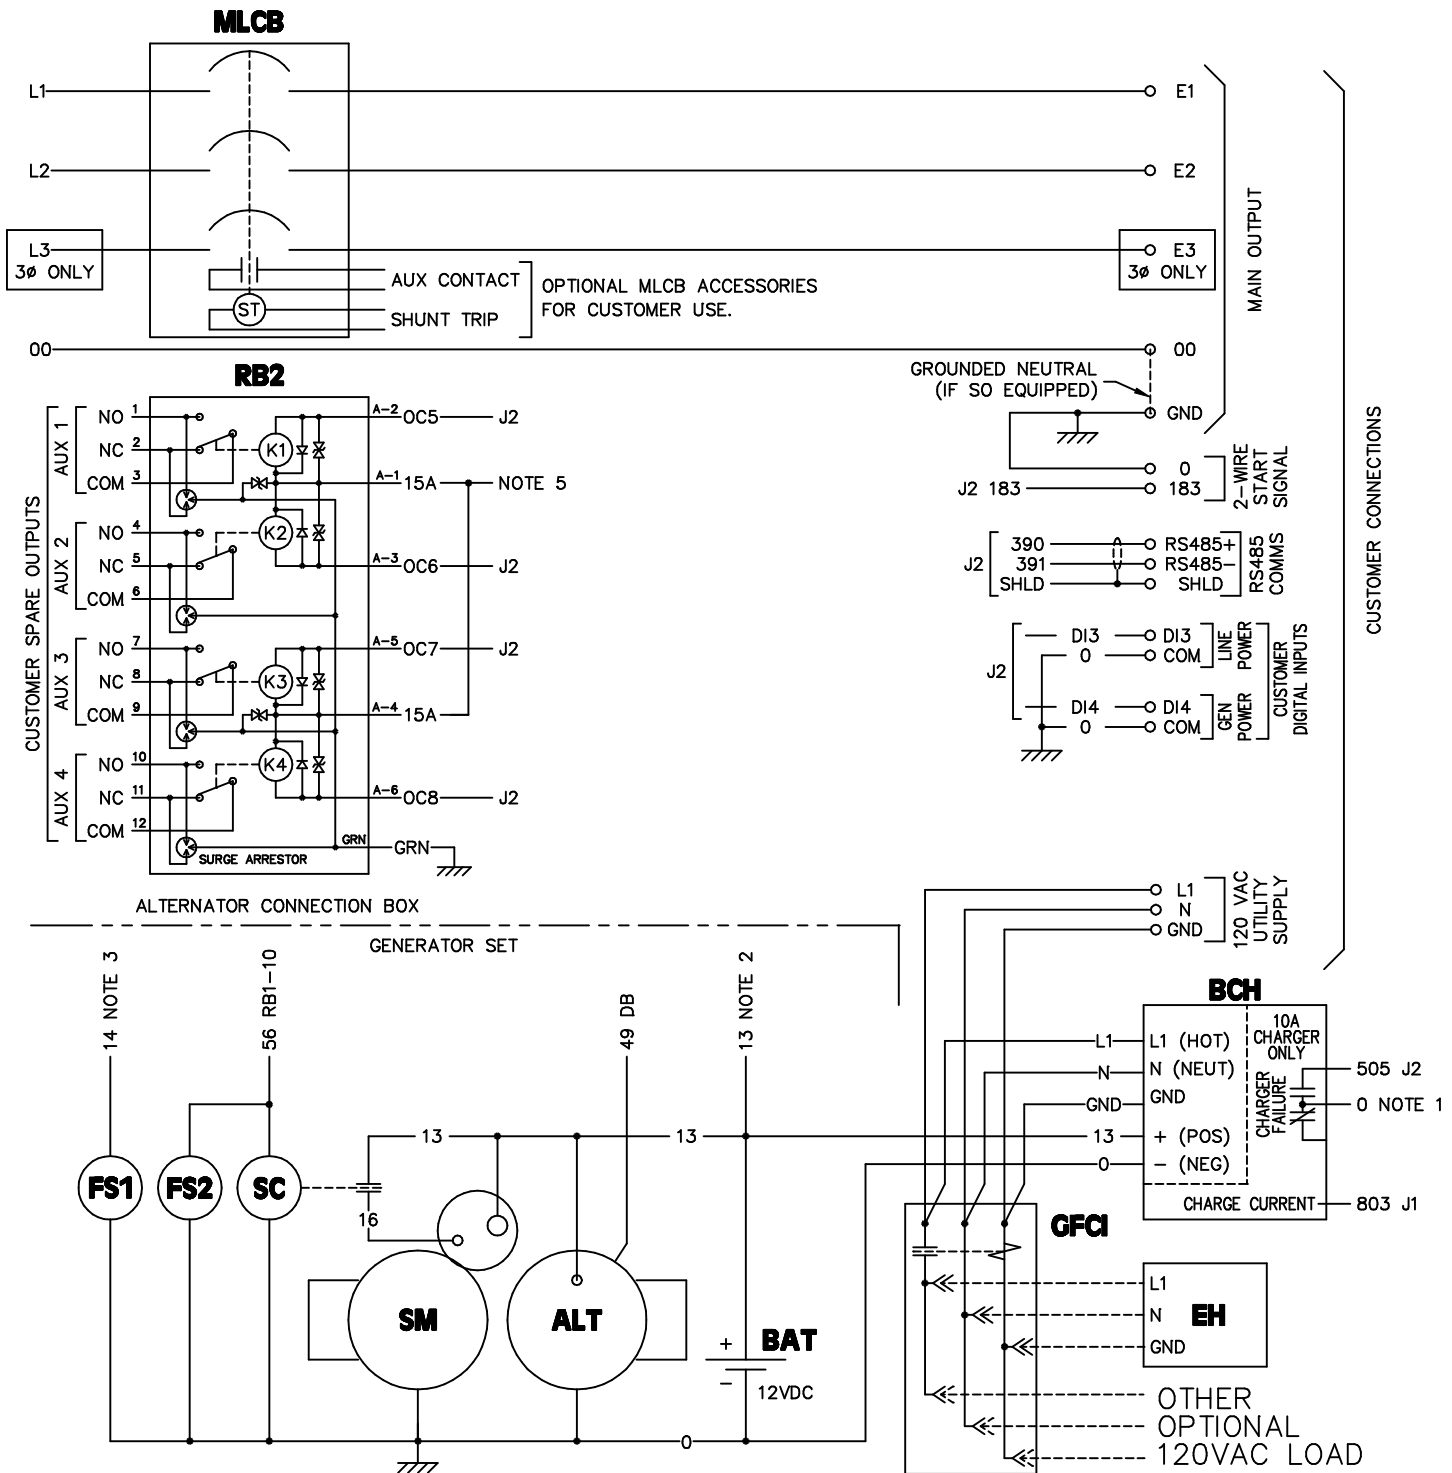

LEGEND			
00 - NEUTRAL	CP - COIL PACK	ICM - IGNITION CONTROL MODULE	RB_ - RELAY BOARD
AFS - AIR/FUEL SOLENOID	CT_ - CURRENT TRANSFORMER	IFT - INTERFACE TRANSFORMER	SC - STARTER CONTACTOR
AH1 - ALARM HORN	DB - DIODE BRIDGE	IM - INTERFACE MODULE	SHLD - SHIELD
ALT - CHARGE ALTERNATOR	EH - ENGINE BLOCK HEATER	J_ - ENGINE CONTROLLER CONNECTIONS	SM - STARTER MOTOR
AVR - AUTOMATIC VOLTAGE REGULATOR	ES1 - E-STOP SWITCH	LFP - LOW FUEL PRESSURE	SP_ - SPARK PLUG
BAT - BATTERY	ESC_ - ELECT. SIGNAL CONITIONER	MLCB - MAIN LINE CIRCUIT BREAKER	ST - SHUNT TRIP
BCH - BATTERY CHARGER	F_ - FUSE	MPU_ - MAGNETIC PICK-UP	SW1 - AUTO/MANUAL SWITCH
CB_ - CIRCUIT BREAKER	FS_ - FUEL SOLENOID	OS - OXYGEN SENSOR	WLS_ - WATER LEVEL SENSOR
CIM - CAM INTERFACE MODULE	GA1 - GOVERNOR ACTUATOR	OPS_ - OIL PRESSURE SENDER	WTS_ - WATER TEMPERATURE SENDER
COM - COMMUNICATION CONNECTOR	GD - GOVERNOR DRIVER	PME - PERMANENT MAGNET EXCITER	
	GFCI - GND FAULT CIRCUIT INTERRUPT	R_ - RESISTOR	