


APPLICABLE TO:

NOTES:

- 1) MINIMUM RECOMMENDED CONCRETE PAD SIZE: 1240 (48.8") WIDE X 2756.2 (108.5") LONG.
- 2) GENERATOR MUST BE LOCATED A MINIMUM DISTANCE OF 5 FEET FROM A WALL OR FENCE. ALLOW A 5 FOOT MINIMUM PERIMETER OF OPEN SPACE AROUND THE ENTIRE GENERATOR.
- 3) CIRCUIT BREAKER INFORMATION:
SEE SPECIFICATION SHEET WITHIN OWNERS MANUAL.
- 4) INSIDE STUB-UP AREA FOR AC LOAD LEAD CONDUIT CONNECTION, NEUTRAL CONNECTION, AUXILIARY OUTPUT RELAYS AND ACCESS TO TRANSFER SWITCH CONTROL WIRES. REMOVE COVER FOR ACCESS.
- 4A) FIELD CUT HOLE IS ONLY REQUIRED FOR MOUNTING OF GENERATOR ON AN EXISTING PAD.
- 5) REFERENCE OWNERS MANUAL FOR LIFTING WARNINGS.
- 6) REMOVE EITHER LEFT OR RIGHT HAND SIDE PANEL TO ACCESS EXHAUST MUFFLERS.
- 7) INSIDE ACCESS TO 120VAC, 20A GFCI OUTLET PREWIRED TO SUPPLY POWER TO BATTERY CHARGER.
5. 4L ONLY: 15A, 240VAC OUTLET FOR ENGINE BLOCK HEATER.
6. 8L ONLY: USE 20A GFCI OUTLET FOR ENGINE BLOCK HEATER.

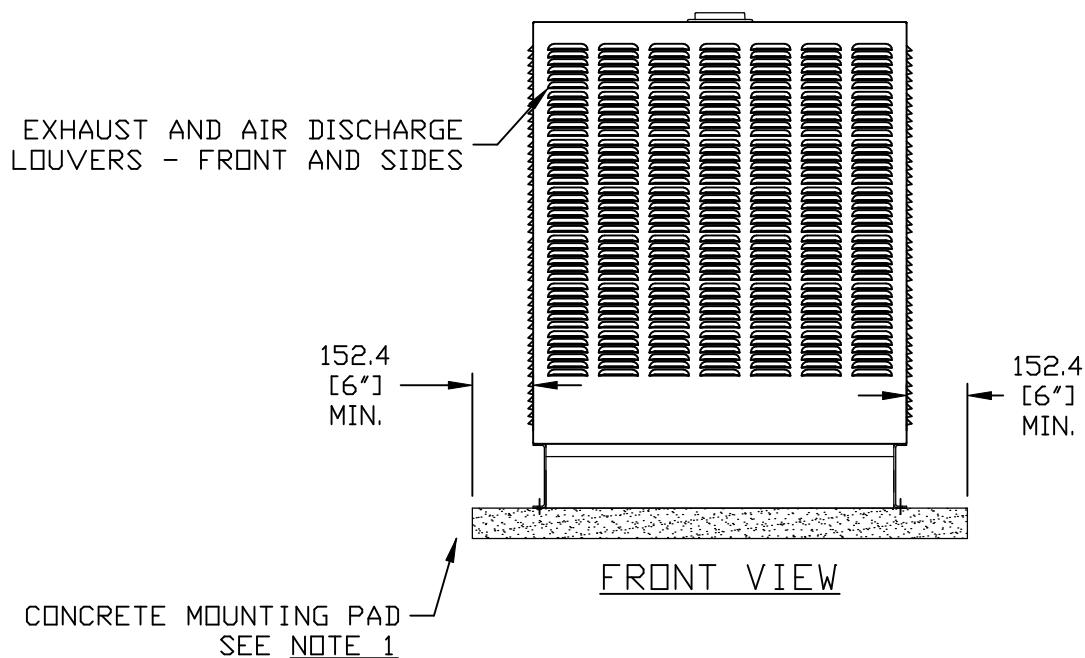

WEIGHT DATA	
5. 4L 45/55KW -	895KG (1973 LB)
6. 8L 70KW -	991KG (2185 LB)
WOODEN SHIPPING SKIDS INCREASE OVERALL WEIGHT 79KG (175LB)	

APPLICABLE TO:

