

- ICMJ_ — IGNITION CONTROL MODULE
- J1 — ENGINE CONTROL MODULE 35-PIN CONNECTOR
- J2 — ENGINE CONTROL MODULE 23-PIN CONNECTOR
- LFP — LOW FUEL PRESSURE SWITCH
- LOS — LOW OIL PRESSURE SWITCH
- LVP — LOW VOLTAGE PLUG 8-PIN (BULKHEAD)
- LVR — LOW VOLTAGE RECEPTACLE 8-PIN
- MLCB — MAIN LINE CIRCUIT BREAKER
- MOV — METAL OXIDE VARISTOR
- MPU — MAGNETIC PICKUP
- NB — NEUTRAL BLOCK
- OS — OXYGEN SENDER
- R1 — RESISTOR
- SC — STARTER CONTACTOR
- SM — STARTER MOTOR
- TB_ — TERMINAL BLOCK, CAGE CLAMP
- WLS — COOLANT LEVEL SENDER
- WTS — COOLANT TEMPERATURE SENDER

NOTE: ALL WIRES ON THIS
PAGE ARE 600V RATED

CUSTOMER CONNECTIONS

UTILITY FROM TRANSFER SWITCH
FUSED 120 VAC SOURCE FOR BATTERY CHARGER

TRANSFER RELAY
TRANSFER RELAY COIL
REMOTE START

TB2

N1
N2
T1
NEU

1
2
3
4

N1
N2
T1
NEU

HVP-1
HVP-2
HVP-3
HVP-4

14
14

TB3

194
23
183
178

1
2
3
4

194
23
183
178

LVP-8
LVP-7
LVP-6
LVP-5

TB1

11
44
1
4
2
6

1
2
3
4
5
6

SA
SB
LVP-1
HVP-9
HVP-10

16
16
16
16
16
16

AS

1-PHASE ALTERNATOR STATOR SHOWN. FOR 3-PHASE, SEE DRAWING 0H6342.

MLCB

E1
E2

NB

GND

DB1

DB2

MOV

R1

10

11

12

13

14

16

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270



271

272

273


274

COMPONENTS LOCATED ON ENGINE

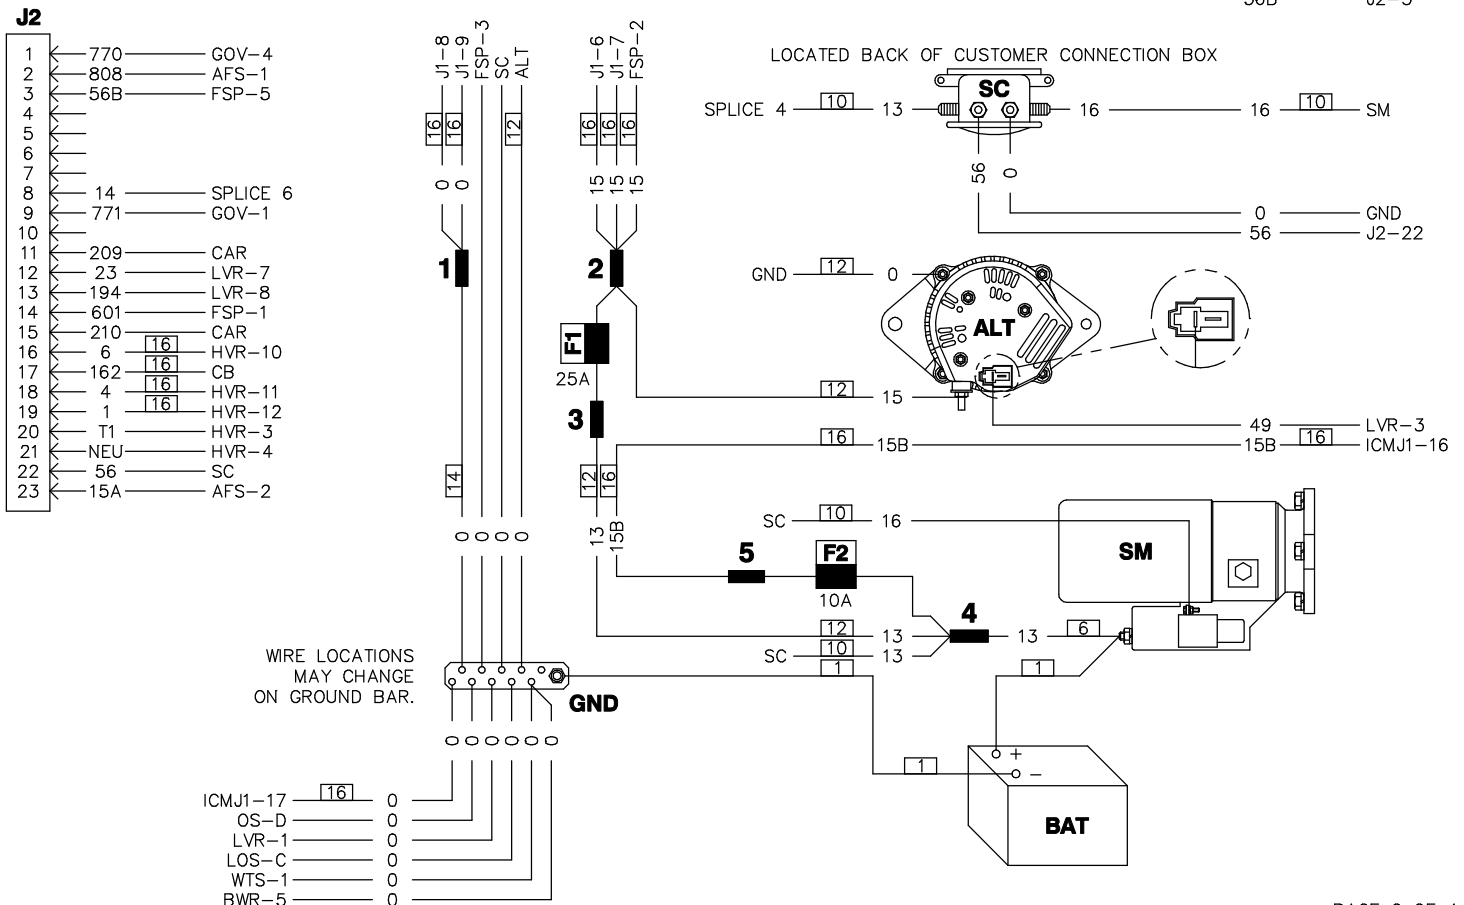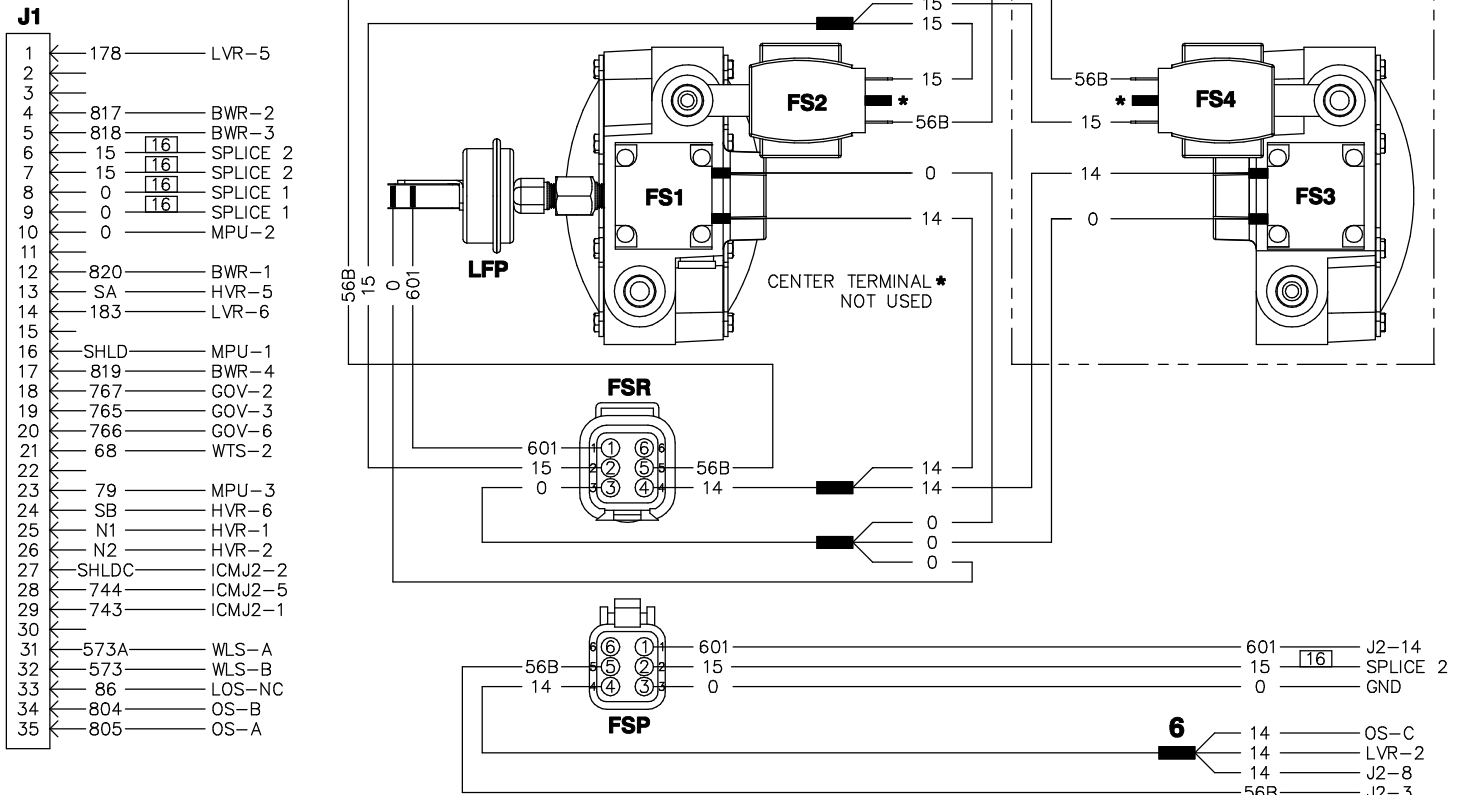


COMPONENTS LOCATED ON ENGINE









HVR

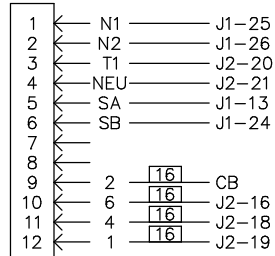

LVR

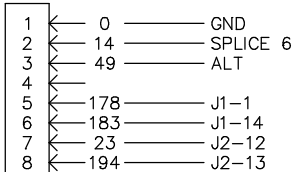

BWR

  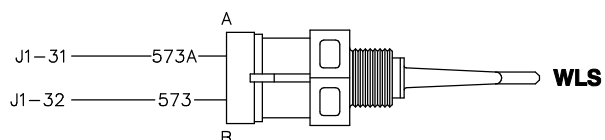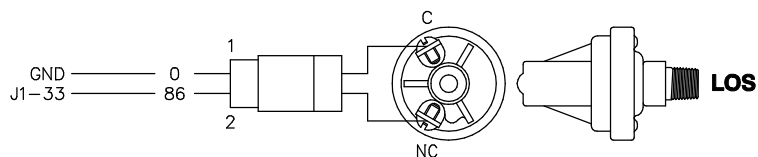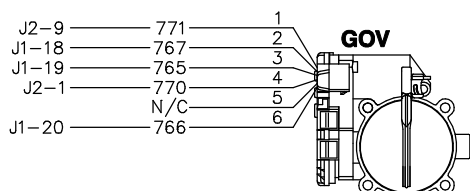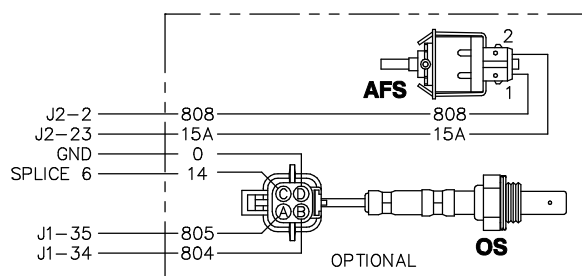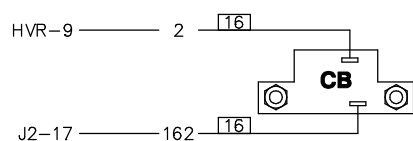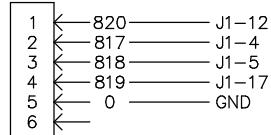

COMPONENTS LOCATED ON ENGINE

