 
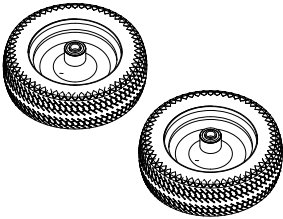
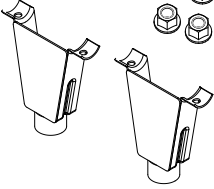
 
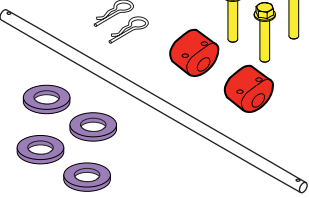
 
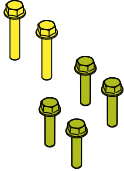
 


LEA EL MANUAL ANTES DE UTILIZAR EL GENERADOR. LIRE LE MANUEL AVANT DE FAIRE FONCTIONNER LA GÉNÉRATRICE.


GUIDE DE PRÉPARATION RAPIDE GUÍA RÁPIDA DE CONFIGURACIÓN

XP SERIES


1


2

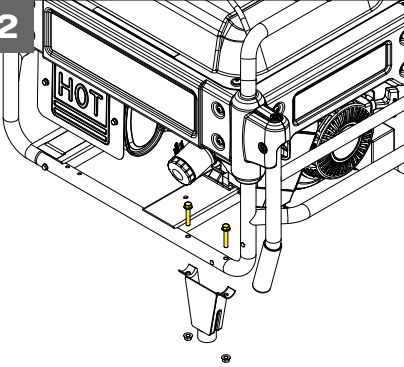

3

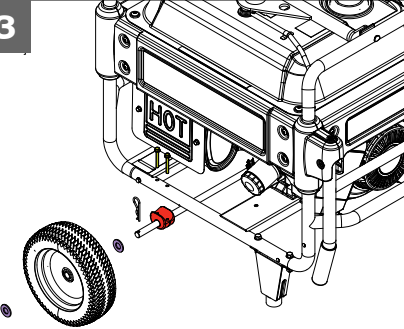

4

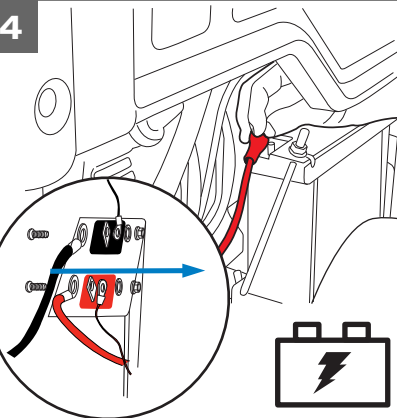

5




Verser huile de moteur.
Agrega aceite de motor.

Le moteur est plein lorsque l'huile se situe au niveau des marques supérieures de la jauge. Remette le bouchon du réservoir d'huile après le remplissage.

El motor está lleno cuando el nivel de aceite alcanza la marca full en la varilla. Vuelve a colocar la tapa de aceite después del llenar.

6

iNo lo llenes por encima de éste borde!
Vuelve a colocar la tapa de la gasolina.

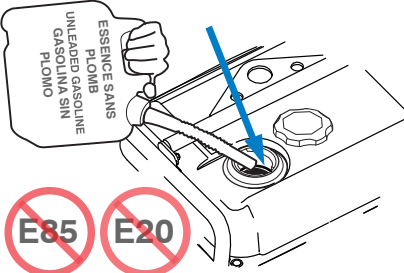

ESSENCE SANS PLOMB
UNLEADED GASOLINE
GASOLINA SIN PLOMO


E85 **E20**

iNunca pongas gasolina mientras la unidad esté encendida o caliente!



7

Suivez les instructions.
Siga las instrucciones.

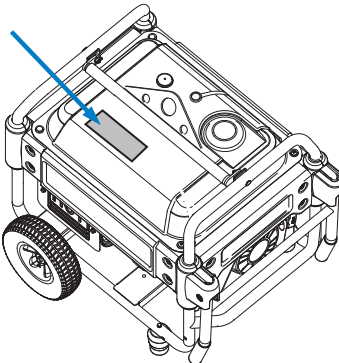


READ MANUAL BEFORE OPERATING GENERATOR. QUICK SET-UP GUIDE


XP SERIES

1


Manual

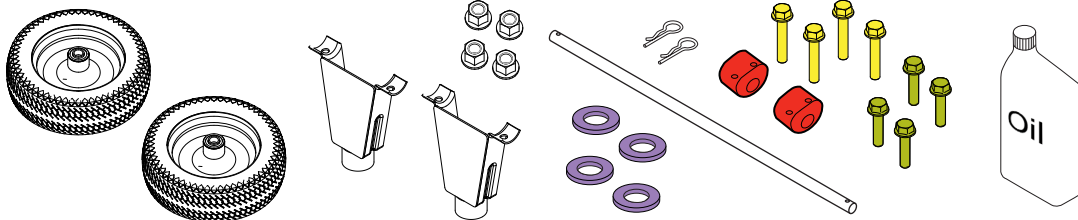


2

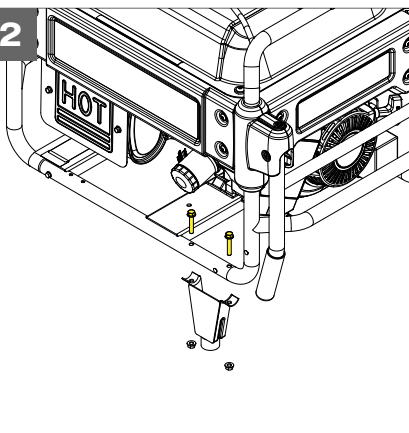

3

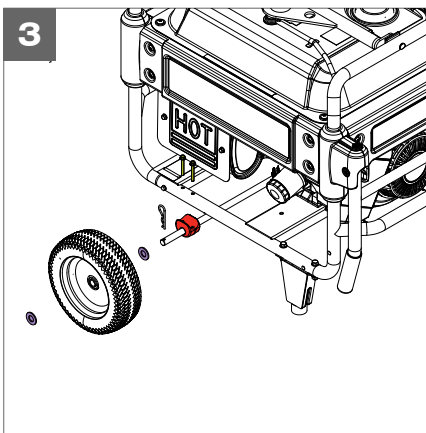


4

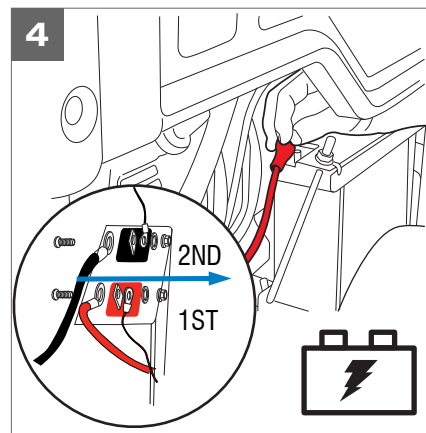


5

Add engine oil.

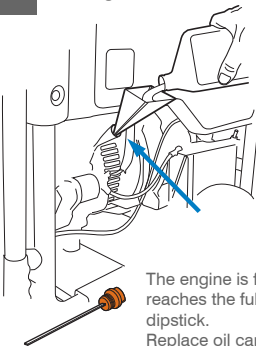

The engine is full when the oil reaches the full mark on the dipstick.
Replace oil cap after filling.

6

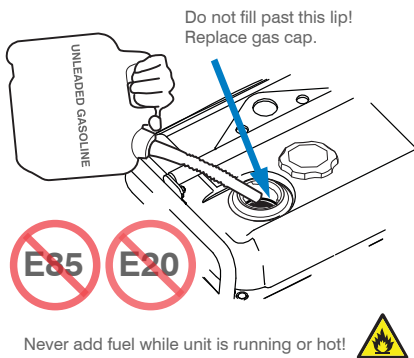

Never add fuel while unit is running or hot!

7

Follow instructions.

