


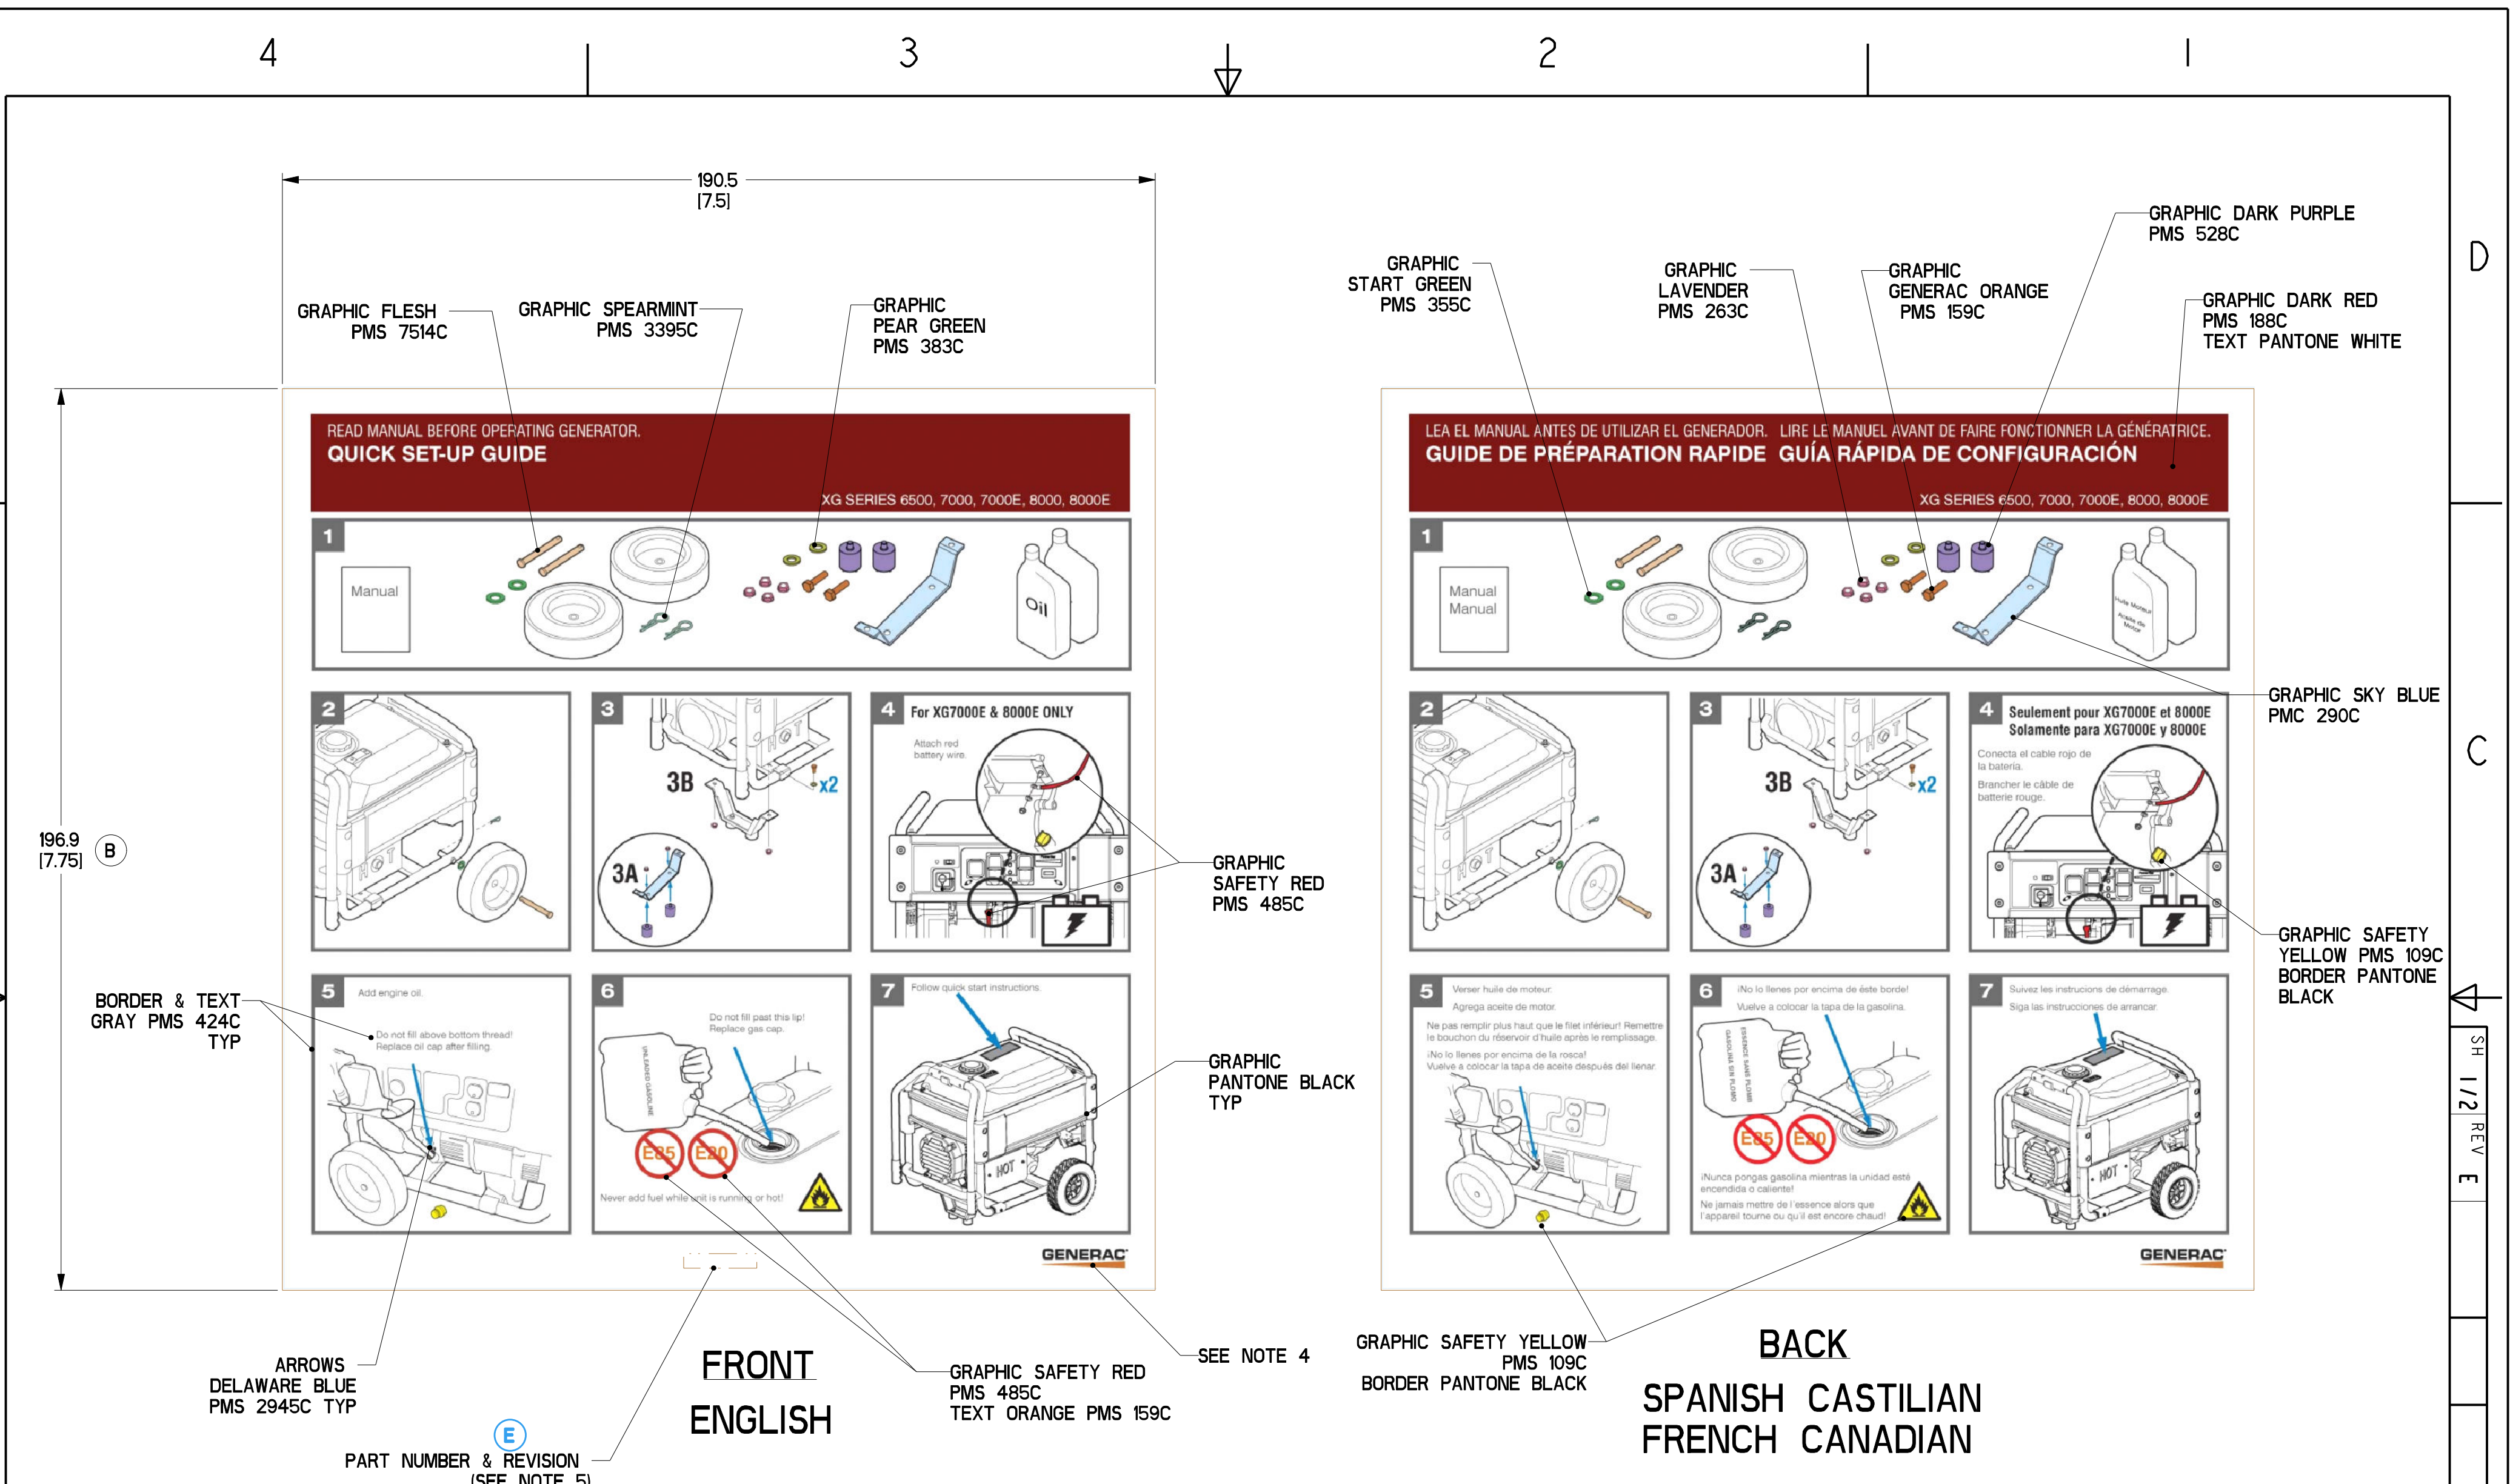

NOTES:
1. FONT STYLE, TEXT SIZE, AND COLORS PER SUPPLIED ARTWORK, (SEE TABLE).
2. MATERIAL: 80# HOUSE GLOSS COATED TEXT.
3. DIMENSIONS ARE MM [INCHES].
4. GENERAC LOGO MUST MEET SPECIFICATIONS ON DRAWING OH1888.
5. LOCATION OF PART NUMBER: AS SHOWN ABOVE. PART NUMBER AND REVISION TO BE ADDED BY DECAL SUPPLIER. LETTERING TO BE HELVETICA, FONT SIZE 10 POINT, BLACK.

DRAWING CREATED FROM PRO/ENGINEER 3D FILE. ECO MODIFICATION TO BE APPLIED TO SOLID MODEL ONLY.

06/22/11	-A-	RELEASED			
07/06/11	H-9302-B	196.9 [7.75] WAS 190.5 [7.5]			
04/16/12	J-1808-C	ADDED OH5469A AND TABLE			
05/11/12	J-1918-D	REMOVED OIL BOTTLE FROM TOP OF OH5469A			
6/27/12	J-2140-E	(SHT 1) ADD PN AND NOTE 5; (SHT 2) ADD NOTE.			

GENERAL TOLERANCES UNLESS NOTED		THIRD ANGLE PROJECTION		
ALL XX	± 1 MM			
XXX	± 1 MM			
XXXX	± 1 MM			
ALL ANG	± 1°			
INTERPRET DIM AND TOL PER ASME Y14.5M-1994				
DATUM INDICATING SYMBOL	PERPENDICULARITY			
POSITION	ANGULARITY			
PROFILE OF A SURFACE	CIRCULAR RUNOUT			
FLATNESS	PARALLELISM			

GENERAC POWER SYSTEMS OWNS THE COPYRIGHT OF THIS DRAWING WHICH IS SUPPLIED IN CONFIDENCE AND MUST NOT BE USED FOR ANY PURPOSE OTHER THAN FOR WHICH IT IS SUPPLIED WITHOUT THE EXPRESS WRITTEN CONSENT OF GENERAC POWER SYSTEMS. © GENERAC POWER SYSTEMS 2010	
APPROVALS	DATE
DRAWN BY DMC	6/14/11
CHECKED BY KC	6/22/11
MFG ENG	
APPROVED BY KB	6/22/11
FIRST USE: 05796-1	
ELECTRONICALLY APPROVED INSIDE WINDCHILL	
LIFECYCLE STATE: In Work	

PART NO.	DESCRIPTION	ARTWORK
OH5469	QUICK START GUIDE XG7-8KW	OH5469.EPS
OH5469A	QUICK START GUIDE XG ENG/RUS	OH5469A.EPS

TITLE QUICK START GUIDE XG7-8KW		
MATERIAL SEE ABOVE	GENERAC SPECIFICATION AS ABOVE	PAINT SURFACE FINISH NA
SIZE C	CAGE NO N/A	DWG NO 0H5469\$
SCALE 1.000	WT-KG	SHEET 1 of 2

4

3



2

1

READ MANUAL BEFORE OPERATING GENERATOR.
QUICK SET-UP GUIDE

XG SERIES

1

Manual

2

3

4

Attach red battery wire.

5

Add engine oil.

Do not fill above bottom thread!
Replace oil cap after filling.

6

Do not fill past this lip!
Replace gas cap.

7

Follow quick start instructions.

GENERAC

FRONT
ENGLISH

ПЕРЕД ВКЛЮЧЕНИЕМ ГЕНЕРАТОРА ОЗНАКОМЬТЕСЬ С РУКОВОДСТВОМ ПО ЭКСПЛУАТАЦИИ
ИНСТРУКЦИЯ ПО БЫСТРОЙ НАСТРОЙКЕ

XG SERIES

1

РУКОВОДСТВО

2

3

4

Подключите красный аккумуляторный кабель.

5

ДОБАВЬТЕ МАШИНОЕ МАСЛО

Уровень масла не должен превышать
нижнюю отметку!
После заливки масла плотно закрутите
крышку

6

Не заполняйте выше этой кромки!
плотно закрутите крышку топливного бака

7

Руководствуйтесь инструкциями по
быстрому запуску

GENERAC

BACK
RUSSIAN

OH5469A

ALL UNSPECIFIED DIMENSIONS AND COLORS
ARE THE SAME AS OH5469

DRAWING CREATED FROM PRO/ENGINEER
3D FILE. ECO MODIFICATION TO BE
APPLIED TO SOLID MODEL ONLY.

GENERAL TOLERANCES UNLESS NOTED		THIRD ANGLE PROJECTION		SIZE		CAGE NO		DWG NO		REV	
INTERPRET DIM AND TOL PER ASME Y14.5M-1994				C		N/A		OH5469\$		E	
SCALE		1.000		WT-KG		0.00		SHEET		2 of 2	

GENERAC

4

3



2

1

D

C



SH 2/2 REV E

A