
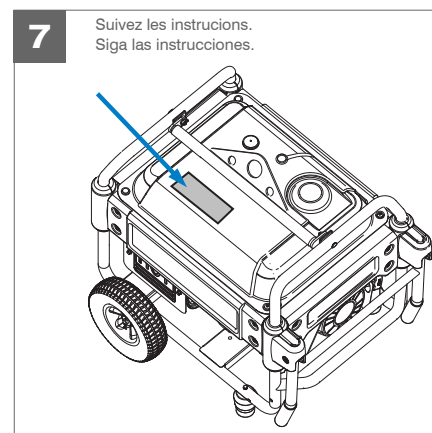
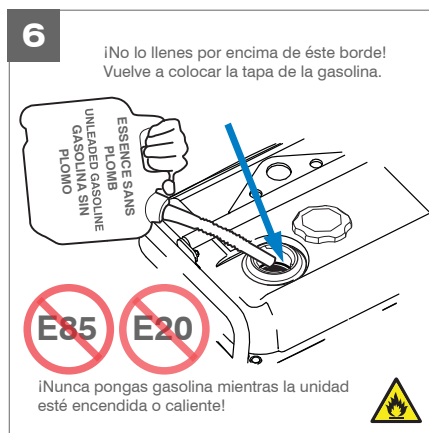
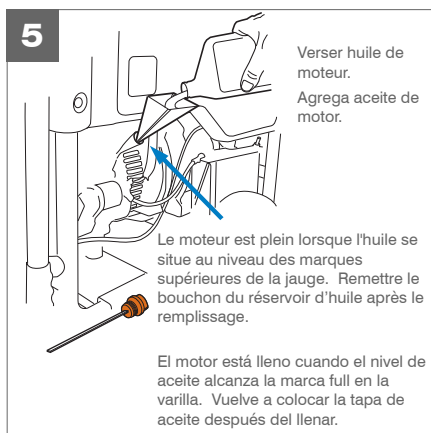
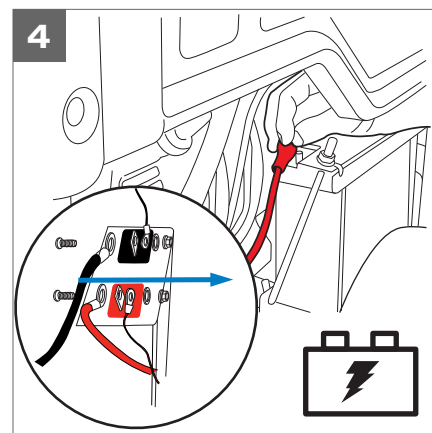
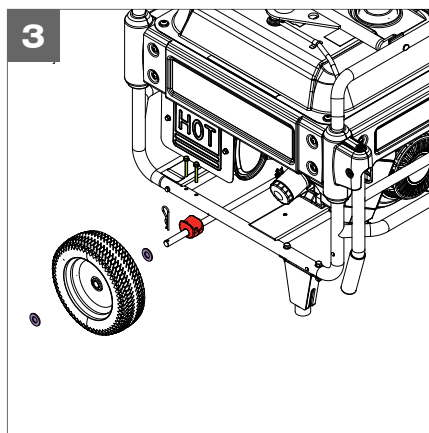
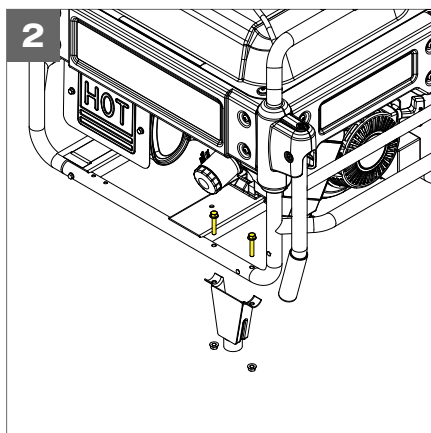


LEA EL MANUAL ANTES DE UTILIZAR EL GENERADOR. LIRE LE MANUEL AVANT DE FAIRE FONCTIONNER LA GÉNÉRATRICE.

GUIDE DE PRÉPARATION RAPIDE GUÍA RÁPIDA DE CONFIGURACIÓN

XP SERIES

 



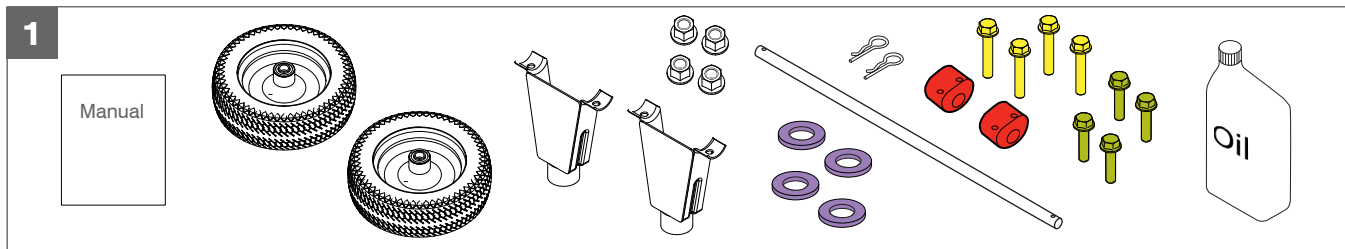


READ MANUAL BEFORE OPERATING GENERATOR. QUICK SET-UP GUIDE


XP SERIES

1


Manual

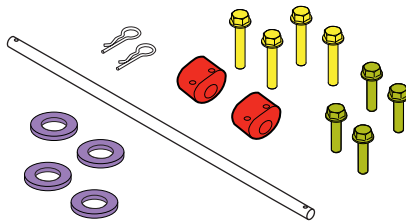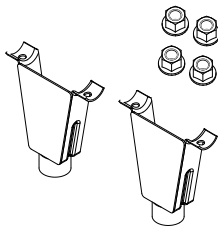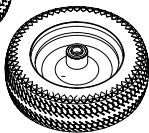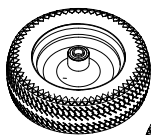


2

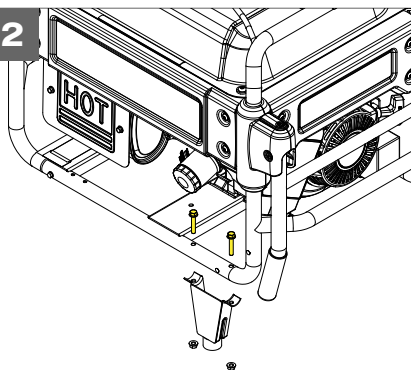

3

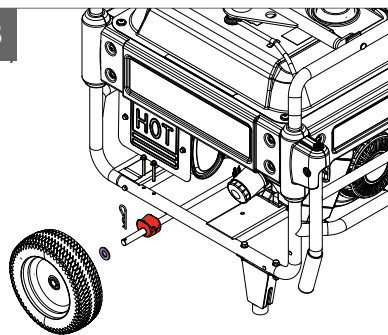


4

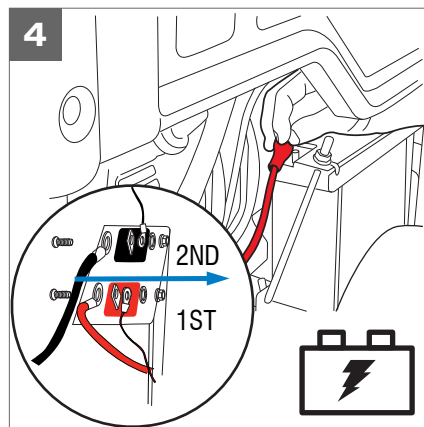


5

Add engine oil.

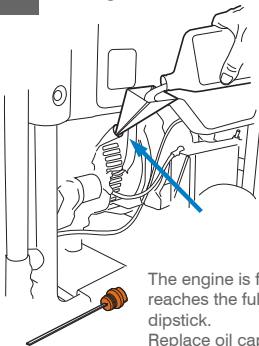

The engine is full when the oil reaches the full mark on the dipstick.
Replace oil cap after filling.


6

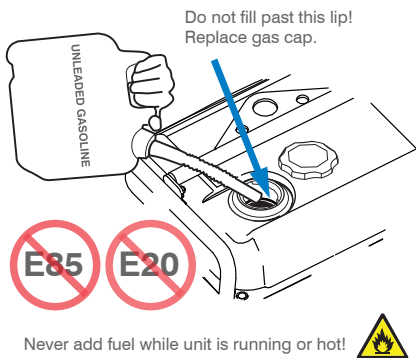

Never add fuel while unit is running or hot!

7

Follow instructions.

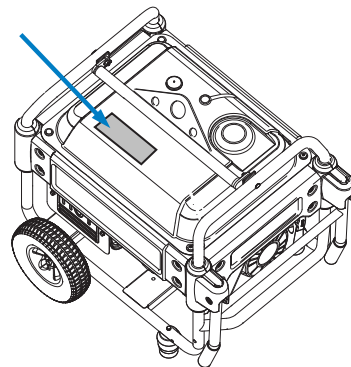

GENERAC