



21 LIGHT REMOTE ANNUNCIATOR

FOR GENERATORS WITH CUSTOMER CONNECTIONS
LOCATED INSIDE ALTERNATOR CONNECTION BOX

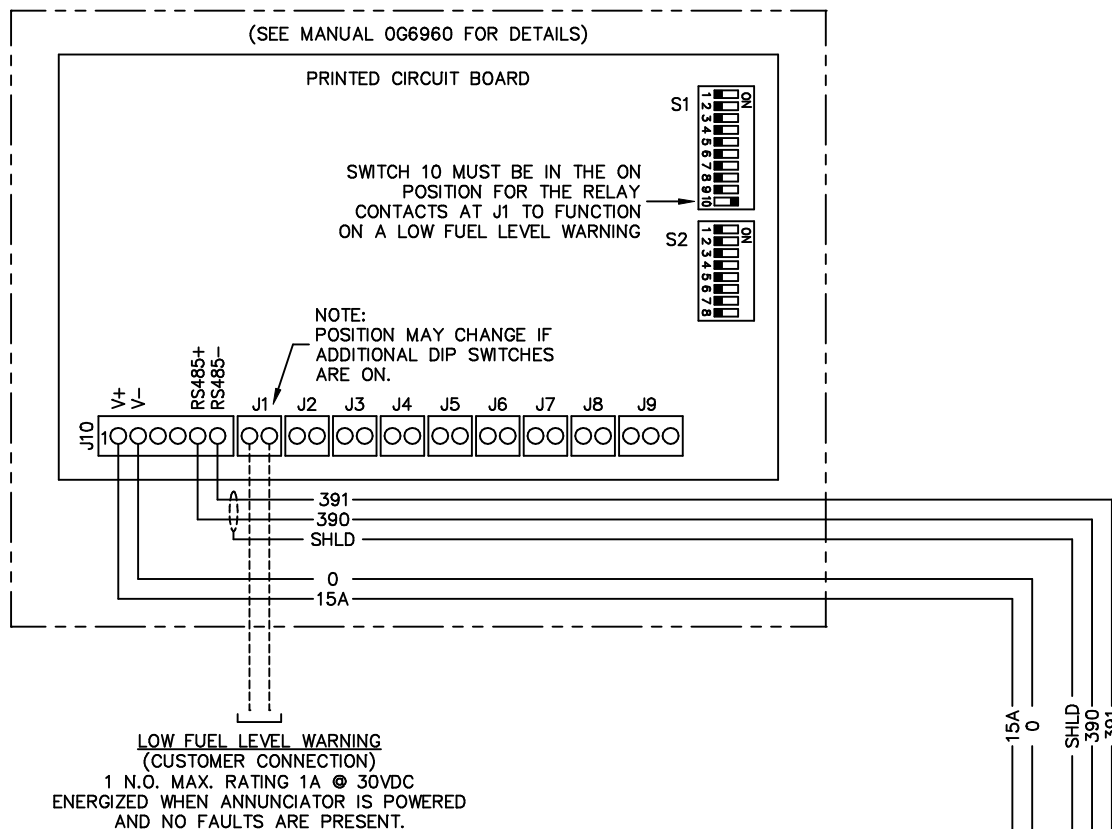


CUSTOMER CONNECTION PANEL LOCATED IN ALTERNATOR CONNECTION BOX

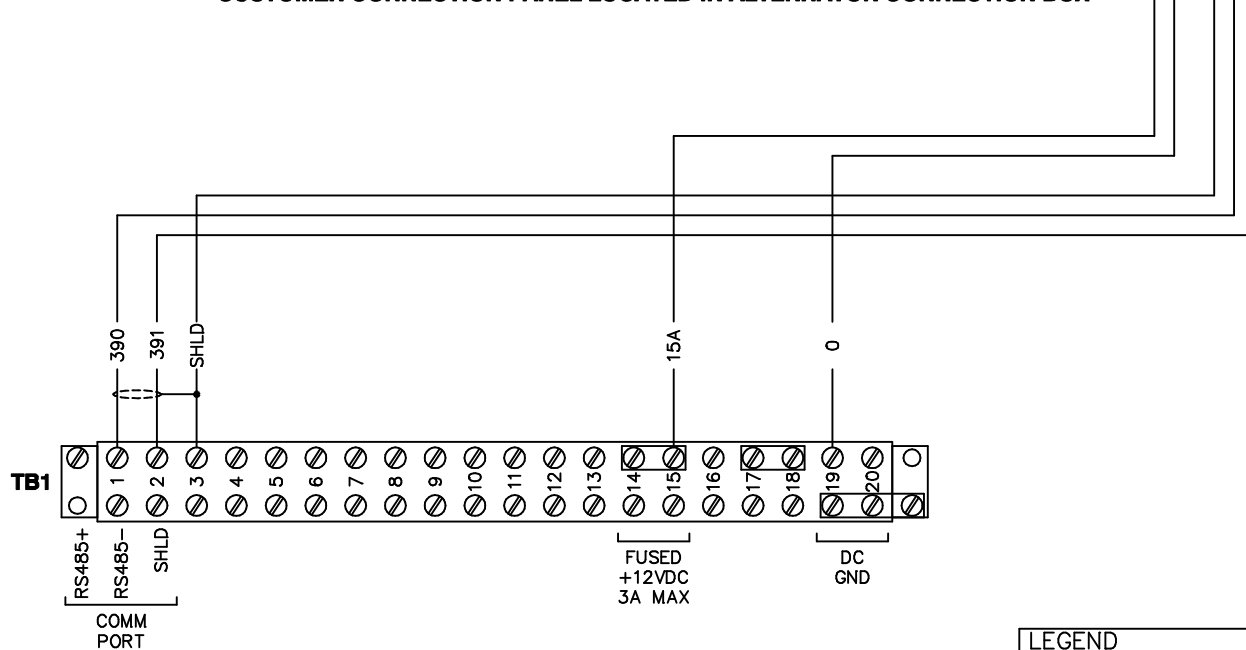

LEGEND
TB_ - TERMINAL BLOCKS

HIGH FUEL LEVEL REMOTE ALARM BOX

**FOR GENERATORS WITH LOW VOLTAGE CUSTOMER CONNECTION BOX
(BOX LOCATED UNDER CONTROL PANEL)**

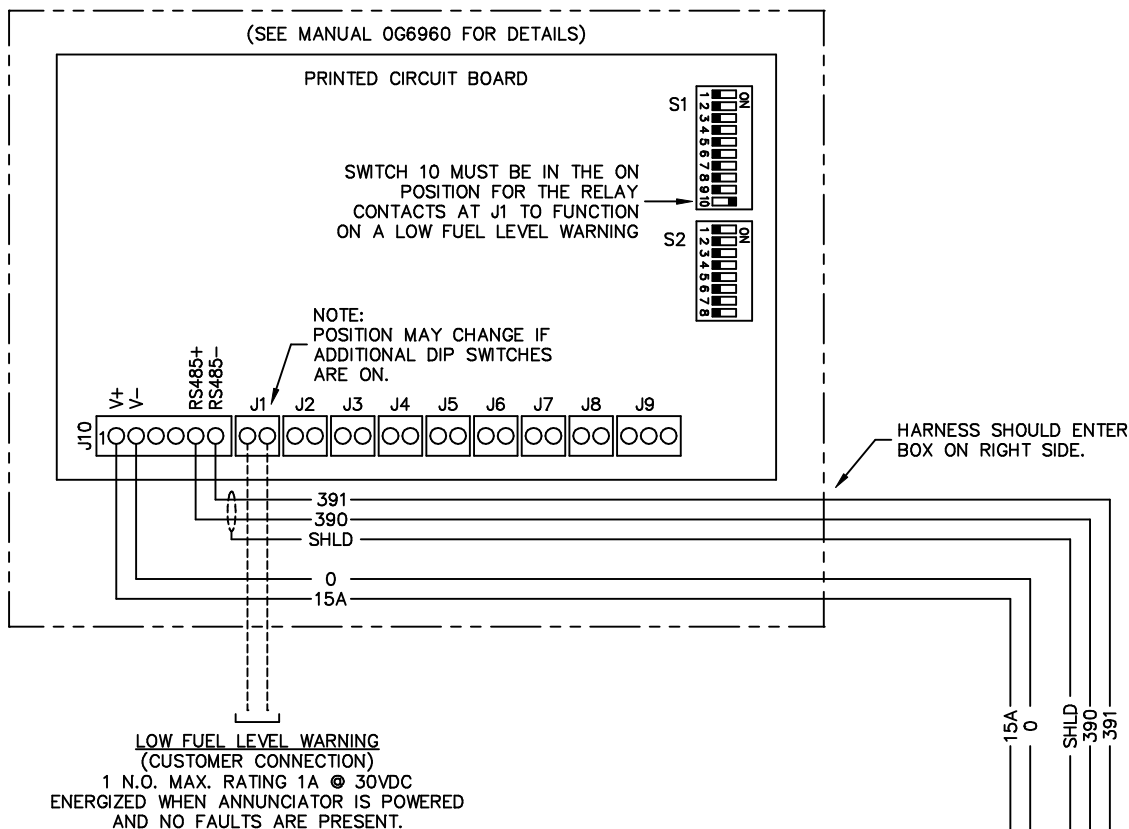

COMPONENTS LOCATED IN CUSTOMER LOW VOLTAGE CONNECTION BOX

