


LEGEND

AFS - AIR/FUEL SOLENOID
 ALT - DC CHARGE ALTERNATOR
 AS - ALTERNATOR STATOR
 BA - BRUSH ASSEMBLY
 BAT - BATTERY
 BWR - BASIC WIRELESS RECEPTACLE
 CAM - CAMSHAFT SENSOR
 CAR - COMMON ALARM RELAY
 CB - CIRCUIT BREAKER
 CSS - CRANKSHAFT SENSOR
 CYL - CYLINDER IGNITION COIL
 DB - DIODE BRIDGE
 EC - EMISSIONS CONNECTOR
 F - FUSE IN LINE
 FS - FUEL SOLENOID
 GND - GROUND CONNECTION
 GOV - ELECTRONIC GOVERNOR ACTUATOR
 HVP - HIGH VOLTAGE PLUG 12-PIN (BULKHEAD)
 HVR - HIGH VOLTAGE RECEPTACLE 12-PIN

ICMJ - IGNITION CONTROL MODULE
 J1 - ENGINE CONTROL MODULE 35-PIN CONNECTOR
 J2 - ENGINE CONTROL MODULE 23-PIN CONNECTOR
 LFP - LOW FUEL PRESSURE SWITCH
 LOS - LOW OIL PRESSURE SWITCH
 LVP - LOW VOLTAGE PLUG 8-PIN (BULKHEAD)
 LVR - LOW VOLTAGE RECEPTACLE 8-PIN
 MLCB - MAIN LINE CIRCUIT BREAKER
 MOV - METAL OXIDE VARISTOR
 MPU - MAGNETIC PICKUP
 NB - NEUTRAL BLOCK
 OS - OXYGEN SENDER
 R1 - RESISTOR
 SC - STARTER CONTACTOR
 SM - STARTER MOTOR
 TB - TERMINAL BLOCK, CAGE CLAMP
 WLS - COOLANT LEVEL SENDER
 WTS - COOLANT TEMPERATURE SENDER


NOTE: ALL WIRES 18 AWG
 300V UL LISTED UNLESS
 SHOWN OTHERWISE

AWG SIZE

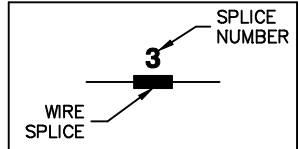


NOTE: ALL WIRES ON THIS
 PAGE ARE 600V RATED

COMPONENTS LOCATED IN CUSTOMER CONNECTION BOX

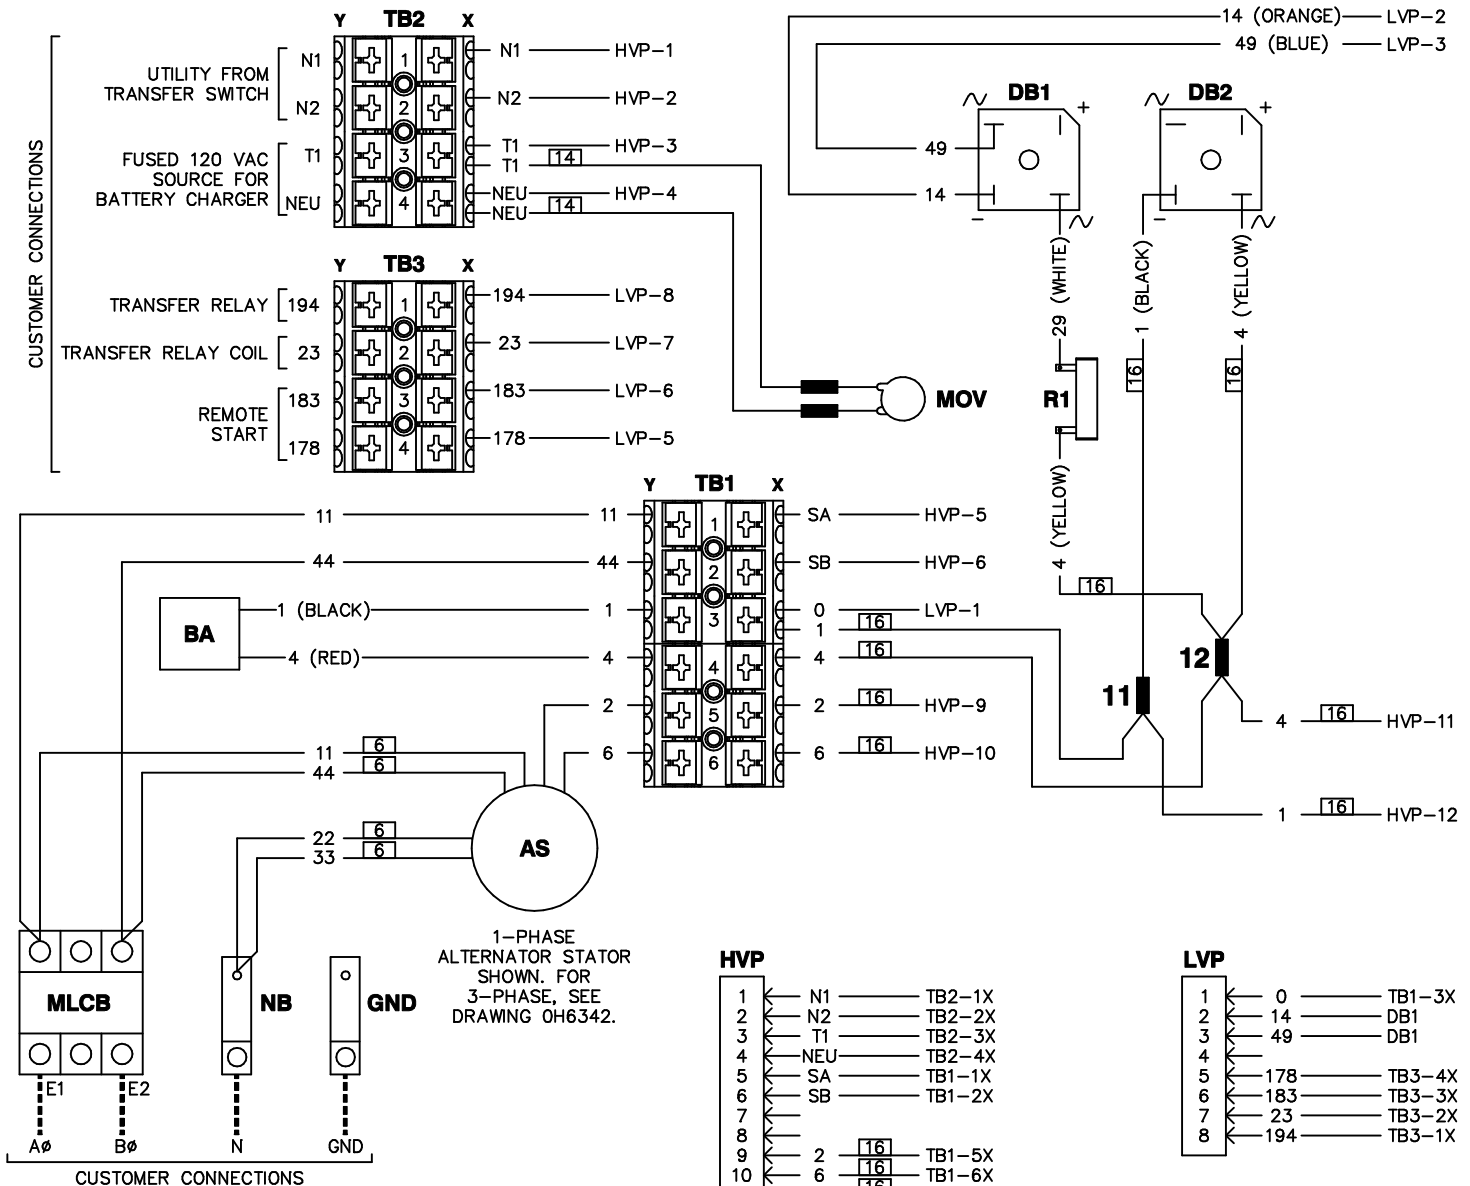


NOTE:
 FOR FIELD WIRING TO CUSTOMER CONNECTIONS
 (TERMINAL BLOCKS)
 MAXIMUM WIRE SIZE: #12 AWG

COMPONENTS LOCATED ON ENGINE

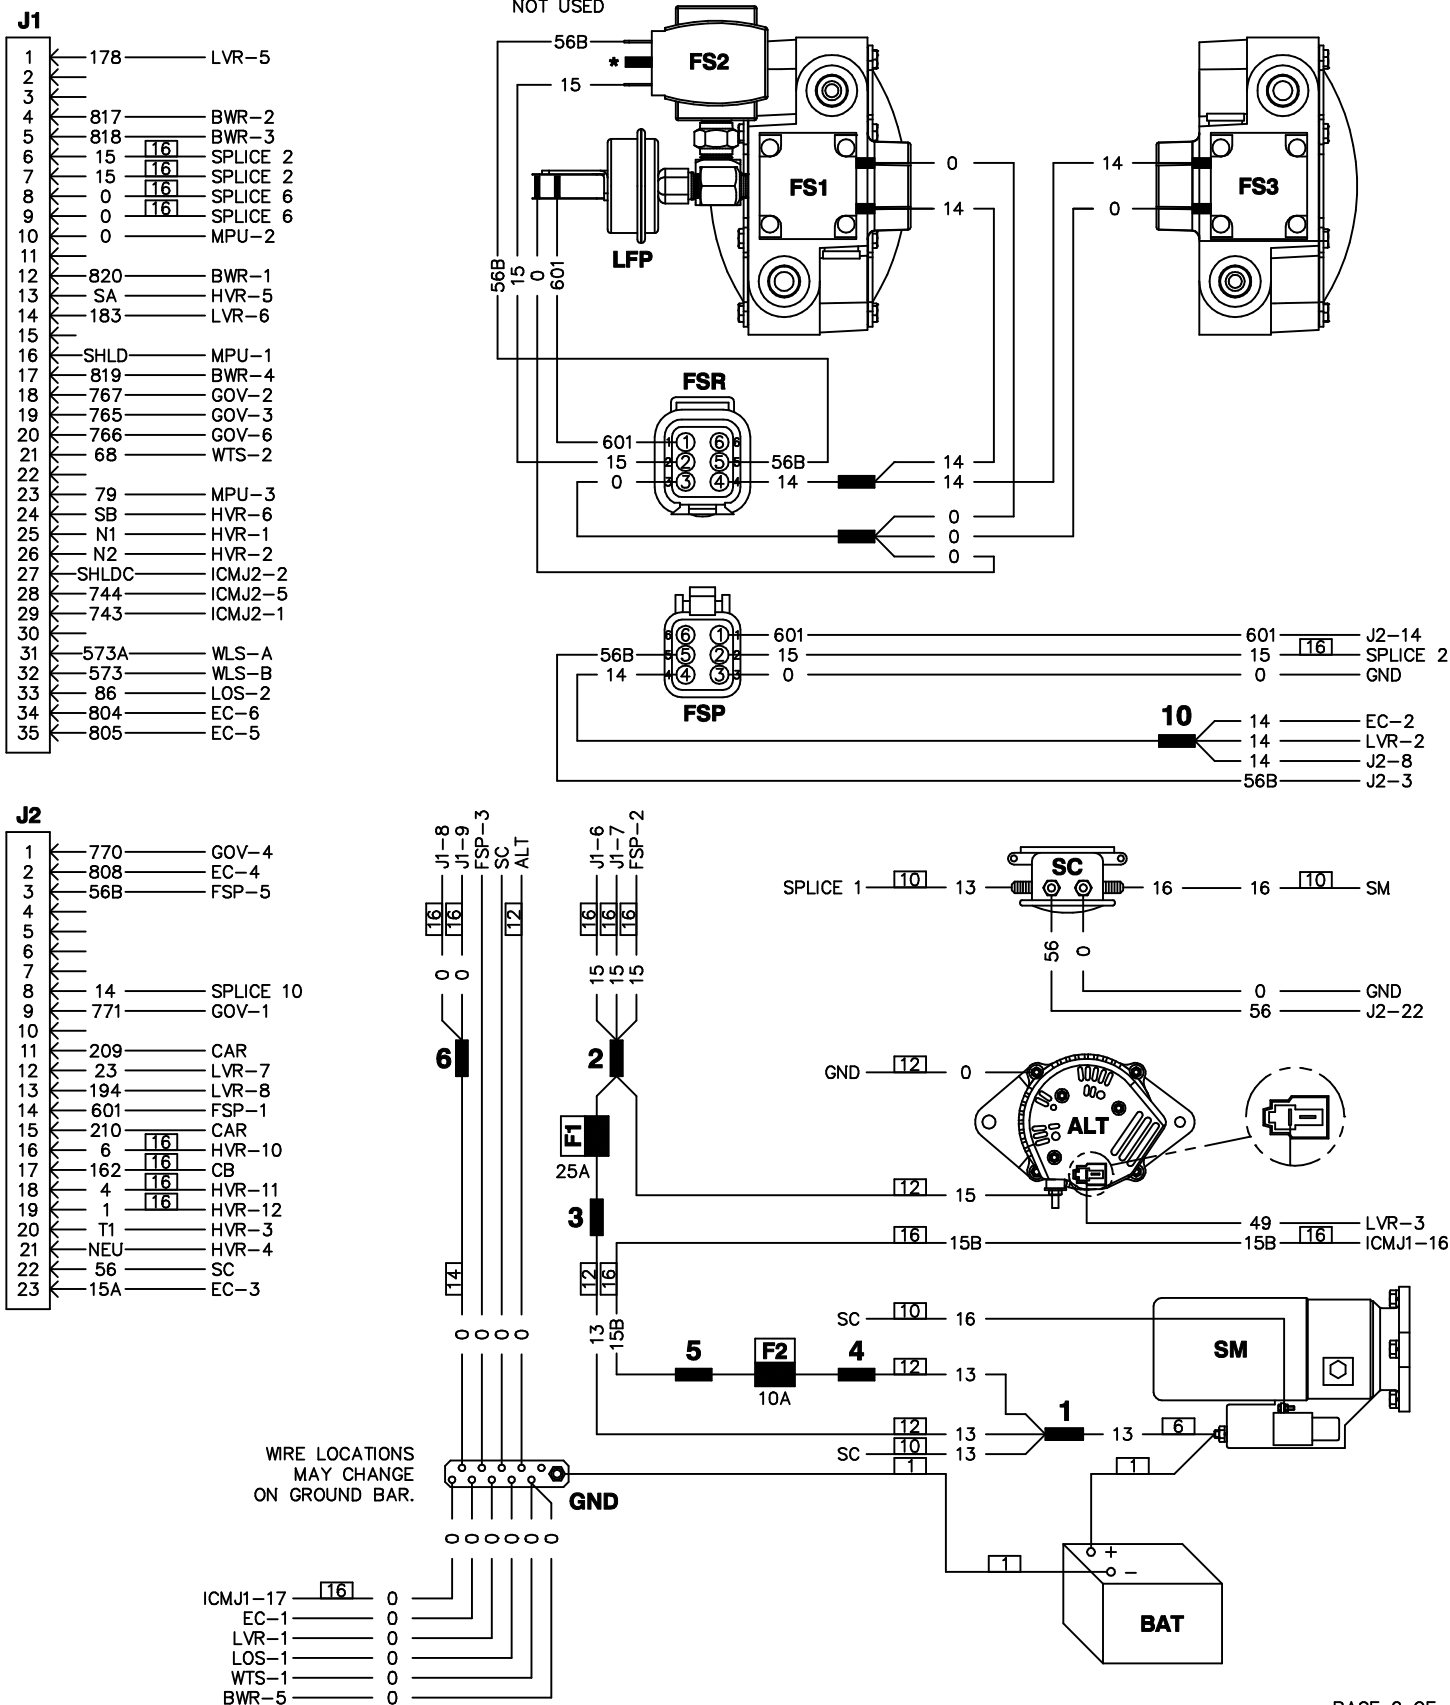


COMPONENTS LOCATED ON ENGINE



HVR

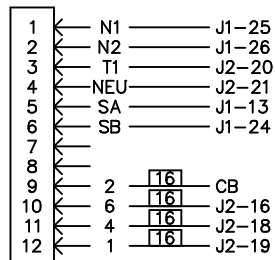







LVR

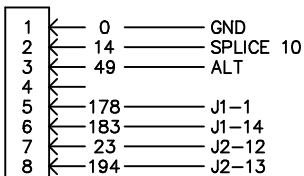

BWR

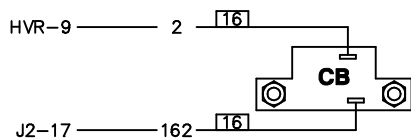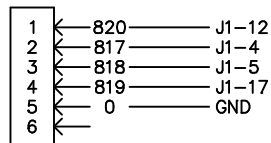

EC

  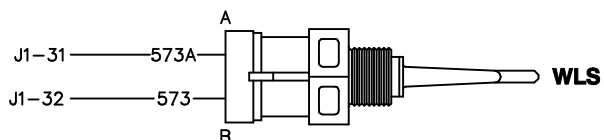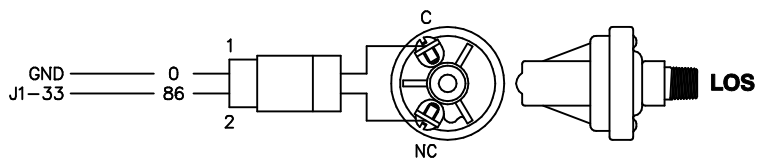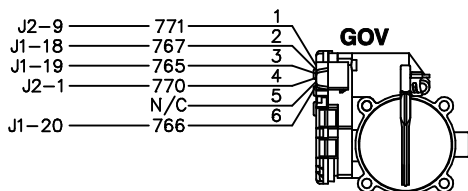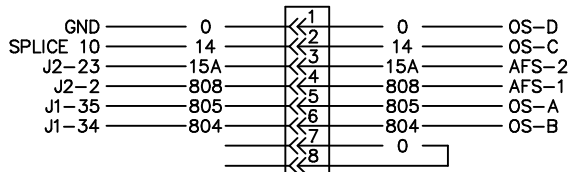

COMPONENTS LOCATED ON ENGINE

