



COMPONENTS LOCATED ON ENGINE


COMPONENTS LOCATED IN CONTROL PANEL



 
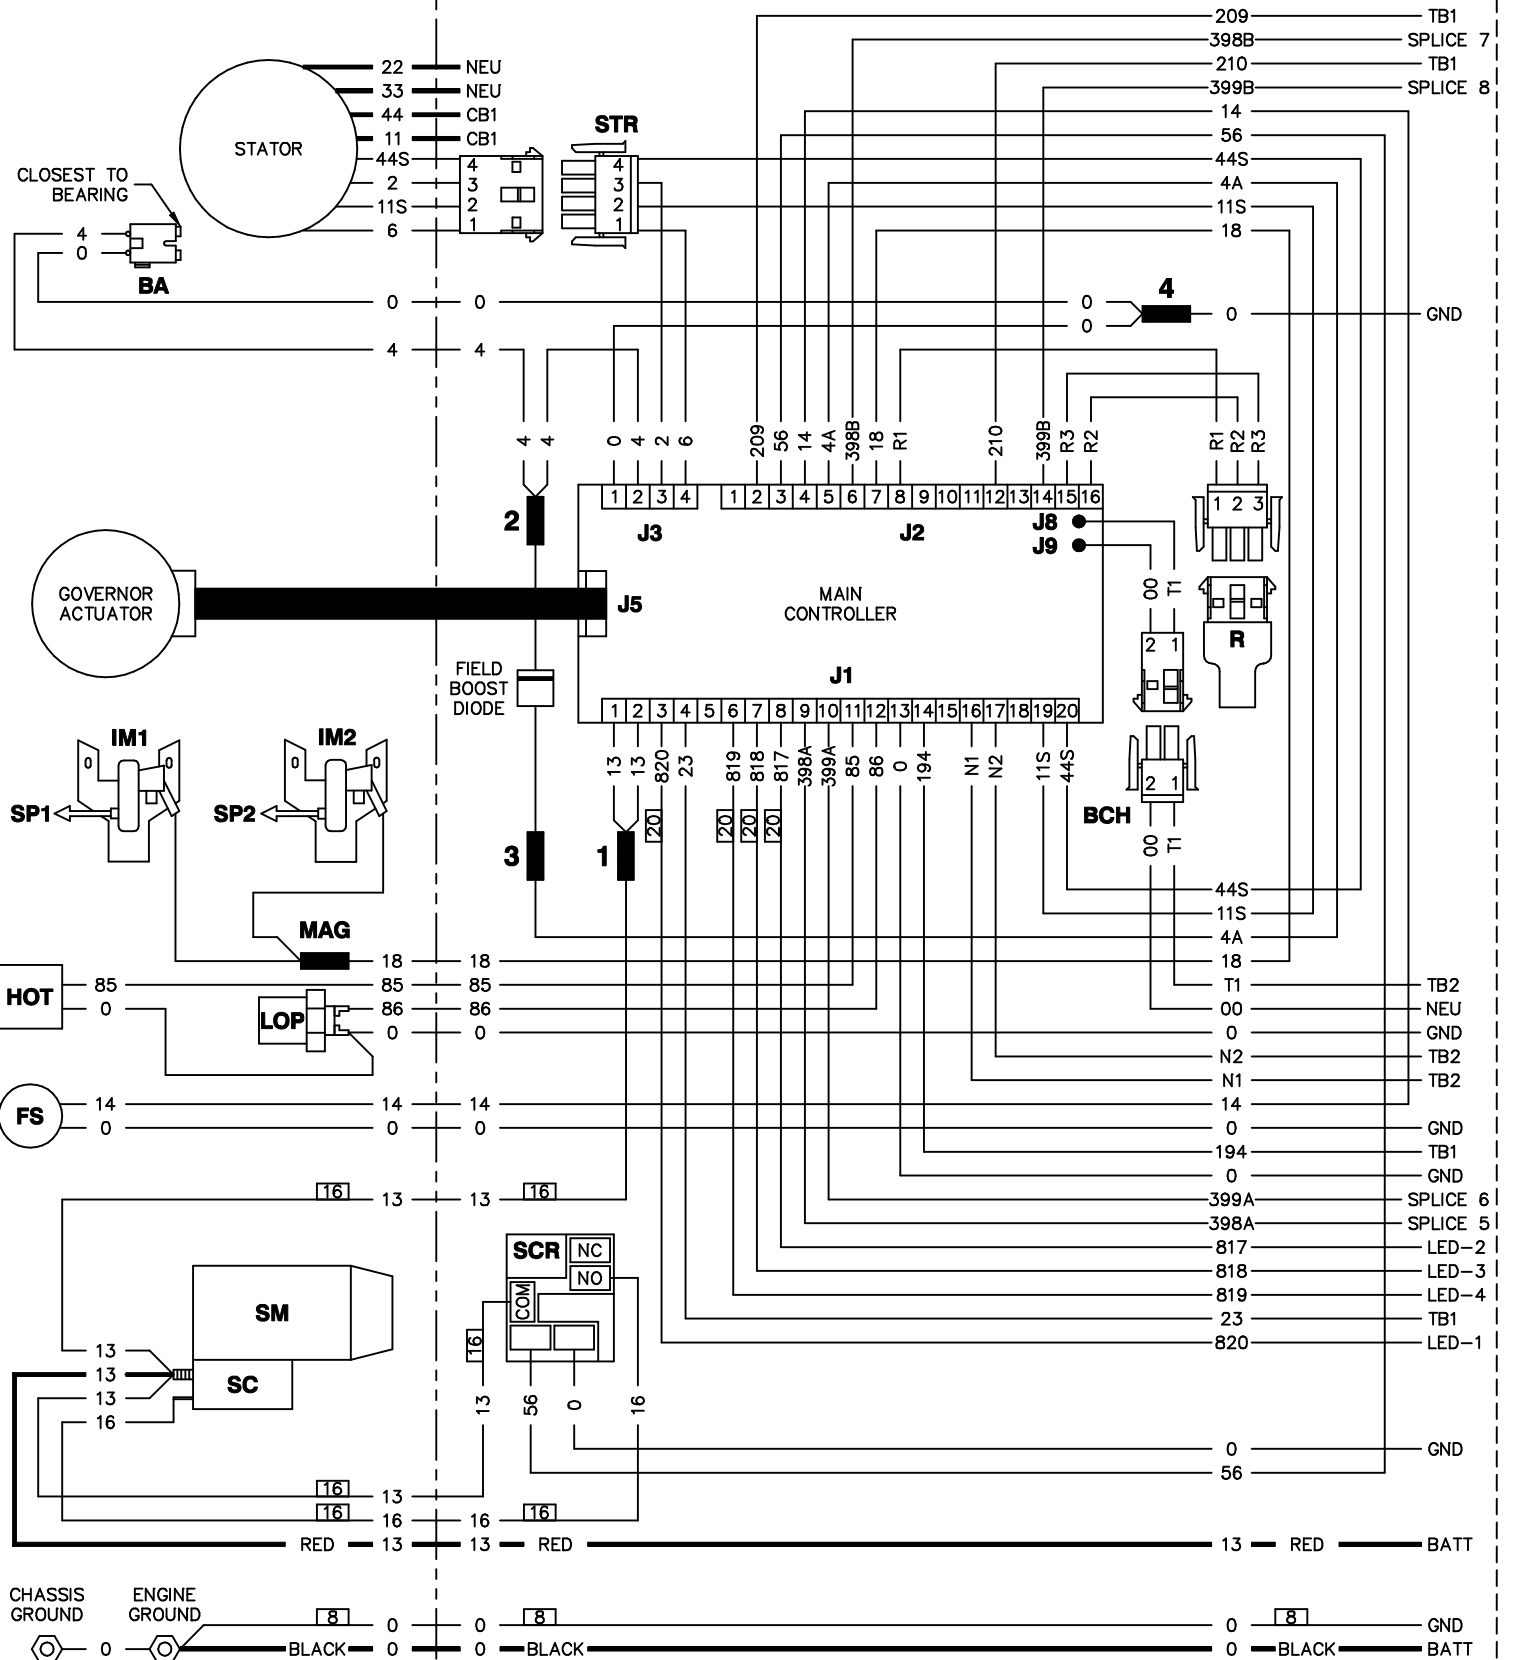


COMPONENTS LOCATED IN CUSTOMER CONNECTION AREA

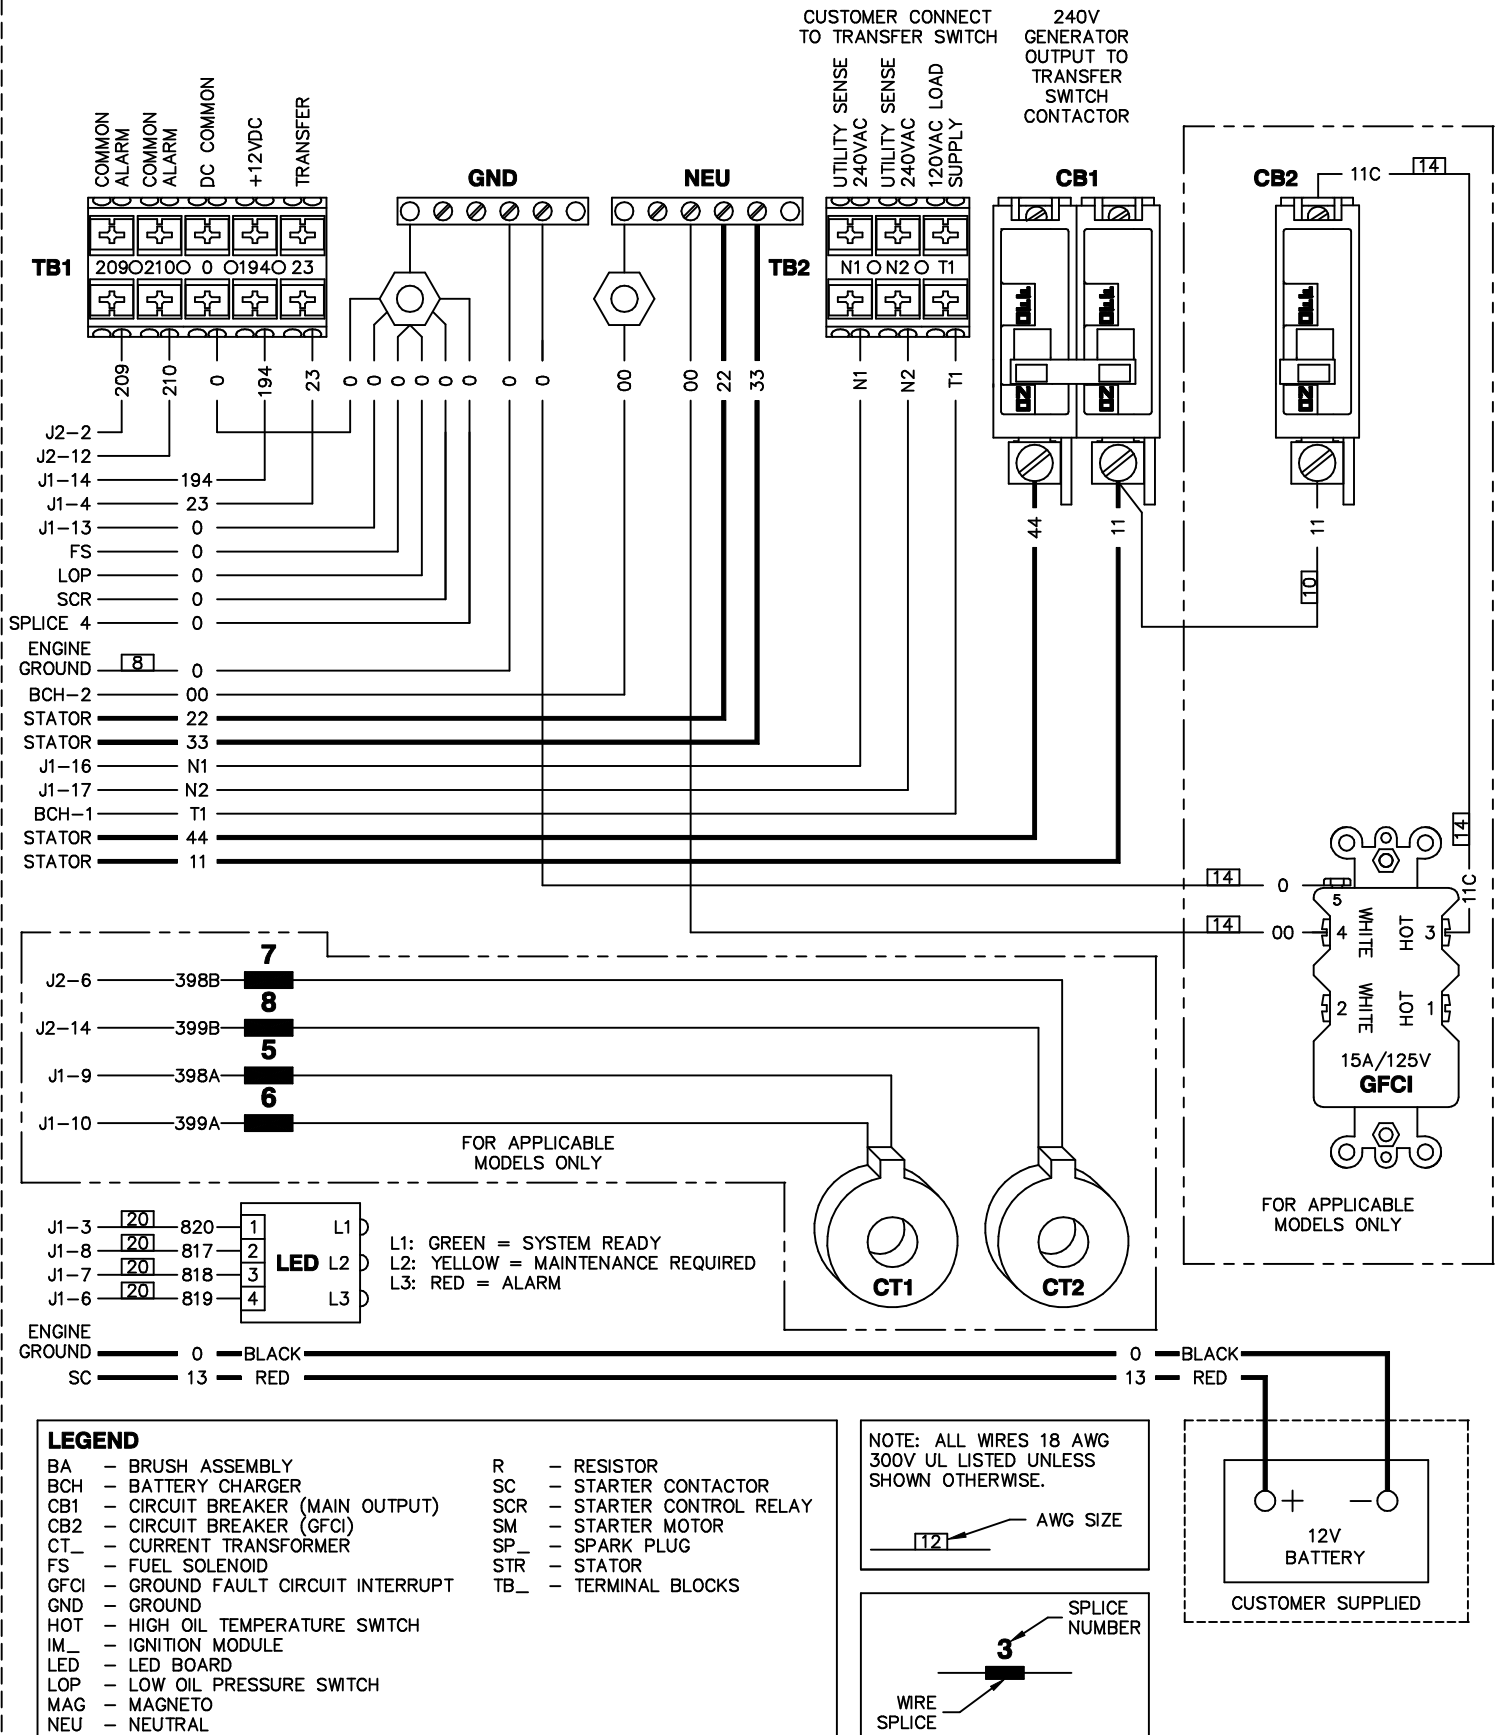



GROUP G

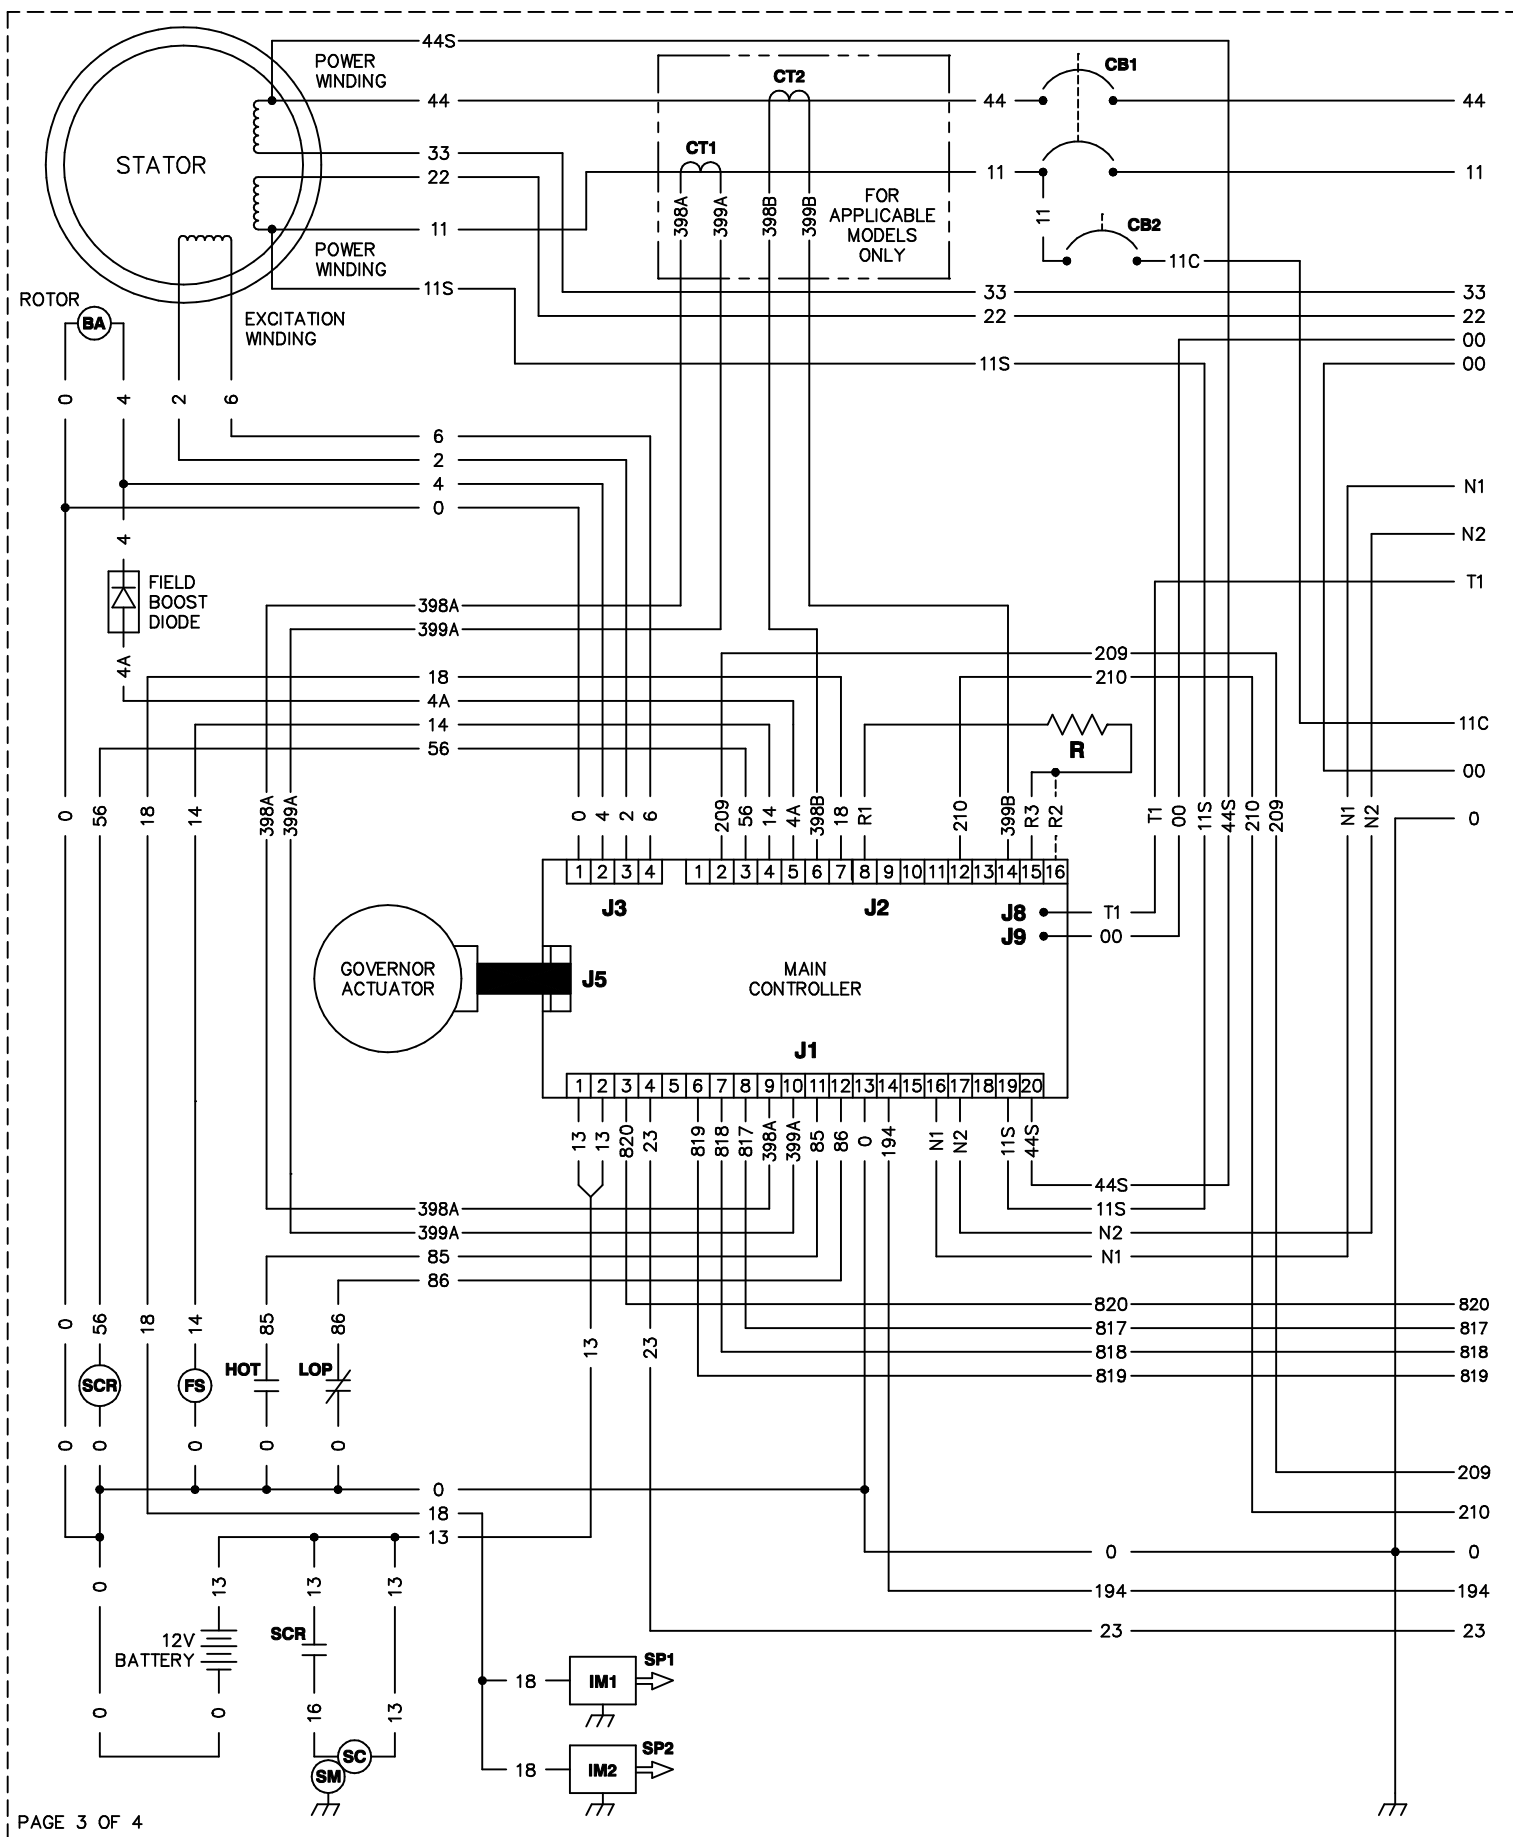

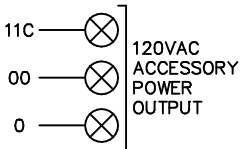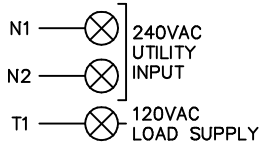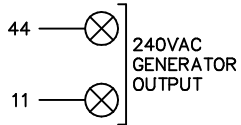

FOR APPLICABLE
MODELS ONLY

L1: GREEN = SYSTEM READY
L2: YELLOW = MAINTENANCE REQUIRED
L3: RED = ALARM

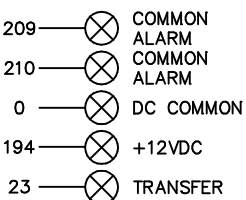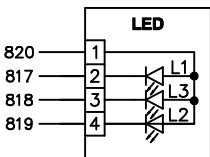

LEGEND

BA — BRUSH ASSEMBLY	LED — LED BOARD
CB1 — CIRCUIT BREAKER (MAIN OUTPUT)	LOP — LOW OIL PRESSURE SWITCH
CB2 — CIRCUIT BREAKER (GFCI)	R — RESISTOR
CT_ — CURRENT TRANSFORMER	SC — STARTER CONTACTOR
FS — FUEL SOLENOID	SCR — STARTER CONTROL RELAY
HOT — HIGH OIL TEMPERATURE SWITCH	SM — STARTER MOTOR
IM_ — IGNITION MODULE	SP_ — SPARK PLUG