

RADIATOR/EXHAUST
DISCHARGE AIR
(BOTH SIDES)

AIR INTAKE
(BOTH SIDES)

768 [30.2]
CENTER OF GRAVITY
SEE NOTE 5

167
[6.6]

535
[21.1]

2.5" O.D. EXHAUST
OUTLET

REMOVE COVER
FOR ACCESS TO
RADIATOR FILL CAP

TOP VIEW

BATTERY 12V, GRP 26
NEGATIVE GROUND
P/N: 077483

EXHAUST MUFFLER
ENCLOSED WITHIN
GENERATOR ENCLOSURE

RADIATOR/EXHAUST
DISCHARGE AIR

FUEL LINE CONNECTION
3/4" NPT FEMALE COUPLING

LEFT SIDE VIEW

LIFTING PROVISIONS
(4 PLACES)
SEE NOTES 5, 7 AND
CENTER OF GRAVITY DIMENSIONS

DRAWING CREATED FROM PRO/ENGINEER
3D FILE. ECO MODIFICATION TO BE
APPLIED TO SOLID MODEL ONLY.

WEIGHT DATA				
ENGINE/KW	ENCLOSURE MATERIAL	WEIGHT GENSET ONLY KG [LBS]	WEIGHT SHIPPING SKID KG [LBS]	SHIPPING WEIGHT KG [LBS]
2.4L 32KW	AL	556 [1225]	44 [98]	600 [1323]
2.4L 38KW	AL	560 [1235]	44 [98]	605 [1333]

SERVICE ITEM	2.4L
OIL FILL CAP	EITHER SIDE
OIL DIP STICK	RIGHT SIDE
OIL FILTER	RIGHT SIDE
OIL DRAIN HOSE	RIGHT SIDE
RADIATOR DRAIN HOSE	LEFT SIDE
COOLANT RECOVERY BOTTLE	LEFT SIDE
RADIATOR FILL CAP ACCESS	ROOF TOP
AIR CLEANER ELEMENT	RIGHT SIDE
SPARK PLUGS	LEFT SIDE
MUFFLER	SEE NOTE 11
DRIVE BELT	EITHER SIDE
FAN BELT	SEE NOTE 11
BATTERY	LEFT SIDE

REFERENCE OWNERS MANUAL
FOR PERIODIC REPLACEMENT
PART LISTINGS.

NOTES:

1. MINIMUM RECOMMENDED CONCRETE PAD SIZE IS 6" OFFSET OF OVERALL LENGTH AND WIDTH OF GENERATOR. {1193.8 (47") WIDE X 2255.5 (88.8") LONG}. REFERENCE INSTALLATION GUIDE SUPPLIED WITH THE UNIT FOR CONCRETE PAD GUIDELINES. REFERENCE MANUFACTURER'S SPECIFICATIONS IF USING ENGINEERED, PREFABRICATED SLABS.
2. ALLOW SUFFICIENT ROOM ON ALL SIDES OF THE GENERATOR FOR MAINTENANCE AND SERVICING. THIS UNIT MUST BE INSTALLED IN ACCORDANCE WITH CURRENT APPLICABLE NFPA 37 AND NFPA 70 STANDARDS AS WELL AS ANY OTHER FEDERAL, STATE, AND LOCAL CODES.
3. CONTROL PANEL / CIRCUIT BREAKER INFORMATION:
 - SEE SPECIFICATION SHEET OR OWNERS MANUAL
 - ACCESSIBLE THROUGH CUSTOMER ACCESS ASSEMBLY DOOR ON REAR OF GENERATOR.
4. REMOVE THE REAR ENCLOSURE COVER PANEL TO ACCESS THE STUB-UP AREAS AS FOLLOWS:
 - HIGH VOLTAGE CONNECTION INCLUDING AC LOAD LEAD CONDUIT CONNECTION, NEUTRAL CONNECTION, AND BATTERY CHARGER 120 VOLT AC (0.5 AMP MAX) CONNECTION.
 - LOW VOLTAGE CONNECTION INCLUDING TRANSFER SWITCH CONTROL WIRES.
5. CENTER OF GRAVITY AND WEIGHT MAY CHANGE DUE TO UNIT OPTIONS.
6. BOTTOM OF GENERATOR SET MUST BE ENCLOSED TO PREVENT PEST INTRUSION AND RECIRCULATION OF DISCHARGE AIR AND/OR IMPROPER COOLING AIR FLOW.
7. REFERENCE OWNERS MANUAL FOR LIFTING WARNINGS.
8. MOUNTING BOLTS OR STUDS TO MOUNTING SURFACE SHALL BE 5/8-11 GRADE 5 (USE STANDARD SAE TORQUE SPECS)
9. MUST ALLOW FREE FLOW OF INTAKE AIR, DISCHARGE AIR AND EXHAUST. SEE SPEC SHEET FOR MINIMUM AIR FLOW AND MAXIMUM RESTRICTION REQUIREMENTS.
10. GENERATOR MUST BE INSTALLED SUCH THAT FRESH COOLING AIR IS AVAILABLE AND THAT DISCHARGE AIR FROM RADIATOR IS NOT RECIRCULATED.
11. EXHAUST MUFFLER AND FAN BELT ARE ENCLOSED WITHIN GENERATOR ENCLOSURE, REMOVE FRONT PANEL TO ACCESS.

CIRCUIT BREAKER
SEE NOTE 3

1171[46.1]
OVERALL HEIGHT

REAR ENCLOSURE
COVER PANEL
SEE NOTE 4

CUSTOMER ACCESS
ASSEMBLY, CONTROL
PANEL ACCESS,
BATTERY CHARGER
LOCATED WITHIN
SEE NOTE 4

888 [35.0]
OVERALL WIDTH

REAR VIEW

759 [29.9]
DOOR TYP

VICE ACTION LATCH,
ONE PER DOOR,
ONE LIFT OFF
DOOR PER SIDE
OF GENERATOR

47
[1.8]
TYP

1857 [73.1] TYP
1950 [76.8]
OVERALL LENGTH

58
[2.3]
TYP

RIGHT SIDE VIEW

GENERAC

TITLE

INSTALLATION PROTECTOR G2.4L C2
32 & 38 KW

ISSUE DATE: 02/2015

SIZE
B

CAGE NO
N/A

DWG NO

0K9268

REV
F

SCALE

0.050

WT-KG

SEE ABOVE

SHEET

1 of 2

DIMENSIONS: MM [INCH]

GENERAC POWER SYSTEMS OWNS THE COPYRIGHT OF THIS DRAWING
WHICH IS SUPPLIED IN CONFIDENCE AND MUST NOT BE USED FOR
ANY PURPOSE OTHER THAN FOR WHICH IT IS SUPPLIED WITHOUT
THE EXPRESS WRITTEN CONSENT OF GENERAC POWER SYSTEMS.
©GENERAC POWER SYSTEMS 2013

ELECTRONICALLY APPROVED
INSIDE WINDCHILL

INSTALLATION DRAWING

2 of 2

INSTALLATION DRAWING