


LEGEND


ALT - DC CHARGE ALTERNATOR
 BAT - BATTERY
 CAM - CAMSHAFT SENSOR
 CYL - CYLINDER IGNITION COIL
 DB - DIODE BRIDGE
 DCVR - DC VOLTAGE REGULATOR
 DPE - EXCITER
 ES - EMERGENCY STOP

F1 - FUSE INLINE
 FS - FUEL SOLENOID
 GA - GOVERNOR ACTUATOR
 J - ENGINE CONTROL MODULE CONNECTOR
 LFP - LOW FUEL PRESSURE SWITCH
 LOS - LOW OIL PRESSURE SWITCH
 MLCB - MAIN LINE CIRCUIT BREAKER
 MPU - MAGNETIC PICKUP


R - RESISTOR
 SC - STARTER CONTACTOR
 SM - STARTER MOTOR
 SP - SPARK PLUG
 THMS - THERMISTOR (BATTERY AMBIENT TEMP.)
 WLS - COOLANT LEVEL SENDER
 WTS - COOLANT TEMPERATURE SENDER

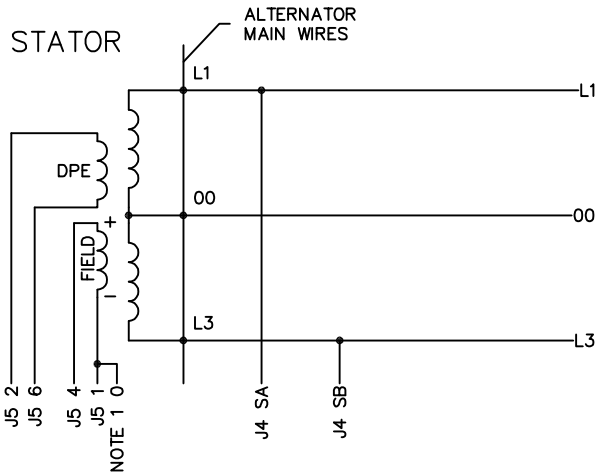


ALTERNATOR CONNECTIONS FOR 1 ϕ UNITS

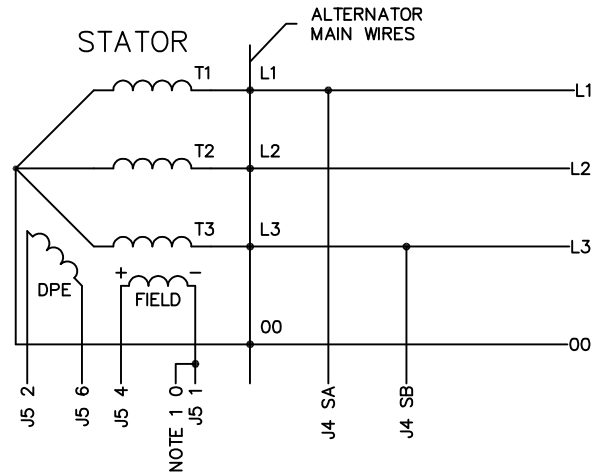

ALTERNATOR CONNECTIONS FOR 3 ϕ UNITS

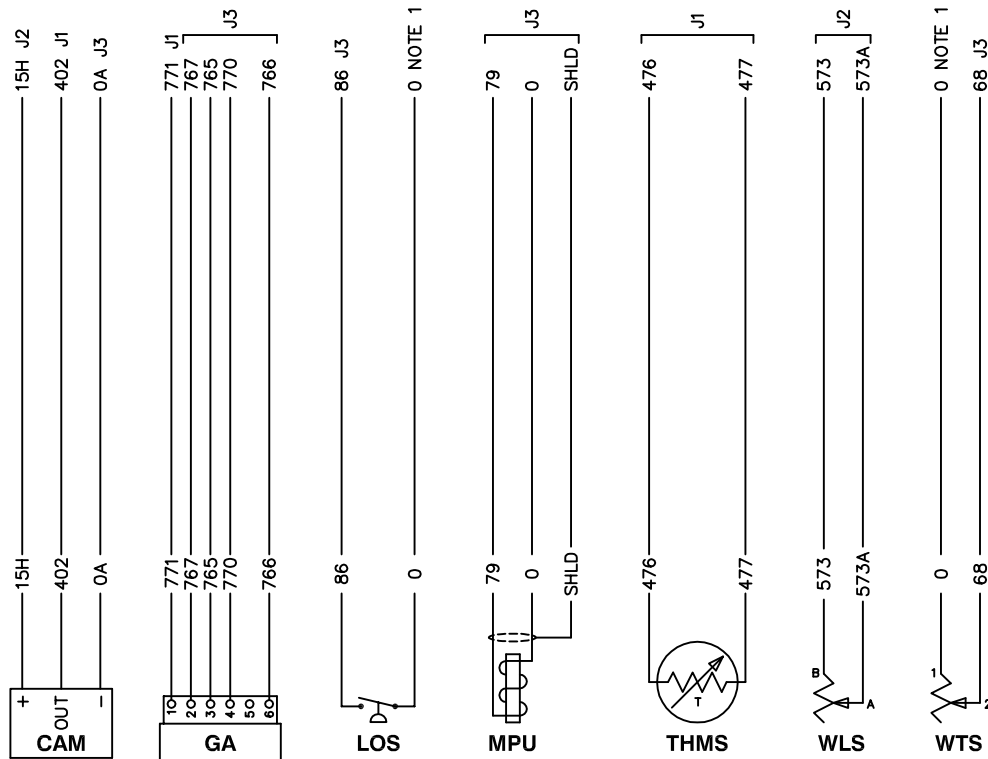

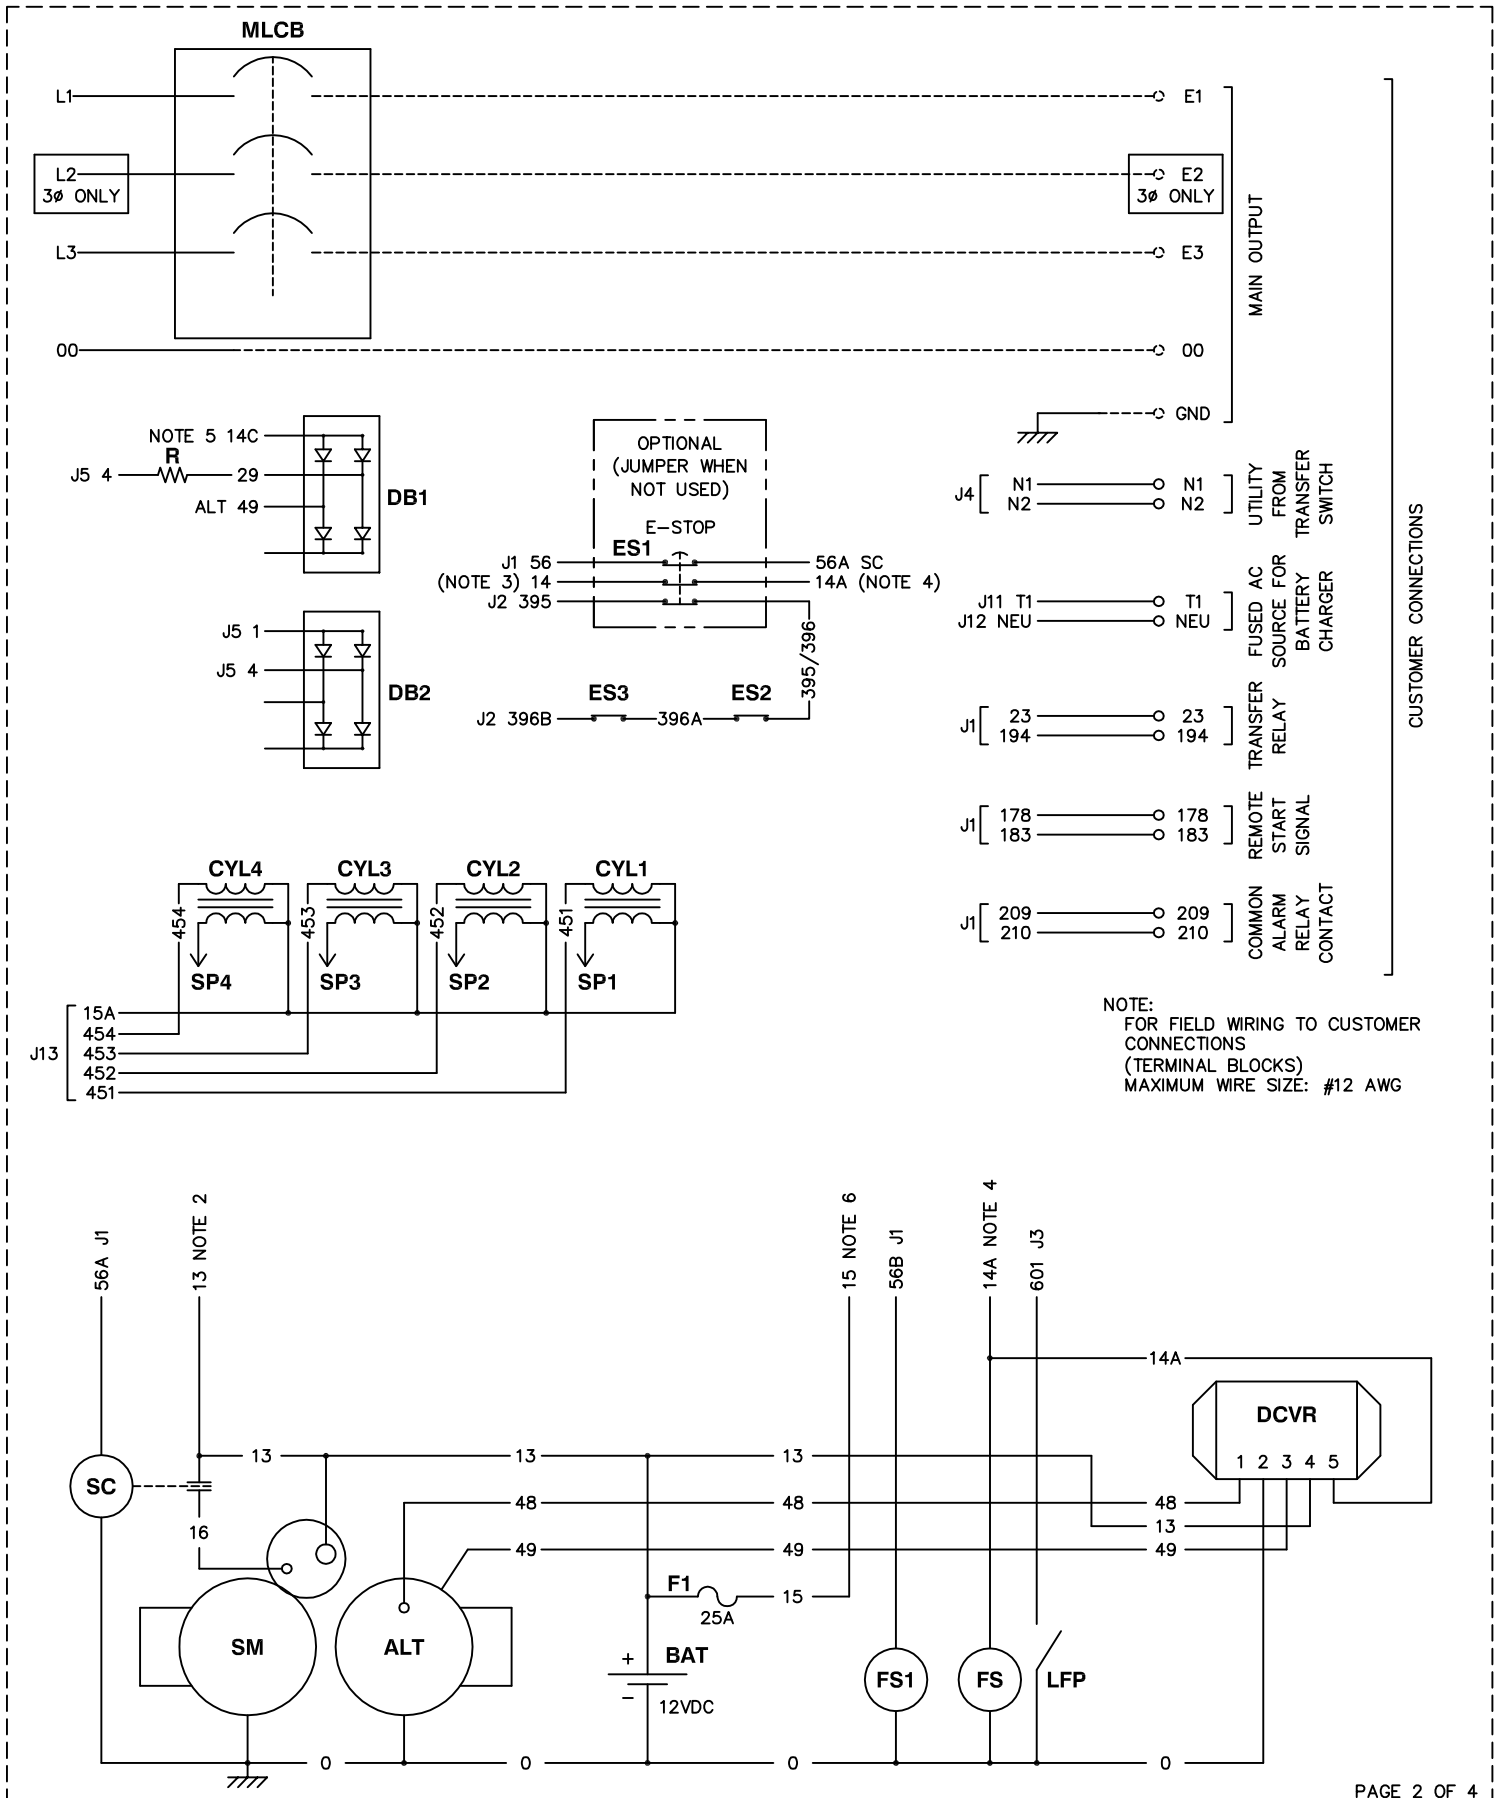

MAIN CONTROLLER CONNECTIONS

J1

PIN	WIRE	TO	FUNCTION
1	15	F1	NOTE 6
2	15	F1	NOTE 6
3	56/56A	ES1	STARTER OUTPUT
4	0	GND	NOTE 1
5	183	CUST CON	REMOTE START
6	194	CUST CON	TRANSFER RELAY COIL +
7	23	CUST CON	TRANSFER RELAY COIL CONTROL
8	209/210	CAR	COMMON ALARM RELAY
9	14/14A	ES1	NOTE 3/NOTE 4
10	771	GA-1	THROTTLE DRIVE LO
11	476	THMS	THERMISTOR (BATTERY CHARGER)
12	477	THMS	THERMISTOR (BATTERY CHARGER)
13	402	CAM-2	HALL-EFFECT CAMSHAFT SENSOR SIGNAL
14	178	CUST CON	REMOTE START
15	209/210	CAR	COMMON ALARM RELAY
16	56B	FS1	START CONTACTOR CONTROL

J2

PIN	WIRE	TO	FUNCTION
2	15H	CAM-3	HALL-EFFECT CAMSHAFT SENSOR +
4	396B	ES3-1	EMERGENCY STOP
8	395/396	ES1	EMERGENCY STOP
9	573	WLS-B	COOLANT LEVEL SIGNAL
10	573A	WLS-A	COOLANT LEVEL SIGNAL RETURN

J3

PIN	WIRE	TO	FUNCTION
1	SHLD	MPU-1	FLYWHEEL SENSOR DRAIN
2	79A	GND	NOTE 1
3	0A	CAM-1	HALL-EFFECT CAMSHAFT SENSOR -
4	0	GND	NOTE 1
5	601	LFP	LOW FUEL PRESSURE
6	68	WTS-2	COOLANT TEMPERATURE SIGNAL
7	765	GA-3	THROTTLE POSITION FEEDBACK SOURCE
8	766	GA-6	THROTTLE POSITION FEEDBACK SIGNAL
9	770	GA-4	THROTTLE DRIVE HI
10	79	MPU-3	FLYWHEEL SENSOR +
11	0	MPU-2	FLYWHEEL SENSOR -
15	86	LOS-NC	LOW OIL PRESSURE SIGNAL
18	767	GA-2	THROTTLE POSITION FEEDBACK RETURN

J4

PIN	WIRE	TO	FUNCTION
1	SA	MLCB	OUTPUT VOLTAGE SENSING A
3	N1	CUST CON	UTILITY VOLTAGE SENSING 1
4	SB	MLCB	OUTPUT VOLTAGE SENSING B
6	N2	CUST CON	UTILITY VOLTAGE SENSING 2

J5

PIN	WIRE	TO	FUNCTION
1	2	DPE	EXCITER OUTPUT
2	1	FIELD	FIELD (BRUSH) -
3	6	DPE	EXCITER RETURN
4	4	FIELD	FIELD (BRUSH) +

J13

PIN	WIRE	TO	FUNCTION
1	15A	CYL1-CYL4	NOTE 7
3	451	CYL1	IGNITION COIL DRIVE 1
4	452	CYL2	IGNITION COIL DRIVE 2
5	453	CYL3	IGNITION COIL DRIVE 3
6	454	CYL4	IGNITION COIL DRIVE 4

NOTES:

1) WIRE #0 IS CHASSIS GROUND (BATTERY-) UNLESS NOTED OTHERWISE.

2) WIRE #13 IS UNFUSED +12VDC (BATTERY+).

3) WIRE #14 IS FUSED +12VDC WHEN GENERATOR IS CRANKING OR RUNNING.

4) WIRE #14A IS LOW CURRENT FUSED +12VDC WHEN GENERATOR IS CRANKING OR RUNNING AND E-STOP IS NOT ACTIVATED.

5) WIRE #14C IS HIGH CURRENT FUSED +12VDC WHEN GENERATOR IS CRANKING OR RUNNING AND E-STOP IS NOT ACTIVATED (FUSED WIRE #15 & SWITCHED WIRE #14A).

6) WIRE #15 IS FUSED +12VDC FOR GENERAL USE.

7) WIRE #15A IS FUSED +12VDC FOR THE IGNITION COILS.

PAGE LEFT INTENTIONALLY BLANK

PAGE 4 OF 4