

21 LIGHT REMOTE ANNUNCIATOR


FOR GENERATORS WITH CUSTOMER CONNECTIONS
LOCATED INSIDE ALTERNATOR CONNECTION BOX

(SEE MANUAL 0G6960 FOR DETAILS)


PRINTED CIRCUIT BOARD

SWITCH 10 MUST BE IN THE ON
POSITION FOR THE RELAY
CONTACTS AT J1 TO FUNCTION
ON A LOW FUEL LEVEL WARNING

NOTE:
POSITION MAY CHANGE IF
ADDITIONAL DIP SWITCHES
ARE ON.

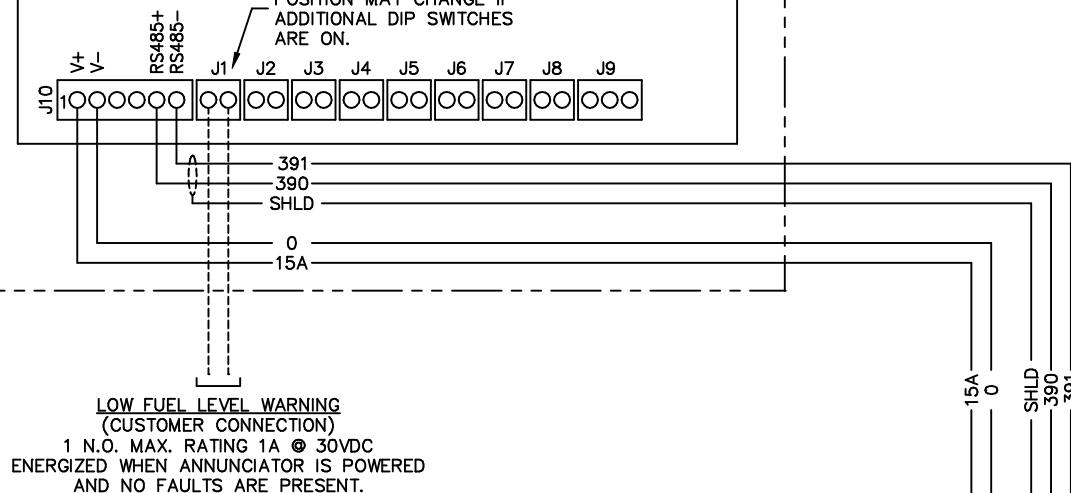


CUSTOMER CONNECTION PANEL LOCATED IN ALTERNATOR CONNECTION BOX

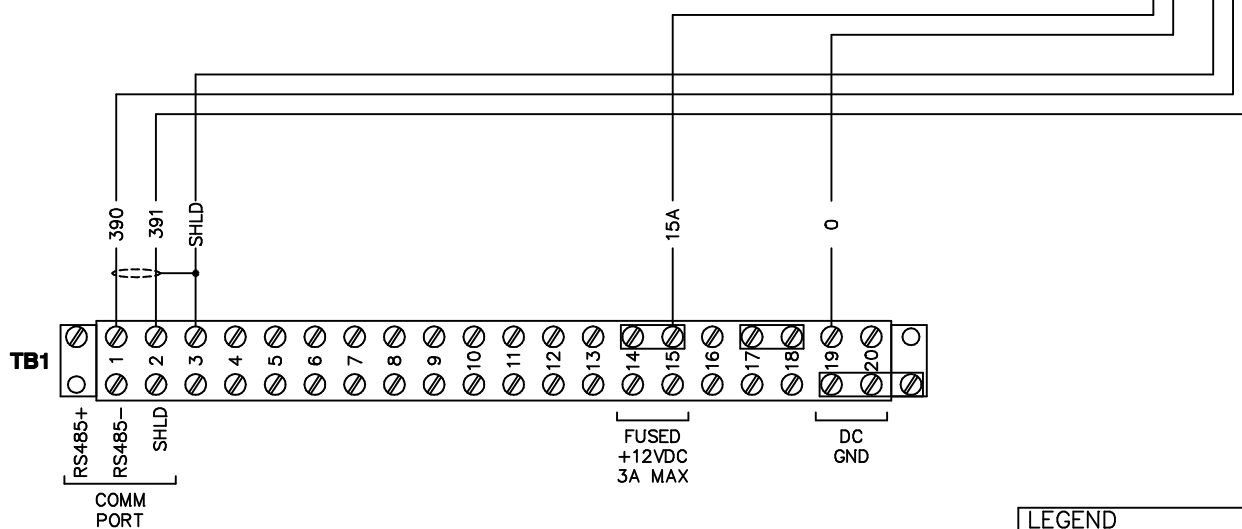

HIGH FUEL LEVEL REMOTE ALARM BOX

**FOR GENERATORS WITH LOW VOLTAGE CUSTOMER CONNECTION BOX
(BOX LOCATED UNDER CONTROL PANEL)**

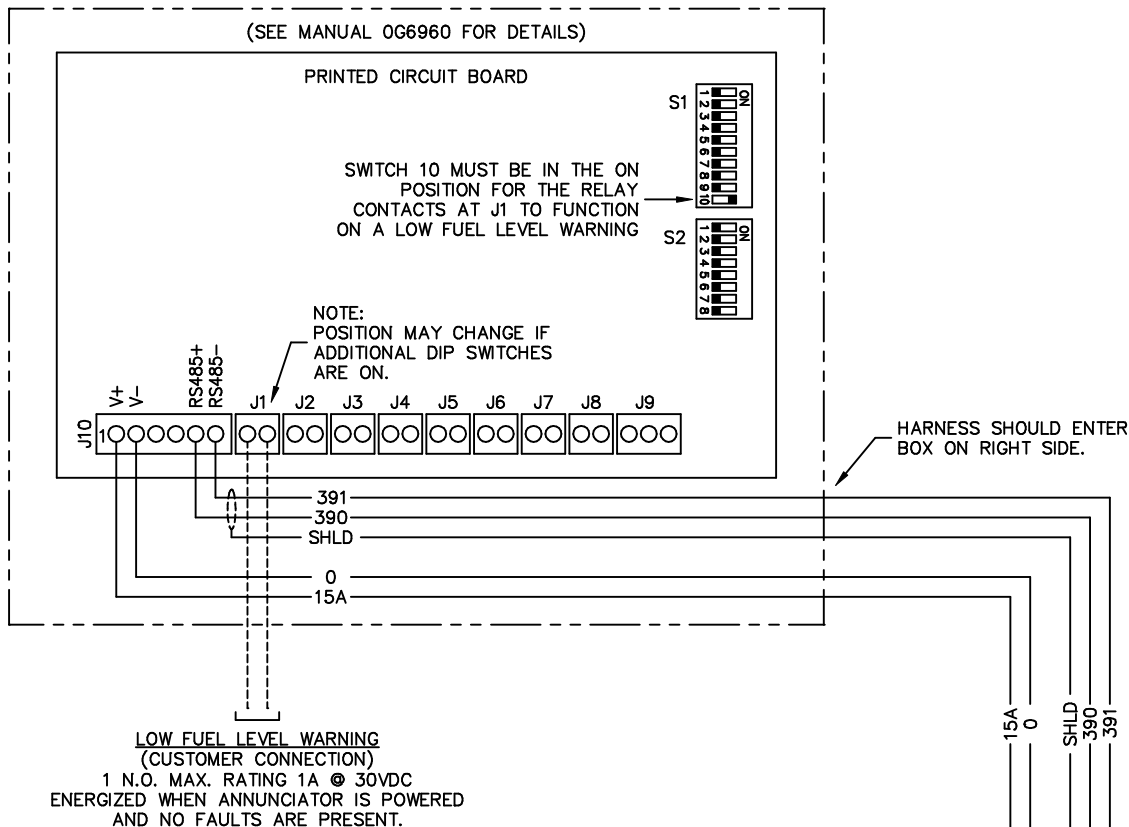

COMPONENTS LOCATED IN CUSTOMER LOW VOLTAGE CONNECTION BOX

