


**LEGEND**

C - CONTACTOR ACTUATING COIL  
 GTS - TRANSFER SWITCH CONTACTOR  
 PM - POWER MONITOR, 3 PHASE UTILITY  
 TR - RELAY, TRANSFER  
 TS - TERMINAL STRIP (CUSTOMER CONNECTION)  
 LS1,LS2,LS3 - LIMIT SWITCHES, ACTUATOR  
 F1,F2 - FUSE 5A SENSING

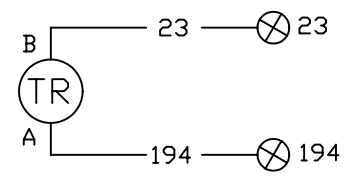

- NOTES:
- 1.) ALL CONTACTS SHOWN WITH TRANSFER SWITCH IN UTILITY POSITION.
  - 2.) FOR SINGLE PHASE OPERATION, ADD JUMPER WIRE FROM PM TERMINALS 1 TO 8.

**SCHEMATIC - DIAGRAM**  
**3-POLE TRANSFER SWITCH**  
**DRAWING #: 0D3818**

# GROUP G

