


LEGEND

- ATS - TRANSFER SWITCH CONTACTOR
- C - CONTACTOR ACTUATING COIL
- PM - POWER MONITOR, 3 PHASE UTILITY
- SC - COIL, SELECTIVE
- TC - COIL, TRIP
- TR - RELAY, TRANSFER
- TS - TERMINAL STRIP (CUSTOMER CONNECTION)
- LS1,LS2,LS3 - LIMIT SWITCHES, ACTUATOR
- F1,F2 - FUSE 5A SENSING & SWITCH OPERATION
- F3,F4,F5,F6 - FUSE 5A XFMR
- TR1,TR2 - TRANSFORMER STEP DOWN

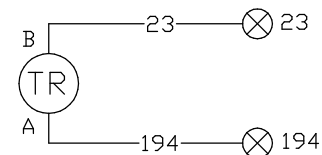

NOTES:

- 1.) ALL CONTACTS SHOWN WITH TRANSFER SWITCH IN UTILITY POSITION.

