


POWER ZONE® CONTROL PLATFORM

Power Zone® 410 Control Interconnections

Power Zone 410 Control with Residential Series Transfer Switch

Important Note: TB10 is not available on all generator configurations.
Refer to the specific unit schematic and wiring diagrams.

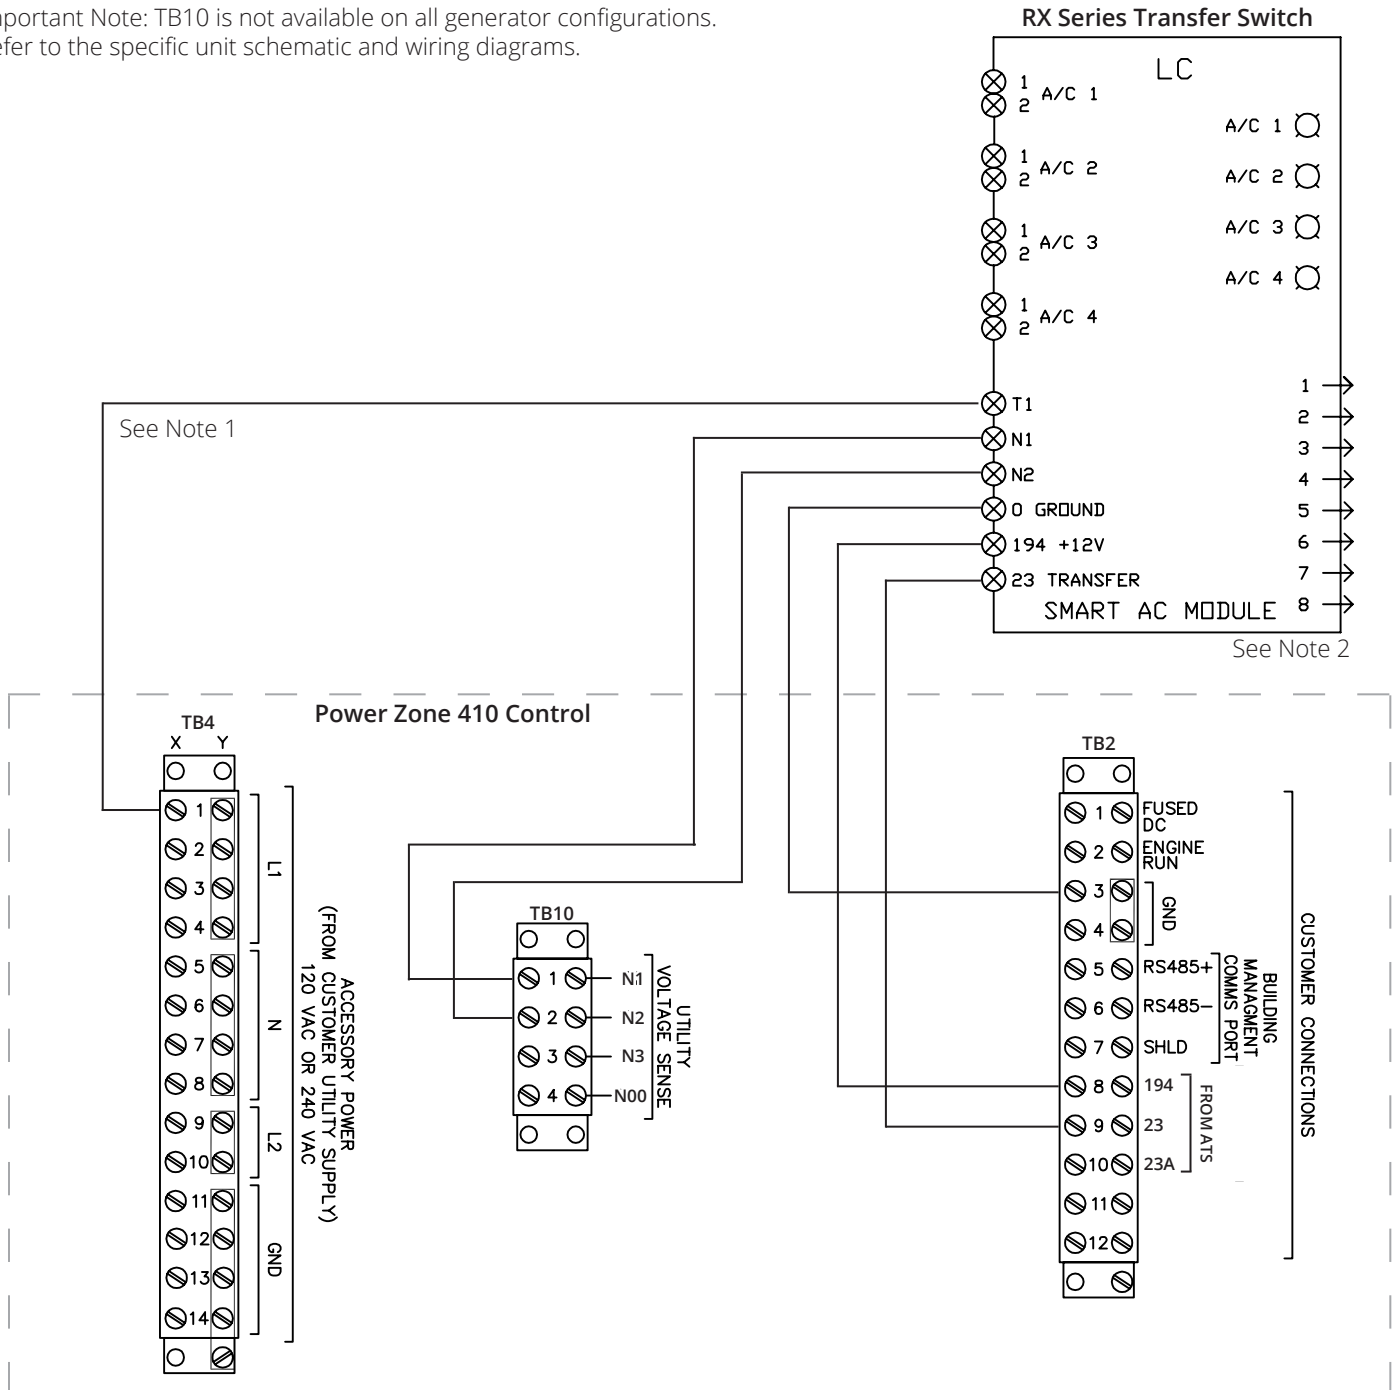


Note 1: When connecting RX Series Smart AC Module T1 for battery charger, Power Zone 410 TB4 must tie to generator neutral bar.
Note 2: If utilizing a three phase Residential transfer switch, an additional kit is required for proper phase sensing functionality:

- RTS___G3, RTS___J3, or RTS___M3 series transfer switches require kit G0074110
- RTS___K3 or RTS___R3 series transfer switches require kit G0074120

POWER ZONE® CONTROL PLATFORM

Power Zone® 410 Control Interconnections

Power Zone 410 Control with TX Series Transfer Switch

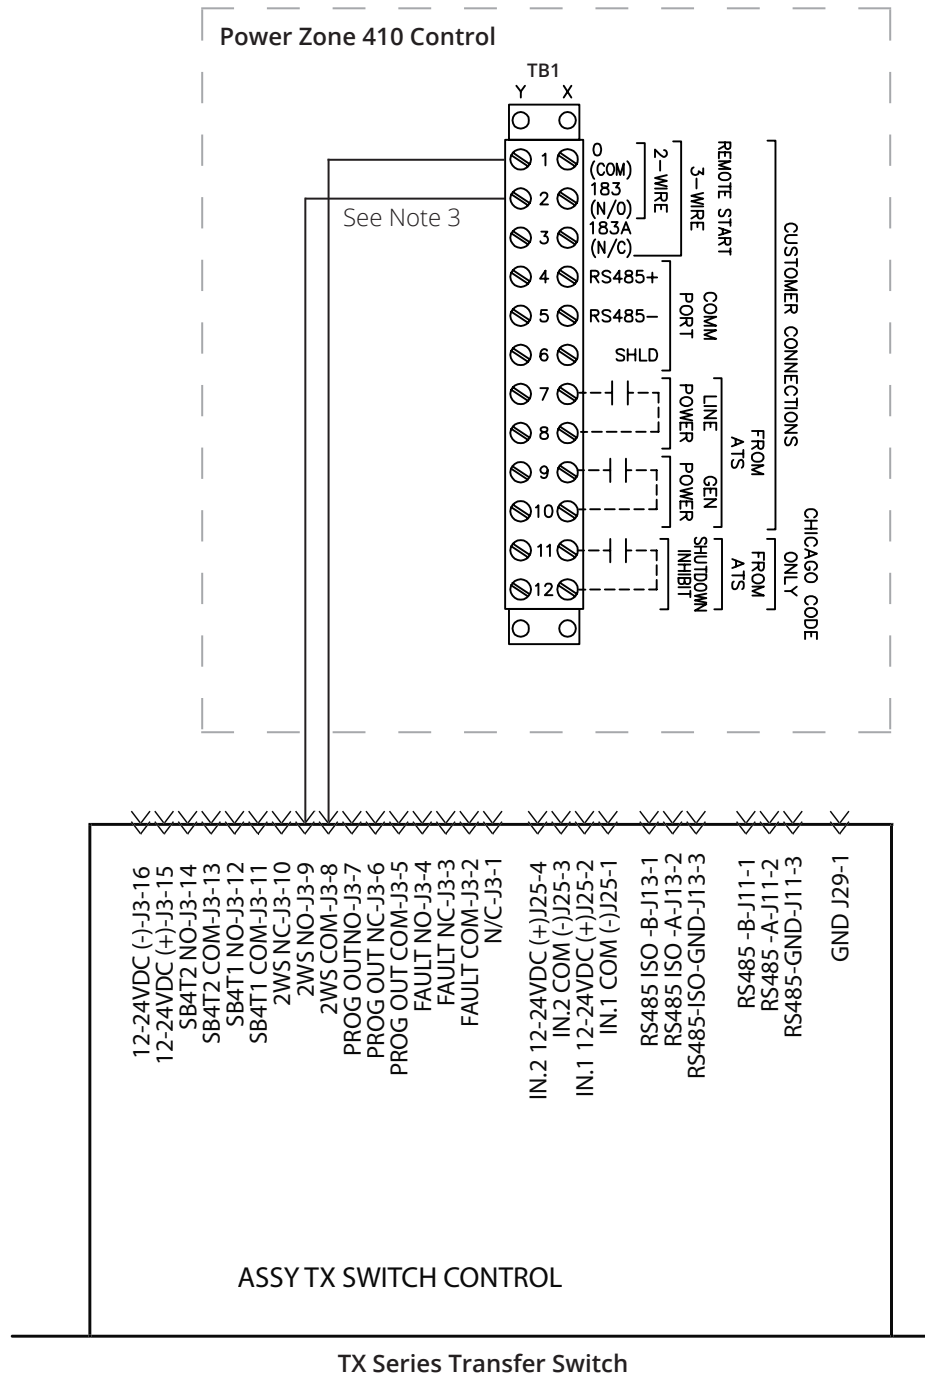


Note 3: For 3-wire start, connect Power Zone 410 Control TB1, 183A (N/C) to TX Series Transfer Switch J3-10.

POWER ZONE® CONTROL PLATFORM

Power Zone® 410 Control Interconnections

Power Zone 410 Control with TX Series Transfer Switch and Gateway

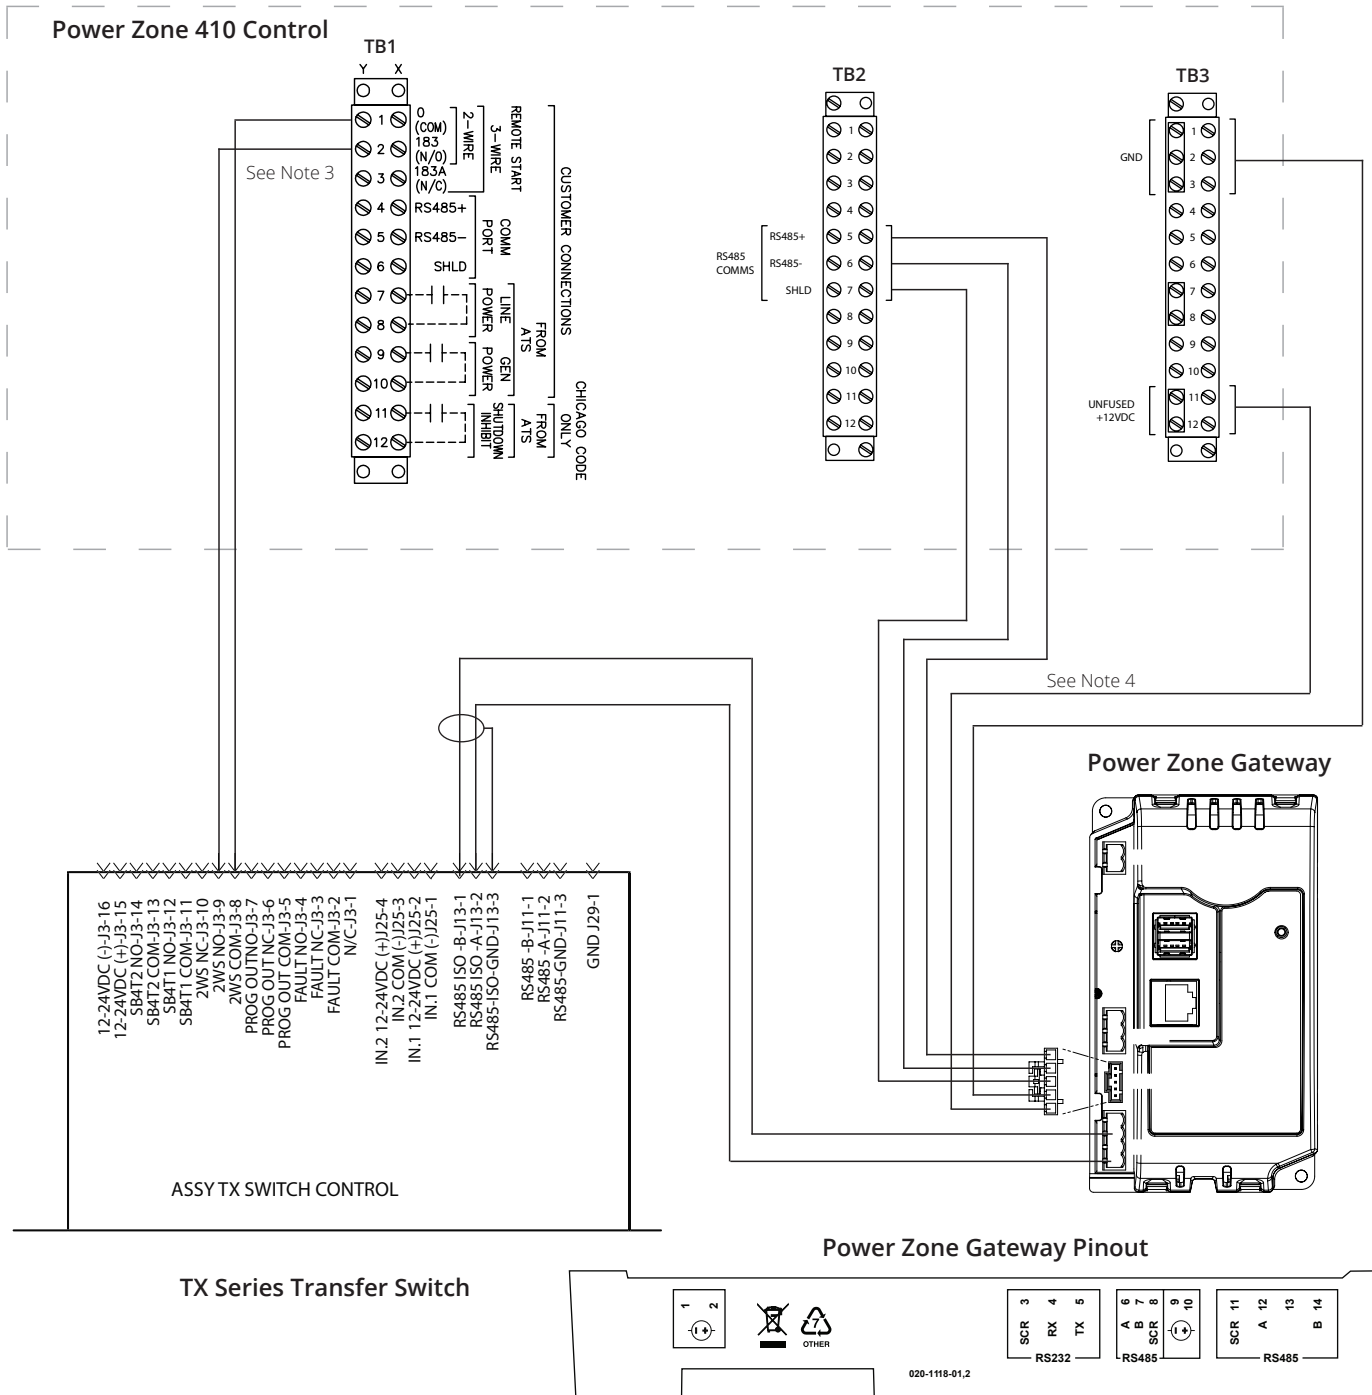

Note 3: For 3-wire start, connect Power Zone 410 Control TB1, 183A (N/C) to TX Series Transfer Switch J3-10.

Note 4: Harness for connections between Power Zone Gateway and Power Zone 410 is provided when unit is configured to include Gateway.