

# GENERAC®

## POWER SYSTEMS, INC.

### Owner's Manual

**GENERAC®**  
POWER SYSTEMS, INC.  
**GUARDIAN®**

**Liquid-cooled, Prepackaged  
Standby Generators**

**Model Numbers  
(Natural Gas)**

**004188-1**

**004370-2**



**004474-1**

**(Liquid Propane Vapor)**

**004189-1**

**004371-2**

**004475-1**

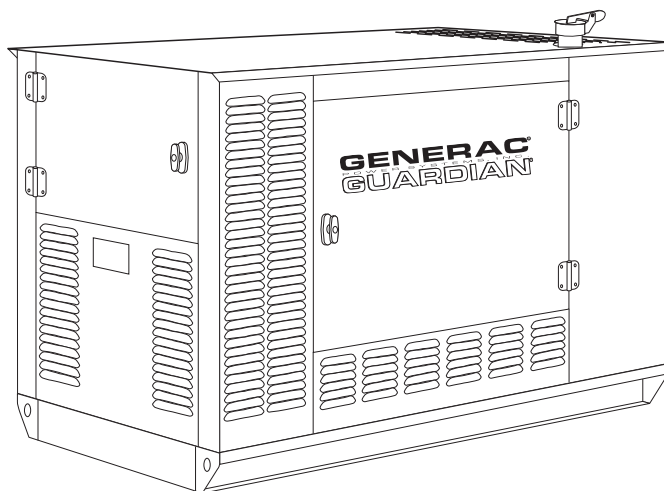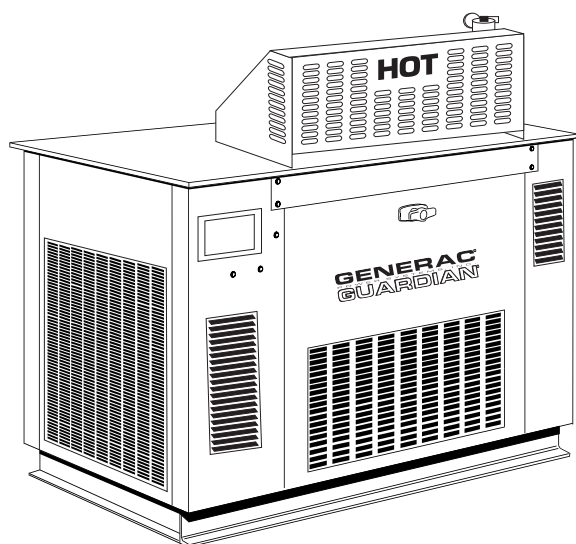

—▲ CAUTION ▲—

**ONLY QUALIFIED ELECTRICIANS OR CONTRACTORS SHOULD ATTEMPT INSTALLATION!!**

**\*This manual should remain with the unit.\***

## INTRODUCTION

Thank you for purchasing this model of the standby generator set product line by Generac Power Systems.

Every effort was expended to make sure that the information and instructions in this manual were both accurate and current at the time the manual was written. However, the manufacturer reserves the right to change, alter or otherwise improve this product(s) at any time without prior notice.

### ◆ READ THIS MANUAL THOROUGHLY

If any portion of this manual is not understood, contact the nearest Generac Authorized Service Dealer for starting, operating and servicing procedures.

Throughout this publication, and on tags and decals affixed to the generator, DANGER, WARNING, CAUTION and NOTE blocks are used to alert personnel to special instructions about a particular service or operation that may be hazardous if performed incorrectly or carelessly. Observe them carefully. Their definitions are as follows:



**After this heading, read instructions that, if not strictly complied with, will result in personal injury or property damage.**



**After this heading, read instructions that, if not strictly complied with, may result in personal injury or property damage.**




**After this heading, read instructions that, if not strictly complied with, could result in damage to equipment and/or property.**

#### NOTE:

**After this heading, read explanatory statements that require special emphasis.**

These safety warnings cannot eliminate the hazards that they indicate. Common sense and strict compliance with the special instructions while performing the service are essential to preventing accidents.

Four commonly used safety symbols accompany the DANGER, WARNING and CAUTION blocks. The type of information each indicates is as follows:

 This symbol points out important safety information that, if not followed, could endanger personal safety and/or property of others.

 This symbol points out potential explosion hazard.

 This symbol points out potential fire hazard.

 This symbol points out potential electrical shock hazard.

The operator is responsible for proper and safe use of the equipment. We strongly recommend that the operator read this Owner's Manual and thoroughly understand all instructions before using this equipment. We also strongly recommend instructing other users to properly start and operate the unit. This prepares them if they need to operate the equipment in an emergency.

### ◆ OPERATION AND MAINTENANCE

It is the operator's responsibility to perform all safety checks, to make sure that all maintenance for safe operation is performed promptly, and to have the equipment checked periodically by a Generac Authorized Service Dealer. Normal maintenance service and replacement of parts are the responsibility of the owner/operator and, as such, are not considered defects in materials or workmanship within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of the generator ensures a minimum number of problems and keep operating expenses at a minimum. See a Generac Authorized Service Dealer for service aids and accessories.

Operating instructions presented in this manual assume that the standby electric system has been installed by a Generac Authorized Service Dealer or other competent, qualified contractor. Installation of this equipment is not a "do-it-yourself" project.

### ◆ HOW TO OBTAIN SERVICE

When the generator requires servicing or repairs, contact a Generac Authorized Service Dealer for assistance. Service technicians are factory-trained and are capable of handling all service needs.

When contacting a Generac Authorized Service Dealer about parts and service, always supply the complete model number of the unit as given on the front cover of this manual or on the DATA CARD affixed to the unit.

## AUTHORIZED SERVICE DEALER LOCATION

To locate the GENERAC AUTHORIZED SERVICE  
DEALER nearest you, please call this number:

**1-800-333-1322**

OR

Locate us on the web at:

**www.generac.com**

**INTRODUCTION .....IFC**

**SAFETY RULES.....2**

**Section 1**

**GENERAL INFORMATION .....4**

Generator .....4

Transfer Switch .....4

Automatic System Operation .....4

Generator AC Connection Systems .....4

Main Circuit Breaker .....5

Generator Fuel System .....5

Engine Protective Devices .....5

Unpacking.....6

Lifting the Generator.....6

Specifications .....6

Fuel Consumption.....7

Torque Specifications .....7

Engine Oil Recommendations .....7

Coolant Recommendations .....7

Before Installation.....7

**Section 2**

**STANDBY GENERATOR INSTALLATION..8**

Generator Location .....8

Generator Mounting and Support.....9

Basic Standby Electric System .....9

Emergency Circuit Isolation Method .....9

Total Circuit Isolation Method.....9

Grounding the Generator .....9

Generator AC Neutral Connections .....10

Transfer Switch Start Signal Connections .....10

Battery Installation .....10

Preparation Before Start-Up .....11

**Section 3**

**OPERATION .....11**

Using a Standard “GTS” Transfer Switch .....11

Control Console Components .....12

Manual Transfer and Startup .....13

Retransfer and Shutdown .....13

Automatic Operation.....13

Weekly Exercise Cycle .....13

Engine Heater .....14

**Section 4**

**MAINTENANCE .....14**

Maintenance Performed by  
Authorized Service Facilities .....14

Overload Protection for Engine DC  
Electrical System .....14

Checking Fluid Levels.....14

Maintenance Owner/Operator Can Perform.....15

Miscellaneous Maintenance.....17

**Section 5**

**TROUBLESHOOTING .....18**

**Section 6**

**SCHEDULED MAINTENANCE .....19**

**Section 7**

**WIRING DIAGRAMS AND  
SCHEMATICS .....22**

**Section 8**

**EXPLODED VIEWS AND  
PARTS LISTS .....27**

**Section 9**

**INSTALLATION DRAWINGS .....52**



**Section 10**



**WARRANTY .....56**





## Important Safety Instructions

Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

 **SAVE THESE INSTRUCTIONS** – The manufacturer suggests that these rules for safe operation be copied and posted in potential hazard areas. Safety should be stressed to all operators, potential operators, and service and repair technicians for this equipment. 

 **SAVE THESE INSTRUCTIONS** – This manual contains important instructions that should be followed during installation and maintenance of the generator and batteries. 


 **WARNING:**   
The engine exhaust from this product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

 **WARNING:**   
This product contains or emits chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

Study these SAFETY RULES carefully before installing, operating or servicing this equipment. Become familiar with this Owner's Manual and with the unit. The generator can operate safely, efficiently and reliably only if it is properly installed, operated and maintained. Many accidents are caused by failing to follow simple and fundamental rules or precautions.

Generac cannot anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and on tags and decals affixed to the unit are, therefore, not all-inclusive. If using a procedure, work method or operating technique that Generac does not specifically recommend, ensure that it is safe for others. Also make sure the procedure, work method or operating technique utilized does not render the generator unsafe.

### **DANGER**

 Despite the safe design of this generator, operating this equipment imprudently, neglecting its maintenance or being careless can cause possible injury or death. Permit only responsible and capable persons to install, operate or maintain this equipment.

 Potentially lethal voltages are generated by these machines. Ensure all steps are taken to render the machine safe before attempting to work on the generator.

 Parts of the generator are rotating and/or hot during operation. Exercise care near running generators.

### **GENERAL HAZARDS**

- For safety reasons, Generac recommends that this equipment be installed, serviced and repaired by a Generac Authorized Service Dealer or other competent, qualified electrician or installation technician who is familiar with applicable codes, standards and regulations. The operator also must comply with all such codes, standards and regulations.
- Installation, operation, servicing and repair of this (and related) equipment must always comply with applicable codes, standards, laws and regulations. Adhere strictly to local, state and national electrical and building codes. Comply with regulations the Occupational Safety and Health Administration (OSHA) has established. Also, ensure that the generator is installed, operated and serviced in accordance with the manufacturer's instructions and recommendations. Following installation, do nothing that might render the unit unsafe or in noncompliance with the aforementioned codes, standards, laws and regulations.
- The engine exhaust fumes contain carbon monoxide gas, which can be DEADLY. This dangerous gas, if breathed in sufficient concentrations, can cause unconsciousness or even death. For that reason, adequate ventilation must be provided. Exhaust gases must be piped safely away from any building or enclosure that houses the generator to an area where people, animals, etc., will not be harmed. This exhaust system must be installed properly, in strict compliance with applicable codes and standards.
- Keep hands, feet, clothing, etc., away from drive belts, fans, and other moving or hot parts. Never remove any drive belt or fan guard while the unit is operating.
- Adequate, unobstructed flow of cooling and ventilating air is critical to prevent buildup of explosive gases and to ensure correct generator operation. Do not alter the installation or permit even partial blockage of ventilation provisions, as this can seriously affect safe operation of the generator.
- Keep the area around the generator clean and uncluttered. Remove any materials that could become hazardous.
- When working on this equipment, remain alert at all times. Never work on the equipment when physically or mentally fatigued.



- Inspect the generator regularly, and promptly repair or replace all worn, damaged or defective parts using only factory-approved parts.
- Before performing any maintenance on the generator, disconnect its battery cables to prevent accidental start-up. Disconnect the cable from the battery post indicated by a NEGATIVE, NEG or (-) first. Reconnect that cable last.
- Never use the generator or any of its parts as a step. Stepping on the unit can stress and break parts, and may result in dangerous operating conditions from leaking exhaust gases, fuel leakage, oil leakage, etc.
- Generators installed with an automatic transfer switch will crank and start automatically when normal (utility) source voltage is removed or is below an acceptable preset level. To prevent such automatic start-up and possible injury to personnel, disable the generator's automatic start circuit (battery cables, etc.) before working on or around the unit. Then, place a "Do Not Operate" tag on the generator control panel and on the transfer switch.
- In case of accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor. **AVOID DIRECT CONTACT WITH THE VICTIM.** Use a nonconducting implement, such as a dry rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- Never wear jewelry when working on this equipment. Jewelry can conduct electricity resulting in electric shock, or may get caught in moving components causing injury.

### **ELECTRICAL HAZARDS**

- All generators covered by this manual produce dangerous electrical voltages and can cause fatal electrical shock. Utility power delivers extremely high and dangerous voltages to the transfer switch as well as the standby generator. Avoid contact with bare wires, terminals, connections, etc., on the generator as well as the transfer switch, if applicable. Ensure all appropriate covers, guards and barriers are in place before operating the generator. If work must be done around an operating unit, stand on an insulated, dry surface to reduce shock hazard.
- Do not handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. **DANGEROUS ELECTRICAL SHOCK MAY RESULT.**
- If people must stand on metal or concrete while installing, operating, servicing, adjusting or repairing this equipment, place insulative mats over a dry wooden platform. Work on the equipment only while standing on such insulative mats.
- The National Electrical Code (NEC), Article 250 requires the frame and external electrically conductive parts of the generator to be connected to an approved earth ground and/or grounding rods. This grounding will help prevent dangerous electrical shock that might be caused by a ground fault condition in the generator set or by static electricity. Never disconnect the ground wire.
- Wire gauge sizes of electrical wiring, cables and cord sets must be adequate to handle the maximum electrical current (ampacity) to which they will be subjected.
- Before installing or servicing this (and related) equipment, make sure that all power voltage supplies are positively turned off at their source. Failure to do so will result in hazardous and possibly fatal electrical shock.
- Connecting this unit to an electrical system normally supplied by an electric utility shall be by means of a transfer switch so as to isolate the generator electric system from the electric utility distribution system when the generator is operating. Failure to isolate the two electric system power sources from each other by such means will result in damage to the generator and may also result in injury or death to utility power workers due to backfeed of electrical energy.

### **FIRE HAZARDS**

- Keep a fire extinguisher near the generator at all times. Do NOT use any carbon tetra-chloride type extinguisher. Its fumes are toxic, and the liquid can deteriorate wiring insulation. Keep the extinguisher properly charged and be familiar with its use. If there are any questions pertaining to fire extinguishers, consult the local fire department.

### **EXPLOSION HAZARDS**

- Properly ventilate any room or building housing the generator to prevent build-up of explosive gas.
- Do not smoke around the generator. Wipe up any fuel or oil spills immediately. Ensure that no combustible materials are left in the generator compartment, or on or near the generator, as FIRE or EXPLOSION may result. Keep the area surrounding the generator clean and free from debris.
- Generac generator sets may operate using one of several types of fuels. All fuel types are potentially FLAMMABLE and/or EXPLOSIVE and should be handled with care. Comply with all laws regulating the storage and handling of fuels. Inspect the unit's fuel system frequently and correct any leaks immediately. Fuel supply lines must be properly installed, purged and leak tested according to applicable fuel-gas codes before placing this equipment into service.
- Diesel fuels are highly FLAMMABLE. Gaseous fluids such as natural gas and liquid propane (LP) gas are extremely EXPLOSIVE. Natural gas is lighter than air, and LP gas is heavier than air; install leak detectors accordingly.



## GENERATOR

This equipment is a liquid-cooled, engine-driven generator set. The generator is designed to supply electrical power that operates critical electrical loads during utility power failure. The unit has been factory-installed in a weather resistant, all metal enclosure and is intended for outdoor installation only. Use this generator as a source of electrical power for the operation of 120 and/or 240 volts, single phase loads.

These models are available. They are rated as follows:

**Model 004188:** Provides 15,000 watts (15 kW) of 1 phase power.

**Model 004189:** Provides 15,000 watts (15 kW) of 1 phase power.

**Model 004370:** Provides 20,000 watts (20 kW) of 1-phase power.

**Model 004371:** Provides 20,000 watts (20 kW) of 1-phase power.

**Model 004474:** Provides 25,000 watts (25 kW) of 1 phase power.

**Model 004475:** Provides 25,000 watts (25 kW) of 1 phase power.

### ⚠ WARNING ⚠

⚠ If this generator is used to power electrical load circuits normally powered by a utility power source, it is required by code to install a transfer switch. The transfer switch must effectively isolate the electric system from the utility distribution system when the generator is operating (NEC 701). Failure to isolate an electrical system by such means results in damage to the generator and may also result in injury or even death to utility power workers due to backfeed of electrical energy.

## TRANSFER SWITCH

This Guardian system includes a matched automatic transfer switch which is intended to be used in conjunction with a Guardian generator. It is supplied in either a NEMA 1 enclosure (15 kW models 004188, and 004189, and 20 kW models 004370, and 004371) or a NEMA 3R enclosure (25 kW models 004474 and 004475). The NEMA 1 enclosure is intended for indoor use only. The NEMA 3R enclosure is weather proof and can be used indoors or outdoors. Follow these rules:

- Install the transfer switch on a firm, sturdy supporting structure.
- To prevent switch distortion, level the switch if necessary. This can be done by placing washers between the switch enclosure and the mounting surface.
- Never install the switch where water or any corrosive substance might drip onto the enclosure.
- Protect the switch at all times against excessive moisture, dust, dirt, lint, construction grit and corrosive vapors.

## AUTOMATIC SYSTEM OPERATION


When this generator, along with its transfer switch, has been installed and interconnected, a circuit board in the generator panel constantly monitors utility power source voltage. Should that voltage drop below a preset value, and remain at such a low state for a preset amount of time, the generator cranks and starts. After the generator starts, the transfer switch transfers load circuits so the generator can power them.

When utility source voltage has been restored, the switch re-transfers back to the utility source voltage and the generator then shuts down.

## GENERATOR AC CONNECTION SYSTEMS

The generator was shipped from the factory with its stator AC output leads connected in a single-phase, 3-wire generator AC connection system (Figure 1.1). The stator assembly in this system consists of a pair of stationary windings, with two leads brought out of each winding. Each single winding can supply 120 volts AC, 60 Hertz. When the two windings are connected in series, a 240 volts, 60 Hertz AC output results. Typically the two “hot” leads in the circuit are Wires No. 11 and 44. The “Neutral” leads are the junction of Wires 22 and 33.

Figure 1.1 - Generator AC Connection System

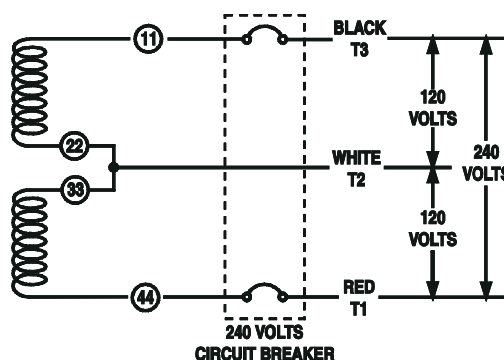

## MAIN CIRCUIT BREAKER

The generator's main circuit breaker is included with the unit as shipped from the factory. The breaker for each unit is described in Figure 1.2 at the top of page 5.

## GENERATOR FUEL SYSTEM

This unit has been factory tested and adjusted using a natural gas fuel system. If propane (LP) gas is preferred, contact an authorized service dealer.

**Figure 1.2 - Main Circuit Breaker**

Model	Rating	Phase	Actual Current	C/B Rating*	% over rating	Circuit Breaker
004188	15,000	1	62.5	70	112%	70A BQ2
004189	15,000	1	62.5	70	112%	70A BQ2
004370	20,000	1	83.3	90	108%	90A BQ2
004371	20,000	1	83.3	90	108%	90A BQ2
004474	25,000	1	104.2	125	120%	125A BQ2
004475	25,000	1	104.2	125	120%	125A BQ2

\* Amp Rating of C/B structured under model.


**⚠ WARNING ⚠**

**⚠** Gaseous fuels such as natural and LP (propane) gas are highly explosive. Even the slightest spark can ignite such fuels and cause an explosion. No leakage of fuel is permitted. Natural gas, which is lighter than air, tends to collect in high areas. LP gas is heavier than air and tends to settle in low areas.

## ENGINE PROTECTIVE DEVICES

The engine has several safety switches which cause the engine to automatically shut down under the following conditions: low oil pressure, high coolant temperature, engine overspeed, low coolant level or overcrank (Figure 1.3).


**Figure 1.3 - Engine Protective Devices**

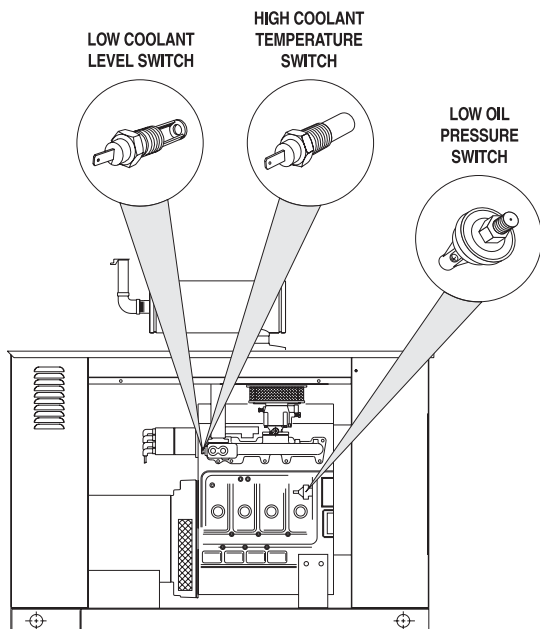

### ◆ LOW OIL PRESSURE SWITCH

This switch is normally-closed (N.C.) but is held open by engine oil pressure during engine running. Should operating oil pressure drop below about 8-10 psi (55-68 kPa), the switch contacts close and the engine shuts down automatically (Figure 1.4).


**Figure 1.4 - Low Oil Pressure Switch**

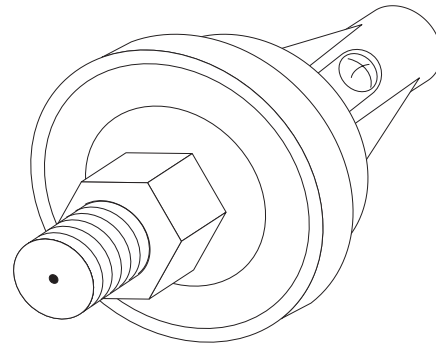

### ◆ HIGH COOLANT TEMPERATURE SWITCH


Normally open (N.O.) thermostatic switch has sensing tip which is immersed in captive coolant. Should coolant temperature exceed about 230°F (110°C), the switch contacts close, which causes the engine to shut down automatically (Figure 1.5).

**Figure 1.5- High Coolant Temperature Switch**

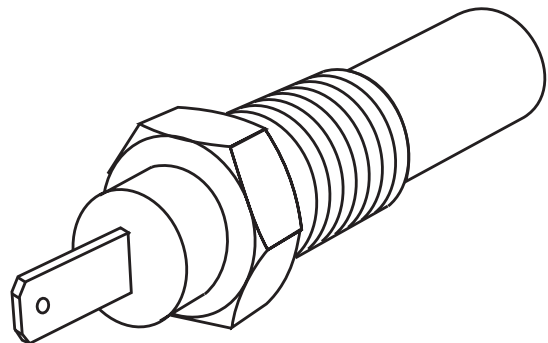

### ◆ LOW COOLANT LEVEL SWITCH


Should engine coolant level drop below the level of the high coolant temperature switch, it is possible for the engine to overheat without automatic shutdown. To prevent such overheating without automatic shut down, the engine has a low coolant level sensor. If the engine coolant drops too low, the engine automatically shuts down (Figure 1.6).

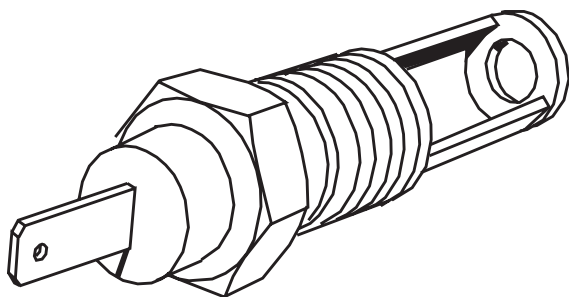**Figure 1.6 - Low Coolant Level Sensor**


### ◆ OVERSPEED SHUTDOWN

The CMA circuit board on liquid cooled units receives AC frequency (rpm) signals directly from the stator AC power windings, via sensing leads S15 and S16. Should AC frequency exceed about 72 Hz, circuit board action will automatically shutdown the engine (Figure 1.7).

**\*Rated power of generator is subject to and limited by such factors as ambient temperature, altitude, engine condition, and other factors. Engine power will decrease about 3.5% for each 1000 feet above sea level and will decrease an additional 1% for each 10°F above 60°F. Maximum output power of the generator is limited by maximum engine power.**

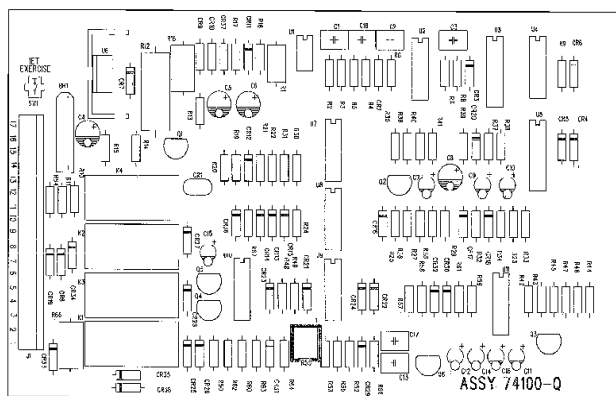**Figure 1.7 - Control Module Assembly Circuit Board**


### ◆ OVERCRANK SHUTDOWN

After 90 seconds of crank-rest cycles, this function ends cranking if the engine fails to start in that 90-second span.

### ◆ DC FUSE

This clearly labeled fuse is located on the front panel of the control system. It protects the panel wiring and components from damaging overload. **Always remove this fuse before commencing work on the generator.** The unit will not start or crank if the fuse is blown. Replace the fuse with one of the same size, type, and rating. Generac normally uses an AGC fuse rated at 30 amps.

## UNPACKING

### ◆ UNPACKING PRECAUTIONS

Handle shipping cartons and crates with care. Use care to avoid damage from dropping, bumping, collision, etc. Store and unpack cartons with the proper side up, as noted on the shipping carton.

### ◆ INSPECTION

After unpacking, carefully inspect the generator for any damage that may have occurred during shipment. If loss or damage is noted at the time of delivery, have the person(s) making delivery note all damage on the freight bill or affix his signature under the consignor's memo of loss or damage.

## LIFTING THE GENERATOR



**⚠ When lifting or hoisting equipment is used, be careful not to touch overhead power lines. The generators weight of more than 900 pounds requires proper tools, equipment, and qualified personnel to be used in all phases of handling and unpacking.**

## SPECIFICATIONS

### ◆ GENERATOR SPECIFICATIONS

1-Phase			
Model	4474 4475	4370 4371	4188 4189
*Rated Max. Cont. AC Power Output (kW)	25	20	15
Rated voltage (volts)	120/240		
No. of Rotor Poles	2		4
Driven Speed of Rotor	3600	3600	1800
Rotor Excitation System	Direct excited brush type		
Type of Stator	4 Wire		
Rotor/Stator Insulation	Class F		



**◆ ENGINE SPECIFICATIONS**

Make .....	Mitsubishi
Displacement .....	92 inches <sup>3</sup> (1.5 liters)
Cylinder Arrangement .....	4, in-line
Valve Arrangement .....	Overhead Cam
Firing Order .....	1-3-4-2
Number of Main Bearings .....	5
Compression Ratio .....	9 to 1
No. of Teeth on Flywheel .....	104
Ignition Timing	
at 1800 rpm .....	35 degrees BTDC
at 3600 rpm .....	43 degrees BTDC
Spark Plug Gap .....	0.020-0.025 inch
Recommended Spark Plugs	
Champion .....	RN11YC4
Oil Pressure .....	30-50 psi
Crankcase Oil Capacity .....	4.0 U.S. quarts (3.8 liters)
Recommended Engine Oil .....	SAE 15W-40
Type of Cooling System .....	Pressurized, closed recovery
Cooling Fan .....	Pusher Type
Cooling System Capacity .....	2 U.S. gallons (7.6 liters)
Recommended Coolant .....	Use a 50-50 mixture of ethylene glycol base.

**FUEL CONSUMPTION**

Models 004474, 004475	
Using Natural Gas .....	441 cu. ft. per hour
Using LP Gas .....	175 cubic ft. (4.8 gal.) per hour
Models 004370, 004371	
Using Natural Gas .....	359 cu. ft. per hour
Using LP Gas .....	143 cubic ft. (4.0 gal.) per hour
Models 004188, 004189	
Using Natural Gas .....	277 cu. ft. per hour
Using LP Gas .....	110 cubic ft. (3.1 gal.) per hour

**NOTE:**

**Fuel consumption is given at rated maximum continuous power output when using natural gas rated at 1000 Btu per cubic foot; or LP gas rated 2520 Btu per cubic foot. Actual fuel consumption obtained may vary depending on such variables as applied load, ambient temperature, engine conditions and other environmental factors.**

**TORQUE SPECIFICATIONS**

Cylinder Head .....	15 (+ 90° + 90°) ft.lb.
Intake Manifold .....	13 ft.lb.
Exhaust Manifold .....	13 ft.lb.

**ENGINE OIL RECOMMENDATIONS**

The unit has been filled with 15W-40 engine oil at the factory. Use a high-quality detergent oil classified "For Service CC, SD, SE, SF." Detergent oils keep the engine cleaner and reduce carbon deposits. Use oil having the following SAE viscosity rating, based on the ambient temperature range anticipated before the next oil change:

Temperature	Oil Grade (Recommended)
Above 80° F (27° C)	SAE 30W or 15W-40
32° to 80° F (-1° to 27° C)	SAE 20W-20 or 15W-40
Below 32° F (0° C)	SAE 10W or 15W-40



**Any attempt to crank or start the engine before it has been properly serviced with the recommended oil may result in an engine failure.**

**COOLANT RECOMMENDATIONS**

Use a mixture of half low silicate ethylene glycol base anti-freeze and half soft water. Cooling system capacity is about 8 U.S. quarts (7.6 liters). Use only soft water and only low silicate anti-freeze. If desired, add a high quality rust inhibitor to the recommended coolant mixture. When adding coolant, always add the recommended 50-50 mixture.



**Do not use any chromate base rust inhibitor with ethylene glycol base anti-freeze or chromiumhydroxide ("green slime") forms and will cause overheating. Engines that have been operated with a chromate base rust inhibitor must be chemically cleaned before adding ethylene glycol base anti-freeze. Using any high silicate anti-freeze boosters or additives will also cause overheating. DO NOT use any soluble oil inhibitor for this equipment.**


**BEFORE INSTALLATION**

Before installing this equipment, check the ratings of both the generator and the transfer switch. Read "Emergency Isolation Method" and "Total Circuit Isolation Method" in the installation manual (Part No. 079699).

The generator's rated wattage/ampere capacity must be adequate to handle all electrical loads that the unit will power. It may be necessary to group the critical (essential) loads together and wire them into a separate "emergency" distribution panel.

This generator can be installed in conjunction with a standard Generac "GTS" type transfer switch, if desired.

The standard transfer switch has no sensing or controlling circuit boards. Instead, the generator control console houses a "Control Module Assembly", which controls all phases of operation, including engine start up and load transfer.



## STANDBY GENERATOR INSTALLATION

### ⚠ DANGER ⚠



Connecting this generator to an electrical system normally supplied by an electric utility shall be by means of a transfer switch, so as to isolate the electric system from the utility distribution system when the generator is operating. Failure to isolate the electric system by these means will result in damage to the generator and may also result in injury or death to utility workers due to backfeed of electrical energy.



### ⚠ CAUTION ⚠



If an open bottom is used, the engine-generator is to be installed over non-combustible materials and should be located such that combustible materials are not capable of accumulating under the generator set.

Only qualified, competent installation contractors or electricians thoroughly familiar with applicable codes, standards and regulations should install this standby electric power system. The installation must comply strictly with all codes, standards and regulations pertaining to the installation.

### ⚠ CAUTION ⚠



After the system has been installed, do nothing that might render the installation in noncompliance with such codes, standards and regulations.

#### NOTE:

For more information about the installation of a standby system, order *Engine-Generator Standby Electric Power Systems Installer's Guide and Reference Manual* (part #046622) from the Generac Authorized Service Dealer.

### ◆ NFPA STANDARDS

The following published standards booklets pertaining to standby electric systems are available from the National Fire Protection Association (NFPA), Batterymarch Park, Quincy, MA 02269:

- NFPA No. 37, STATIONARY COMBUSTION ENGINES AND GAS TURBINES.
- NFPA No. 76A, ESSENTIAL ELECTRICAL SYSTEMS FOR HEALTH CARE FACILITIES.
- NFPA No. 220, STANDARD TYPES OF BUILDING CONSTRUCTION
- NFPA No. 68, GUIDE FOR EXPLOSION VENTING
- NFPA No. 70, NATIONAL ELECTRICAL CODE.
- NFPA No. 30, FLAMMABLE AND COMBUSTIBLE LIQUIDS CODE.
- NFPA No. 10, INSTALLATION, MAINTENANCE AND USE OF PORTABLE FIRE EXTINGUISHERS.

### ◆ OTHER PUBLISHED STANDARDS


In addition to NFPA standards, the following information pertaining to the installation and use of standby electric systems is available:

- Article X, NATIONAL BUILDING CODE, available from the American Insurance Association, 85 John Street, New York, N.Y. 10038.
- AGRICULTURAL WIRING HANDBOOK, obtainable from the Food and Energy Council, 909 University Avenue, Columbia, MO, 65201.
- ASAE EP-364.2, INSTALLATION AND MAINTENANCE OF FARM STANDBY ELECTRIC POWER, available from the American Society of Agricultural Engineers, 2950 Niles Road, St. Joseph, MI 49085.
- A52.1, AMERICAN NATIONAL STANDARD FOR CHIMNEYS, FIREPLACES AND VENTING SYSTEMS, available from the American National Standard Institute, 1430 Broadway, New York, N.Y. 10018.

## GENERATOR LOCATION

Install the generator set, in its protective enclosure outdoors, where adequate cooling and ventilating air always is available. Consider these factors:

- Install the unit where air inlet and outlet openings will not become obstructed by leaves, grass, snow, etc. If prevailing winds will cause blowing or drifting, consider using a windbreak to protect the unit.
- Install the generator on high ground where water levels will not rise and endanger it.
- Allow sufficient room on all sides of the generator for maintenance and servicing. A good rule is to allow 3 feet of space on all sides.
- Where strong prevailing winds blow from one direction, face the generator air inlet openings into the prevailing winds.
- Install the generator as close as possible to the transfer switch. This reduces the length of wiring and conduit.
- Install the generator as close as possible to the fuel supply, to reduce the length of piping. HOWEVER, REMEMBER THAT LAWS OR CODES MAY REGULATE THE DISTANCE.



## GENERATOR MOUNTING AND SUPPORT

Retain the generator compartment to a concrete slab with 1/4-inch masonry type anchor bolts. Be sure the bolts are long enough to retain the compartment. The slab should be at least 6 inches thick and should extend beyond the enclosure to a distance of at least 3 inches on all sides. See pages 54-55 for generator major dimensions.

## BASIC STANDBY ELECTRIC SYSTEM

Figure 2.1 shows a schematic diagram of a basic standby electric system. Both the UTILITY power supply and the STANDBY (generator) output are connected to an approved transfer switch. The transfer switch is required by electrical code and serves the following functions:


- Permits the LOAD circuits to be connected to only one power supply at a time.
- Prevents electrical backfeed between the generator and the UTILITY power circuits.

Notice that both the STANDBY and the UTILITY power supplies to the transfer switch are protected against overload by a main line circuit breaker.

### NOTE:

**Generac recommends the use of a Generac power systems “GTS” type transfer switch in conjunction with this generator.**

*Figure 2.1 – Basic Standby Electric System*

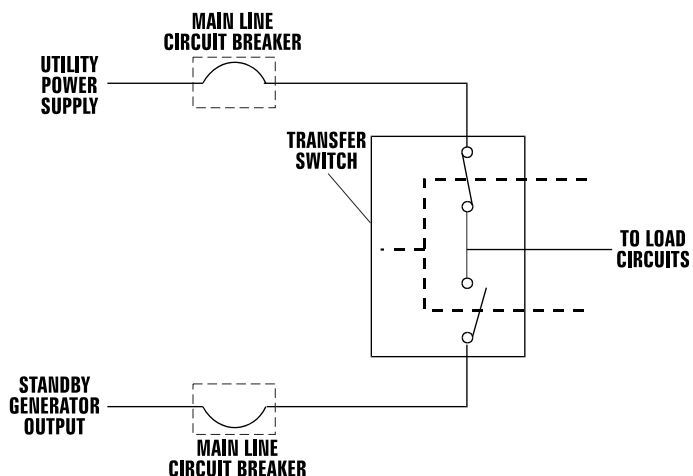

## EMERGENCY CIRCUIT ISOLATION METHOD

This prevents overloading the generator by keeping electrical loads below the wattage/amperage capacity of the generator. If the generator is powering only critical loads, within the wattage/amperage capacity, during utility power outages, consider using the emergency circuit isolation method.

Critical electrical loads are grouped together and wired into a separate “Emergency Distribution Panel.” Load circuits powered by that panel are within the wattage/amperage capacity of the generator set. When this method is used, it is difficult to overload the generator. The transfer switch must meet the following requirements:

- It must have an ampere rating equal to the total amperage rating of the emergency distribution panel circuit.
- Have it installed between the building’s main distribution panel and the emergency distribution panel.


## TOTAL CIRCUIT ISOLATION METHOD

When a generator capable of powering all electrical loads in the circuit is to be installed, use the “Total Circuit Isolation Method.” It is possible for the generator to be overloaded when this isolation method is employed. The following apply to the transfer switch in this type of system.

- Ampere rating of the transfer switch must equal the ampere rating of the normal incoming utility service.
- The transfer switch is installed between the utility service entrance and the building distribution panel.


## GROUNDING THE GENERATOR

The National Electrical Code requires the frame and external electrically conductive parts of this equipment to be properly connected to an approved earth ground and/or grounding rods. For that purpose, a GROUND LUG (Figure 2.2) is provided on the generator mounting base. Consult a qualified electrician for grounding requirements in the area. Grounding procedures must meet local regulations.

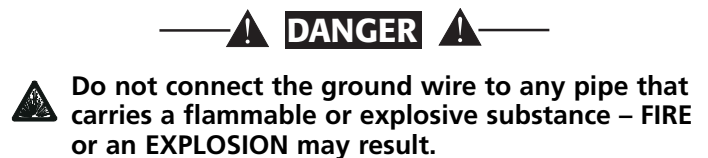

Proper grounding helps protect personnel against electrical shock in the event of a ground fault condition in the generator or in connected electrical devices. In addition, grounding helps dissipate static electricity that often builds up in ungrounded devices.

*Figure 2.2 – Generator Grounding Lug (typical)*

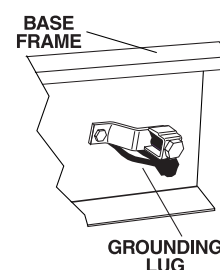



## GENERATOR AC NEUTRAL CONNECTIONS

Generac uses an UNGROUNDED AC neutral. Grounding is recommended only at the main service entrance. If the neutral wire is grounded and one of the phase loads becomes grounded, the excessive current opens the load circuit breaker or collapses the generator field. The actual result depends on the electrical characteristics of the particular installed generator.

## TRANSFER SWITCH START SIGNAL CONNECTIONS

If the generator is to be installed with an automatic transfer switch, such as a Generac GTS-type switch, it will be necessary to connect the two-wire start control system.

Connect the two-wire start signal from the automatic transfer switch to the automatic start connection, which is located in the right hand corner inside the control panel. Match wires 178 and 183 in the transfer switch to 178 and 183 on the terminal strip in the control panel. The conductors for the two-wire start circuit must be in their own conduit.

## BATTERY INSTALLATION



**Standby generators installed with automatic transfer switches will crank and start automatically when normal (utility) source voltage is removed or is below an acceptable preset level. To prevent such automatic start-up and possible injury to personnel, do not connect battery cables until certain that normal source voltage at the transfer switch is correct and the system is ready to be placed into operation.**

**Storage batteries give off explosive hydrogen gas. This gas can form an explosive mixture around the battery for several hours after charging. The slightest spark can ignite the gas and cause an explosion. Such an explosion can shatter the battery and cause blindness or other injury. Any area that houses a storage battery must be properly ventilated. Do not allow smoking, open flame, sparks or any spark producing tools or equipment near the battery.**

**Battery electrolyte fluid is an extremely caustic sulfuric acid solution that can cause severe burns. Do not permit fluid to contact eyes, skin, clothing, painted surfaces, etc. Wear protective goggles, protective clothing and gloves when handling a battery. If fluid is spilled, flush the affected area immediately with clear water.**



### WARNING

- Do not dispose of the battery in a fire. The battery is capable of exploding.**
- Do not open or mutilate the battery. Released electrolyte can be toxic and harmful to the skin and eyes.**
- The battery represents a risk of high short circuit current. When working on the battery, always remove watches, rings or other metal objects, and only use tools that have insulated handles.**

### VENTED BATTERIES



### CAUTION

- The electrolyte is a dilute sulfuric acid that is harmful to the skin and eyes. It is electrically conductive and corrosive. The following procedures are to be observed:**
  - **Wear full eye protection and protective clothing,**
  - **Where electrolyte contacts the skin, wash it off immediately with water,**
  - **Where electrolyte contacts the eyes, flush thoroughly and immediately with water and seek medical attention, and**
  - **Spilled electrolyte is to be washed down with an acid-neutralizing agent. A common practice is to use a solution of one pound (500 grams) bicarbonate of soda to one gallon (4 liters) of water. The bicarbonate of soda solution is to be added until the evidence of reaction (foaming) has ceased. The resulting liquid is to be flushed with water and the area dried.**
- Lead acid batteries present a risk of fire because they generate hydrogen gas. The following procedure are to be followed:**
  - **DO NOT SMOKE when near batteries,**
  - **DO NOT cause flame or spark in battery area, and**
  - **Discharge static electricity from body before touching batteries by first touching a grounded metal surface.**

Servicing of batteries is to be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.


For recommended batteries, see "Specifications." All batteries must be at 100 percent state-of-charge before they are installed on the generator.

When using maintenance-free batteries, it is not necessary to check the specific gravity or electrolyte level. Have these procedures performed at the intervals specified in Section 4, "Maintenance." A negative ground system is used. Battery connections are shown on the wiring diagrams. Make sure all batteries are correctly connected and terminals are tight. Observe battery polarity when connecting batteries to the generator set.

### Note:

**Damage will result if the battery connections are made in reverse.**





## PREPARATION BEFORE START-UP

The instructions in this section assume that the standby generator has been properly installed, serviced, tested, adjusted and otherwise prepared for use by a competent, qualified installation contractor. Be sure to read the "Safety Rules" on pages 2 and 3, as well as all other safety information in this manual, before attempting to operate this (and related) equipment.

### ◆ PRIOR TO INITIAL START-UP



- ⚠ Prior to initially starting the generator, it must be properly prepared for use. Any attempt to crank or start the engine before it has been properly serviced with the recommended types and quantities of engine fluids (oil, coolant, fuel, etc.) may result in an engine failure.

Before starting the generator for the first time, the installer must complete the following procedures. For follow-up maintenance information and/or service intervals, please refer to Section 4, "Maintenance."

#### ► Transfer Switch

If this generator is used to supply power to any electrical system normally powered by an electric utility, the National Electrical Code requires that a transfer switch be installed. The transfer switch prevents electrical backfeed between two different electrical systems. (For additional information, see the applicable transfer switch manual for this unit.) The transfer switch, as well as the generator and other standby components, must be properly located and mounted in strict compliance with applicable codes, standards and regulations.

#### ► Fuel System

Make sure the fuel supply system to the generator (a) delivers the correct fuel at the correct pressure and (b) is properly purged and leak tested according to code. No fuel leakage is permitted. See "Specifications" for more information.

#### ► Generator Set Lubrication

Check the engine crankcase oil level before operating and add oil to the proper level – the dipstick "FULL" mark. Never operate the engine with the oil level below the dipstick "ADD" mark. See "Specifications" and "Engine Oil Recommendations".

#### NOTE:

**This engine is shipped from the manufacturer with 15W-40 oil. This oil should be changed after 30 hours of operation.**

#### ► Engine Coolant

Have the engine cooling system properly filled with the recommended coolant mixture. Check the system for leaks and other problems. See "Specifications" and "Coolant".

#### ► Belt Tension

Check the engine fan belt tension and condition prior to placing the unit into service and at recommended intervals. Belt tension is correct when a force of approximately 22 pounds (10 kg), applied midway between pulleys, deflects the belt about 3/8- to 5/8-inch (10 to 16 mm).

#### ► Electrical System

Make sure the generator is properly connected to an approved earth ground and/or ground rod.

Make sure the generator battery is fully charged, properly installed and interconnected, and ready for use.

Check to ensure that there are no loose electrical connections. Restrain any loose wires to keep them clear of any moving generator set components.

## USING A STANDARD "GTS" TRANSFER SWITCH

When required, the pre-packaged standby generator can be installed with a standard Generac "GTS" type automatic transfer switch.


When using a standard GTS type transfer switch, it controls automatic operation and automatic transfer as follows:

- Solid state circuits in the transfer switch monitor utility power source voltage.
- When utility source voltage drops below a pre-set level, transfer switch action closes the circuit. The engine then cranks and starts as controlled by the pre-packaged generator's Control Module circuit board.
- After the engine starts and when the generator AC output voltage and frequency have reached a pre-set value, transfer switch circuits signal the transfer switch main contacts to actuate to the "Standby" power source side. Generator AC output then powers load circuits.
- When the utility power source voltage is restored above a pre-set level, transfer switch solid state circuits signal the switch main contacts to move back to their utility power source side.
- Following re-transfer back to the utility power source side, transfer switch circuit board action opens the circuit. Engine then shuts down.

#### NOTE:

**If the generator is installed in conjunction with a standard GTS type transfer switch, refer to the applicable transfer switch manual for exact operating parameters and timing sequences.**






## CONTROL CONSOLE COMPONENTS

The components of a liquid-cooled generator control console (Figure 3.1) are as follows:

**Figure 3.1 - Liquid-Cooled Generator Panel**

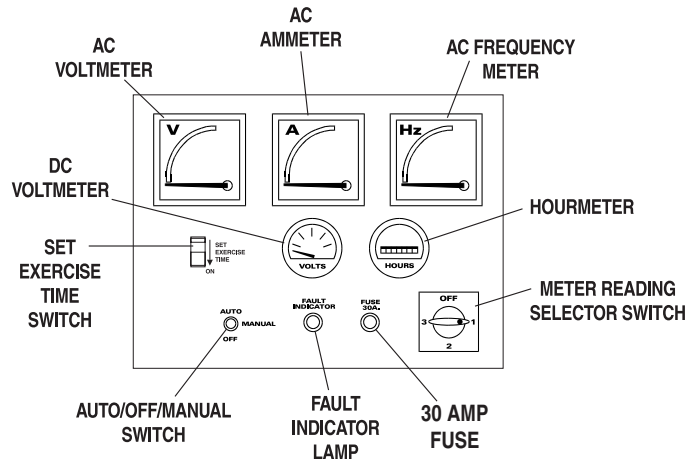

### ◆ AC VOLTMETER

The voltmeter displays generator AC output voltage during operation. Voltage is regulated by a solid state voltage regulator and is proportional to AC frequency. Refer to the unit's DATA PLATE for rated AC voltage.

### ◆ AC AMMETER

Indicated current draw of connected electrical loads during operation. **DO NOT EXCEED THE UNIT'S RATED MAXIMUM CONTINUOUS CURRENT.** Refer to the unit DATA PLATE.

### ◆ AC FREQUENCY METER

Indicates generator AC output frequency in "Hertz" (cycles per second). Frequency is proportional to engine speed. Units with a 4-pole rotor supplies 60 Hertz at 1800 rpm. Units with a 2-pole rotor supplies 60 Hz at 3600 rpm. Frequency reading with no electrical loads connected (no-load condition) should be between 60-62 Hertz.

### ◆ DC VOLTMETER

The generator is equipped with a belt-driven DC alternator, which maintains battery state of charge when the engine operates. The Control Module Assembly also incorporates a trickle charge circuit which maintains battery state of charge during non-operating periods. Battery voltage should read about 12.5 to 14.5 volts DC. A low battery voltage indicates the battery is discharging.

### ◆ HOURMETER

Indicates time the engine-generator has operated, in hours and tenths of hours. Use the hourmeter along with the periodic maintenance schedule for the generator set.

### ◆ AUTO/OFF/MANUAL SWITCH

Use this 3-position switch as follows:

- Set the switch to "Auto" for fully automatic operation. See "Automatic Operation".
- Set switch to "Manual" position to crank and start the generator engine.
- Set switch to "Off" position to shut down an operating engine. With "Off" selected, operation will not be possible.



**With switch set to "auto", engine can crank and start suddenly without warning. Such automatic start up normally occurs when utility source voltage drops below a pre-set level. To prevent possible injury that might be caused by such sudden starts, set AUTO/OFF/MANUAL switch to "off" before working on or around the unit. Then, place a "do not operate" tag on control console.**

### ◆ FAULT INDICATOR LAMP

Lamp goes ON when one or more of the following engine faults occurs and when engine shuts down.

- Low oil pressure
- High coolant temperature
- Low coolant level
- Overcrank
- Overspeed

### ◆ 30 AMP FUSE

Fuse protects the control console's DC control circuit against electrical overload. If the fuse has melted open because of an overload, engine cranking and startup cannot occur. If the fuse needs to be replaced, use only an identical 30-amp replacement fuse. (Type AGC)

### ◆ 7.5 AMP INLINE FUSE

This inline fuse is connected in the 15A line that runs between the Auto/Off/Manual switch and position 10 of the 76009A PCB. This fuse protects the start, fuel, field boost, and transfer outputs from the PCB and will open if there is excessive current draw on any one of these outputs.

**NOTE:**

**This fuse will not remove the + battery input power from the PCB when it opens. This means the exercise timer will not be reset. If this fuse does open, carefully check the wiring to the start, fuel, field boost and transfer outputs before replacing the fuse.**

**◆ METER READING SELECTOR SWITCH:**

This switch permits selection of either line-to-line or line-to-neutral voltage and amperage readings on the console AC voltmeter and AC ammeter.

**◆ SET EXERCISE TIME SWITCH:**

This switch allows for programming the generator to start and exercise automatically. "See Weekly Exercise Cycle."

## MANUAL TRANSFER AND START UP

To transfer electrical loads to the "Standby" (generator) power source side and start the engine manually, refer to the Owner's Manual of the particular transfer switch.

## RETRANSFER AND SHUTDOWN

When utility power source voltage has been restored, electrical loads may be transferred back to that source and the generator can be shut down as follows:

- Verify that utility power supply voltage to the transfer switch has been positively turned "Off," using whatever means provided (such as utility main line circuit breaker).
- Set the generator's main circuit breaker to its "Off" or "Open" position.
- Let the generator engine run at no-load for a few minutes, to stabilize internal unit temperatures.
- On the generator console, set the Auto-Off-Manual switch to "Off". Wait for engine to come to a complete stop.
- For transfer to utility position, refer to the Owner's Manual of the particular transfer switch.
- Turn on the utility power supply to the transfer switch, using whatever means provided (such as a utility main line circuit breaker). The utility power source now powers the loads.

## AUTOMATIC OPERATION

To set the system for fully automatic operation, proceed as follows:

- Check that load circuits are connected to the utility power supply.
- Set the Auto/Off/Manual switch to its "Auto" position.
- Set the generator main circuit breaker to its "On" or "Closed" position.

## WEEKLY EXERCISE CYCLE

The generator will start and exercise once every 7 days. During this weekly exercise, the unit runs for about 20 minutes and shuts down. Transfer of loads to generator output does not occur during the exercise.

To select day and time for exercising, proceed as follows:

- Set the Auto/Off/Manual switch to OFF.
- Set generator main circuit breaker to OFF or OPEN.
- Locate the rocker switch on the control panel identified with the words "Set Exercise Time" (Figure 3.2).
- Push "Set Exercise Time" switch to ON position for 20 to 30 seconds and then release. Switch will spring back into its original position when released.
- Wait 30 seconds before setting the Auto/Off/Manual switch to "AUTO" position.




**! If the Auto/Off/Manual switch is switched too soon, the engine may start. If engine does start, it will shut down automatically in about two (2) minutes.**

- Set the generator main circuit breaker to its ON or CLOSED position.
- Generator is now programmed to start and exercise every 7 days thereafter, on day and time of day the switch was actuated.
- Place a sign on the generator control panel and the transfer switch, indicating the day and time the generator will be exercising.

**NOTE:**

**If battery terminals are disconnected or control panel fuse is removed, the exercise timer needs to be reset for correct automatic exercise operation.**

**Figure 3.2 - "Set Exercise" Switch**

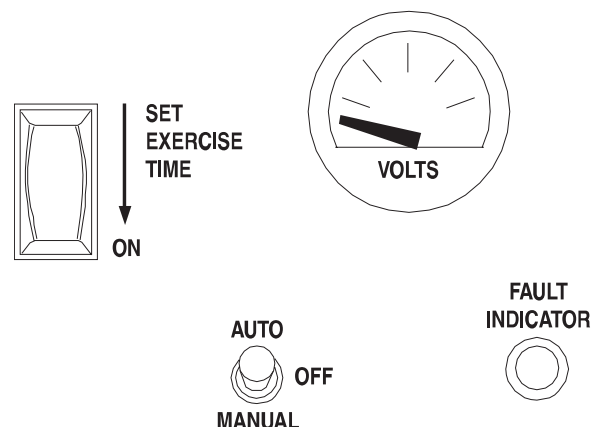



MAINTENANCE


## Section 4 — Maintenance

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

## ENGINE HEATER

The Generac standby generator comes equipped with a block heater (Figure 4.1), similar to the block heaters used in automotive applications. The block heater is wired to a grounded plug.

**Figure 4.1 - Engine Block Heater**

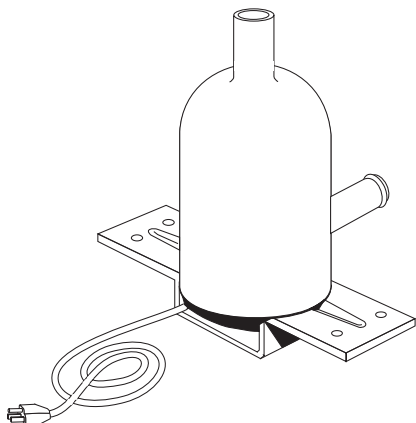

Refer to applicable wiring diagram(s) and electrical schematic(s) at back of manual for wiring connections. Customer supplies a 120V 15A Utility fed circuit for the block heater.

## MAINTENANCE PERFORMED BY AUTHORIZED SERVICE FACILITIES

### A. EVERY THREE MONTHS

1. Check battery state of charge and condition.
2. Inspect and test fuel system.
3. Check transfer switch.
4. Inspect exhaust system.
5. Check engine ignition system.
6. Check fan belts.

### B. ONCE EVERY SIX MONTHS

1. Test Engine Safety Devices (low oil pressure, low coolant level, high coolant temperature).

### C. ONCE ANNUALLY

1. Test engine governor; adjust or repair, if needed.
2. Clean, inspect generator.
3. Flush cooling system.

### D. FIRST 100 OPERATING HOURS

1. Change engine oil and oil filter. (After initial change, service engine oil and filter at 150 operating hours or 6 months, whichever comes first.)
2. Retorque cylinder head. (See Torque Specs.)
3. Retorque intake and exhaust manifold. (See Torque Specs.)

### E. EVERY 500 OPERATING HOURS

1. Service air cleaner.
2. Check starter.
3. Check engine DC alternator.

### F. EVERY 800 OPERATING HOURS

1. Retorque cylinder head. (See Torque Specs.)
2. Retorque intake and exhaust manifold. (See Torque Specs.)
3. Check engine compression.
4. Check valve clearance.

## COOLING SYSTEM

Air intake and outlet openings in the generator compartment must be open and unobstructed for continued proper operation. This includes such obstructions as high grass, weeds, brush, leaves and snot.

Without sufficient cooling and ventilating air flow, the engine/generator quickly overheats, which causes it to shut down. (See Section 9 for installation drawings and vent locations.)

### ⚠ WARNING ⚠



The exhaust system parts from this product get extremely hot and remains hot after shutdown. High grass, weeds, brush, leaves, etc. must remain clear of the exhaust. Such materials may ignite and burn from the heat of the exhaust system.

## OVERLOAD PROTECTION FOR ENGINE DC ELECTRICAL SYSTEM

Engine cranking, start up and running are controlled by a solid state Engine Controller circuit board. Battery voltage is delivered to that circuit board via a 30 amp fuse. These overcurrent protection devices will open if the circuit is overloaded.

### ⚠ CAUTION ⚠




If a circuit breaker opens or a fuse element melts, find the cause of the overload before resetting the circuit breaker or replacing the fuse.

## CHECKING FLUID LEVELS

### ◆ CHECK ENGINE OIL

Check engine crankcase oil level (Figure 4.2) at least every 20 hours of operation, or prior to use.


- Remove oil dipstick and wipe dry with a clean, lint-free cloth.
- Install oil dipstick, then remove again.
- Oil should be between FULL and ADD marks.

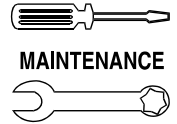

MAINTENANCE

- If oil level is below the dipstick ADD mark, remove oil fill cap. Add the recommended oil to bring oil level up to the FULL mark. DO NOT FILL ABOVE THE “FULL” MARK. (See Engine Oil Recommendations.)

**Figure 4.2 - Oil Dipstick and Oil Fill Cap**

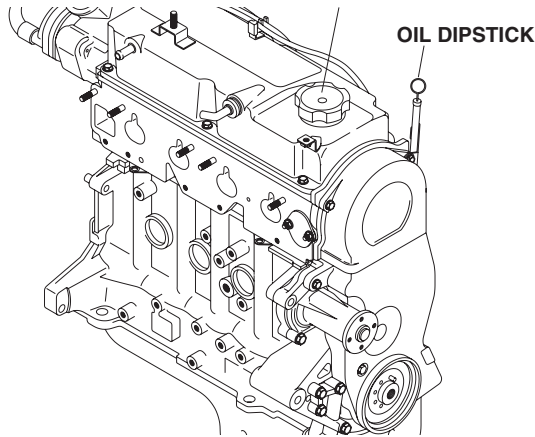

#### ◆ BATTERY FLUID

Check battery electrolyte fluid at least once weekly. Fluid should cover separators in all battery cells. If fluid level is low, add distilled water to cover tops of separators. DO NOT USE TAP WATER IN BATTERY.

#### ◆ ENGINE COOLANT

Check coolant level in coolant recovery bottle. See Specifications.

- Add recommended coolant mixture as necessary.
- Periodically remove radiator pressure cap to make sure the coolant recovery system is functioning properly. Coolant should be at bottom of radiator filler neck. If coolant level is low, inspect gasket in radiator pressure cap. Replace cap, if necessary. To have pressure cap tested, contact an authorized Generac Service Dealer. Inspect cooling system and coolant recovery system for leaks.

## MAINTENANCE OWNER/OPERATOR CAN PERFORM

#### ◆ CHECK ENGINE OIL LEVEL

Refer to “Checking Fluid Levels”.

#### ◆ CHECK BATTERY

- Check battery fluid level each week as outlined under “Check Fluid Levels”.
- Check battery cables for condition, tightness, corrosion or damage. Clean, tighten or replace as necessary.

#### ◆ EXERCISE SYSTEM

Start the generator engine at least once every seven days and let it run at least 20 minutes. See “Weekly Exercise Cycle”.

#### ◆ INSPECT COOLING SYSTEM

- Inspect engine cooling system at least once each month.
- Check hoses for damage, deterioration, leaks, etc. Correct any discrepancies found.
- Check hose clamps for tightness.

#### ◆ CHECK ENGINE COOLANT LEVEL

See “Checking Fluid Levels”.

#### ◆ PERFORM VISUAL INSPECTION

Complete a thorough visual inspection of the entire engine-generator monthly. Look for obvious damage, loose, missing or corroded nuts, bolts and other fasteners. Look for fuel, oil or coolant leaks.

#### ◆ INSPECT EXHAUST SYSTEM

Inspect the exhaust system at least once every three months. Check all exhaust system pipes, mufflers, clamps, etc. for condition, tightness, leaks, security, damage.

#### ◆ CHECK FAN BELT


- Inspect fan belts every three months. Replace any damaged, deteriorated, worn or otherwise defective belt.
- Check fan belt tension. Thumb pressure, exerted midway between pulleys, should deflect about 3/8 to 3/4 inch. Adjust belt tension as required.

#### ◆ INSPECT ENGINE GOVERNOR

Visually inspect electronic governor.



**DANGER:** Do not attempt to adjust the governor. Only qualified service facilities should adjust the governor. Excessively high operating speeds are dangerous and increase the risk of personal injury. Low speeds impose a heavy load on the engine when adequate engine power is not available and may shorten engine life. Correct rated frequency and voltage are supplied only at the proper governed speed. Some connected electrical load devices may be damaged by incorrect frequency and/or voltage. Only qualified service technicians should adjust the governed speed.




### ◆ CHANGING ENGINE OIL

Refer to maintenance performed by authorized service facilities for engine oil and filter change frequencies.

Drain the oil while the engine is still warm from running. This means warm up the engine, shut it down and drain immediately as follows:

1. Remove OIL DRAIN HOSE from its retaining clip.
2. Loosen and remove OIL DRAIN HOSE CAP. Drain oil completely into suitable container.
3. When all oil has drained, install and tighten OIL DRAIN HOSE CAP, and re-install into its retaining clip.
4. Turn OIL FILTER (Figure 4.3) counterclockwise and remove. Dispose of old filter.

**Figure 4.3 - Oil Filter**

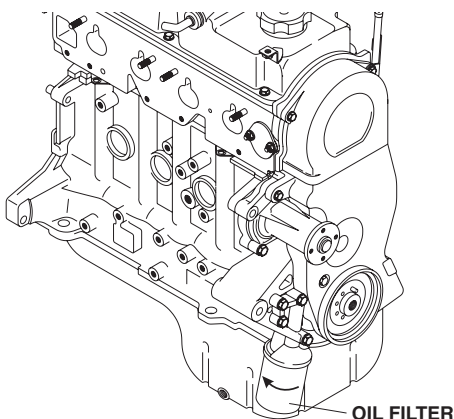

5. Apply light coating of new engine oil to seal of new oil filter. Install FILTER and tighten by hand only. DO NOT OVERTIGHTEN.
6. Remove OIL FILL CAP. Add recommended oil (see SPECIFICATIONS). DO NOT FILL ABOVE THE DIPSTICK "FULL" MARK. Crankcase oil capacity is 4.0 U.S. quarts (3.8 liters).



**CAUTION**


**After refilling the crankcase with oil, always check oil level on dipstick. NEVER OPERATE ENGINE WITH OIL BELOW THE DIPSTICK "ADD" MARK.**

7. Start engine and check for oil leaks.

### ◆ CHANGING THE ENGINE AIR CLEANER

To replace the engine air cleaner, (part number 59402), simply remove the air cleaner cover and replace the air filter making sure it is positioned properly before reattaching the cover (Figure 4.4).

**Figure 4.4 – Engine Air Cleaner**

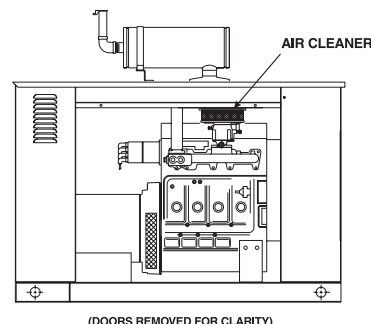

See the "Service Schedule," Section 6, for air cleaner maintenance.


### ◆ SPARK PLUGS

Reset the spark plug gap or replace the spark plugs as necessary. See Section 6.

1. Clean the area around the base of the spark plugs to keep dirt and debris out of the engine. Clean by scraping or washing using a wire brush and commercial solvent. Do not blast the spark plugs to clean.
2. Remove the spark plugs and check the condition. Replace the spark plugs if worn or if reuse is questionable. See the "Service Schedule," Section 6, for recommended inspection.
3. Check the spark plug gap using a wire feeler gauge. Adjust the gap to 0.5-0.6 mm (0.020-0.025 inch) by carefully bending the ground electrode (Figure 4.5).

**Figure 4.5 – Setting the Spark Plug Gap**


**SET PLUG GAP AT 0.5-0.6 mm  
(0.020-0.025 inch)**

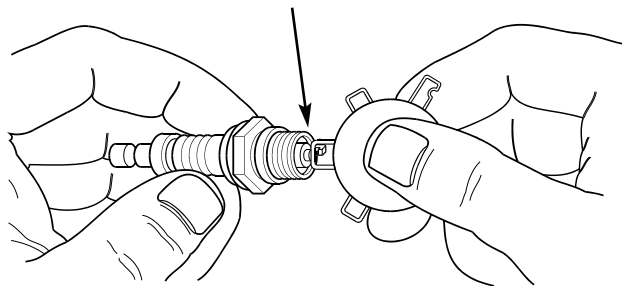

### ◆ COOLANT CHANGE

Every year, have Authorized Service Facility drain, flush and refill the cooling system. See SPECIFICATIONS for cooling system recommendations.



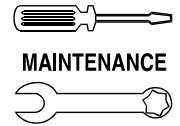

## MISCELLANEOUS MAINTENANCE

### ◆ CLEANING THE GENERATOR

Keep the generator as clean and as dry as possible. Dirt and moisture that accumulates on internal generator windings have an adverse effect on insulation resistance.

Periodically clean generator exterior surfaces. A soft brush may be used to loosen caked on dirt. Use a vacuum system or dry, low pressure air to remove any accumulations of dirt. The generator is housed inside an all-weather enclosure, clean the enclosure with a soft, damp cloth or sponge and water.

Once each year have the generator cleaned and inspected by an Authorized Service Dealer. That dealer will use dry, low pressure air to clean internal windings. Parts inside the control console should be cleaned and inspected at this time as well.

Finally, have the insulation resistance of stator and rotor windings checked. If insulation resistances are excessively low, the generator may require drying.

### ◆ BATTERY

All lead-acid storage batteries discharge when not in use. Refer to specific instructions and warnings that accompany the battery. If such information is not available, observe the following precautions when handling a battery:

- DO NOT use jumper cables and a booster battery to crank or start the generator engine.
- DO NOT recharge a weak battery while it is installed in the generator. Remove battery from generator and recharge in a well-ventilated area, away from fuel vapors, sparks, heat or flames.
- Battery electrolyte fluid is an extremely caustic sulfuric solution that can cause severe burns. DO NOT permit fluid to contact eyes, skin, clothing, painted surfaces, wiring insulation, etc. If any battery fluid is spilled, flush the affected area with clear water immediately.
- Always wear safety glasses, rubber apron and gloves when handling a battery.
- Batteries give off explosive hydrogen gas while charging. The gas can form an explosive mixture around the battery for several hours after charging. Any spark, heat or flames can ignite the gas and cause an explosion which can shatter the battery, causing blindness or other serious injury.

### ◆ BATTERY MAINTENANCE

The battery should be inspected per the "Service Schedule," Section 6. The following procedure should be followed for inspection:

1. Inspect the battery posts and cables for tightness and corrosion. Tighten and clean as necessary.
2. Check the battery fluid level of unsealed batteries and, if necessary, fill with DISTILLED WATER ONLY. DO NOT USE TAP WATER IN BATTERIES.
3. Have the state of charge and condition checked. This should be done with an automotive-type battery hydrometer.

### — ⚠ DANGER ⚠ —

⚠ Storage batteries give off explosive hydrogen gas. This gas can form an explosive mixture around the battery for several hours after charging. The slightest spark can ignite the gas and cause an explosion. Such an explosion can shatter the battery and cause blindness or other injury. Any area that houses a storage battery must be properly ventilated. Do not allow smoking, open flame, sparks or any spark producing tools or equipment near the battery.

⚠ Battery electrolyte fluid is an extremely caustic sulfuric acid solution that can cause severe burns. Do not permit fluid to contact eyes, skin, clothing, painted surfaces, etc. Wear protective goggles, protective clothing and gloves when handling a battery. If fluid is spilled, flush the affected area immediately with clear water.

⚠ Do not use any jumper cables or booster battery to crank and start the generator engine. If the battery has completely discharged, remove it from the generator for recharging.

### — ⚠ WARNING ⚠ —

⚠ Be sure the Auto/Off/Manual switch is set to the OFF position before connecting the battery cables. If the switch is set to AUTO or MANUAL, the generator can crank and start as soon as the battery cables are connected.

⚠ Be sure the utility power supply is turned off, or sparking may occur at the battery posts as the cables are attached and cause an explosion.

### ◆ BATTERY REPLACEMENT

When replacing batteries, use the same number and the type of battery that follows:

BCI Group No.	CCA
26/26R	525 @ 0 deg. F

**Note:**

**The BCI number should be located directly on the battery.**



## Section 5 — Troubleshooting

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

PERIODIC REPLACEMENT PARTS	
Part Name	Generac's Part Number
Oil Filter	# 0A45310244
Radiator Cap	# 046627
Air Cleaner	# 059402
Spark Plug	# 0A45310275

# TROUBLESHOOTING POINTS

## PROBLEM

Engine won't crank.

## CAUSE

1. 30 amp fuse blown.
2. Loose or corroded or defective battery cables.
3. Defective starter contactor.
4. Defective starter motor.
5. Dead or Defective Battery.

## CORRECTION

1. Replace fuse.
2. Tighten, clean or replace battery cables as necessary.
3. Replace contactor.
4. Replace starter motor.
5. Remove, change or replace battery.

Engine cranks but won't start

1. Out of fuel.
2. Fuel solenoid (FS) is defective
3. Open Wire #14 from Engine Control circuit board.
4. Spark plugs defective.

1. Replenish fuel.
2. Replace solenoid.
3. Reconnect wire.
4. Clean, regap or replace plugs.

Engine starts hard, runs rough.

1. Flame arrestor (air cleaner) plugged or damaged.
2. Plugged fuel line.
3. Defective spark plugs.

1. Clean or replace as needed.
2. Unclog fuel line.
3. Clean, regap or replace plugs.

Engine starts then shuts down.

1. Engine oil level is low.
2. Engine is overheated.
3. Defective Low Oil Pressure Switch
4. Defective Coolant Temperature Switch
5. Defective Control Module circuit board.
6. Coolant Level is Low.
7. Defective Low Coolant Level Switch

1. Check oil and add oil as needed.
2. Check cooling system for leaks.
3. Replace switch.
4. Replace switch.
5. Replace board.
6. Repair leak - Add coolant.
7. Replace Switch.

Auto/Off/Manual Switch at OFF, engine continues to run


1. Defective Auto/Off/Manual switch
2. Open/disconnected wire #15A between Auto/Off/Manual switch and Control Module circuit board.
3. Defective Control Module circuit board

1. Replace switch.
2. Reconnect/close wire.
3. Replace board.

No AC output from generator.

1. Check main line circuit breaker.
2. Check circuit breaker & fuses.
3. Transfer switch set to NORMAL position
4. Generator internal failure.
5. Thermal circuit breaker open.

1. Reset to ON or CLOSED.
2. Reset and replace, if necessary.
3. Set to GENERATOR position.
4. Contact an Authorized Generac facility.
5. Auto-reset - Wait 5 min. and attempt restart.

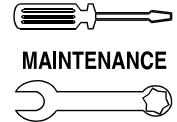

Following is a recommended maintenance schedule for Generac Guardian small standby and residential generator sets. The established intervals in the schedule are the maximum recommended when the unit is used in an average service application. They will need to be decreased (performed more frequently) if the unit is used in a severe application. Use the unit hour meter or calendar time, whichever occurs first, from the previous maintenance interval to determine the next required maintenance interval.

### **Service Maintenance Interval Information:**

The various service maintenance intervals are designated by interval numbers as follows:

- 1** An early inspection of the generator set to insure it is ready to operate when required and to identify any potential problem areas.

*Performed monthly or following each 10 hours of operation of the unit and requires approximately **.5 man-hours** per unit to complete.*

*This inspection may be performed by the end user providing the following safety steps are taken to prevent the engine from starting automatically without warning:*

**To prevent injury, perform the following steps in the order indicated before starting any maintenance:**

- **Disable the generator set from starting and/or connecting to the load by setting the control panel Auto-Off-Manual switch to the “OFF” position.**
- **Remove the control panel fuse.**
- **Turn off the battery charger.**
- **Remove the negative battery cable.**

**The battery charger must be turned off BEFORE removing the battery cable to prevent an over current condition from burning out sensitive control panel components and circuits.**

**Following all maintenance, reverse these steps to insure the unit is returned to standby setup for normal operation when required.**

- 2** A break-in service inspection of the generator set to insure it is ready to operate and carry the load when required, and to identify any potential problem areas.

*Performed **ONLY ONCE** following the first three months or the first 30 hours of operation after purchase of the unit and requires approximately **2.5 man-hours** per unit to complete.*

*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by an authorized Generac Service Dealer.*

- 3** An operational inspection of the generator set to insure it is ready to operate and carry the load when required, and to identify any potential problem areas.



*Performed semi-annually or following each 50 hours of operation of the unit and requires approximately **1.5 man-hours** per unit to complete.*

*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by an authorized Generac Service Dealer.*

- 4** A mid-level inspection of the generator set to insure it is ready to operate and carry the load when required, and to identify any potential problem areas.


*Performed annually or following each 100 hours of operation of the unit and requires approximately **4.0 man-hours** per unit to complete.*

*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by an authorized Generac Service Dealer.*

**MAINTENANCE****Section 6 – Scheduled Maintenance****Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**


<b>Maintenance Tasks</b>	<b>Level 1</b> Recom- mended to be done monthly/ 10 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 2</b> Required to be done 3 months/ Break-in 30 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 3</b> Required to be done Semi- annually/ 50 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 4</b> Required to be done Annually/ 100 hrs.	<b>Task</b> Comp. (Date- Initials)
1. Disable the unit from operating per the first page warning.								
2. Check the engine oil level. Adjust as necessary.								
3. Check the engine coolant level. Adjust as necessary.								
4. Check the engine coolant thermal protection level. Correct as necessary.								
5. Check the natural gas delivery system on gas engine driven units. Tighten connections as necessary.								
6. Check the air inlets and outlets for debris. Clean as necessary.								
7. Check the battery electrolyte level if accessible. Adjust as necessary.								
8. Check the battery posts, cables, and charger for loose connections, corrosion, and proper operation. Correct as necessary.								
9. Check the unit wiring for loose connections, corrosion, and damage. Correct as necessary.								
10. Check the engine accessory drive belts for wear, weather cracking, and damage. Replace as necessary.								
11. Visually inspect the unit looking for leaks, wear or damage, loose connections or components, and corrosion. Correct as necessary.								
12. Test the engine and transfer switch safety devices. Correct and/or adjust as necessary.								

**Section 6 – Scheduled Maintenance**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**

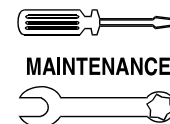

<b>Maintenance Tasks</b>	<b>Level 1</b> Recom- mended to be done monthly/ 10 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 2</b> Required to be done 3 months/ Break-in 30 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 3</b> Required to be done Semi- annually/ 50 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 4</b> Required to be done Annually/ 100 hrs.	<b>Task</b> Comp. (Date- Initials)
13. Initiate an automatic start and transfer of the unit to site load and exercise it for at least 1 hour looking for leaks, loose connections or components, and abnormal operating conditions. Correct as necessary.								
14. Start and exercise the unit at full rated load (use a load bank if the site load is not enough) for at least 2 hours looking for leaks, loose connections or components, and abnormal operating conditions. Correct as necessary.								
15. Change the engine oil.								
16. Replace the engine oil filter(s).								
17. Replace the engine air filter(s).								
18. Replace the engine fuel filter(s) on diesel engine driven units and re-prime the fuel system.								
19. Check the engine spark plugs on gas engine driven units. Clean and re-gap or replace as necessary.								
20. Perform a 5 minute no-load operational run of the unit looking for any post service problems.								
21. Return the unit to standby setup for operation when required.								




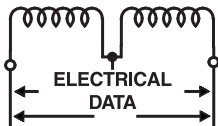



## Section 7 - Electrical Data


### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Wiring Diagram – Control Panel (1-Phase) –Drawing No. 0A2803-D

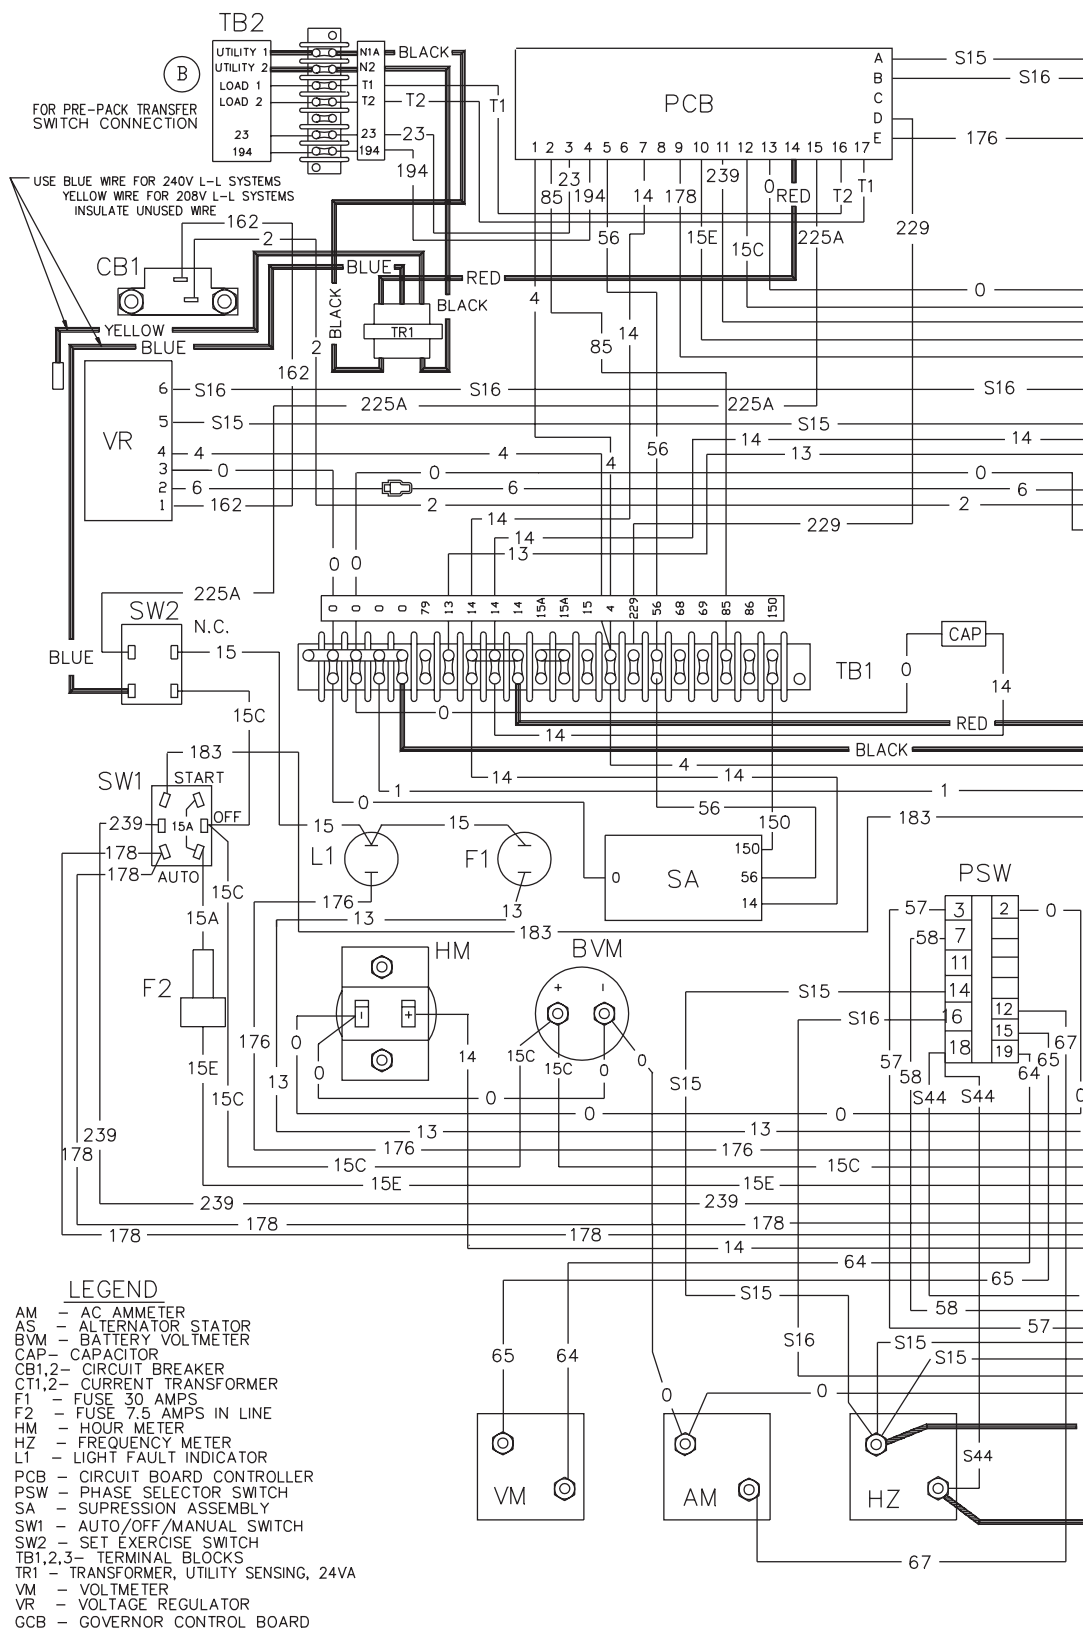

**Section 7 - Electrical Data**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Wiring Diagram – Control Panel (1-Phase) –Drawing No. 0A2803-D**

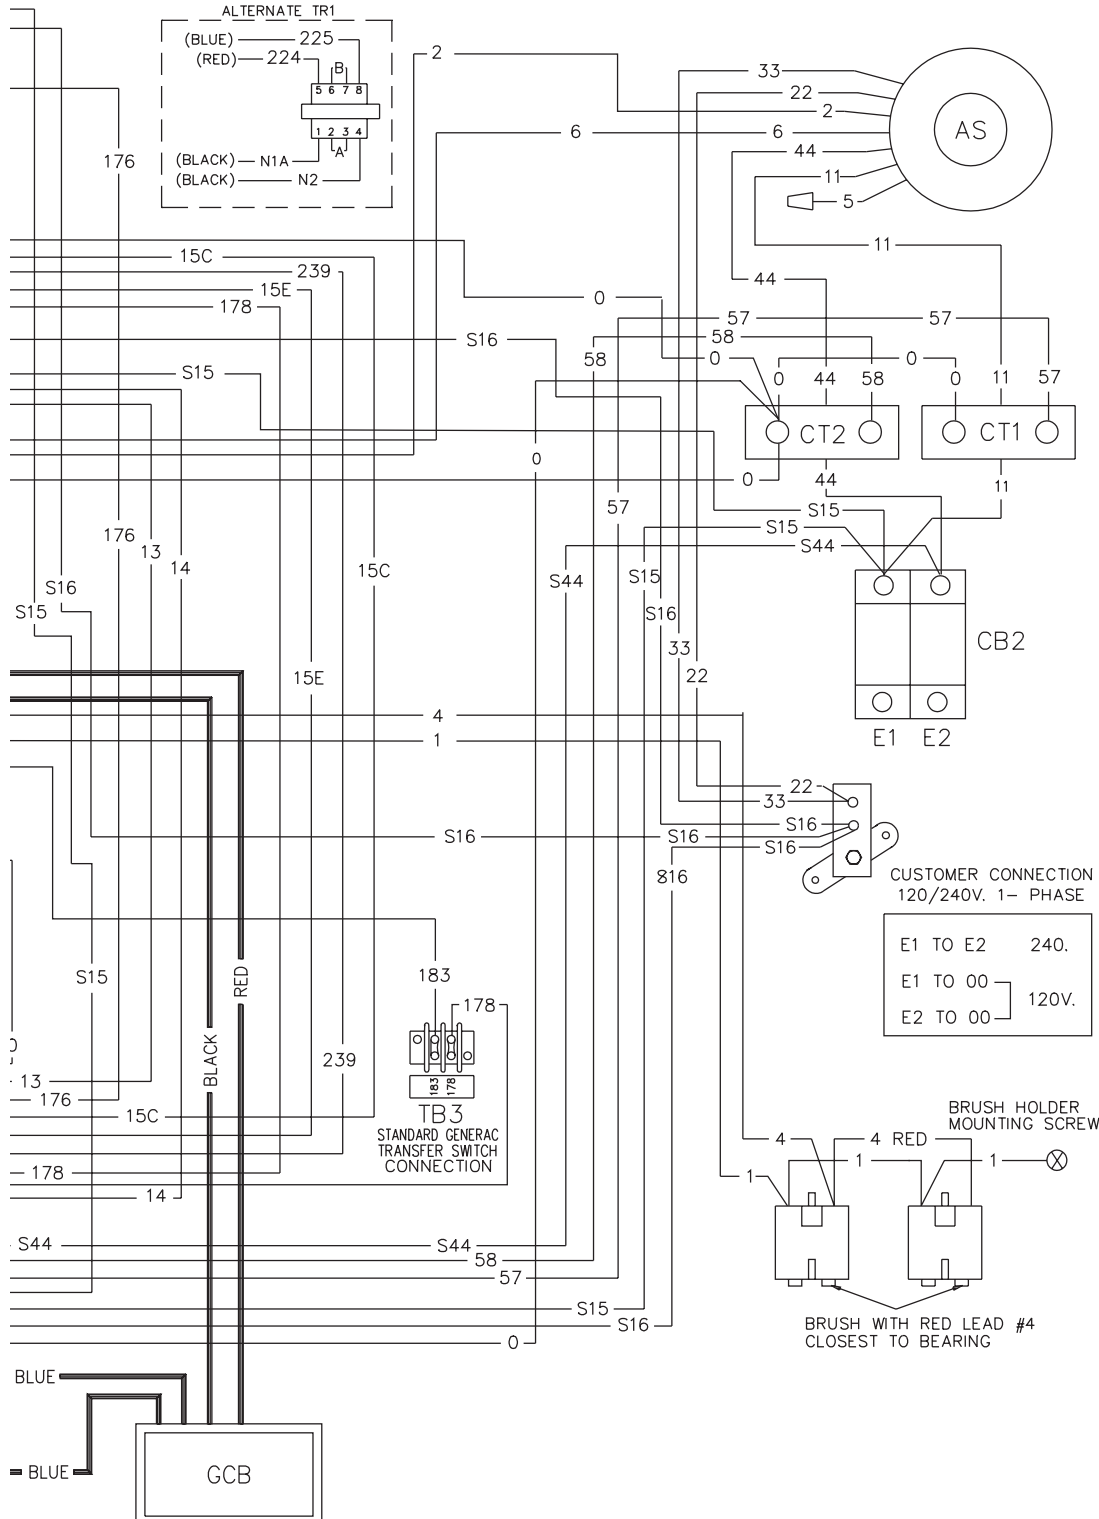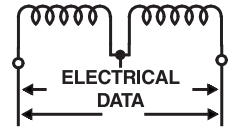


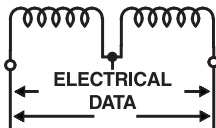



## Section 7 - Electrical Data

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators


#### Electrical Schematic – Control Panel (1-Phase) – Drawing No. 0A2802-B

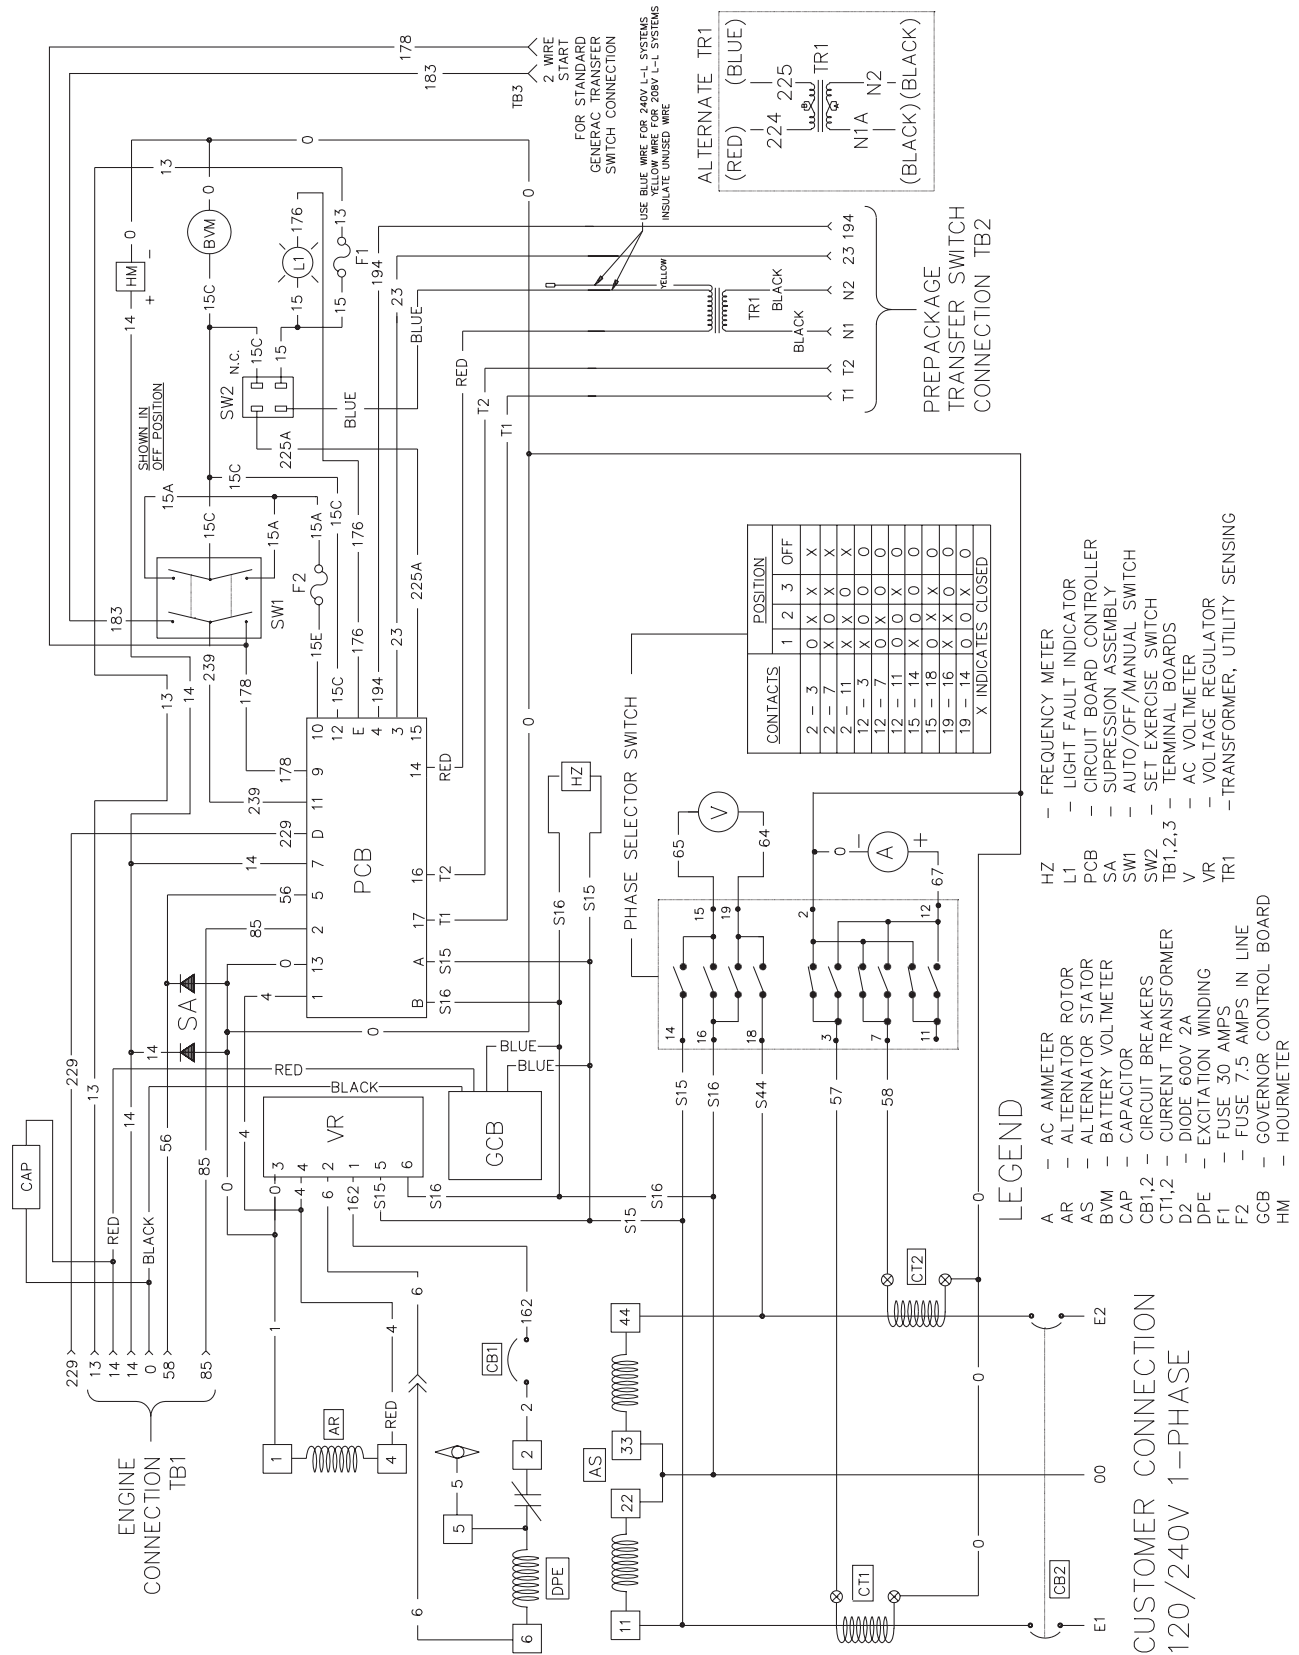


**Section 7 - Electrical Data**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Wiring Diagram – 1.5L Gas Engine – Drawing No. 0A7176-A**

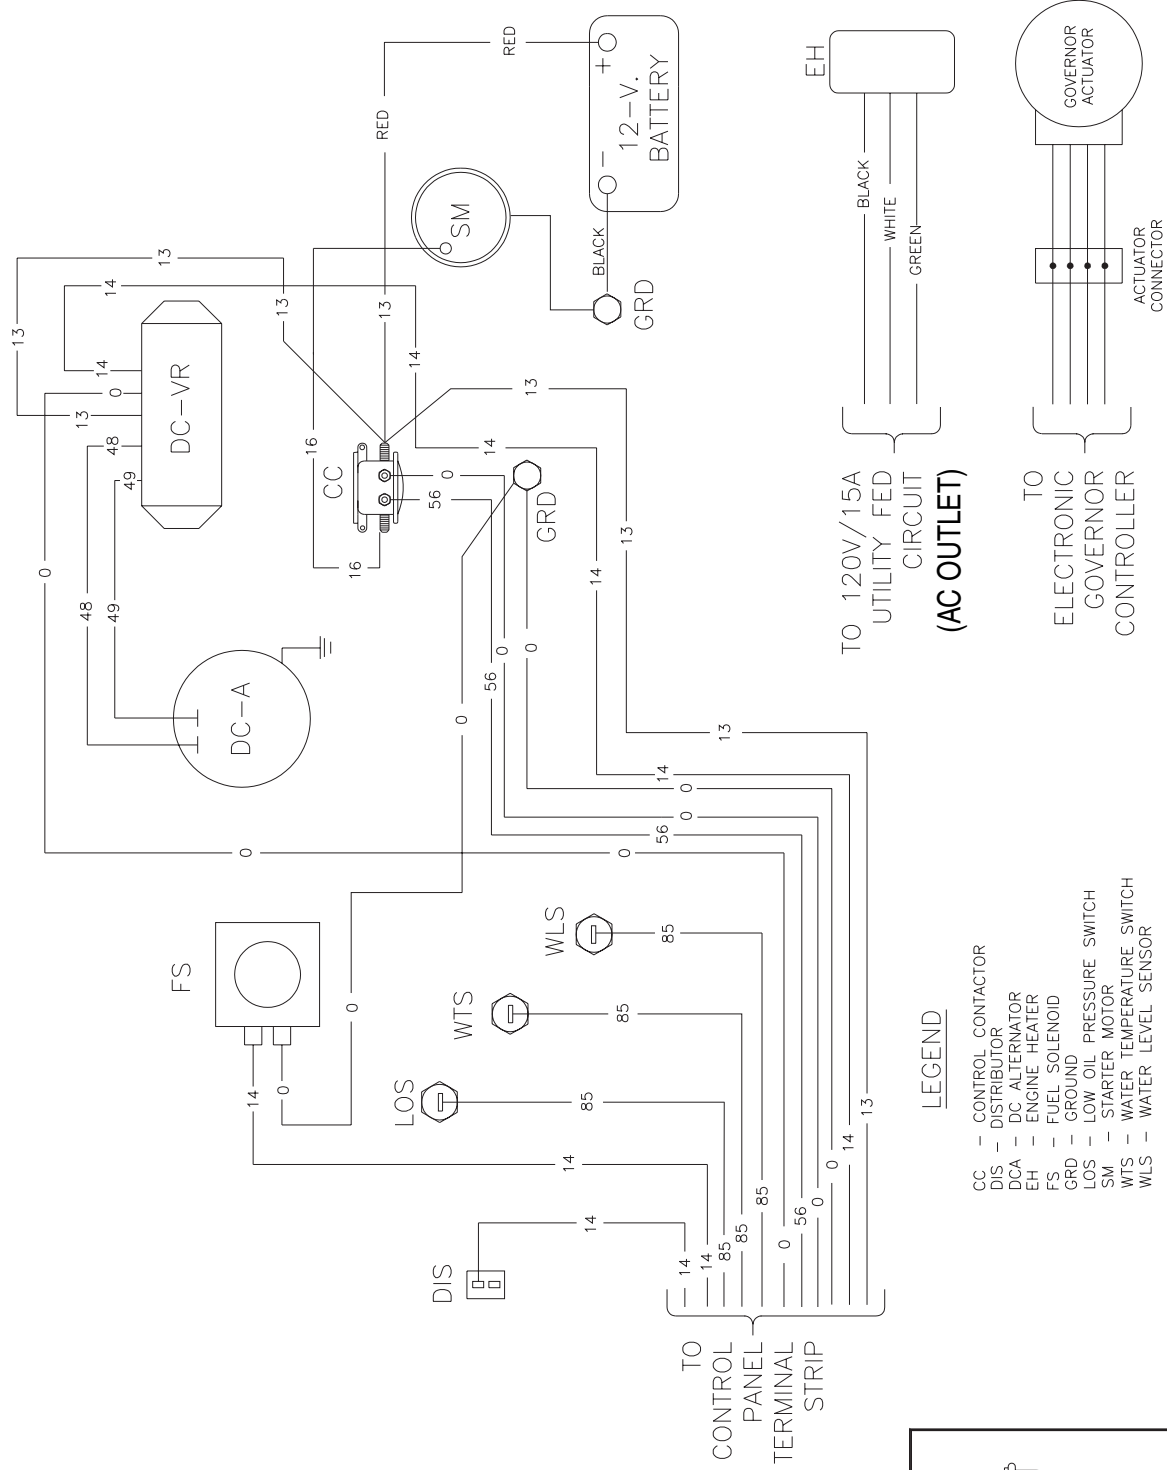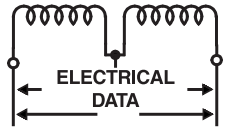

- LEGEND**
- CC - CONTROL CONTACTOR
  - DIS - DISTRIBUTOR
  - DCA - DC ALTERNATOR
  - EH - ENGINE HEATER
  - FS - FUEL SOLENOID
  - GRD - GROUND
  - LOS - LOW OIL PRESSURE SWITCH
  - SM - STARTER MOTOR
  - WTS - WATER TEMPERATURE SWITCH
  - WLS - WATER LEVEL SENSOR

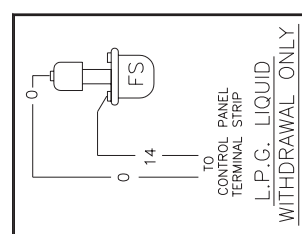


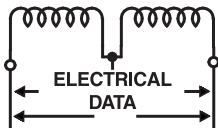

## Section 7 - Electrical Data



### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Electrical Schematic – 1.5L Gas Engine – Drawing No. 0A7182-B

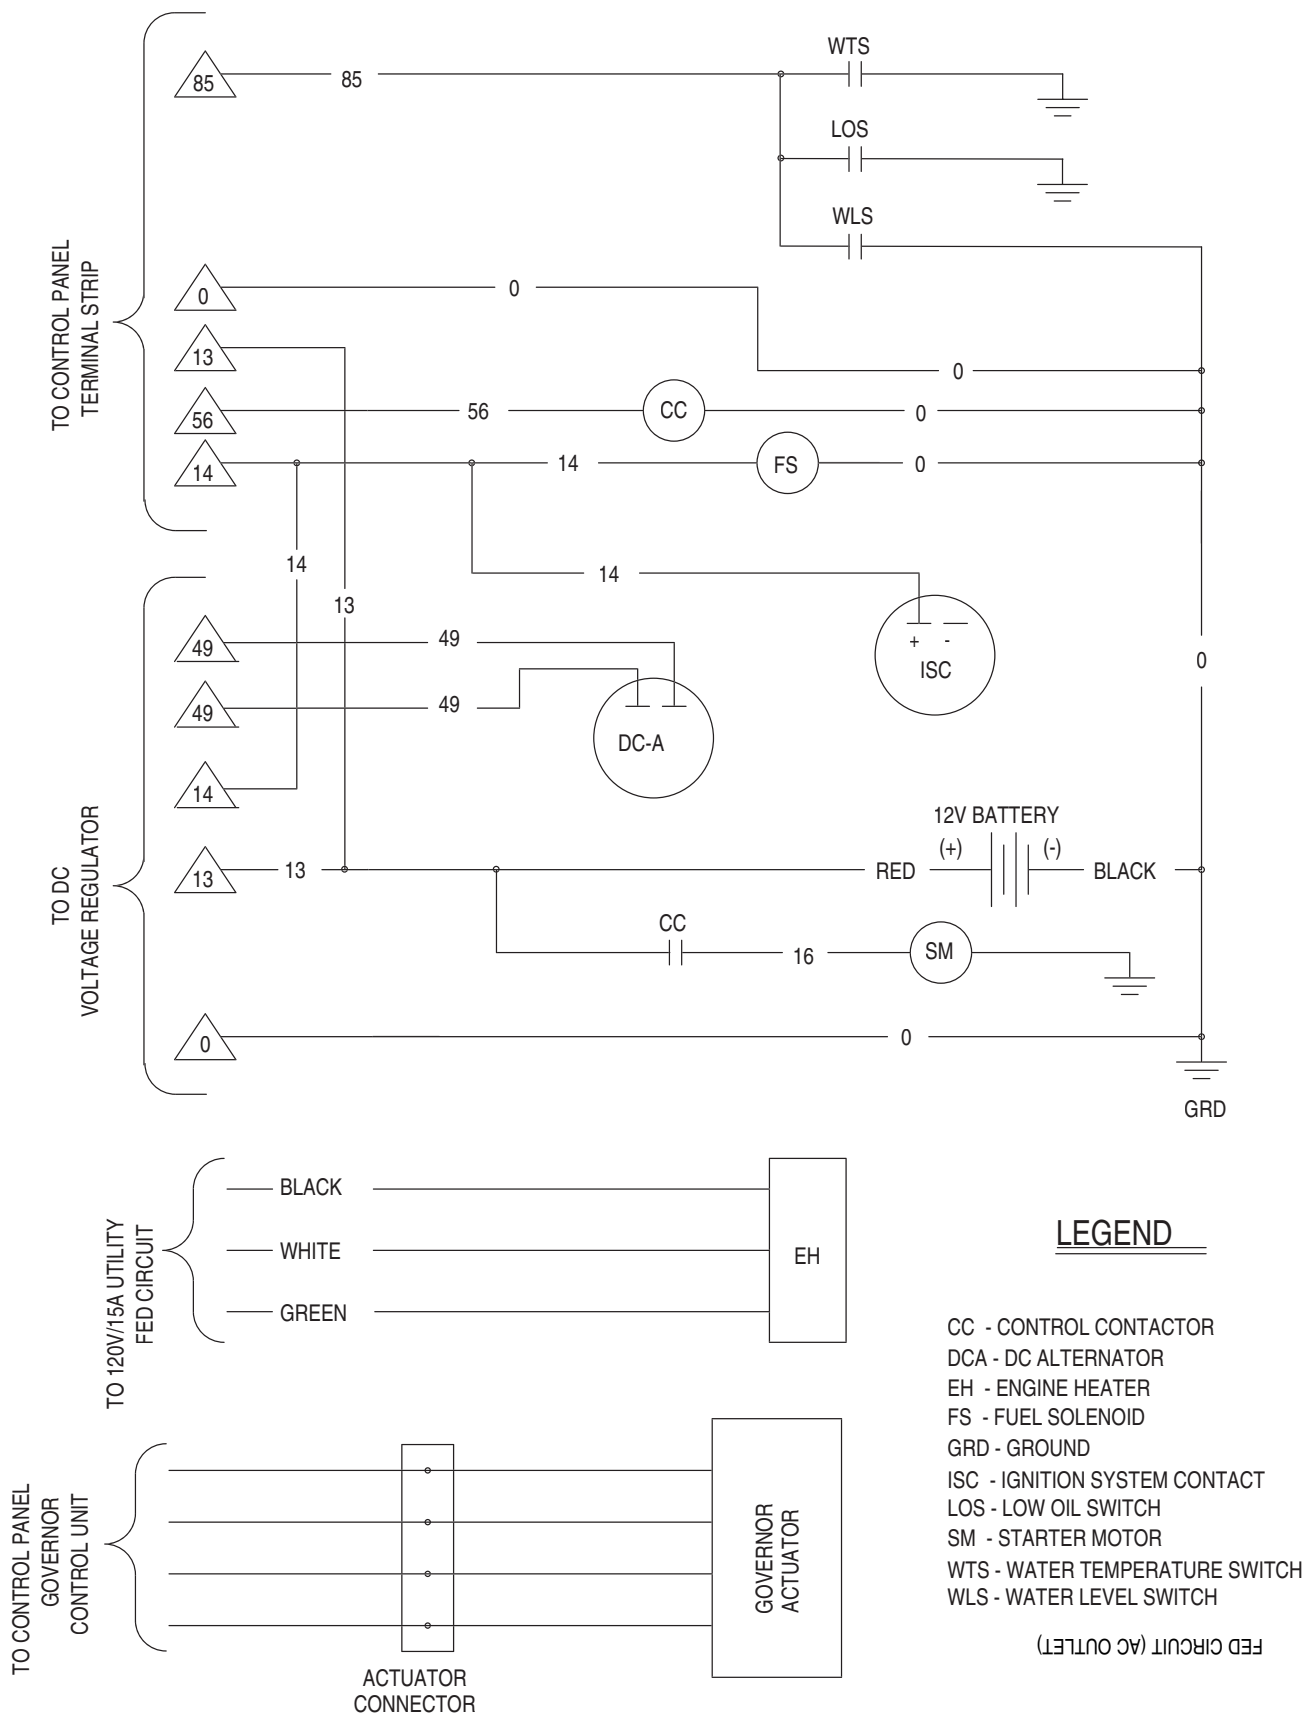




**Section 8 - Exploded Views and Parts**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Exploded View – Enclosure (15 and 20 kW) – Drawing No. 0A7188-D**

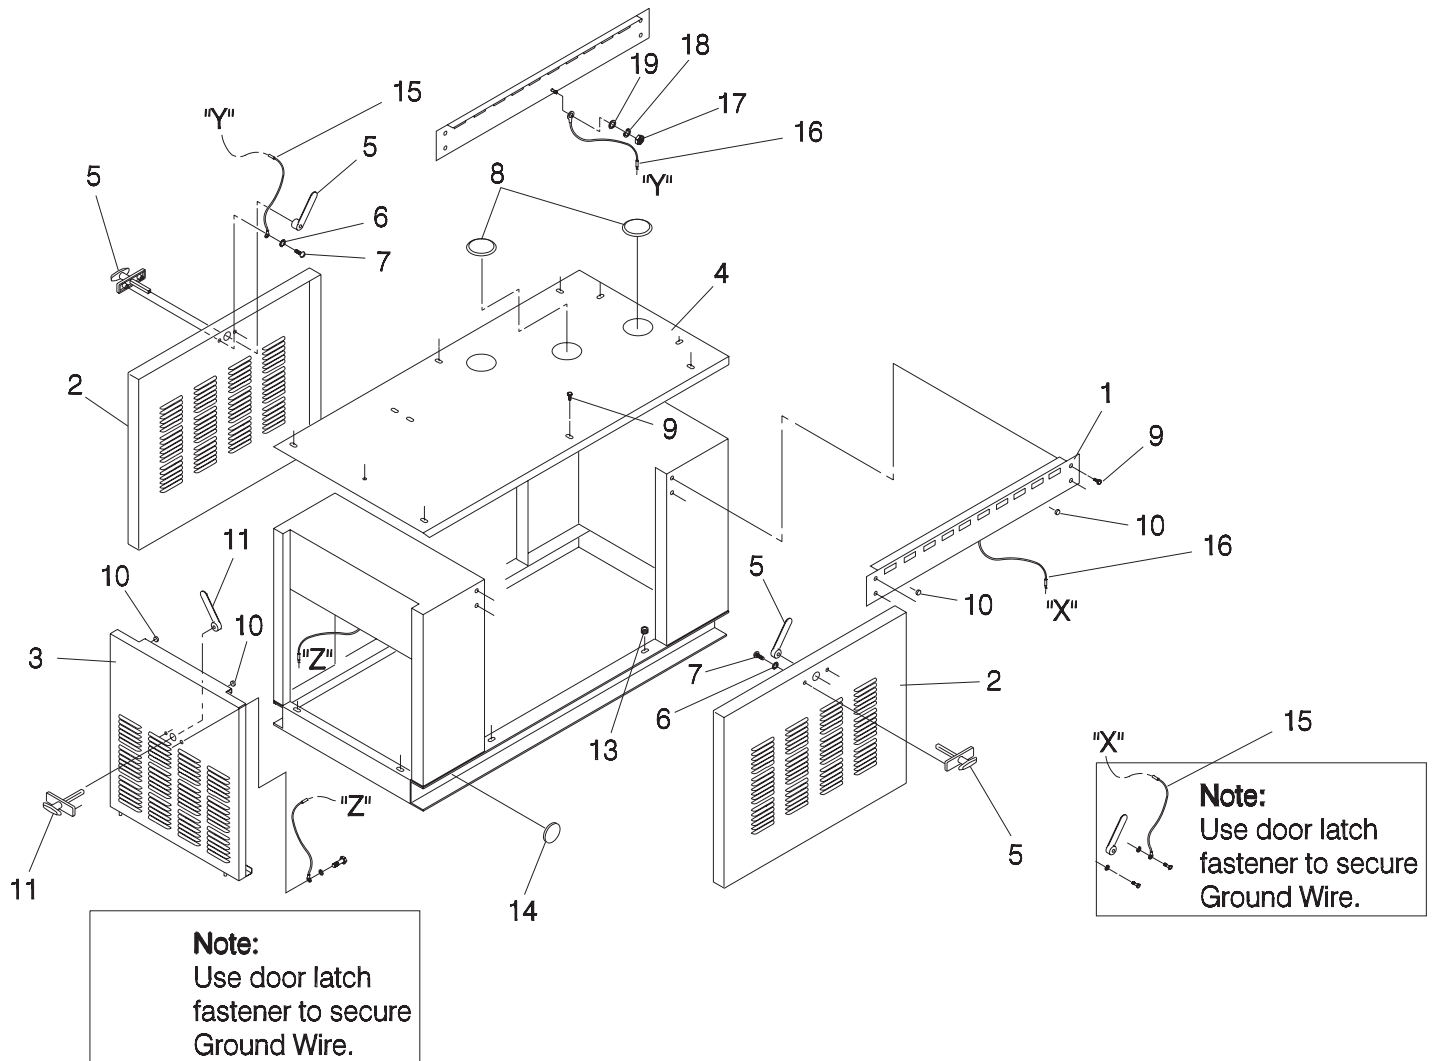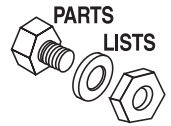


ITEM	PART NO.	QTY.	DESCRIPTION
1	97575	2	BRACE, SIDE
2	A3769	2	DOOR, ENCLOSURE
3	A3768	1	DOOR, ENCLOSURE
4	A5314	1	TOP, ENCLOSURE
5	67042	2	LATCH
6	22264	6	LOCK WASHER, #8
7	67035	6	SCREW, PAN HEAD MACH.-#8-32 x 5/16"
8	82570	2	PLUG-4"
9	A7215	10	SWAGE FASTENER-W/NYLON WASHER

ITEM	PART NO.	QTY.	DESCRIPTION
10	32990	6	BUMPER
11	C2164	1	LATCH
13	29107	6	GROMMET 3/16"-7/8"
14	A1694	5	BUTTON-PLUG 1-1/2"
15	91297-063	3	GROUND WIRE ASSEMBLY
16	91297-064	3	GROUND WIRE ASSEMBLY
17	49813	3	HEX NUT M6 x 1.0
18	70005	3	LOCK WASHER M6
19	49811	3	FLAT WASHER M6

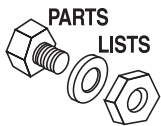


## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Enclosure (25kW) – Drawing No. 0C1404-D

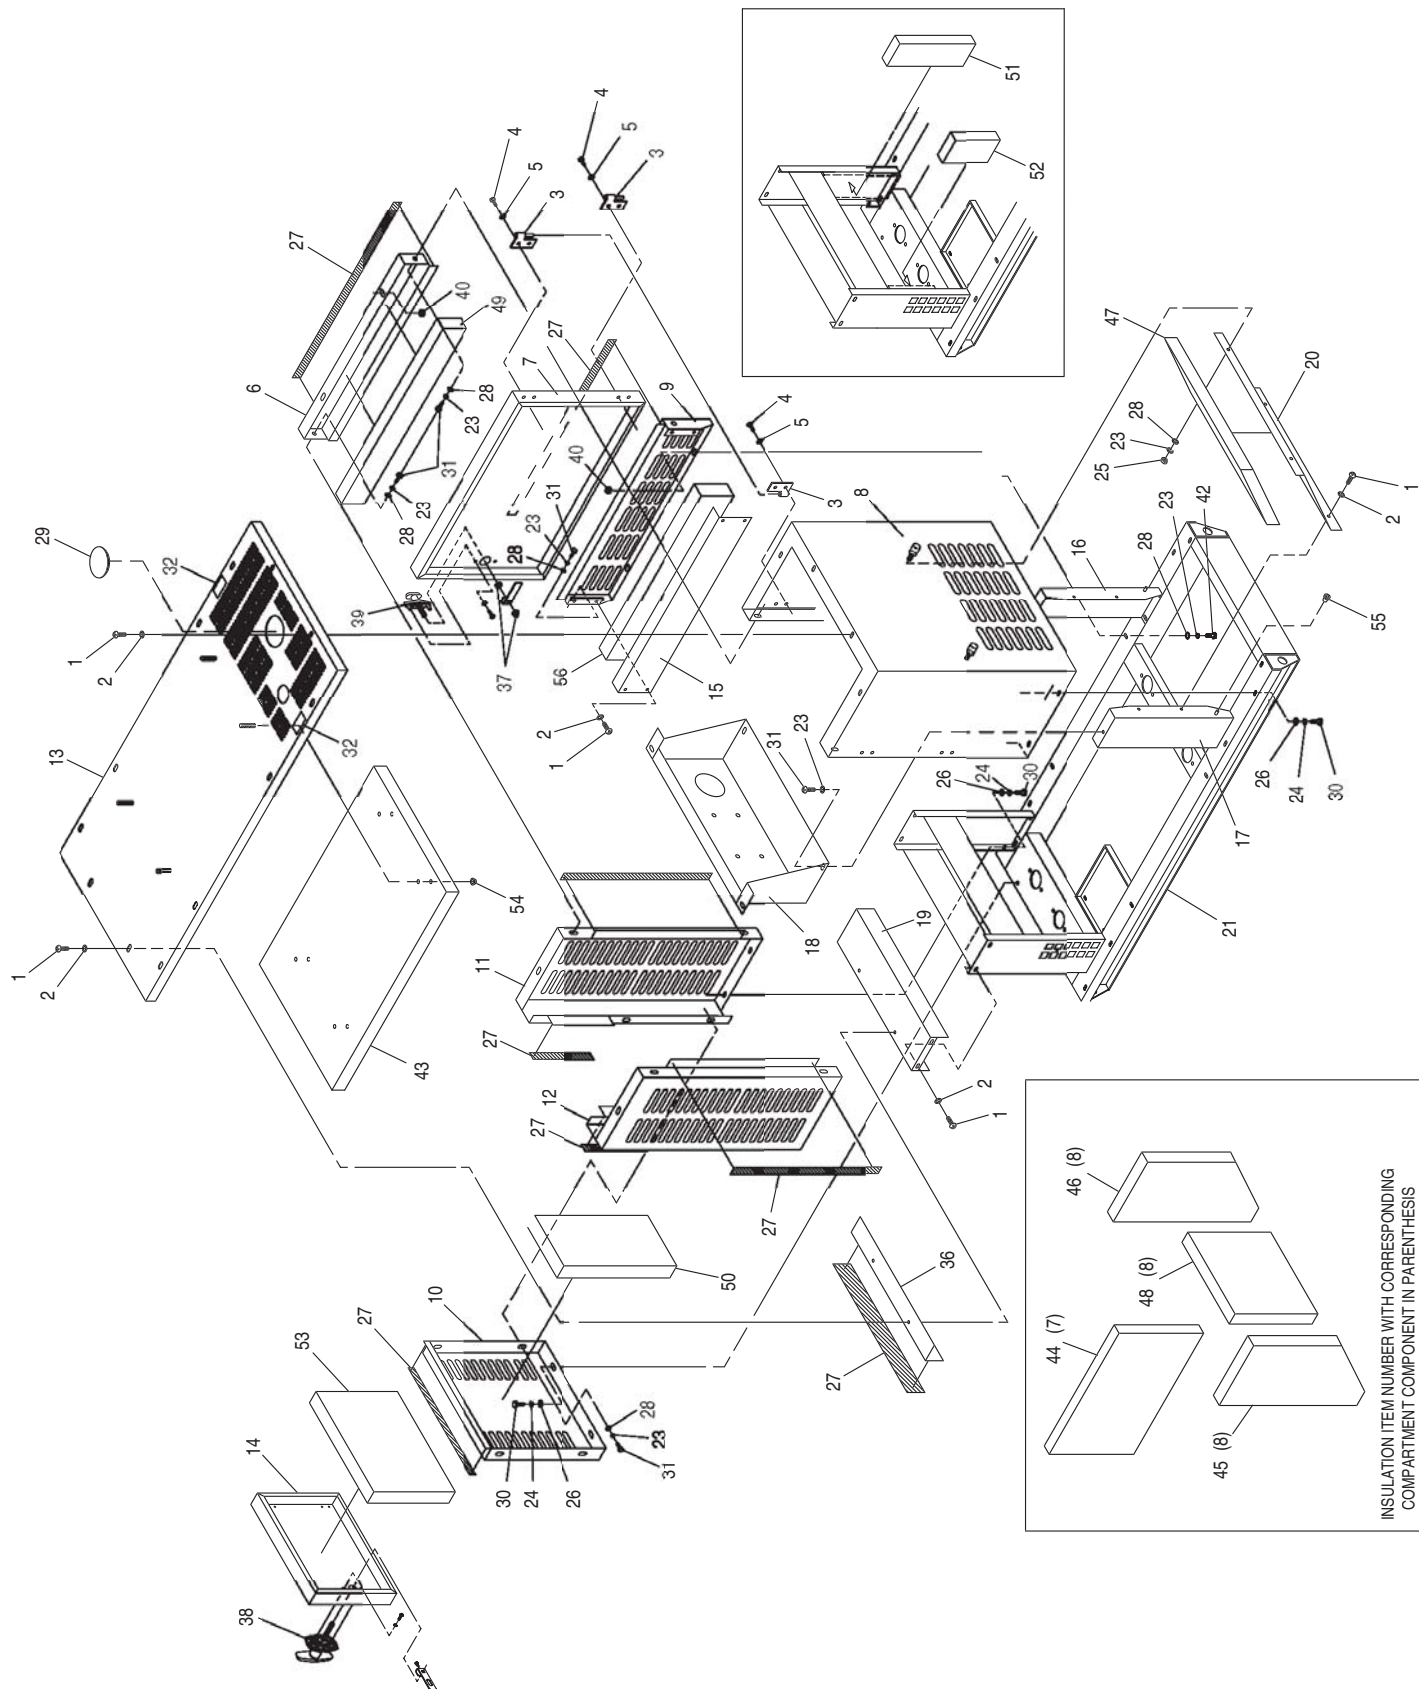

## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Enclosure (25kW) – Drawing No. 0C1404-D

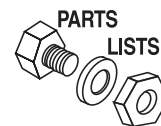

ITEM	PART NO.	QTY.	DESCRIPTION
1	0A2110	32	SCREW SWAGE 1/4-20 X 1/2 Z/YC
2	0A2115	32	WASHER NYLON .250
3	0A3133A	4	HINGE SLIP MALE LH
	0A3133B	4	HINGE SLIP FEMALE LH
	0A3133C	2	HINGE SLIP MALE RH
	0A3133D	2	HINGE SLIP FEMALE RH
4	0A3359	24	SCREW BHSC M6-1.0 X 16 SS
5	0A3360	24	SHAKEPROOF INT M6 SS
6	0C1245	1	PANEL TOP SIDE LH
	0C1245A	1	PANELTOP SIDE RH
7	0A3449	2	DOOR SIDE
8	0A4822	1	PANEL FRONT
9	0A4823	2	PANEL SIDE BOTTOM
10	0A4824	1	PANEL REAR
11	0A4825	1	CORNER POST REAR LH
12	0A4826	1	CORNER POST REAR RH
13	0C1193	1	TOP ENCLOSURE 1.5 SAE
14	0A4831	1	DOOR REAR
15	0A4832	2	DUCT
16	0C1067	1	SUPPORT RADIATOR LH
17	0C1067A	1	SUPPORT RADIATOR RH
18	0C1068	1	SUPPORT MUFFLER 1.5L
19	0C8817	1	TOP CONTROL PANEL SAE
20	0C1244	1	DUCT FRONT 1.5L SAE
21	0A9955	1	BASE MOUNTING
23	022097	16	WASHER LOCK M6-1/4
24	022129	12	WASHER LOCK M8-5/16
25	022127	4	NUT HEX 1/4-20 STEEL
26	022145	12	WASHER FLAT 5/16 ZINC
27	089961	24 FT.	FOAM STRIP 3/4 X 1/4
28	022473	20	WASHER FLAT 1/4 ZINC
29	082570	1	PLUG PLASTIC 4 PLUG BTTN #425
30	039253	12	SCREW HHC M8-1.25 X 20 G8.8
31	042568	14	SCREW HHC M6-1.0 X 20 G8.8
32	0D3397	2	DECAL CAUTION HOT SURFACES
36	0D3785	1	BRACE REAR DOOR
37	037337	4	NUT HEX JAM 3/8-24 SS
38	0C2164	1	LATCH AND CAM
39	067042	2	LATCH AND CAM
40	067577	4	NUT SPEED 1/4-20
42	022413	4	SCREW HHC 1/4-20 X 1 G5
43 *	0C1053B	1	INSULATION PANEL TOP
44 *	0C1053A	2	INSULATION PANEL SIDE DOOR
45 *	0C1053E	1	INSULATION PANEL FRONT RH
46 *	0C1053F	1	INSULATION PANEL FRONT LH
47 *	0C1053G	1	INSULATION DUCT FRONT
48 *	0C1053H	1	INSULATION PANEL FRONT TOP
49 *	0C1053D	2	INSULATION PANEL DUCT SIDE TOP
50 *	0C1053J	1	INSULATION PANEL REAR
51 *	0C1053K	1	INSULATION DUCT LH SIDE
52 *	0C1053L	1	INSULATION DUCT RH SIDE
53 *	0C1053M	1	INSULATION DOOR REAR
54	078115	14	WASHER SELF LOC/DOME
55	030486	2	GROMMET 7/16 X 1/16 X 1/4
56 *	0C1053C	2	INSULATION PANEL DUCT SIDE BOTTOM


\* NOTE: THESE PARTS ARE INCLUDED IN KIT 0C1053Z.



## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators


#### Exploded View – Control Panel (15 and 20 kW) – Drawing No. 0A2872-F

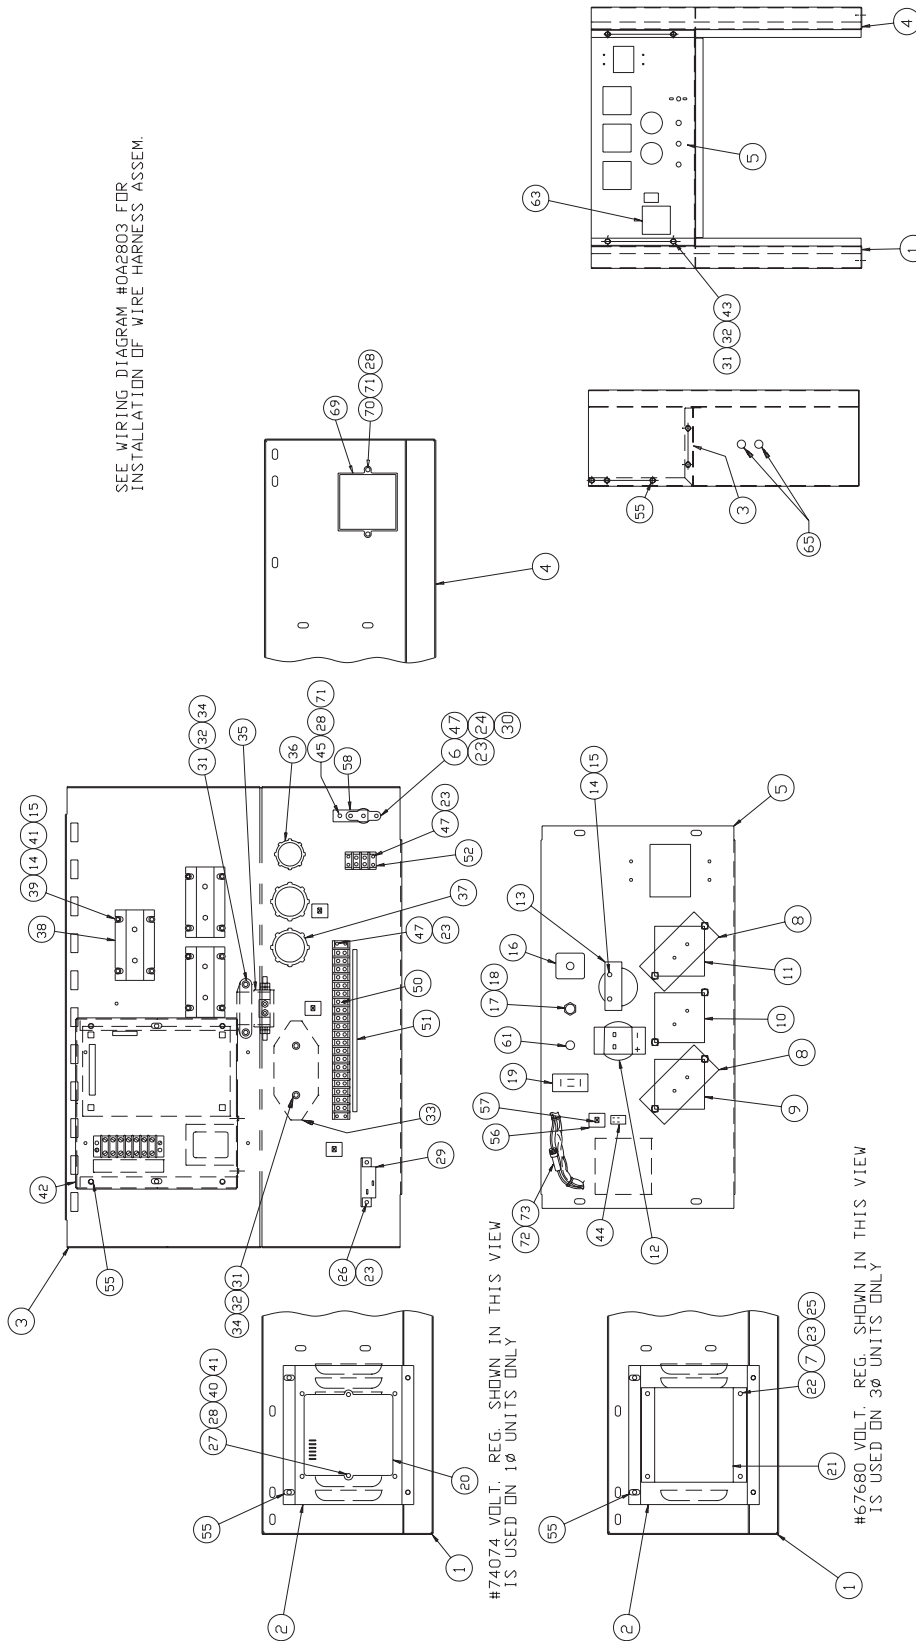

P/N	PHASE	ITEM 7	ITEM 14	ITEM 15	ITEM 20	ITEM 21	ITEM 22	ITEM 23	ITEM 25	ITEM 27	ITEM 28	ITEM 39	ITEM 40
0A2856	1Ø	P/N 022985	P/N 022152	P/N 022158	P/N 074074	P/N 067680	P/N 075476	P/N 022264	P/N 051715	P/N 076039	P/N 051756	P/N 033121	P/N 049226
0A2856A	3Ø	QTY. 4	QTY. 12	QTY. 12	QTY. 1	QTY. 1	QTY. 4	QTY. 8	QTY. 4	QTY. 2	QTY. 5	QTY. 4	QTY. 2

## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Control Panel (15 and 20 kW) – Drawing No. 0A2872-F

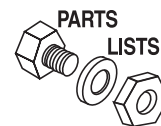


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	098062	1	SUPPORT, CONTROL PANEL, L.H.	36	0C2512	1	GROMMET 1/16-1-3/8
2	075589	1	BRACKET, VOLTAGE REGULATOR	37	0C2513	2	GROMMET 1/8-1-3/4
3	0A1775	1	CONTROL, PANEL-BACK	38	061395	**	TRANSFORMER, CURRENT 100/5
4	098063	1	SUPPORT, CONTROL PANEL R.H.		058318	**	TRANSFORMER, CURRENT 150/5
5	0A2106	1	SILKSCREEN, "P" PANEL	39	033121	2	HEX HD. MACH. SCR. 10-32 x 1/2"
6	057073	1	BLOCK, JUNCTION	40	049226	2	LOCK WASHER, M5
7	022985	**	WASHER, FLAT #6	41	023897	6	WASHER, FLAT #10-M5
8	070080	2	INSULATOR	42	075595	1	CMA BOX ASSEMBLY
9	070043	1	VOLTMETER, AC 0-300	43	077438	4	SCREW, PHM M6 x 1.0 x 12MM
10	070055	1	AMMETER, AC 0-100	44	082573	1	ROCKER SWITCH DPST
11	070042	1	METER, FREQUENCY 55-65HZ	45	055440	1	HHCS M5-0.8 x 25MM
12	070081	1	HOURLMETER	47	0C2212	6	M4-.7 x 16 SWAGEFORM PPH
13	076037	1	METER, VOLT DC 8-18V	50	057335	1	TERMINAL BLOCK 20 PCS #6 PANEL
14	022152	**	WASHER, LOCK #10	51	0A7230	1	DECAL, TERMINAL STRIP
15	022158	**	NUT, HEX #10-32	52	048766	1	BLOCK, TERMINAL 2 PCS #6 PANEL
16	061945	1	SWITCH, SELECTOR AMP/VOLT	55	0A7215	14	1/4"-20 X 5/8" LG. SWAGEFORM
17	032300	1	HOLDER, FUSE	56	057593	4	MOUNT, CABLE TIE
18	022668	1	FUSE, AGC-30	57	028739	4	WRAP, TIE-4" LONG
19	076020	1	SWITCH, TOGGLE DPDT	58	061979	1	BUS, BAR
20	074074	**	ASSEM. POTTED REG. WOFIN	59*	0A2833	1	HARNESS, PANEL "PP" IP
21	067680	**	VOLTAGE REG. ASSEM. B&D	60*	0A2833A	1	HARNESS, PANEL "PP" 3P
22	075476	**	SCREW, PPHM M4-0.7 x 16MM	61	064009	1	PILOT LIGHT RED 14-V.
23	022264	**	WASHER, LOCK #8-M4	63	081988	1	DECAL-EXERCISE INFO
24	022237	1	WASHER, LOCK 3/8"	65	086381	2	CAPLUG, BPF-1/4"
25	051715	**	NUT, HEX M4-0.7	67	036903	2	SCREW, PPHM 6-32 x 5/8 LG
26	0C2428	2	6-32 x 5/8" SWAGEFORM PPH	68	022155	2	WASHER, LOCK #6
27	076039	**	SCREW, PPHM-M5-0.8 x 40MM	69	098647	1	STEPPER MOTOR KIT
28	051756	**	HHCS M10-1.5 x 20	70	076040	2	PPHMS, M5-0.8 x 16MM
29	048476	1	CIRCUIT BREAKER 4.5A.	71	049226	2	WASHER, LOCK M5
	054450	1	CIRCUIT BREAKER 5.5A.	72***	0D5324	1	FUSE & HOLDER LITTLE 7.5A
30	022241	1	HEX NUT 3/8"-16	73***	0A9611	REF	FUSE 7.5AXBK/AGC7.5NX
31	022097	8	WASHER, LOCK 1/4-M6				
32	022473	8	WASHER, FLAT 1/4-M6				
33	0A1354A	1	REGULATOR-DC ALT.				
34	043116	4	HHCS, M6-1.0 x 12MM				
35	056739	1	SOLENOID RELAY 12VDC				

\*NOT SHOWN ON THIS ASSEMBLY


\*\*SEE CHART

\*\*\*PART OF CONTROL PANEL WIRE HARNESS

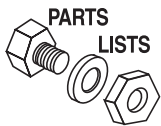

## Section 8 - Exploded Views and Parts


### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Control Panel (25kW) – Drawing No. 0C8847-D

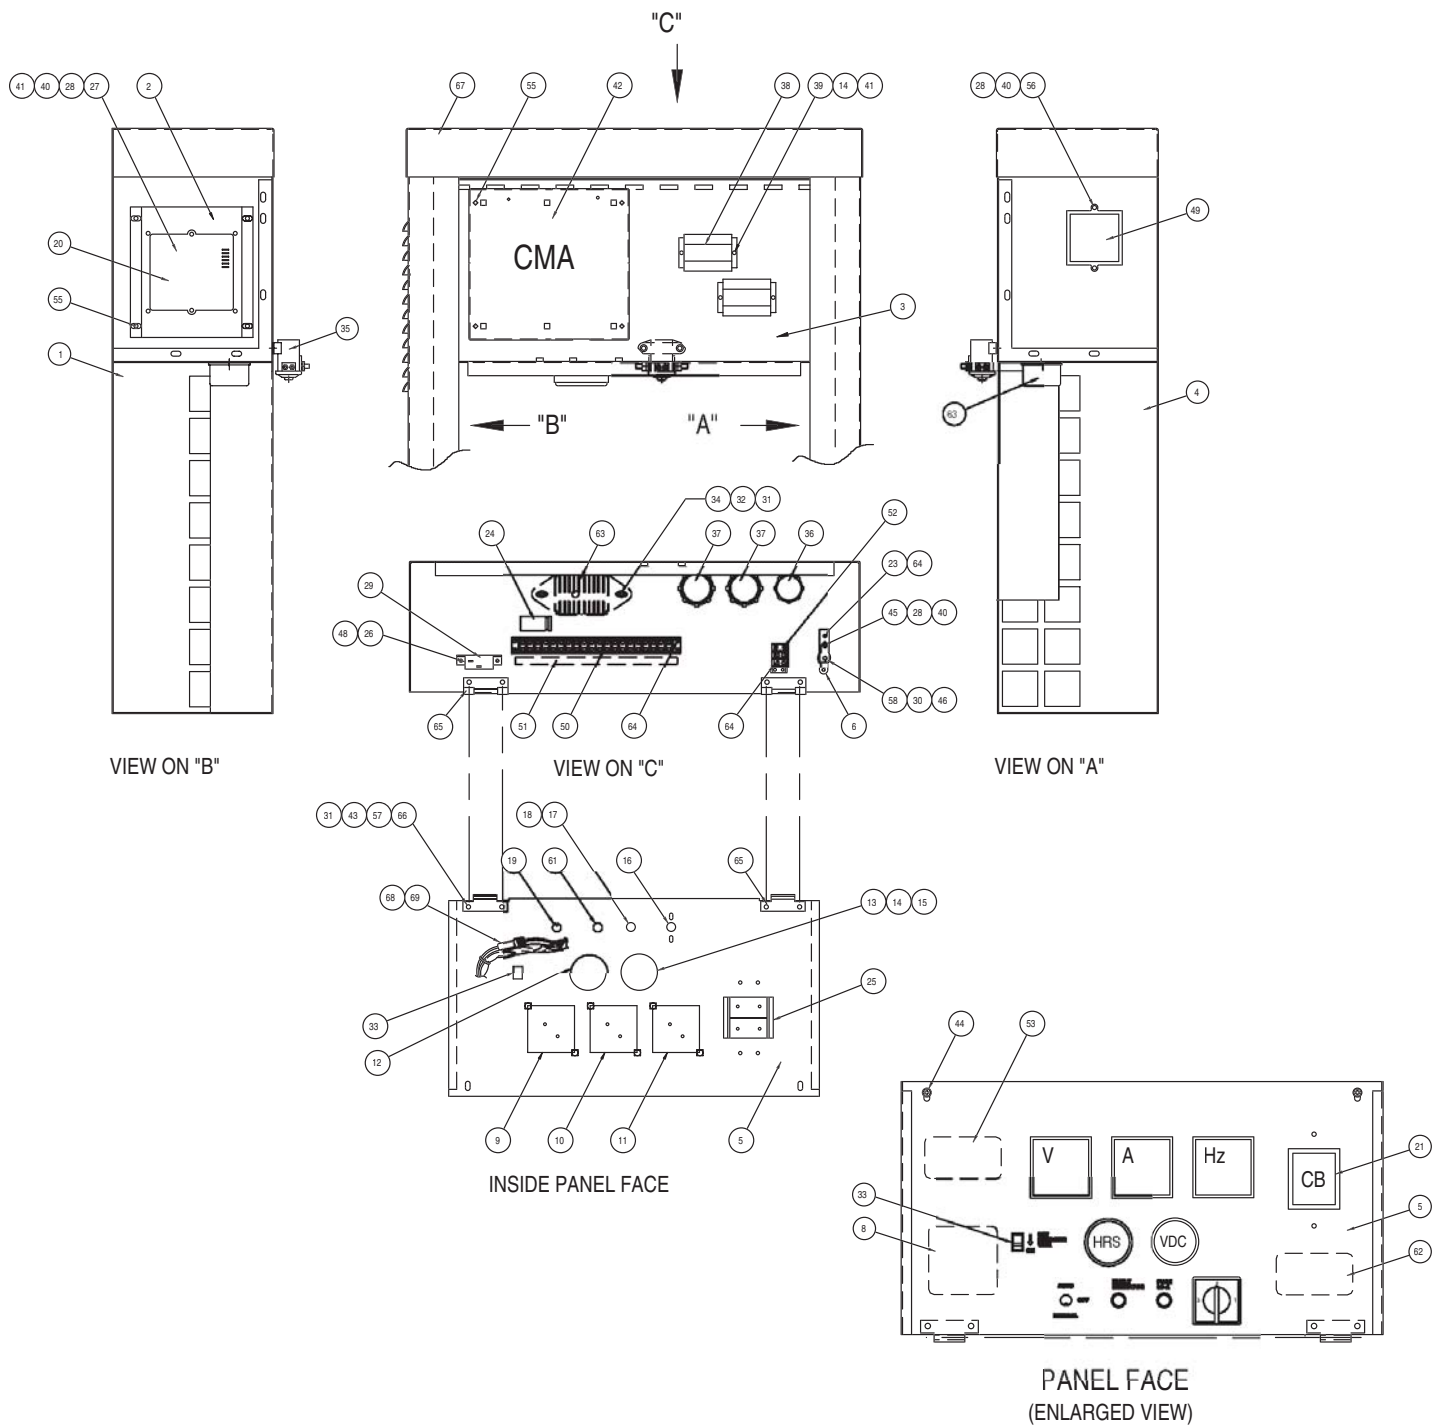



## Section 8 - Exploded Views and Parts


### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Control Panel (25kW) – Drawing No. 0C8847-D

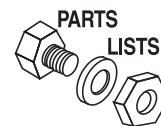

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0C5077	1	SUPPORT CONTROL PANEL LH	37	063212	1	GROMMET 1.75 X .12 X 1.50
2	075589	1	BRACKET VOLTAGE REGULATOR	38	058318	2	TRANSFRM 150A TO 5A 5VA
3	0A1775	1	CONTROL PANEL-BACK	39	033121	2	SCREW HHC #10-32 X 1/2
4	0C5078	1	SUPPORT CONTROL PANEL RH	40	049226	4	WASHER LOCK M5
5	0C4224A	1	SILKSCREEN PANEL (SAE)	41	023897	10	WASHER FLAT #10 ZINC
6	057073	1	BLOCK JUNCTION 3/8-16	42	075595	1	ASSEMBLY CMA BOX
7	022985	4	WASHER FLAT #6 ZINC	43	049811	8	WASHER FLAT M6
8	081988	1	DECAL EXERCISE INFO	44	072355	2	SCREW HHC M6-1 X 12 SEMS
9	070043	1	VOLTMETER AC 0-300	45	055440	1	SCREW HHC M5-0.8 X 25 G8.8
10	070055	1	AMMETER AC 0-100	46	022241	1	NUT HEX 3/8-16 STEEL
11	070042	1	FREQUENCY METER 55-65HZ	48	022155	2	WASHER LOCK #6
12	070081	1	HOURLMETER	49	098647	1	ASSEMBLY L.C. ELECT GOV
13	076037	1	VOLTMETER DC 8-18V	50	057335	1	BLOCK TERM 20A 20 X 6 X 1100V
14	022152	10	WASHER, LOCK #10	51	021480	1	DECAL TERMINAL STRIP
15	022158	10	NUT HEX #10-32 STEEL	52	048766	1	BLOCK TERM 20A 2 X 6 X 1100V
16	061945	1	SWITCH 6A AMP/V SELECTOR	53	058589	1	DECAL WARN ENG START
17	032300	1	HOLDER FUSE	54*	070882	1	ASSEMBLY SUPPRESSION
18	022668	1	FUSE 30A X AGC30 HLDR22669 HKP	55	0A7215	10	SCREW SW 1/4-20 X 5/8 N WA JS500
19	076020	1	SWITCH DPDT 15/10 SP ON-OFF-ON	56	076040	2	SCREW PPHM M5-0.8 X 16
20	083048	1	ASSEMBLY POTTED REG WOFIN	57	049813	8	NUT HEX M6-1.0 G8 YEL CHR
21	0A2077	1	CIRCT BRK 125X2 120/240V	58	061979	1	BUS BAR
22	075476	14	SCREW PPHM M4-0.7 X 16	59 *	0A2833	1	HARNESS PNL "PP" 1P
23	022264	14	WASHER LOCK #8-M4	60 *	0A6821	1	HARNESS WIRING (1.5L)
24	0A3968	1	ASSEMBLY CAPACITOR FILTER	61	064009	1	LIGHT 12VDC .02A LED RED PILOT
25	039782	1	BRACKET CIRCT BRK MOUNTING	62	064828	1	DECAL TRAN SWITCH CONN
26	0C2323	2	SCREW PHTT #6-32 X 5/8 ZYC	63	0A1354A	1	REGULATOR - DC ALT
27	076039	2	SCREW PPHM M5-0.8 X 40	64	0C2212	6	SCREW PHTT M4-0.7 X 16 ZYC
28	051756	3	SCREW HHC M10-1.5 X 20 G8.8	65	0C3826	2	HINGE CONTROL PANEL
29	048476	1	CIRCT BRK 4.5 X 1 AUT30KW CNT45K	66	0C4427	8	T.H.M.S SS M6 X 1.0 X 12
30	022237	1	WASHER LOCK 3/8	67	0C8817	1	CONTROL PANEL TOP (SAE)
31	022097	8	WASHER LOCK M6-1/4	68 **	0D5324	1	FUSE & HOLDER LITTLE 7.5A
32	022473	8	WASHER FLAT 1/4 ZINC	69 **	0A9611	REF	FUSE 7.5A X BK/AGC7.5NX
33	082573	1	SWITCH DPST 5 125V SPD RCKR				
34	043116	4	SCREW HHC M6-1.0 X 12 G8.8				
35	056739	1	RELAY SOLENOID 12VDC PNL MNT				
36	072252	2	GROMMET 1.37 X .06 X 1.00				

\* NOT SHOWN ON THIS ASSEMBLY


\*\* PART OF CONTROL PANEL WIRE HARNESS

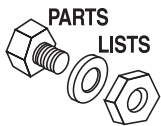


## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators


#### Exploded View – Radiator (15 & 20 kW) – Drawing No. 0A7206-D

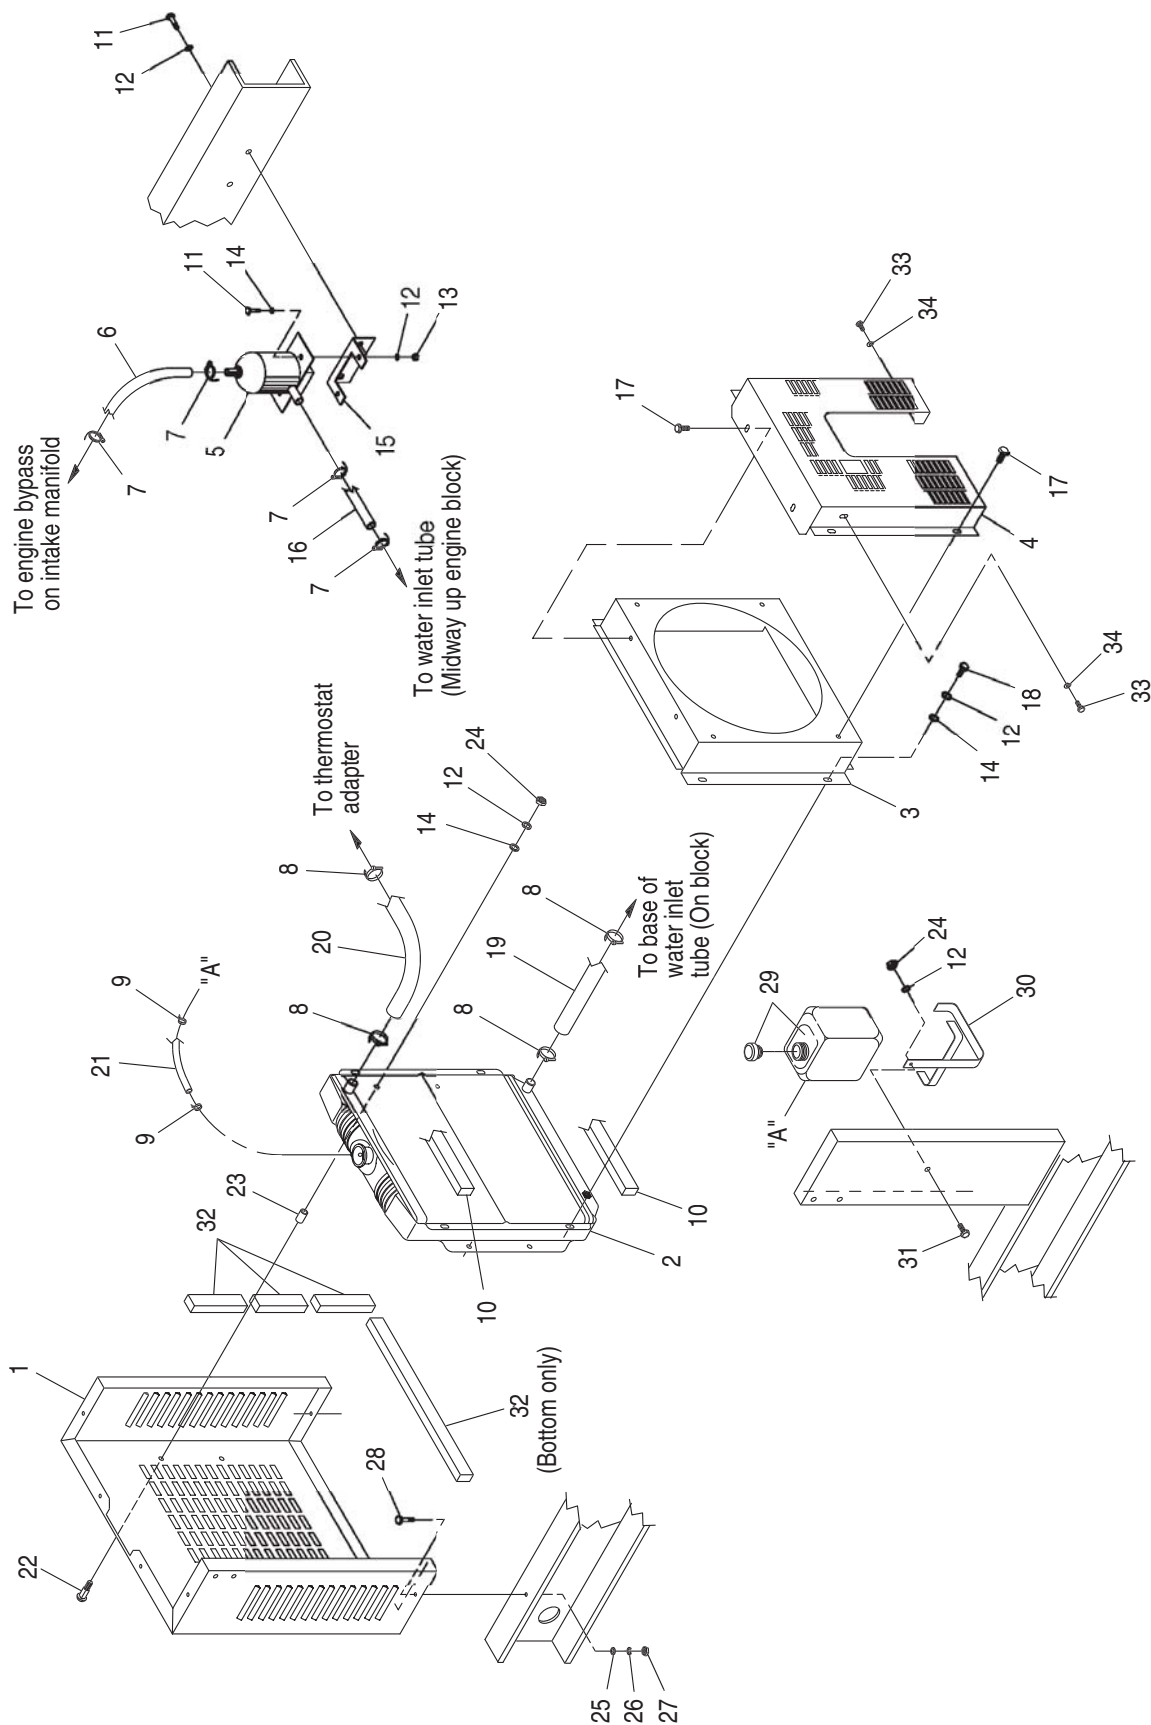

**Section 8 - Exploded Views and Parts**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Exploded View – Radiator (15 & 20 kW) – Drawing No. 0A7206-D**

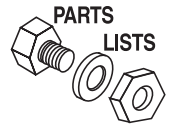


ITEM	PART NO.	QTY.	DESCRIPTION
1	0A6272	1	SUPPORT RADIATOR
2	0A5734	1	RADIATOR 1.5L
3	0A6237	1	VENTURI 1.5L MODINE
4	0A6238	1	GUARD FAN 1.5L MODINE
5	084918	1	HEATER ENGINE 0500W 120V
6	050967	1	HOSE 5/8 ID RIA 250F 12"
7	057823	4	CLAMP HOSE #10 .56 - 1.06
8	099502	4	CLAMP HOSE #24 B1.06 - 2.00
9	083709	2	CLAMP WIRE HOSE .573 - .551
10	052250	1	TAPE FOAM 1 X 1 14'
11	042568	4	SCREW HHC M6-1.0 X 20 G8.8
12	022097	13	WASHER LOCK M6-1/4
13	049813	2	NUT HEX M6 X 1.0 G8 YEL CHR
14	022473	11	WASHER FLAT 1/4 ZINC
15	084427	1	BRACKET HEATER
16	050967	1	HOSE 5/8 ID RIA 250F 18"
17	075443	6	SCREW CRMPIT 1/4-20 X 5/8
18	056892	4	SCREW CRIMPTITE 10-24 X 3/8
19	0A6284	1	HOSE - LOWER RADIATR
20	0A6258	1	HOSE - UPPER RADIATR
21	029032	1	HOSE 9/32 ID
22	031669	4	BOLT CARR 1/4-20 X 1-3/4 JS500
23	060035	4	SPACER .41 X .75 X .87 ST/ZNC
24	022127	5	NUT HEX 1/4-20 STEEL
25	022145	4	WASHER FLAT 5/16 ZINC
26	022129	4	WASHER LOCK M8-5/16
27	045771	4	NUT HEX M8-1.25 G8 YEL CHR
28	042907	4	SCREW HHC M8-1.25 X 16 G8.8
29	076749	1	TANK COOLANT RECOVERY
30	080712	1	BRACKET COOLANT RECOVERY TANK
31	0A7215	1	SCREW SWAGE 1/4-20 X 5/8 N WA JS500
32	0A7275	6'	FOAM 1.5 X 1 ADHESIVE BACKING
33	0A2111	2	SCREW SWAGE 10-32 X 5/16 Z/YC
34	065852	2	SPRING CLIP HOLDER .37-.62

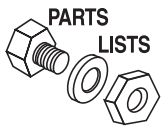

## Section 8 - Exploded Views and Parts


### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Exploded View – Radiator (25 kW) – Drawing No. 0C1406-C

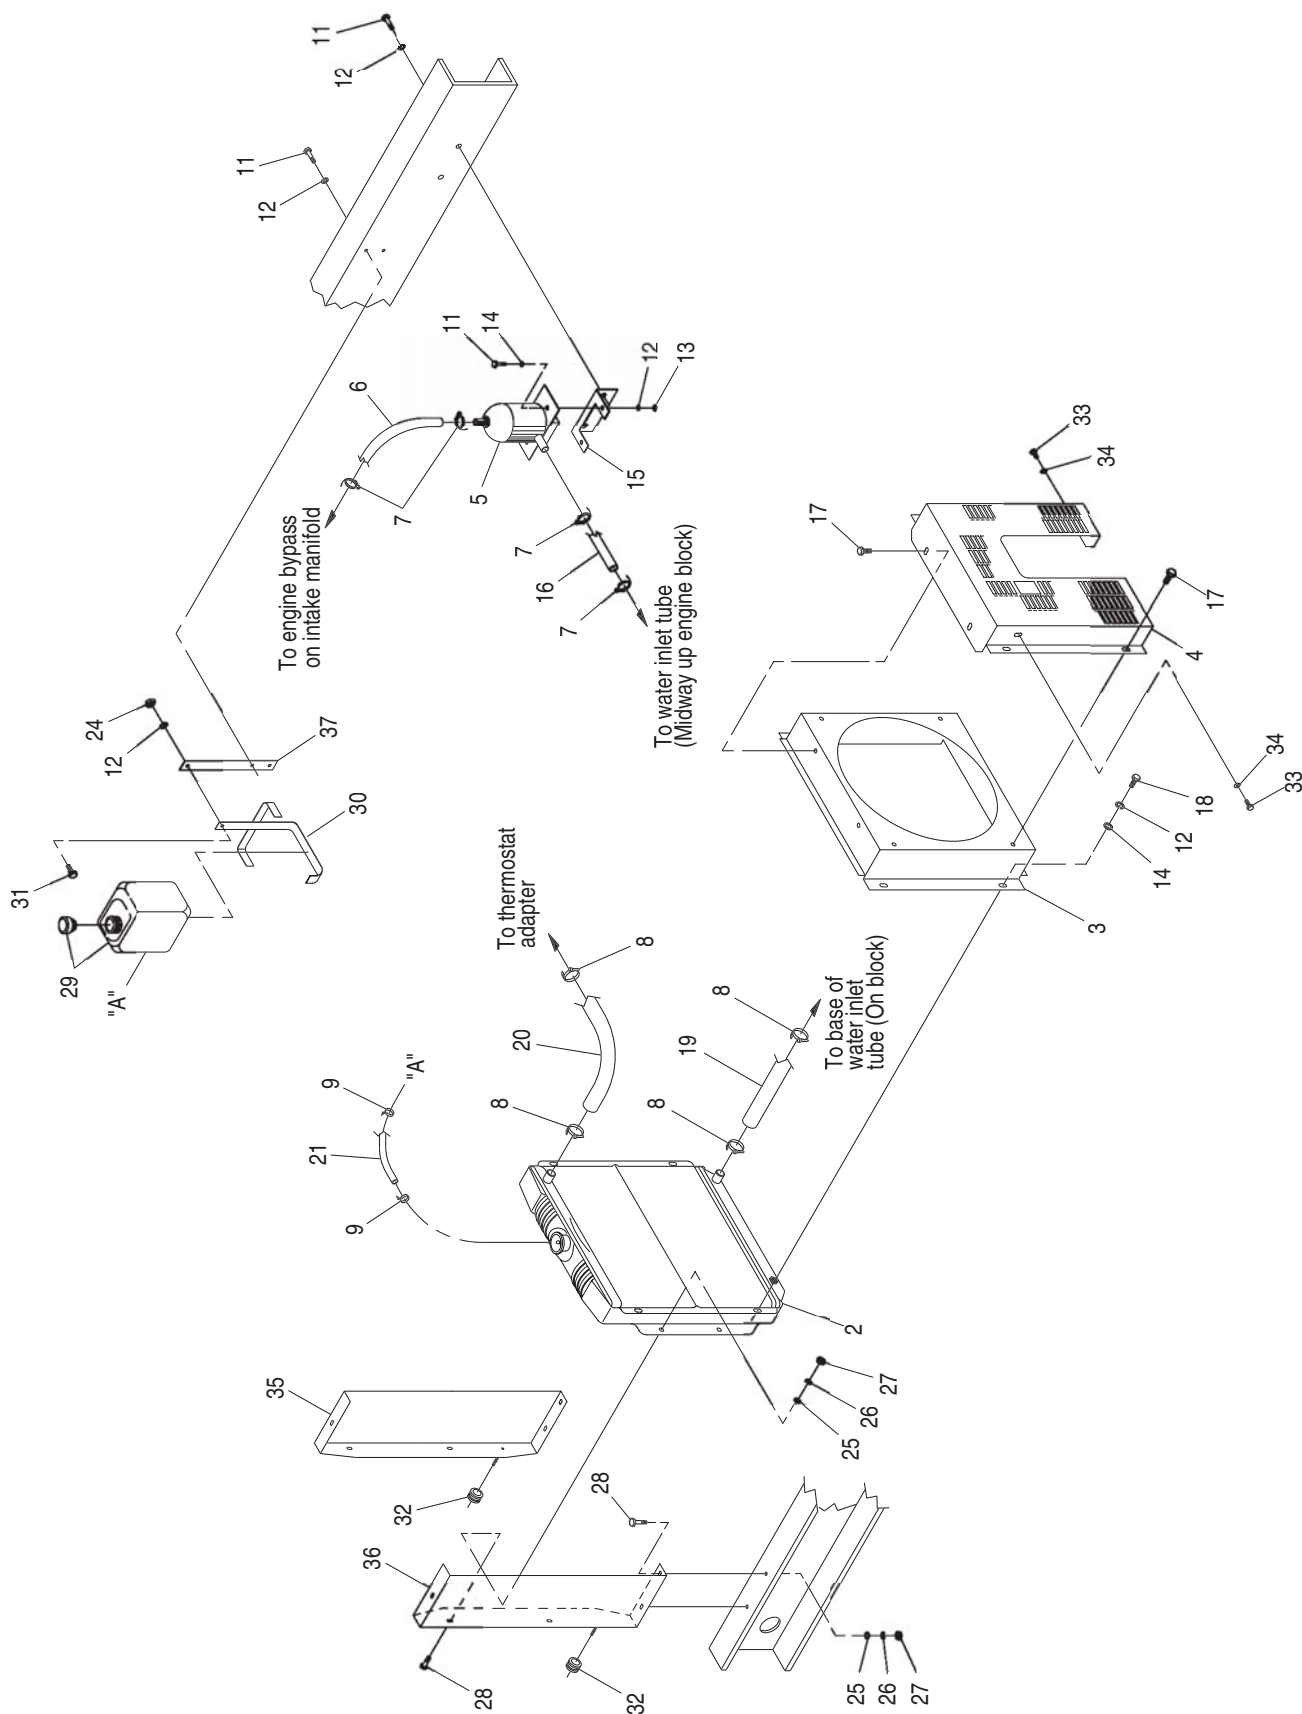


## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Radiator (25 kW) – Drawing No. 0C1406-C

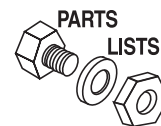


ITEM	PART NO.	QTY.	DESCRIPTION
2	0A5734	1	RADIATOR 1.5L
3	0A6237	1	VENTURI 1.5L
4	0A6238	1	GUARD FAN
5	084918	1	HEATER 500W 1020
6	050967	12"	HOSE RES 5/8 RIA 250F
7	057823	4	CLAMP HOSE #10 .56 - 1.06
8	099502	4	CLAMP HOSE #24 1.06 - 2.00
9	083709	2	CLAMP WIRE HOSE .573 - .551
11	042568	6	SCREW HHC M6-1.0 X 20 G8.8
12	022097	11	WASHER LOCK M6-1/4
13	049813	2	NUT HEX M6 -1.0 G8 YEL CHR
14	022473	7	WASHER FLAT M6-1/4 ZINC
15	084427	1	BRACKET HEATER
16	050967	18"	HOSE RES 5/8 RIA 250F
17	075443	6	CRMPIT 1/4-20 X 5/8
18	056892	4	CRMPIT 10-24 X 3/8
19	0A6284	1	HOSE LOWER RADIATOR
20	0A6258	1	HOSE UPPER RADIATOR
21	029032	1	HOSE 9/32 ID
24	022127	1	NUT HEX 1/4-20 STEEL
25	022145	8	WASHER FLAT 5/16 ZINC
26	022129	8	WASHER LOCK M8-5/16
27	045771	8	NUT HEX M8-1.25 G8 YEL CHR
28	042907	8	SCREW HHC M8-1.25 X 16 G8.8
29	076749	1	TANK COOLANT RECOVERY
30	080712	1	BRACKET COOLANT RECOVERY TANK
31	0A7215	1	SCREW SW 1/4-20 X 5/8 N WA JS500
32	030486	2	GROMMET 7/16 X 1/16 X 1/4
33	0A2111	2	SCREW SWAGE 10-32 X 5/16 Z/YC
34	065852	2	NUT SPRINGCLIP .37 - .62
35	0C1067A	1	SUPPORT RADIATOR RH
36	0C1067	1	SUPPORT RADIATOR LH
37	0C1480	1	BRACKET COOLANT BOTTLE

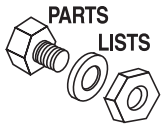

## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators



#### Exploded View – Mounting Base (15 & 20 kW) – Drawing No. 0A7187-A

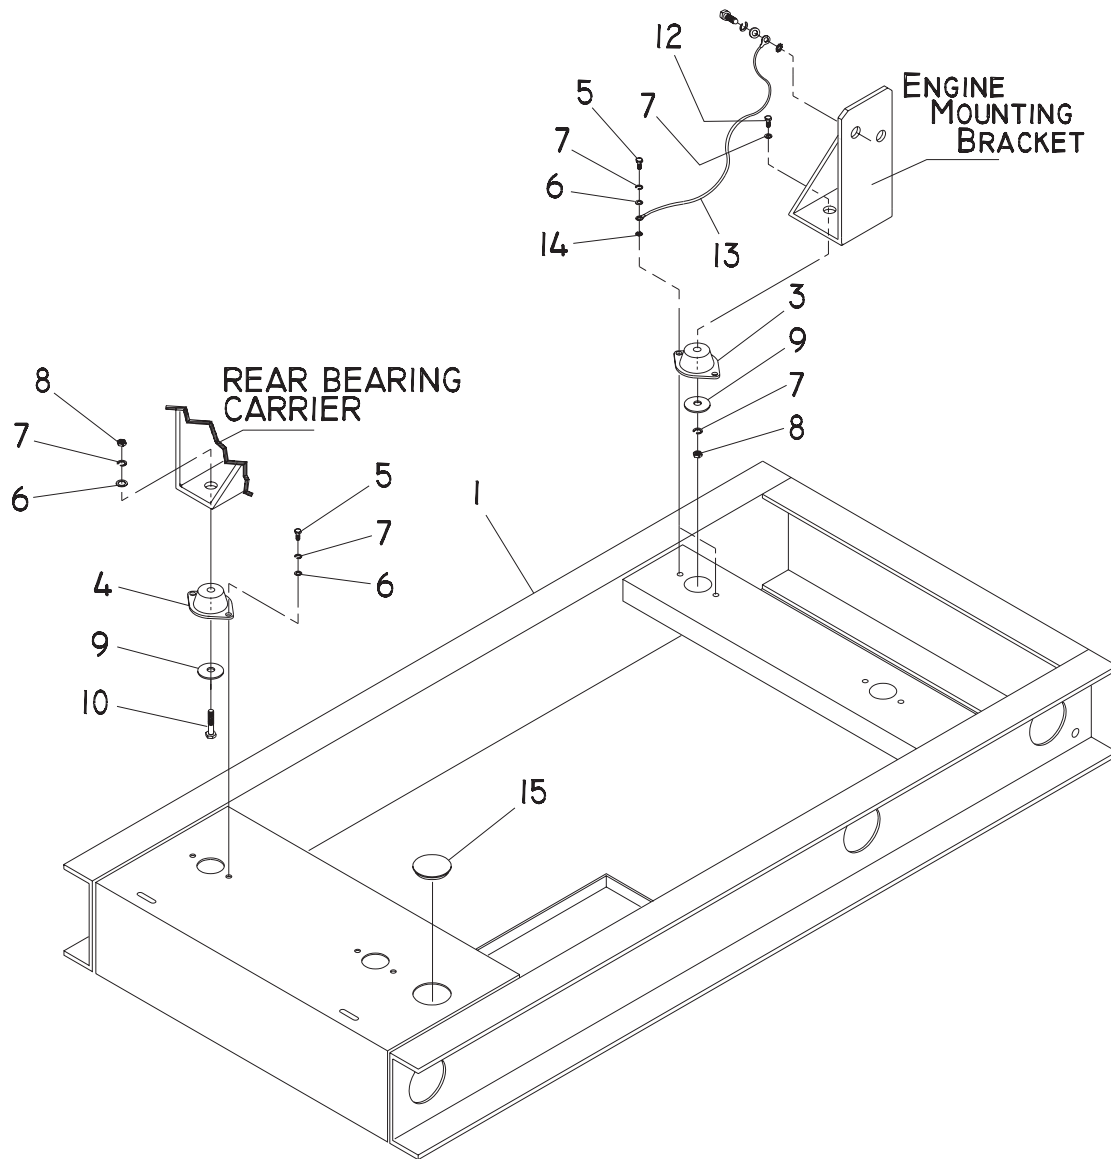


ITEM	PART NO.	QTY.	DESCRIPTION
1	C2632	1	BASE, MOUNTING
3	70936	2	ISOLATOR-VIBRATION
4	70936C	2	ISOLATOR, VIBRATION
5	39253	8	CAPSCREW, HEX HEAD-M8-1.25 x 20MM
6	22145	12	FLAT WASHER-M8
7	22129	12	LOCK WASHER-M8
8	45771	12	NUT, HEX-M8-1.25
9	71956	4	WASHER, VIBRATION ISOLATOR
10	51730	2	CAPSCREW, HEX HEAD-M8-1.25 x 60MM
12	57821	2	CAPSCREW, HEX HEAD-M8-1.25 x 40MM
13	21991	1	STRAP, GROUNDING
14	27482	1	WASHER-STAR 5/16"
15	A2308	1	PLUG-BUTTON



**Section 8 - Exploded Views and Parts**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Exploded View – Mounting Base (25 kW) – Drawing No. 0C1405-A**

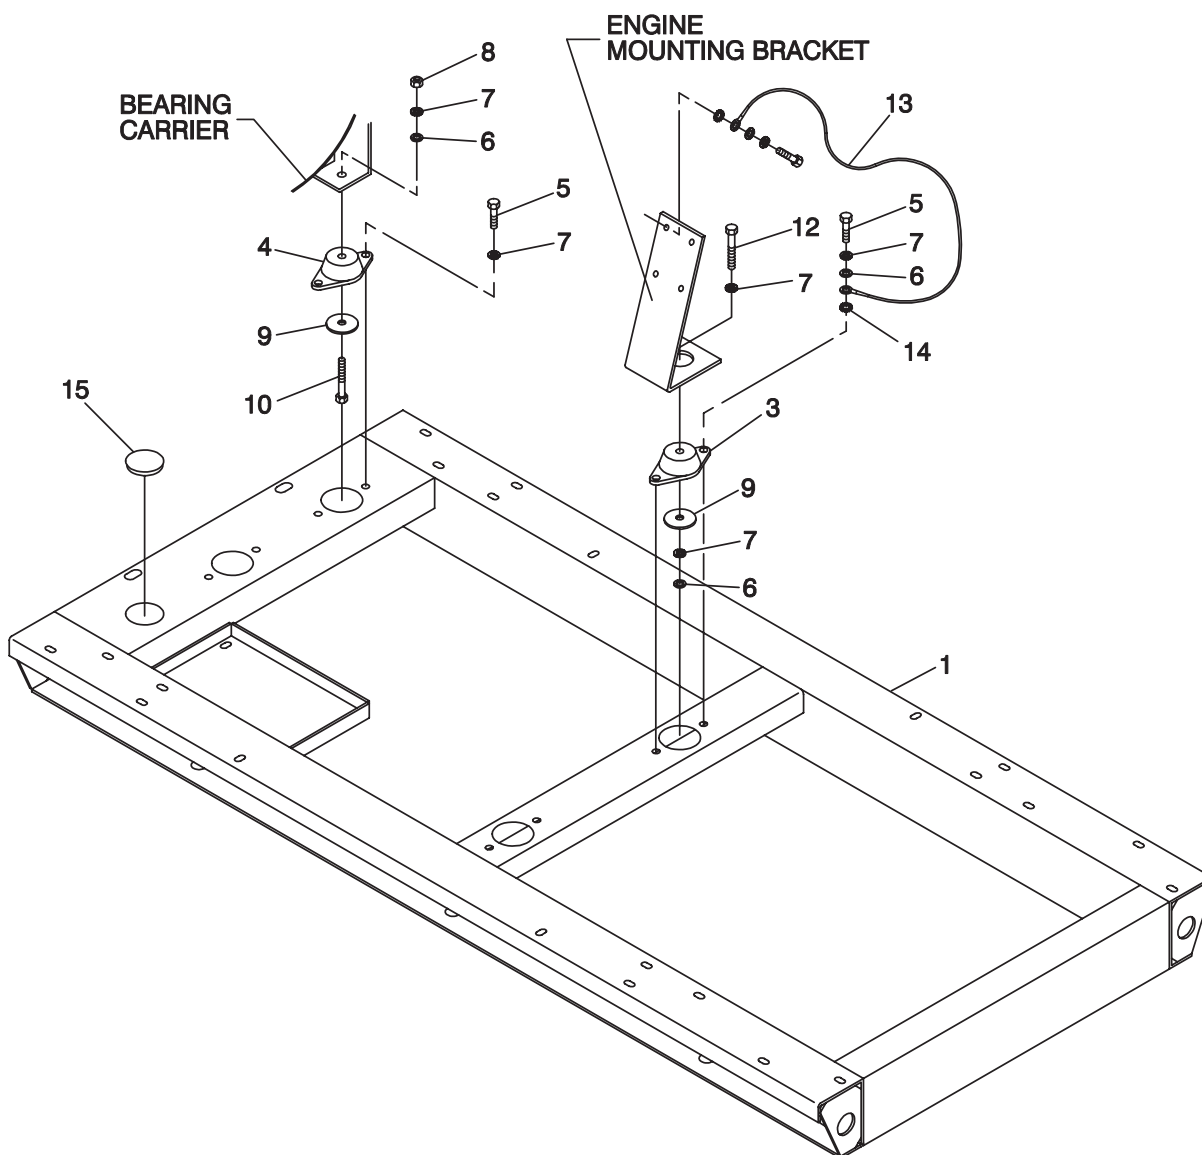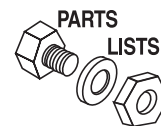


ITEM	PART NO.	QTY.	DESCRIPTION
1	0A9955	1	BASE MOUNTING
3	070936	2	DAMPENER VIBRATION
4	070936C	2	DAMPENER VIBRATION
5	039253	8	SCREW HHC M8-1.25 X 20 G8.8
6	022145	12	WASHER FLAT 5/16 ZINC
7	022129	12	WASHER LOCK M8-5/16
8	045771	12	NUT HEX M8-1.25 G8 YEL CHR
9	071956	4	WASHER FLAT M8
10	051730	2	SCREW HHC M8-1.25 X 60 G8.8
12	057821	2	SCREW HHC M8-1.25 X 40 G8.8
13	021991	1	EARTH STRAP
14	027482	2	WASHER SHAKEPROOF EXT 5/16 STL
15	0A2308	1	PLUG BUTTON 2" DIA

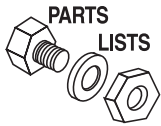



## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Muffler (15 & 20 kW) – Drawing No. 0A7618-B

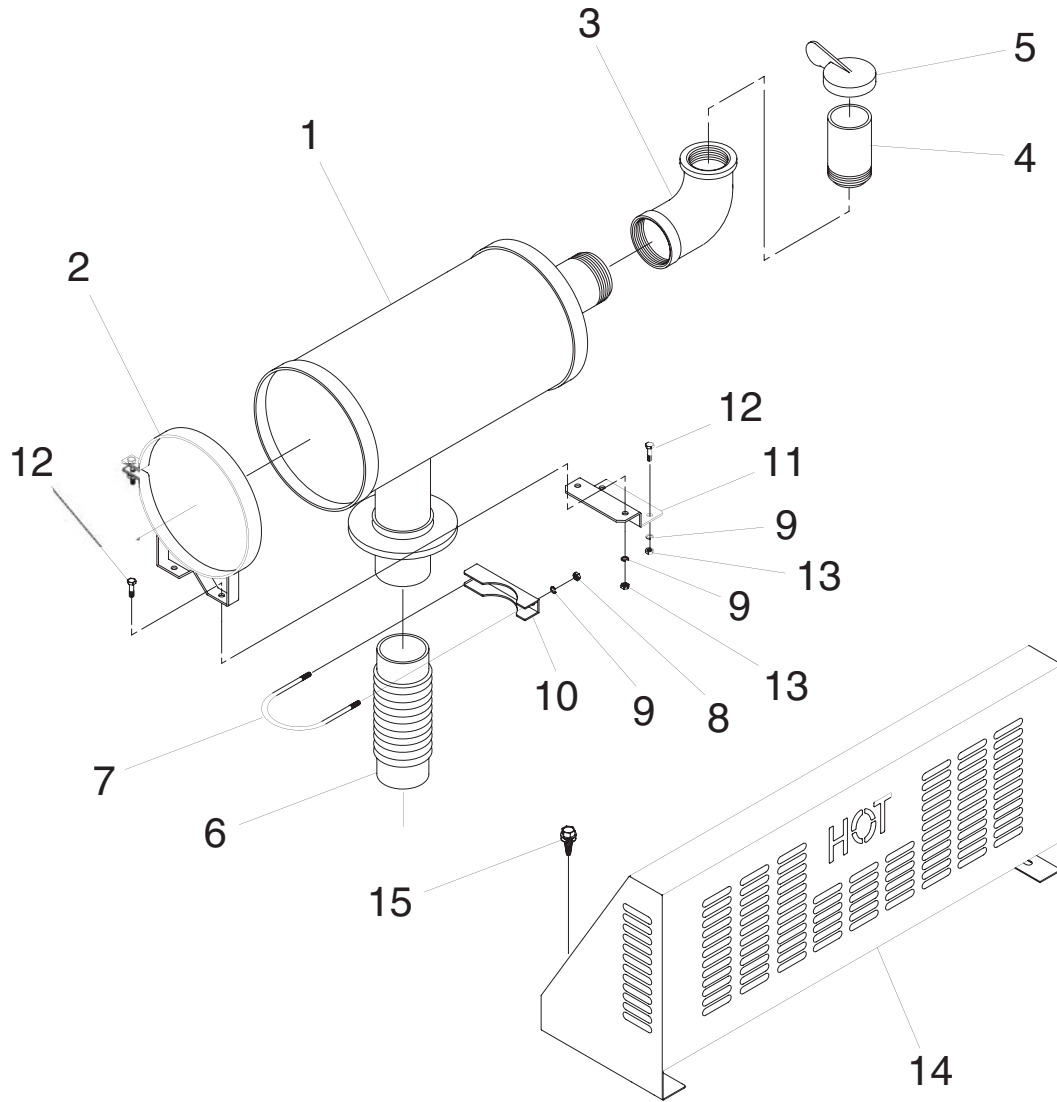


ITEM	PART NO.	QTY.	DESCRIPTION
1	020689	1	MUFFLER W/RAIN SHLD
2	060366	1	MUFFLR STRAP 6IN DIA
3	059933	1	ELBOW 90 DEG 2 NPT
4	080761	1	NIPPLE TOE 2 NPT X 4.5 BLK IRON
5	059939	1	RAIN CAP 2.37 I.D.
6	075546A	1	PIPE FLEX EXHAUST
7	036434	1	BOLT U 5/16-18 X 2.09
8	022259	2	NUT HEX 5/16-18 STEEL
9	022129	6	WASHER LOCK M8-5/16
10	036449	1	SADDLE 2 INCH
11	076032	1	CHANNEL MUFFLER SUPPORT
12	039253	4	SCREW HHC M8-1.25 X 20 G8.8
13	045771	4	NUT HEX M8-1.25 G8 YEL CHR
14	0C3683	1	GUARD MUFFLER (1.5L)
15	0A7215	4	SCREW SW 1/4-20 X 5/8 N WA JS500

**Section 8 - Exploded Views and Parts**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Exploded View – Muffler (25 kW) – Drawing No. 0C1408-B**

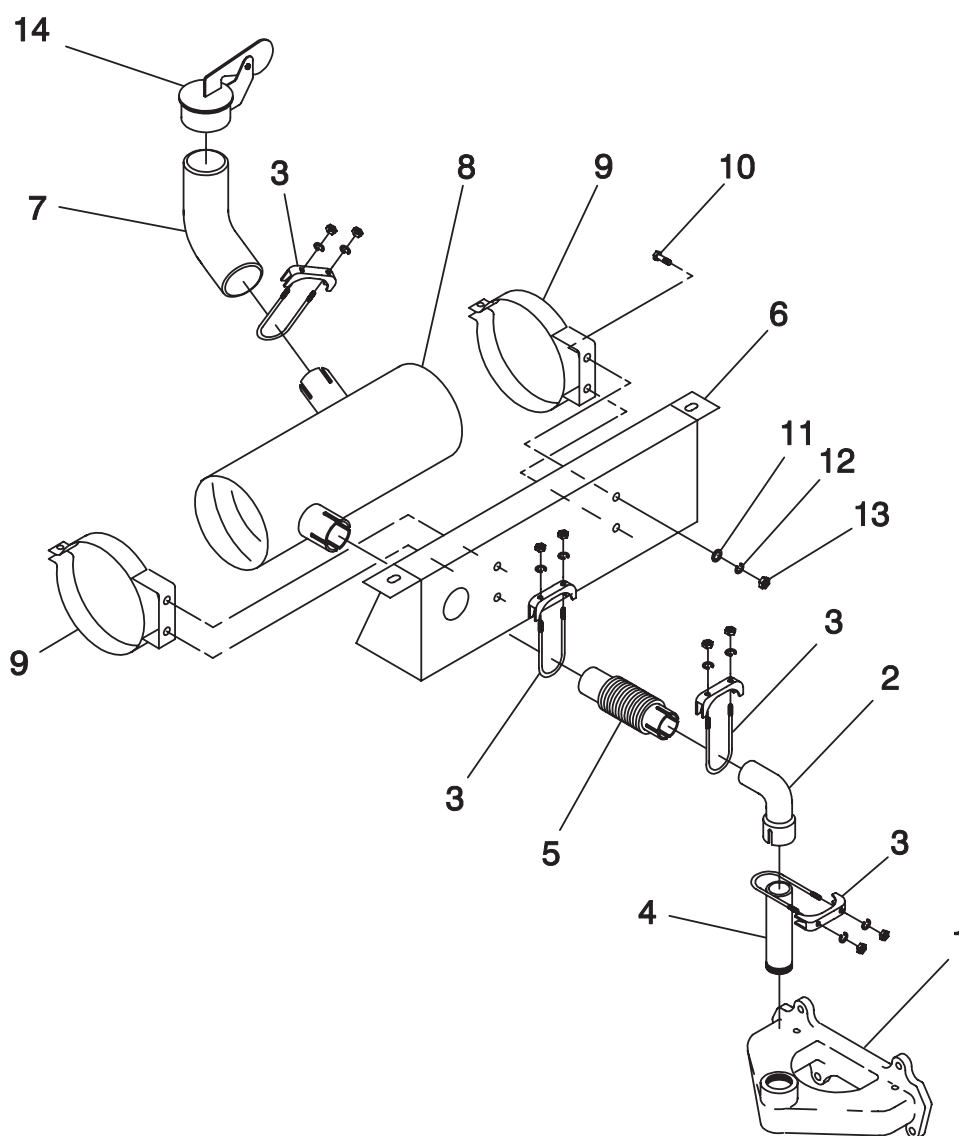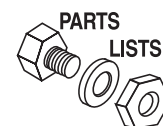


ITEM	PART NO.	QTY.	DESCRIPTION
1	0A4355	1	MANIFOLD EXHAUST 1.5L
2	0C1636	1	NIPPLE TOE 1.5 NPT X 6.5 BL IRON
3	036434	4	BOLT U 5/16-18 X 2.09
	036449	4	SADDLE 2 INCH
4	0C1330	1	PIPE EXHAUST
5	0C1318	1	FLEX PIPE EXHAUST
6	0C1068	1	SUPPORT MUFFLER 1.5L
7	0C1412	1	ELBOW EXHAUST 45 DEG
8	0A5728	1	MUFFLER 1.6/1.5L SAE
9	060366	2	STRAP MUFFLER 6" DIA
10	066889	4	SCREW HHC M8 X 1.25 X 20MM
11	022145	4	WASHER FLAT 5/16 ZINC
12	022129	4	WASHER LOCK M8-5/16
13	045771	4	NUT HEX M8-1.25 G8 YEL CHR
14	0A8974	1	CAP RAIN 2"

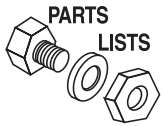

## Section 8 - Exploded Views and Parts



### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Exploded View – Circuit Breaker – Drawing No. 0D8294

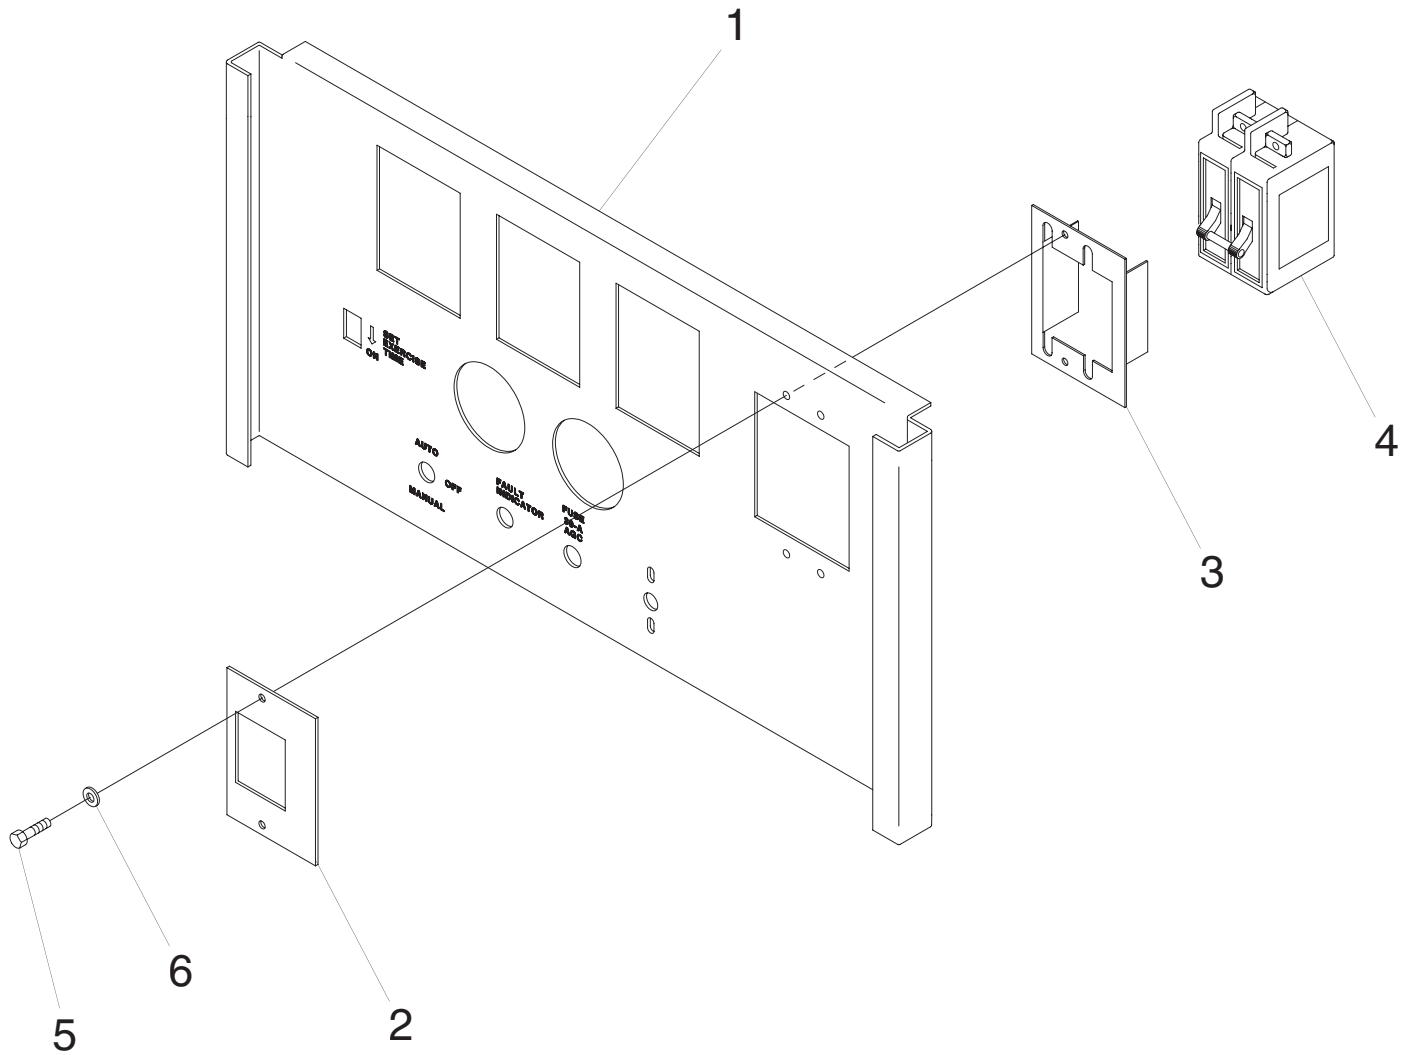

ITEM	PART NO.	QTY.	DESCRIPTION
1	0A2106	1	SILKSCREEN "P" PANEL
2	0A2952	1	COVER BQ CIRCUIT BREAKER
3	039782	1	BRACKET MOUNTING CIRCUIT BREAKER
4	048373	1	CIRCUIT BREAKER 70 X 2 240V 39782 BRKT
	039766	1	CIRCUIT BREAKER 90 X 2 240V 39782 BRKT
	0A2077	1	CIRCUIT BREAKER 125 X 2 120/240V 39783 BRKT
5	023965	2	SCREW RHM #8-32 X 3/8
6	022264	2	WASHER LOCK #8-M4

**Section 8 - Exploded Views and Parts**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Exploded View – CMA Assembly – Drawing No. 081086-D**

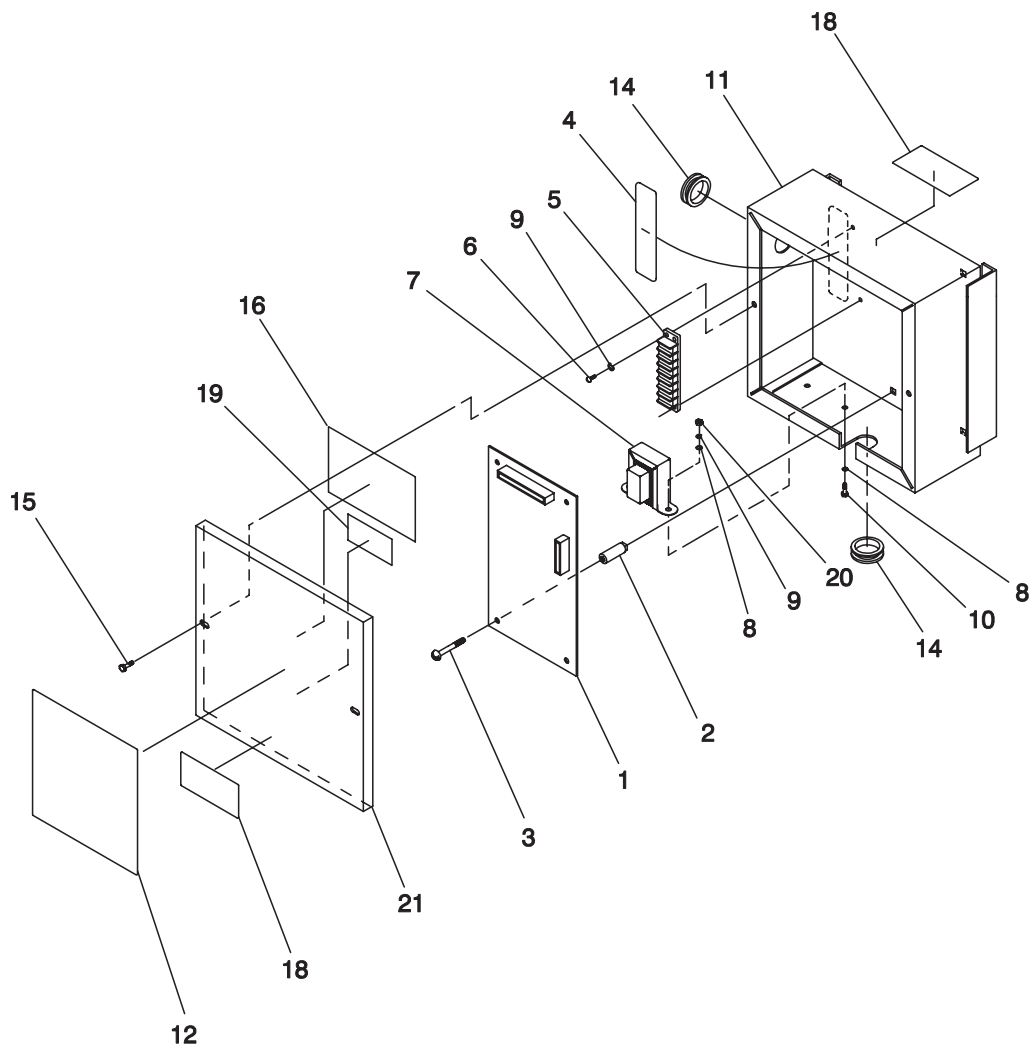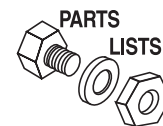


**ITEM PART NO. QTY. DESCRIPTION**

1	074100	1	ASSY HOME STDBY LOGIC (MODELS 921, 863, 865)
	076009A	1	PP LOGIC ASM 50/60HZ (MODEL 9428)
2	072566	4	NUT SPACER .250 PCB
3	080882	4	SCREW PPH TAPPING #6X5/8 SS
4	074978	1	DECAL TERMINAL STRIP
5	047822	1	BLOCK TERM 20A 7 X 6 X 1100V
6	075476	2	SCREW PPHM M4-0.7 X 16
7	083264	1	TRANSFORMER ASM CMA 240/12V
8	022985	4	WASHER FLAT #6 ZINC
9	022264	4	WASHER LOCK M4
10	051787	2	SCREW HHC M4-0.7 X 16 G8.8
11	079847	1	BOX CMA

**ITEM PART NO. QTY. DESCRIPTION**

12	0A8504	1	DECAL, CMA LABEL
	0A8504A	1	DECAL, CMA LABEL
13*	022661V	.083'	TUBING SHRINK 19"ID RED
14	038057	2	GROMMET 7/8 X 1/16 X 3/4
15	058443	2	SCREW CRIMPTITE 1/4-20 X 5/8
16	081224	1	DECAL MFG NAMEPLATE
17*	079682	1	HARNESS CMA WIRE
18	086093	2	DECAL CMA WARNING
19	083736	1	DECAL CSA GTS
20	051715	2	NUT HEX M4-0.7 G8 YEL CHR
21	077401	1	COVER SILKSCREEN CMA


\* NOT SHOWN

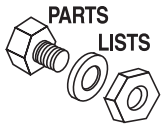

## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators



#### Exploded View – Battery – Drawing No. 098922-E

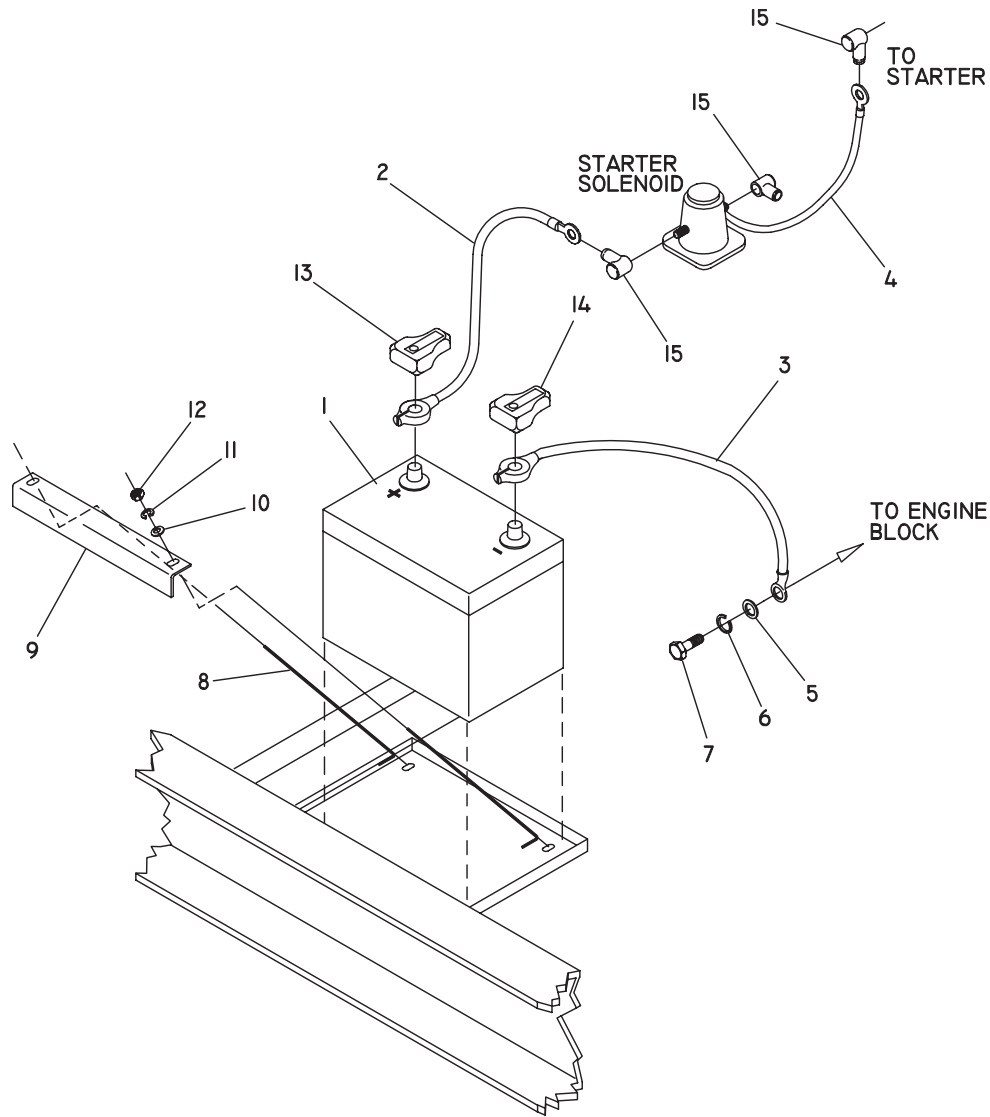


ITEM	PART NO.	QTY.	DESCRIPTION
1	077483	1	BATT 12VDC 75-AH 26/26R
2	038804D	1	CABLE BATT RED #4 X 20.00
3	038805B	1	CABLE BATT BLK #4 X 23.00
4	0742600131	1	ASSY,WIRE#16 RED 1.6
5	022131	1	WASHER FLAT 3/8 ZINC
6	046526	1	WASHER LOCK M10
7	052213	1	SCREW HHC M10-1.25 X 20 G8.8
8	059567	2	BOLT BATTERY HOLD DOWN
9	078121	1	BAR BATTERY HOLDDOWN
10	022145	2	WASHER FLAT M8-5/16 ZINC
11	022129	2	WASHER LOCK 5/16
12	022259	2	NUT HEX 5/16-18 STEEL
13	050331A	1	BATTERY POST COVER (RED+)
14	050331	1	BATTERY POSTCOVER (BLACK-)
15	075763	3	BOOT, BATTERY CABLE



**Section 8 - Exploded Views and Parts**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Exploded View – Governor Assembly – Drawing No. 0A7216-B**

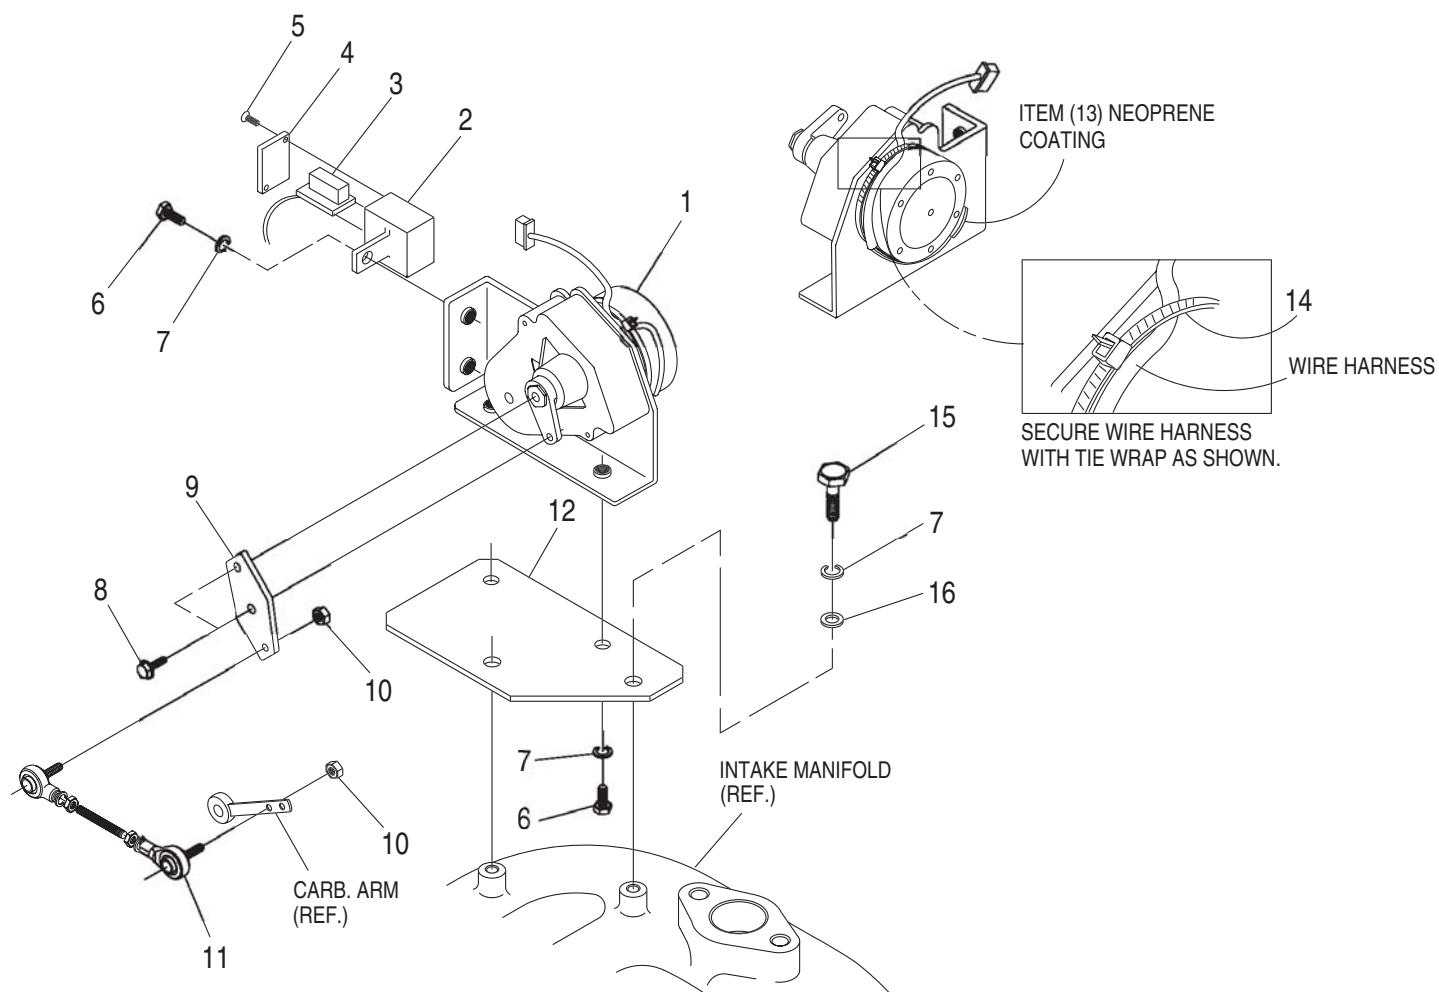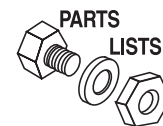


ITEM	PART NO.	QTY.	DESCRIPTION
1	098290	1	ASM MOTOR STEPPER
2	098941A	1	HOUSING GOVERNOR CONNECTOR
3	098958A	1	CONNECTOR INTERFACE ASSEMBLY
4	098942A	1	COVER CONNECTOR HOUSING
5	098225	2	SCREW FHM #2 X 5/8 SELF TAP
6	043146	3	SCREW HHC M6-1.0 X 10 G8.8
7	022097	5	WASHER LOCK M6-1/4
8	064526	2	SCREW TAP HWH #6-25 X 3/8 ZINC
9	098783	1	LEVER STEPPER MOTOR
10	037398	2	NUT LOCK HEX #10-32 NYL INS
11	0A7041	1	ASSEMBLY CARBURATOR LINKAGE
12	0A7106	1	BRACKET STEPPER MOTOR
13	074031	-	LIQUID NEOPRENE
14	029333A	1	TIE WRAP 7.4\"X.19\" BLK UL
15	022507	2	SCREW HHC 1/4-20 X 1/2 G5
16	022473	2	WASHER FLAT 1/4 ZINC

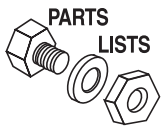

## Section 8 - Exploded Views and Parts


### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Exploded View - Generator - Drawing No. 0A9348-F

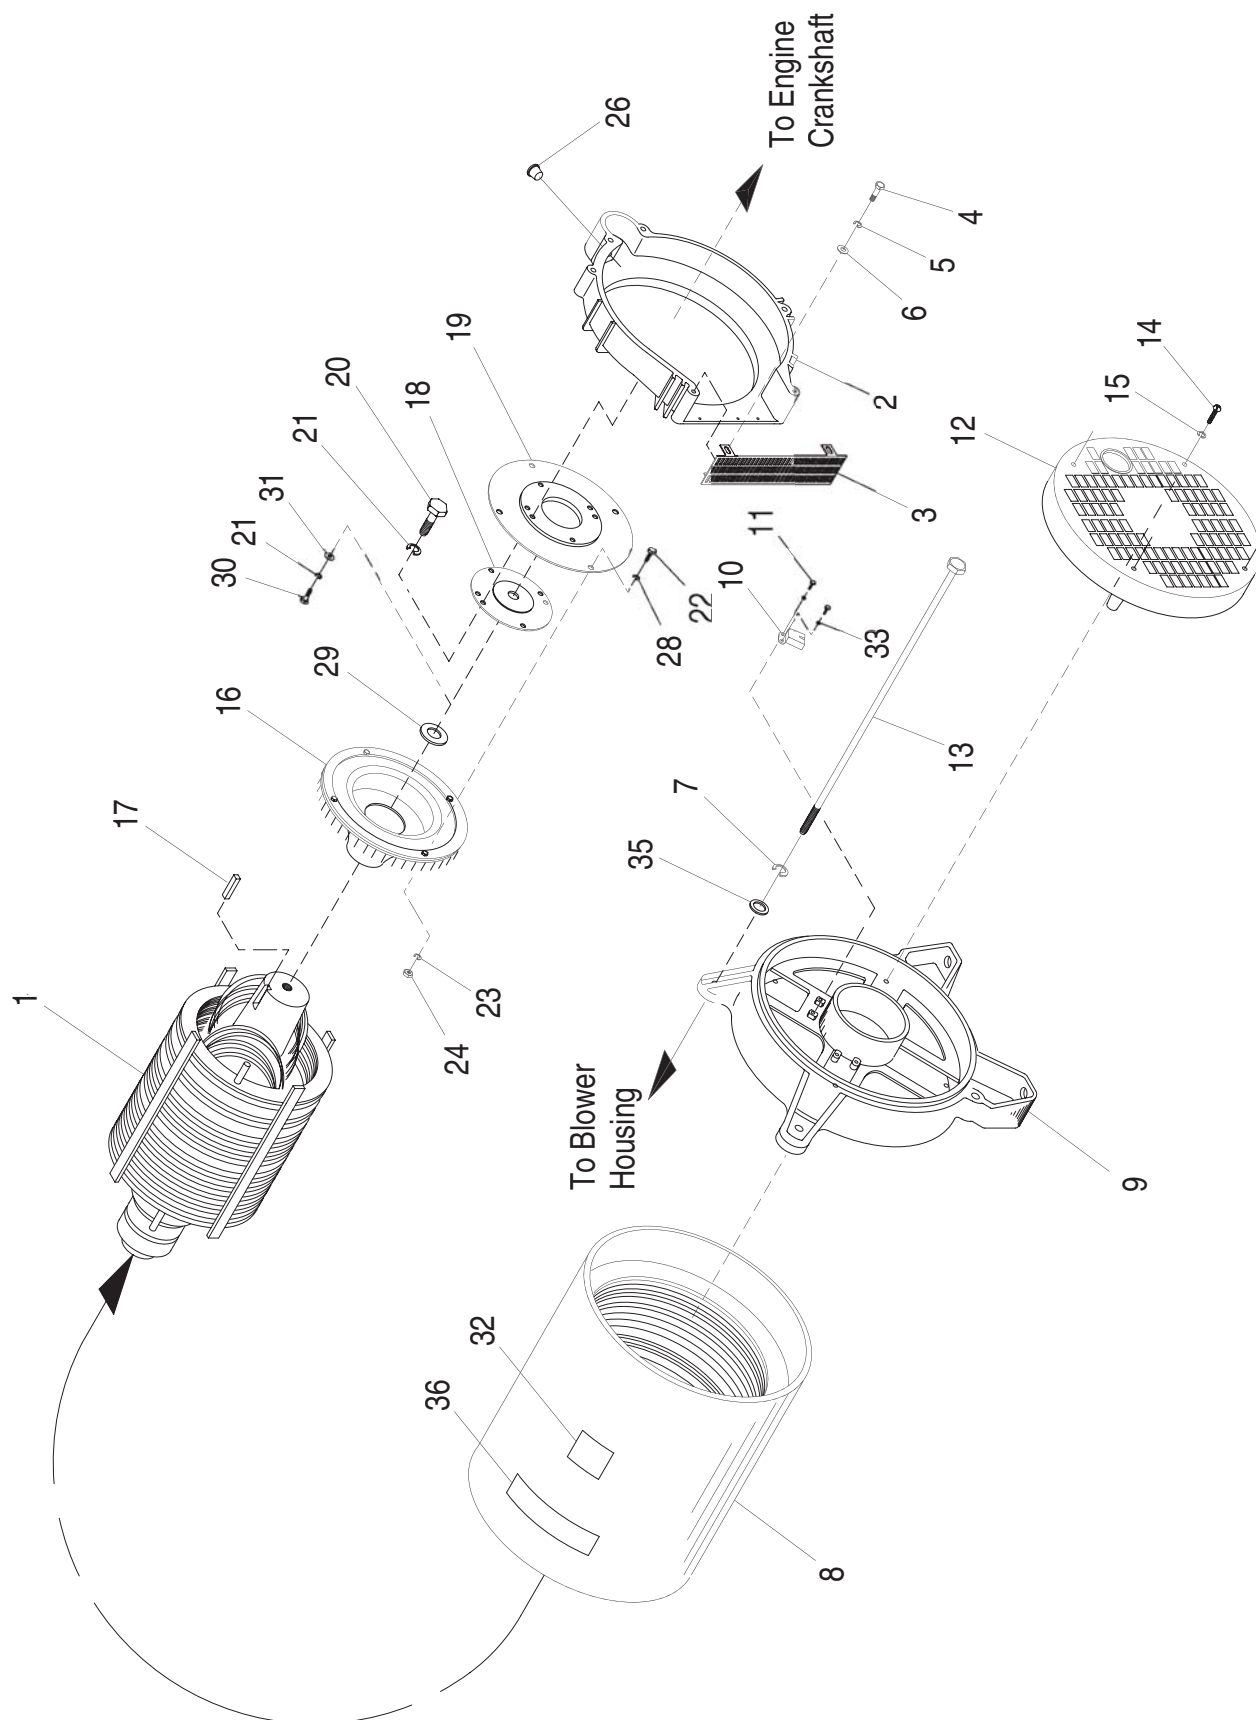


## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Generator – Drawing No. 0A9348-F

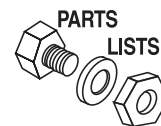

ITEM	PART NO.	QTY.	DESCRIPTION
1	098671	1	ASSY ROTOR 10KW
	098681	1	ASSY ROTOR 15KW
	098675	1	ASSY ROTOR 20KW
	098936	1	ASSY ROTOR 25KW
2	0A5336A	1	HOUSING BLOWER
3	0A1659	1	SCREEN AIR OUTLET
4	071912	4	SCREW PPHM M5-0.8 X 8 SS
5	049226	4	WASHER LOCK M5
6	051713	4	WASHER FLAT M5
7	022129	4	WASHER LOCK M8-5/16
8	098672	1	ASSY STATOR 10KW A
	098673	1	ASSY STATOR 10KW D
	098674	1	ASSY STATOR 10KW GJK
	098682	1	ASSY STATOR 15KW 1PH A
	098683	1	ASSY STATOR 15KW 3PH D
	098684	1	ASSY STATOR 15KW 1PH GJK
	098676	1	ASSY STATOR 20KW 1PH A
	098677	1	ASSY STATOR 20KW 1PH D
	098678	1	ASSY STATOR 20KW 1PH GJK
	097620	1	ASSY STATOR 25KW 1PH A
	098937	1	ASSY STATOR 25KW 1PH D
	097621	1	ASSY STATOR 25KW 3PH D
9	0A5382	1	BEARING CARRIER REAR
10	075591	1	ASSY HOLDER BRUSH
11	075476	4	SCREW PPHM M4-0.7 X 16
12	0A5601	1	COVER REAR BEARING CARRIER
13	075554B	4	BOLT STATOR X 16" LG
14	0A9375	4	SCREW RHM #10-24 X 2
15	022152	4	WASHER LOCK #10
16	097146	1	FAN & RING GEAR ASSEM.
17	042558	1	KEY SQ 3/8 X 1 STEEL
18	0A5061	1	SPACER-FLEX PLATE
19	0A4989	1	PLATE, FLEX
20	053557	1	SCREW HHC M12-1.75 X 40 G8.8
21	051769	6	WASHER LOCK M12
22	049541	4	SCREW HHC M10-1.5 X 35 G8.8
23	046526	4	WASHER LOCK M10
24	045772	4	NUT HEX M10-1.5 G8 YEL CHR
26 *	087599	1	PLUG PLASTIC 3/8 NPT
27	077043E	1	FLEX CONDUIT 1" BLACK (NOT SHOWN)
28	022131	4	WASHER FLAT 3/8-M10 ZINC
29	072578	1	SPACER ROTOR SHAFT
30	0A7043	5	SCREW HHC M12-1.25 X 25 G8.8
31	049808	5	WASHER FLAT M12
32	058589	1	DECAL WARN ENG START
33	023365	4	WASHER SHAKEPROOF INT #8
35	0A8830	4	WASHER FLAT .34 ID X .75 OD
36	072080	1	DECAL, DANGER STANBY UNITS


\* USED ON PRE-PACKAGED UNITS ONLY

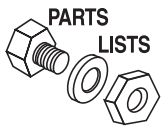

## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Exploded View – Gaseous Fuel System – Drawing No. 0C1667-F

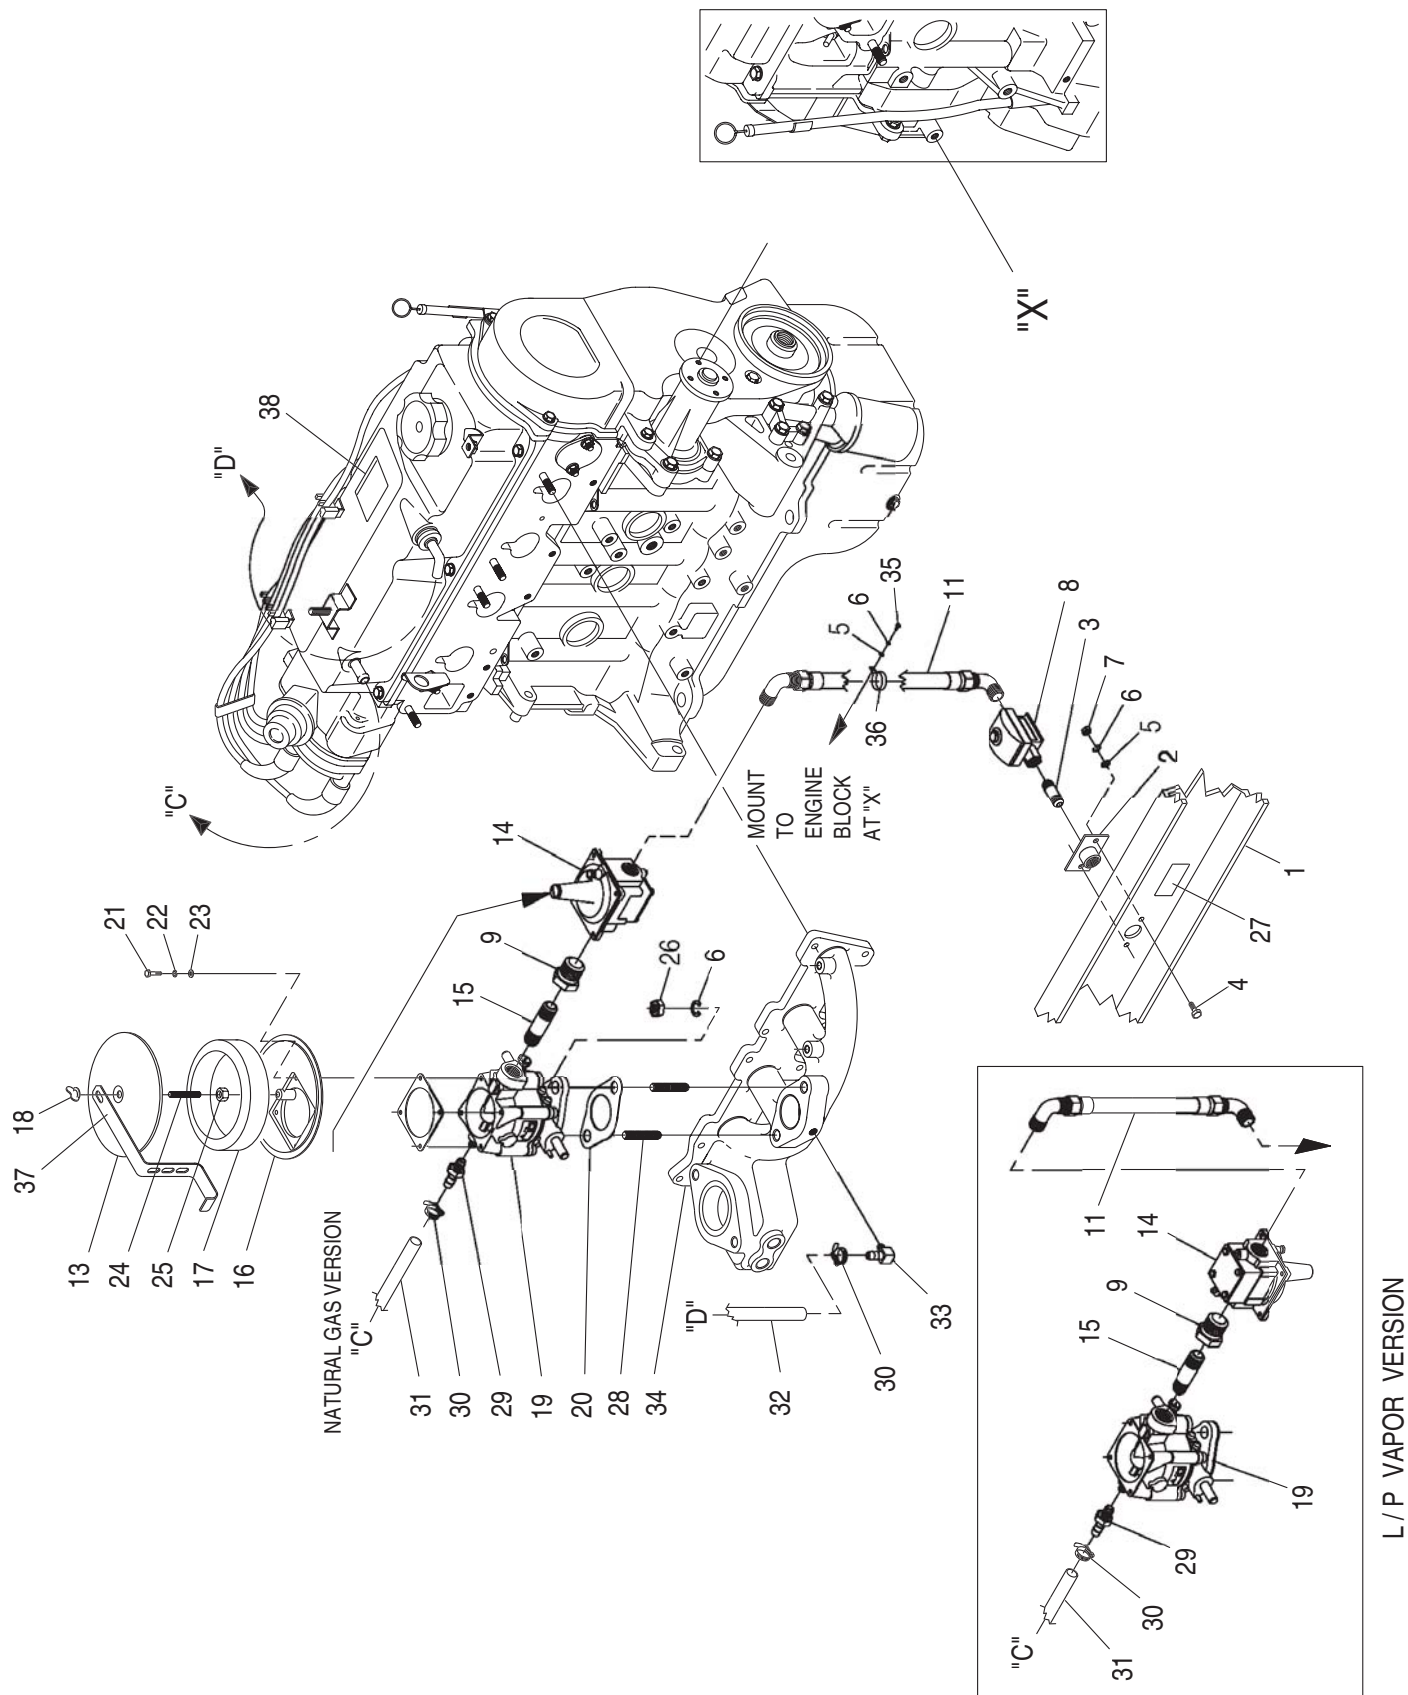


**Section 8 - Exploded Views and Parts**  
**Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Exploded View – Gaseous Fuel System – Drawing No. 0C1667-F**



ITEM	PART NO.	QTY.	DESCRIPTION
1 *	-----	1	WELDMENT MOUNTING BASE
2	075580	1	FLANGE FUEL INLET
3	026915	1	NIPPLE CLOSE 3/4 X 1.375
4	039253	2	SCREW HHC M8-1.25 X 20 G8.8
5	022145	5	WASHER FLAT 5/16 ZINC
6	022129	5	WASHER LOCK M8-5/16
7	045771	2	NUT HEX M8-1.25 G8 YEL CHR
8	0A2666	1	SOLENOID GAS FUEL
9	046747	1	BUSHING REDUCER 3/4 TO 3/8
11	0C3714	1	ASSY HOSE NG/LPV. 31"
13	0A5547	1	COVER AIR CLEANER
14	0C1475	1	REGULATOR NATURAL GAS EM
	0A9911	1	REGULATOR L.P. GAS EM
15	0A7989	1	NIPPLE PIPE 3/8 NPT X 4 BL IRON
16	0A6593	1	ADAPTOR - CARBURETOR
17	059402	1	FILTER ELEMENT
18	037561	1	NUT WING 1/4-20 NYLK
19	059403	1	CARBURETOR CA55 EM
20	059401	1	CARBURETOR GASKET
21	076011	4	SCREW PRHM #10-24 X 1/2
22	022152	4	WASHER LOCK #10
23	023897	4	WASHER FLAT #10 ZINC
24	062522	1	STUD TH 1/4-20 X 3 G2 ZNC FULL
25	022127	1	NUT HEX 1/4-20 STEEL
26	022259	2	NUT HEX 5/16-18 STEEL
27	050279	1	DECAL FUEL INLET NG
28	028717	2	STUD 5/16-18 X 1.5 F THR
29	052219	1	BARBED STR 1/8 NPT X 5/16
30	048031C	4	CLAMP HOSE BAND 1/4
31	029032	1	HOSE 9/32 ID 6.5"
32	029032	1	HOSE 9/32 ID 11"
33	032552	1	BARBED EL 90 5/16 X 1/8 NPT
34	0A4682	1	MANIFOLD INTAKE 1.5 MACH. PART
35	042907	1	SCREW HHC M8-1.25 X 16 G8.8
36	055934D	1	CLAMP VINYL 1.06 X .406 Z
37	0A7040	1	BRACKET-RAD HOSE
38	0D8492J	1	DECAL EMISSION (10-15KW NATURAL GAS UNITS)
	0D8492K	1	DECAL EMISSION (10-15KW LP VAPOR UNITS)


\* SHOWN IN OTHER VIEW

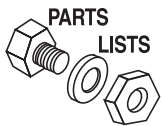

## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators


#### Exploded View – Engine Compartment – Drawing No. 0A7642-J

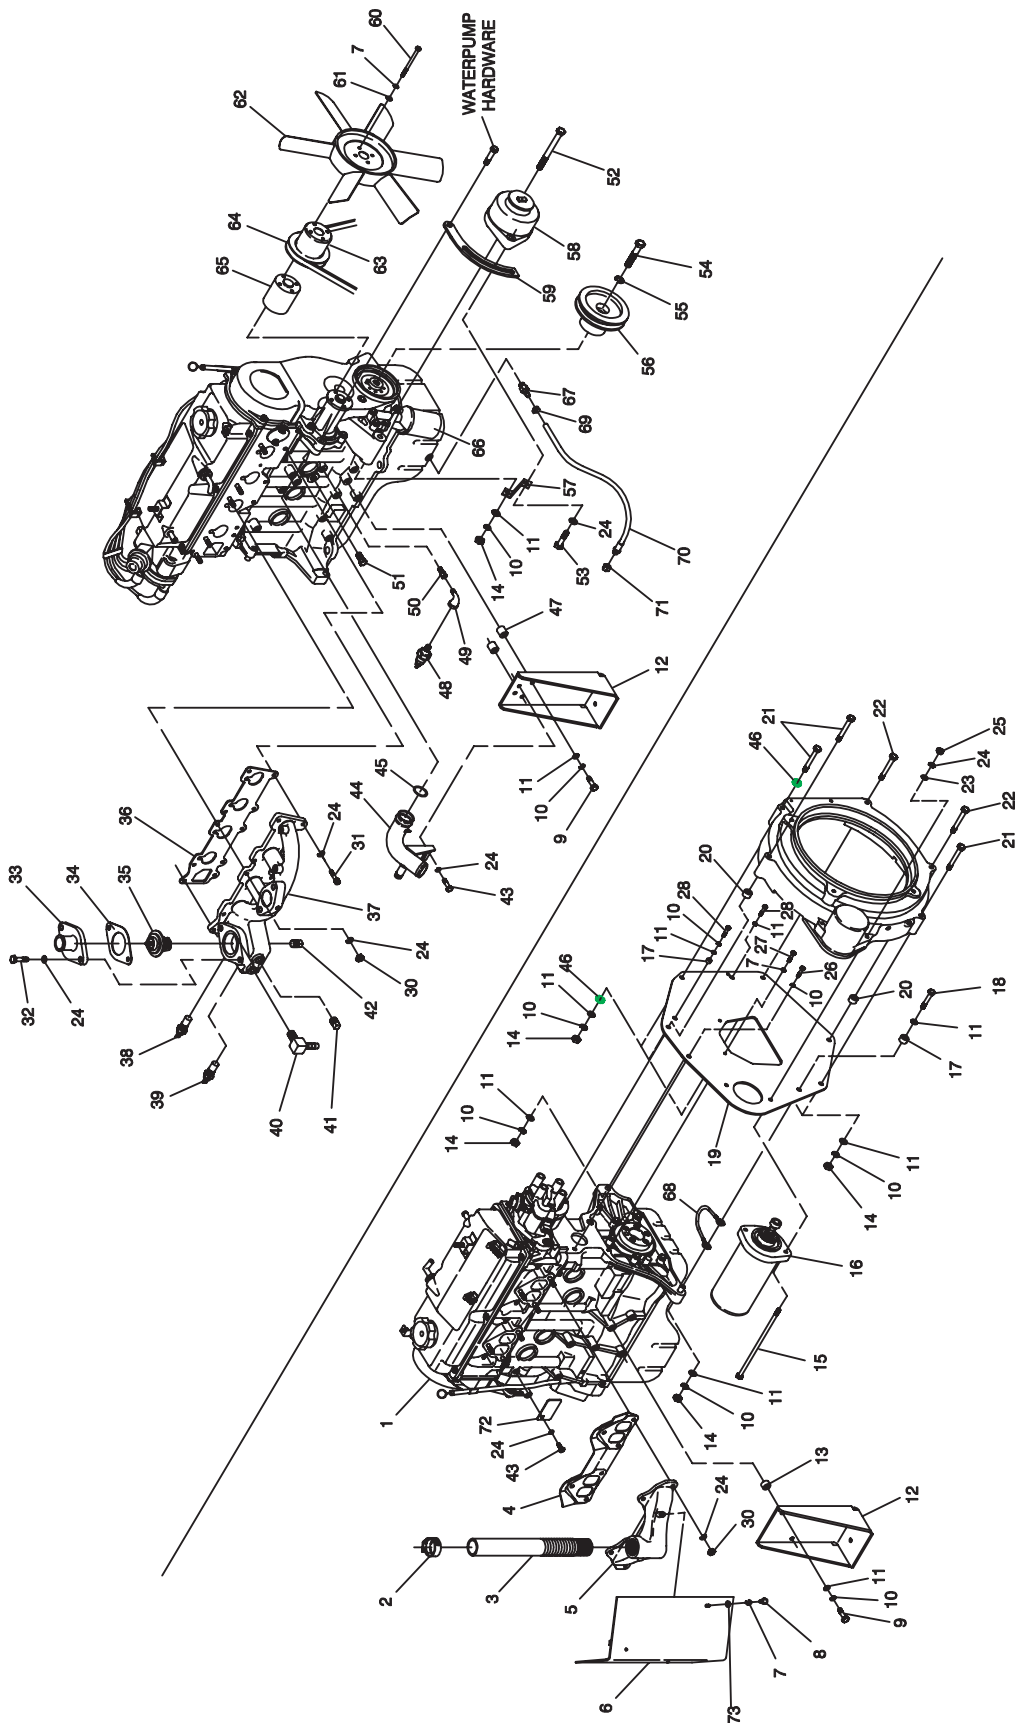




## Section 8 - Exploded Views and Parts

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Exploded View – Engine Compartment – Drawing No. 0A7642-J

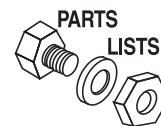


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0A4531	1	ENGINE-1.5L	39	0A6751	1	SW-TMP 245DEG 3/8NPT
2	035685	1	CLAMP HOSE #28 1.32 - 2.25	40	034339	1	BARBED EL 90 3/8NPT X 5/8
3	075546A	1	PIPE-FLEX EXHAUST	41	0D4788	1	PLUG STD PIPE 3/8 STEEL SQ HD
4	0A45310258	1	GASKET-EXHAUST MANIFOLD	42	061012	1	PLUG STD PIPE 1/8 SCKT HD
5	0A4355	1	MANIFOLD-EXHAUST	43	039253	6	SCREW HHC M8-1.25 X 20 G8.8
6	0A6699	1	SHIELD HEAT EXHAUST	44	0A5110	1	PIPE WATER-INLET
7	022097	8	WASHER LOCK M6-1/4	45	0A7006	1	O-RING 1-1/16X1-5/16X1/8
8	022507	2	SCREW HHC 1/4-20 X 1/2 G5	46	025507	2	WASHER SHAKEPROOF EXT 7/16 STL
9	052212	4	SCREW HHC M10-1.25 X 25 G8.8	47	022500B	2	SPACER .41X.75X.25 ST/ZNC
10	046526	14	WASHER-LOCK-M10	48	0A8584	1	SWITCH OIL PRESSURE
11	022131	16	WASHER FLAT 3/8 ZINC	49	036277	1	ELBOW 90D STREET 1/8
12	0C2499	2	STAMPING ENG FOOT	50	042574	1	ADAPTOR 1/8NPTF TO 1/8-28
13	055993	1	SPACER .41 X .75 X .12 STL/ZNC	51	026073A	1	PLUG STD PIPE 1/4 STEEL SQ HD
14	045772	4	NUT HEX M10-1.5 G8 YEL CHR	52	0A6701	1	SCREW HHC M10-1.5 X 110 G8.8
15	023586	2	SCREW SHC 5/16-18 X 2 G8.8 NZ	53	039414	1	SCREW HHC M8-1.25 X 35 G8.8
16	020692	1	STARTER-12V	54	0A5568	1	SCREW HHC M12-1.25 X 55 G8.8
17	0A7005	2	SPACER .56 X 1 X .37 ST/ZNC	55	051769	1	WASHER LOCK M12
18	052243	1	SCREW HHC M10-1.5 X 60 G8.8	56	0A4804	1	PULLEY-CRANKSHAFT (1800 RPM)
19	0A4772	1	ENGINE PLATE		0A4800	1	PULLEY-CRANKSHAFT (3600 RPM)
20	070901	2	SLEEVE DOWEL BLHSG	57	0A5839	1	BRACKET - ALT SUPPRT
21	051735	3	SCREW HHC M10-1.5 X 70 G8.8	58	0A1354B	1	DC ALTERNATOR-12V
22	056768	2	SCREW HHC M10-1.5 X 90 G8.8	59	0A4839	1	ARM ADJUST ALTERNATOR
23	022145	2	WASHER FLAT 5/16 ZINC	60	055816	4	SCREW HHC M6-1.0 X 70 G8.8
24	022129	23	WASHER LOCK M8-5/16	61	049811	4	WASHER FLAT M6
25	022259	2	NUT HEX 5/16-18 STEEL	62	075614	1	FAN ENG PUSHER 6/380
26	052213	1	SCREW HHC M10-1.25 X 20 G8.8	63	0A2628	1	PULLEY - FAN 95 DIA
27	047411	2	SCREW HHC M6-1.0 X 16 G8.8	64	0A5275	1	V-BELT 3/8 X 32-1/8 1.5L
28	052830	2	SCREW HHC M10-1.25 X 45 G8.8		0A5586	1	V-BELT 3/8 X 28.9 1.5L
30	045771	10	NUT HEX M8-1.25 G8 YEL CHR	65	0A4814	1	SPACER PULLEY
31	058306	5	SCREW SHC M8-1.25 X 25 G12.9	66	0A45310244	1	FILTER OIL
32	030795	2	SCREW HHC 5/16-18 X 1 G5	67	0C1852	1	ADAPTER DRAIN OIL
33	0A2711A	1	ADAPTER-THERMOSTAT	68	0912970066	1	GROUND WIRE (STARTER)
34	048665	1	GASKET THERMOSTAT	69	070928	1	CLAMP HOSE - OIL DRAIN
35	075885	1	THERMOSTAT 195 DEG	70	069860C	1	HOSE ASM.-OIL DRAIN
36	0A45310257	1	GASKET INLET MANIFOLD	71	069811	1	CAP HEX 1/4NPT BRASS
37	0A4682	1	MANIFOLD-INTAKE	72	0A5317	1	NAMEPLATE ENGINE
38	057522	1	SENSOR COOLANT LEVEL	73	022473	2	WASHER FLAT 1/4 ZINC



## Section 9 – Installation



### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Installation Drawing 15 & 20 kW – Drawing No. 0A7214-C

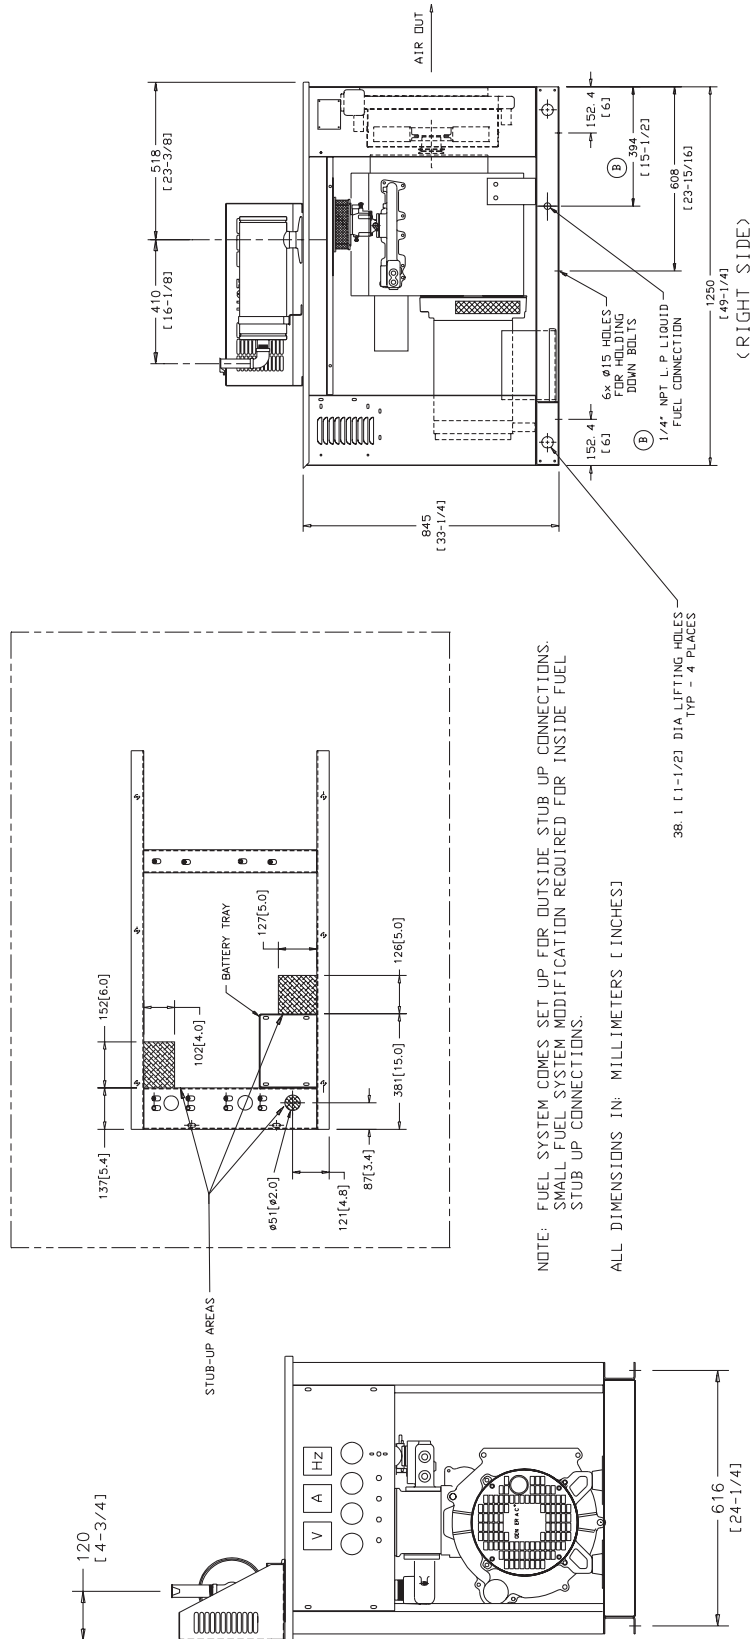

## Section 9 – Installation

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators Installation Drawing 15 & 20 kW – Drawing No. 0A7214-C

## INSTALLATION

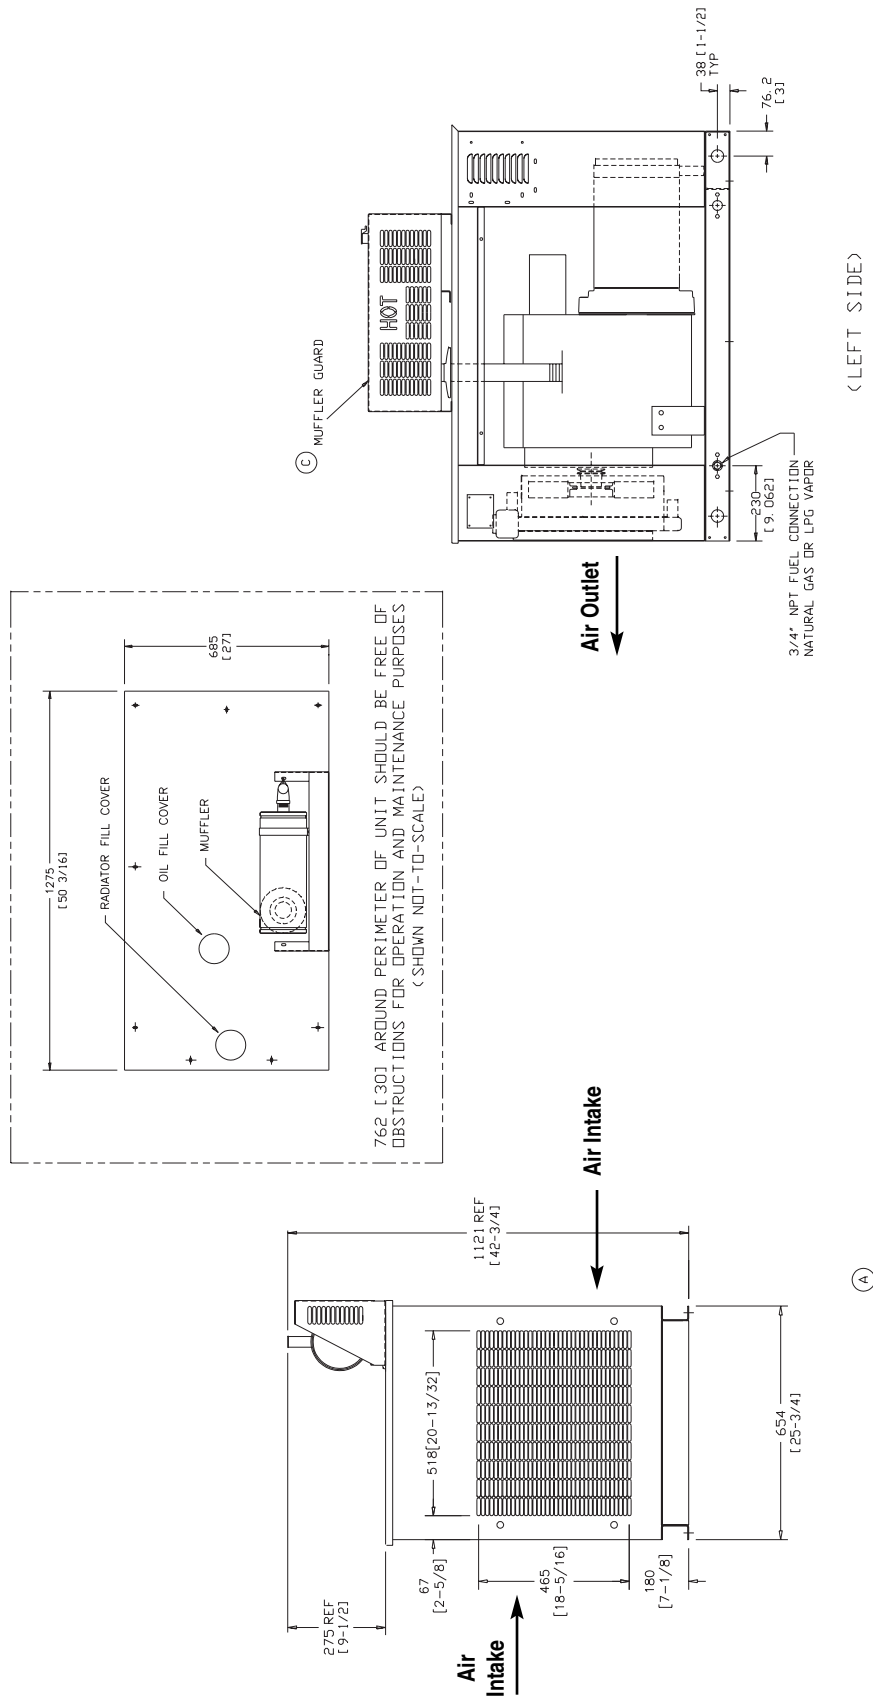








## Section 9 — Installation

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Installation Drawing 25 kW – Drawing No. 0C1450

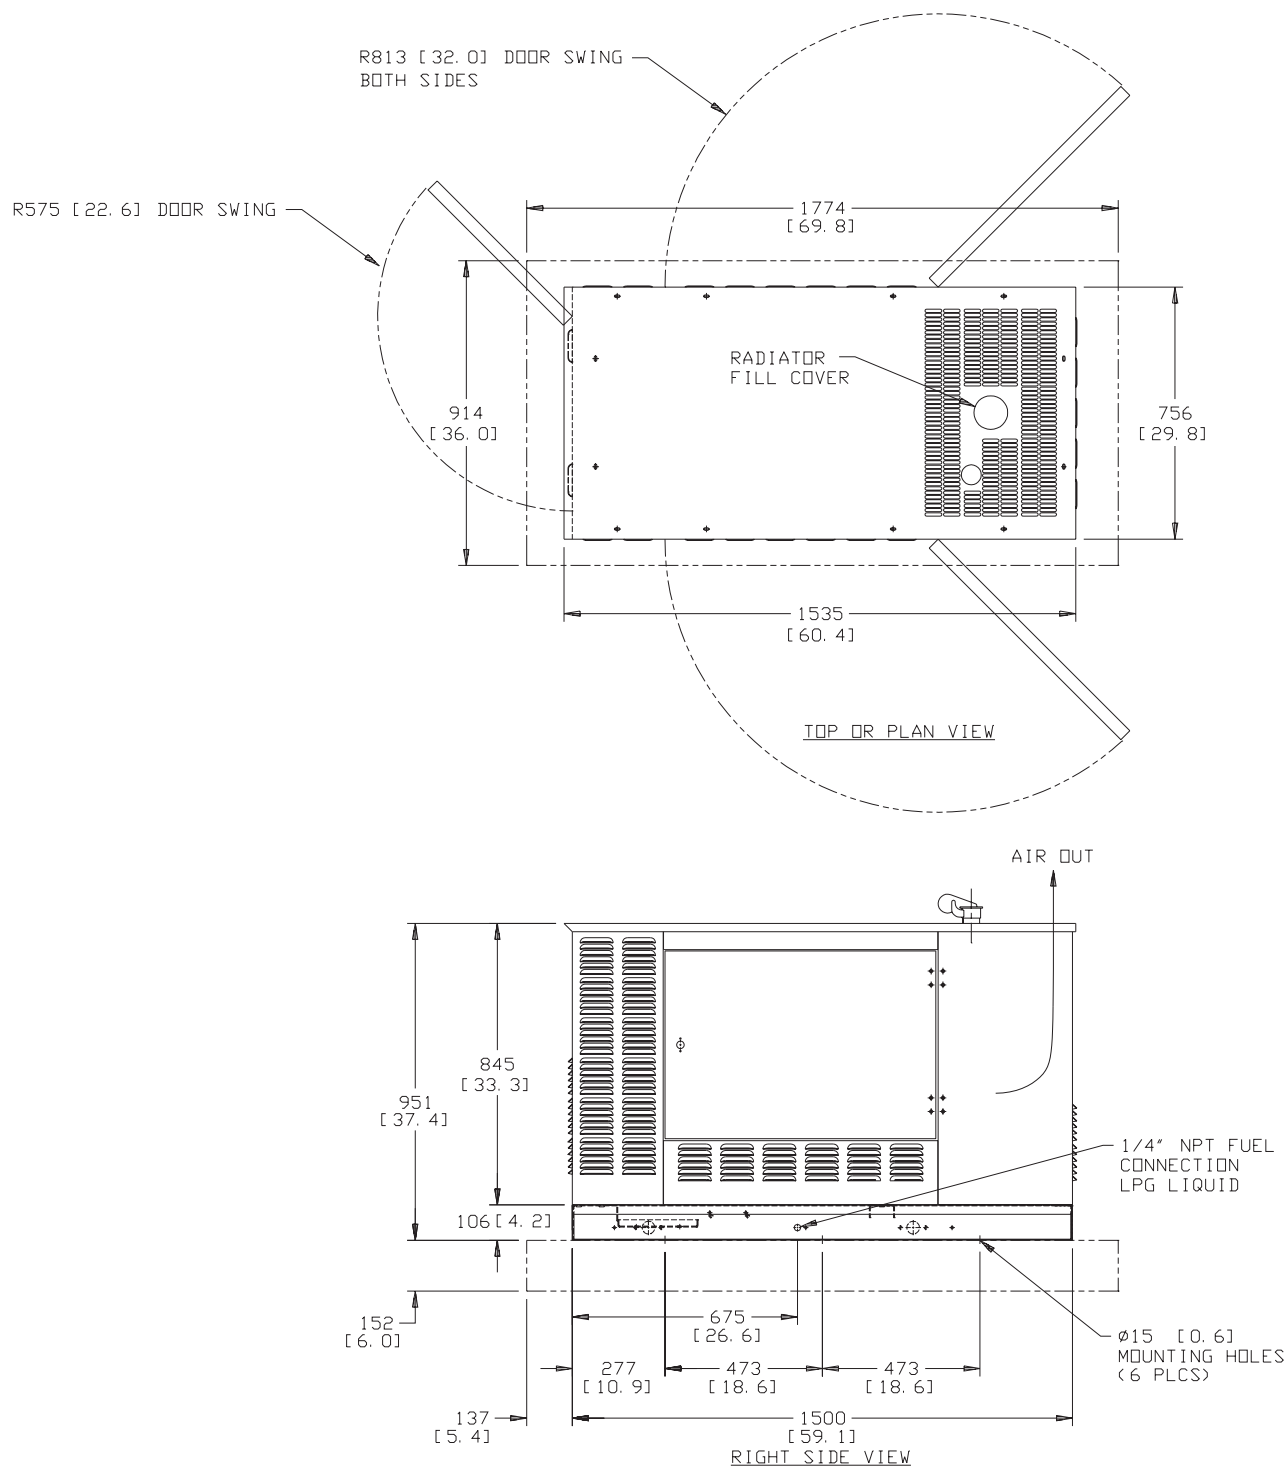

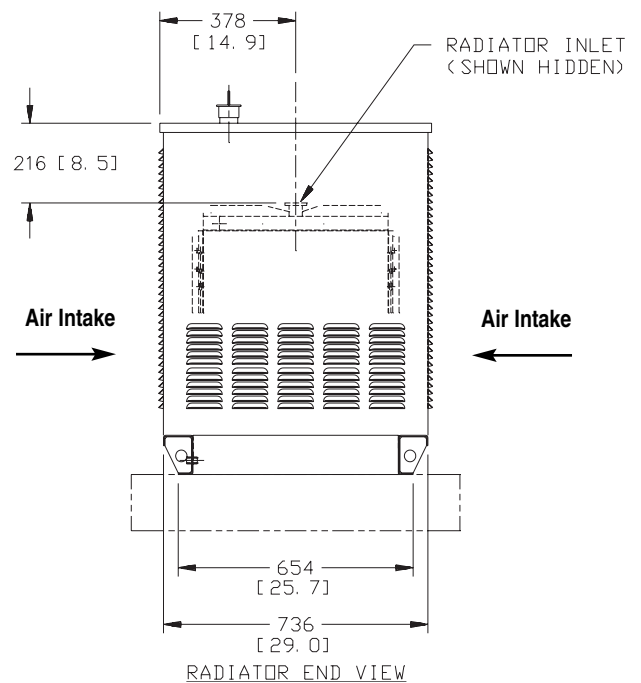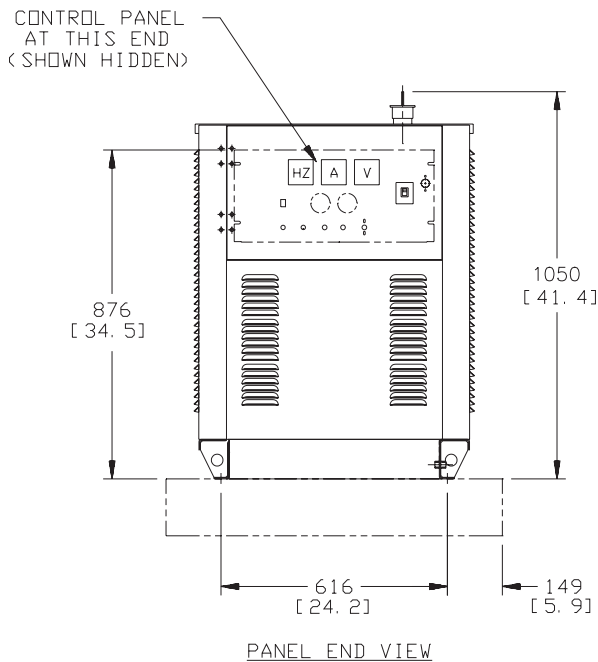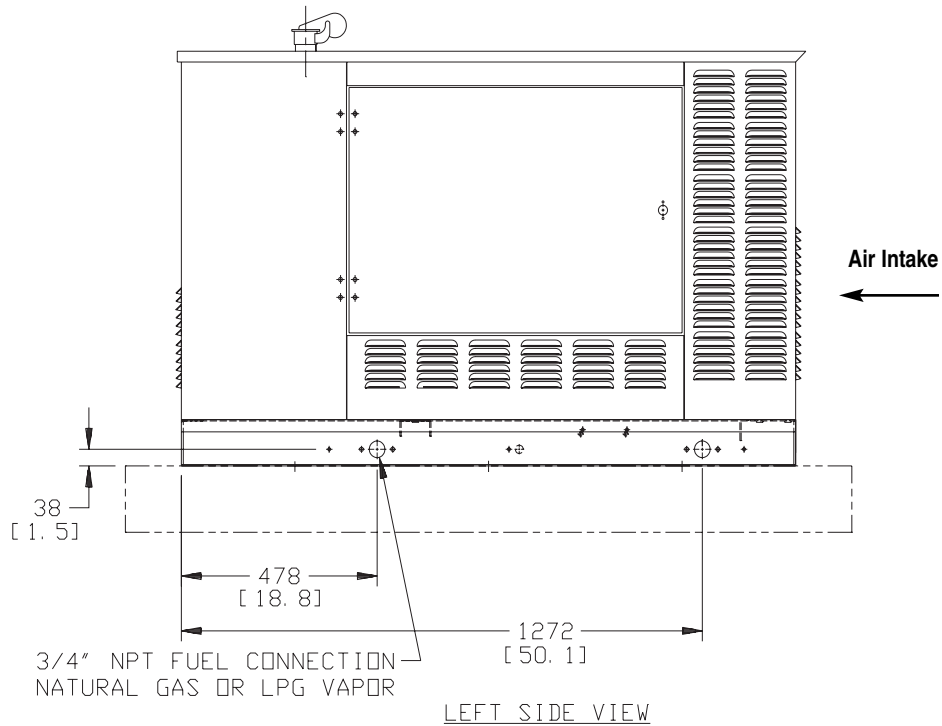



## Section 10 – Warranty

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

# CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT

## YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board (CARB) and Generac Power Systems, Inc. (Generac) are pleased to explain the Emission Control System Warranty on your new engine.\* In California, new utility, and lawn and garden equipment engines must be designed, built and equipped to meet the state's stringent anti-smog standards. Generac will warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect, unapproved modification or improper maintenance of your engine.

Your emission control system may include parts such as the carburetor, ignition system and exhaust system. Generac will repair your engine at no cost to you for diagnosis, replacement parts and labor, should a warrantable condition occur.

## MANUFACTURER'S EMISSION CONTROL SYSTEM WARRANTY COVERAGE:

Emissions control systems on 1995 and later model year engines are warranted for two years as hereinafter noted. If, during such warranty period, any emission-related component or system on your engine is found to be defective in materials or workmanship, repairs or replacement will be performed by a Generac Authorized Warranty Service Facility.

## PURCHASER'S/OWNER'S WARRANTY RESPONSIBILITIES:

As the engine purchaser/owner, you are responsible for the completion of all required maintenance as listed in your factory supplied *Owner's Manual*. For warranty purposes, Generac recommends that you retain all receipts covering maintenance on your engine. However, Generac cannot deny warranty solely due to the lack of receipts or for your failure to ensure the completion of all scheduled maintenance.

As the engine purchaser/owner, you should, however, be aware that Generac may deny any and/or all warranty coverage or responsibility if your engine, or a part/component thereof, has failed due to abuse, neglect, improper maintenance or unapproved modifications, or the use of counterfeit and/or "grey market" parts not made, supplied or approved by Generac.

**You are responsible for presenting your engine to a Generac Authorized Warranty Service Facility as soon as a problem occurs.** The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

Warranty service can be arranged by contacting either your selling dealer or a Generac Authorized Warranty Service Facility. To locate the Generac Authorized Warranty Service Facility nearest you, call our toll-free number:

**1-800-333-1322**

**IMPORTANT NOTE:** This warranty statement explains your rights and obligations under the Emission Control System Warranty (ECS Warranty), which is provided to you by Generac pursuant to California law. See also the "Generac Limited Warranties for Generac Power Systems, Inc.," which is enclosed herewith on a separate sheet, also provided to you by Generac. The ECS Warranty applies **only** to the emission control system of your new engine. If there is any conflict in terms between the ECS Warranty and the Generac Warranty, the ECS Warranty shall apply except in circumstances where the Generac Warranty may provide a longer warranty period. Both the ECS Warranty and the Generac Warranty describe important rights and obligations with respect to your new engine.

Warranty service can be performed only by a Generac Authorized Warranty Service Facility. When requesting warranty service, evidence must be presented showing the date of the sale to the original purchaser/owner.

**If you have any questions regarding your warranty rights and responsibilities, you should contact Generac at the following address:**

**ATTENTION WARRANTY DEPARTMENT  
GENERAC POWER SYSTEMS, INC.  
P.O. BOX 297  
WHITEWATER, WI 53190**

Part 1





### EMISSION CONTROL SYSTEM WARRANTY

Emission Control System Warranty (ECS Warranty) for 1995 and later model year engines:

- (a) Applicability: This warranty shall apply to 1995 and later model year engines. The ECS Warranty Period shall begin on the date the new engine or equipment is purchased by/delivered to its original, end-use purchaser/owner and shall continue for 24 consecutive months thereafter.
- (b) General Emissions Warranty Coverage: Generac warrants to the original, end-use purchaser/owner of the new engine or equipment and to each subsequent purchaser/owner that each of its engines is ...
  - (1) Designed, built and equipped so as to conform with all applicable regulations adopted by the CARB pursuant to its authority, and
  - (2) Free from defects in materials and workmanship which, at any time during the ECS Warranty Period, may cause a warranted emissions-related part to fail to be identical in all material respects to the part as described in the engine manufacturer's application for certification.
- (c) The ECS Warranty only pertains to emissions-related parts on your engine, as follows:
  - (1) Any warranted, emissions-related parts that are not scheduled for replacement as required maintenance in the *Owner's Manual* shall be warranted for the ECS Warranty Period. If any such part fails during the ECS Warranty Period, it shall be repaired or replaced by Generac according to Subsection (4) below. Any such part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period.
  - (2) Any warranted, emissions-related part that is scheduled only for regular inspection as specified in the *Owner's Manual* shall be warranted for the ECS Warranty Period. A statement in such written instructions to the effect of "repair or replace as necessary" shall not reduce the ECS Warranty Period. Any such part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period.
  - (3) Any warranted, emissions-related part that is scheduled for replacement as required maintenance in the *Owner's Manual* shall be warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part shall be repaired or replaced by Generac according to Subsection (4) below. Any such emissions-related part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period prior to the first scheduled replacement point for such emissions-related part.
  - (4) Repair or replacement of any warranted, emissions-related part under this ECS Warranty shall be performed at no charge to the owner at a Generac Authorized Warranty Service Facility.
  - (5) When the engine is inspected by a Generac Authorized Warranty Service Facility, the owner shall not be held responsible for diagnostic costs if the repair is deemed warrantable.
  - (6) Generac shall be liable for damages to other original engine components or approved modifications proximately caused by a failure under warranty of any emission-related part covered by the ECS Warranty.
  - (7) Throughout the ECS Warranty Period, Generac shall maintain a supply of warranted emission-related parts sufficient to meet the expected demand for such emission-related parts.
  - (8) Any Generac authorized and approved emission-related replacement part may be used in the performance of any ECS Warranty maintenance or repairs and will be provided without charge to the owner. Such use shall not reduce Generac ECS Warranty obligations.
  - (9) Unapproved, add-on, modified, counterfeit and/or "grey market" parts may not be used to modify or repair a Generac engine. Such use voids this ECS Warranty and shall be sufficient grounds for disallowing an ECS Warranty claim. Generac shall not be held liable hereunder for failures of any warranted parts of a Generac engine caused by the use of such an unapproved, add-on, modified, counterfeit and/or "grey market" part.

### EMISSION RELATED PARTS INCLUDE THE FOLLOWING:

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>1) Fuel Metering System:</li> <li>1.2) LPG/Natural Gas carburetion assembly and its internal components.               <ul style="list-style-type: none"> <li>a) Fuel controller (if so equipped)</li> <li>b) Mixer and its gaskets (if so equipped)</li> <li>c) Carburetor and its gaskets (if so equipped)</li> <li>d) Primary gas regulator (if so equipped)</li> <li>e) LP liquid vaporizer (if so equipped)</li> </ul> </li> <li>2) Air Induction System including:               <ul style="list-style-type: none"> <li>a) Intake pipe/manifold</li> <li>b) Air cleaner</li> </ul> </li> </ul> | <ul style="list-style-type: none"> <li>3) Ignition System including:               <ul style="list-style-type: none"> <li>a) Spark plug</li> <li>b) Ignition module</li> </ul> </li> <li>4) Catalytic Muffler Assembly (if so equipped) including:               <ul style="list-style-type: none"> <li>a) Muffler gasket</li> <li>b) Exhaust manifold</li> </ul> </li> <li>5) Crankcase Breather Assembly including:               <ul style="list-style-type: none"> <li>a) Breather connection tube</li> </ul> </li> </ul> |
|---|---|

\*Generac engine types covered by this warranty statement include the following:

- 1) Prepackaged Standby Generator
- 2) Auxiliary Power Unit (APU) Generator
- 3) Standby Generator



## Section 10 – Warranty

### Guardian Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### **GENERAC POWER SYSTEMS "TWO YEAR" LIMITED WARRANTY FOR GUARDIAN® "PREPACKAGED EMERGENCY AUTOMATIC STANDBY GENERATORS"**

For a period of two years from the date of original sale, Generac Power Systems, Inc. (Generac) warrants that its Guardian generator will be free from defects in material and workmanship for the items and period set forth below. Generac will, at its option, repair or replace any part which, upon examination, inspection and testing by Generac or a Guardian Authorized Warranty Service Dealer, is found to be defective. Any equipment that the purchaser/owner claims to be defective must be examined by the nearest Guardian Authorized Warranty Service Dealer. All transportation costs under the warranty, including return to the factory, are to be borne and prepaid by the purchaser/owner. This warranty applies only to Generac Guardian prepackaged emergency automatic standby generators sold and rated for use in "Standby" applications.

#### **WARRANTY SCHEDULE**

YEARS ONE and TWO - 100% (one hundred percent) transferable coverage on Labor and Part(s) listed (proof of purchase and maintenance is required):

Engine - All Components

Alternator - All Components

Transfer System - All Components

Steel enclosures are warranted against rusting for the first year of ownership only. Damage caused after receipt of generator is the responsibility of the owner and is not covered by this warranty. Nicks, scrapes, dents or scratches to the painted enclosure should be repaired promptly by the owner.

All warranty expense allowances are subject to the conditions defined in Guardian's Warranty Policies, Procedures and Flat Rate Manual.

#### **THIS WARRANTY SHALL NOT APPLY TO THE FOLLOWING:**

- Guardian generators that utilize non-Guardian/Generac replacement parts.
- Guardian generators utilizing non-Guardian/Generac automatic transfer switches.
- Repairs performed by individuals other than Guardian/Generac authorized dealers.
- Any Guardian generators used as rental or trailer mounted applications.
- Air-cooled units used for prime power in place of existing utility power where utility power is present or in place of utility power where utility power service does not normally exist.
- Costs of normal maintenance, adjustments, installation and start-up.
- Steel enclosures that are rusting due to the improper installation, location in a harsh or saltwater environment or scratched where integrity of paint applied is compromised.
- Failures caused by any contaminated fuels, oils, coolants or lack of proper fluid amounts.
- Failures due, but not limited, to normal wear and tear, accident, misuse, abuse, negligence or improper installation. As with all mechanical devices, the Generac engines need periodic part(s) service and replacement to perform well. This warranty will not cover repair when normal use has exhausted the life of a part(s) or engine.
- Failures caused by any external cause or act of God, such as collision, theft, vandalism, riot or wars, nuclear holocaust, fire, freezing, lightning, earthquake, windstorm, hail, volcanic eruption, water or flood, tornado or hurricane.
- Damage related to rodent and/or insect infestation.
- Products that are modified or altered in a manner not authorized by Generac in writing.
- Any incidental, consequential or indirect damages caused by defects in materials or workmanship, or any delay in repair or replacement of the defective part(s).
- Failure due to misapplication.
- Telephone, cellular phone, facsimile, internet access or other communication expenses.
- Living or travel expenses of person(s) performing service, except as specifically included within the terms of a specific unit warranty period.
- Expenses related to "customer instruction" or troubleshooting where no manufacturing defect is found.
- Rental equipment used while warranty repairs are being performed.
- Costs incurred for equipment used for removal and/or reinstallation of generator, (i.e.: cranes, hoists, lifts, etc.)
- Overnight freight costs for replacement part(s).
- Overtime labor.
- Starting batteries, fuses, light bulbs and engine fluids.

THIS WARRANTY IS IN PLACE OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. SPECIFICALLY, GENERAC MAKES NO OTHER WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

GENERAC'S ONLY LIABILITY SHALL BE THE REPAIR OR REPLACEMENT OF PART(S) AS STATED ABOVE. IN NO EVENT SHALL GENERAC BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF SUCH DAMAGES ARE A DIRECT RESULT OF GENERAC'S NEGLIGENCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights. You also have other rights from state to state.

**GENERAC® POWER SYSTEMS, INC.  
P.O. BOX 297 · WHITEWATER, WI 53190**

Revision (10/01/04)