

# GENERAC<sup>®</sup>

---

## POWER SYSTEMS, INC.

# Owner's Manual

Liquid-cooled, Prepackaged  
Standby Generators

Model Number  
004948-1

This manual should remain with the unit.

—▲ CAUTION ▲—

**ONLY QUALIFIED ELECTRICIANS OR CONTRACTORS  
SHOULD ATTEMPT INSTALLATION!!**



## INTRODUCTION

Thank you for purchasing this model of the standby generator set product line by Generac Power Systems.

Every effort was expended to make sure that the information and instructions in this manual are both accurate and current at the time the manual was written. However, the manufacturer reserves the right to change, alter or otherwise improve this product(s) at any time without prior notice.

### ◆ READ THIS MANUAL THOROUGHLY

If any portion of this manual is not understood, contact the nearest Generac Authorized Service Dealer for starting, operating and servicing procedures.

Throughout this publication, and on tags and decals affixed to the generator, DANGER, WARNING, CAUTION and NOTE blocks are used to alert personnel to special instructions about a particular service or operation that may be hazardous if performed incorrectly or carelessly. Observe them carefully. Their definitions are as follows:



**After this heading, read instructions that, if not strictly complied with, will result in personal injury or property damage.**



**After this heading, read instructions that, if not strictly complied with, may result in personal injury or property damage.**




**After this heading, read instructions that, if not strictly complied with, could result in damage to equipment and/or property.**

#### **NOTE:**

**After this heading, read explanatory statements that require special emphasis.**

These safety warnings cannot eliminate the hazards that they indicate. Common sense and strict compliance with the special instructions while performing the service are essential to preventing accidents.

Four commonly used safety symbols accompany the DANGER, WARNING and CAUTION blocks. The type of information each indicates is as follows:

 This symbol points out important safety information that, if not followed, could endanger personal safety and/or property of others.

 This symbol points out potential explosion hazard.

 This symbol points out potential fire hazard.

 This symbol points out potential electrical shock hazard.

The operator is responsible for proper and safe use of the equipment. Generac strongly recommends that the operator read this Owner's Manual and thoroughly understand all instructions before using this equipment. Generac also strongly recommends instructing other users to properly start and operate the unit. This prepares them if they need to operate the equipment in an emergency.

### ◆ OPERATION AND MAINTENANCE

It is the operator's responsibility to perform all safety checks, to make sure that all maintenance for safe operation is performed promptly, and to have the equipment checked periodically by a Generac Authorized Service Dealer. Normal maintenance service and replacement of parts are the responsibility of the owner/operator and, as such, are not considered defects in materials or workmanship within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of the generator ensures a minimum number of problems and keep operating expenses at a minimum. See the Generac Authorized Service Dealer for service aids and accessories.

Operating instructions presented in this manual assume that the standby electric system has been installed by a Generac Authorized Service Dealer or other competent, qualified contractor. Installation of this equipment is not a "do-it-yourself" project.

### ◆ HOW TO OBTAIN SERVICE

When the generator requires servicing or repairs, contact a Generac Authorized Service Dealer for assistance. Service technicians are factory-trained and are capable of handling all service needs.

When contacting a Generac Authorized Service Dealer about parts and service, always supply the complete model number of the unit as given on the front cover of this manual or on the DATA CARD affixed to the unit.

## **AUTHORIZED SERVICE DEALER LOCATION**

To locate the nearest GENERAC AUTHORIZED  
SERVICE DEALER, please call this number:

**1-800-333-1322**

**OR**

Locate us on the web at:

**[www.generac.com](http://www.generac.com)**



**INTRODUCTION .....IFC**

**SAFETY RULES .....2**

**Section 1 — GENERAL INFORMATION .....4**

1.1	Generator .....	4
1.2	Transfer Switch .....	4
1.3	Automatic System Operation .....	4
1.4	Generator AC Connection Systems.....	4
1.5	Main Circuit Breaker .....	4
1.6	Generator Fuel System .....	5
1.7	Engine Protective Devices .....	5
1.8	Unpacking .....	6
1.9	Lifting the Generator .....	6
1.10	Specifications .....	7
1.11	Fuel Consumption .....	7
1.12	Reconfiguring the Fuel System .....	7
1.13	Torque Specifications .....	8
1.14	Engine Oil Recommendations .....	8
1.15	Coolant Recommendations .....	8
1.16	Before Installation .....	8

**Section 2 — INSTALLATION .....8**

2.1	Standby Generator Installation .....	8
2.2	Generator Location.....	9
2.3	Generator Mounting and Support .....	9
2.4	Basic Standby Electric System .....	9
2.5	Emergency Circuit Isolation Method.....	10
2.6	Total Circuit Isolation Method .....	10
2.7	Grounding the Generator .....	10
2.8	Generator AC Neutral Connections.....	10
2.9	Transfer Switch Start Signal Connections .....	10
2.10	Battery Installation .....	11
2.11	Preparation Before Start-Up .....	11

**Section 3 — OPERATION .....12**

3.1	Using a Standard “GTS” Transfer Switch.....	12
3.2	Control Console Components.....	13
3.3	Manual Transfer and Startup.....	14
3.4	Engine Governor Adjustments .....	14
3.5	Retransfer and Shutdown.....	14
3.6	Automatic Operation .....	14
3.7	Weekly Exercise Cycle.....	14

**Section 4 — MAINTENANCE .....15**

4.1	Maintenance Performed by Authorized Service Facilities .....	15
4.2	Cooling System.....	15
4.3	Overload Protection for Engine DC Electrical System .....	15
4.4	Checking Fluid Levels .....	15
4.5	Maintenance Owner/Operator Can Perform .....	16
4.6	Miscellaneous Maintenance .....	18
4.7	Scheduled Maintenance .....	19

**Section 5 — TROUBLESHOOTING .....22**

**Section 6 — INTALLATION DIAGRAM .....23**

**Section 7 — ELECTRICAL DATA .....24**

**Section 8 — EXPLODED VIEWS AND  
PARTS LISTS .....28**

**Section 9 — NOTES .....44**

**Section 10 — WARRANTY .....Back Cover**





## IMPORTANT SAFETY INSTRUCTIONS

Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators

**SAVE THESE INSTRUCTIONS** – The manufacturer suggests that these rules for safe operation be copied and posted in potential hazard areas. Safety should be stressed to all operators, potential operators, and service and repair technicians for this equipment.

**SAVE THESE INSTRUCTIONS** – This manual contains important instructions that should be followed during installation and maintenance of the generator and batteries.



### WARNING:



The engine exhaust from this product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.



### WARNING:



This product contains or emits chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

Study these SAFETY RULES carefully before installing, operating or servicing this equipment. Become familiar with this *Owner's Manual* and with the unit. The generator can operate safely, efficiently and reliably only if it is properly installed, operated and maintained. Many accidents are caused by failing to follow simple and fundamental rules or precautions.

Generac cannot possibly anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and on tags and decals affixed to the unit are, therefore, not all-inclusive. If using a procedure, work method or operating technique that Generac does not specifically recommend, ensure that it is safe for others. Also make sure the procedure, work method or operating technique chosen does not render the generator unsafe.

### — DANGER —

**Despite the safe design of this generator, operating this equipment imprudently, neglecting its maintenance or being careless can cause possible injury or death. Permit only responsible and capable persons to install, operate or maintain this equipment.**

**Potentially lethal voltages are generated by these machines. Ensure all steps are taken to render the machine safe before attempting to work on the generator.**

**Parts of the generator are rotating and/or hot during operation. Exercise care near running generators.**



### GENERAL HAZARDS



- For safety reasons, Generac recommends that this equipment be installed, serviced and repaired by a Generac Authorized Service Dealer or other competent, qualified electrician or installation technician who is familiar with applicable codes, standards and regulations. The operator also must comply with all such codes, standards and regulations.
- Installation, operation, servicing and repair of this (and related) equipment must always comply with applicable codes, standards, laws and regulations. Adhere strictly to local, state and national electrical and building codes. Comply with regulations the Occupational Safety and Health Administration (OSHA) has established. Also, ensure that the generator is installed, operated and serviced in accordance with the manufacturer's instructions and recommendations. Following installation, do nothing that might render the unit unsafe or in noncompliance with the aforementioned codes, standards, laws and regulations.
- The engine exhaust fumes contain carbon monoxide gas, which can be DEADLY. This dangerous gas, if breathed in sufficient concentrations, can cause unconsciousness or even death. For that reason, adequate ventilation must be provided. Exhaust gases must be piped safely away from any building or enclosure that houses the generator to an area where people, animals, etc., will not be harmed. This exhaust system must be installed properly, in strict compliance with applicable codes and standards.
- Keep hands, feet, clothing, etc., away from drive belts, fans, and other moving or hot parts. Never remove any drive belt or fan guard while the unit is operating.
- Adequate, unobstructed flow of cooling and ventilating air is critical to prevent buildup of explosive gases and to ensure correct generator operation. Do not alter the installation or permit even partial blockage of ventilation provisions, as this can seriously affect safe operation of the generator.
- Keep the area around the generator clean and uncluttered. Remove any materials that could become hazardous.
- When working on this equipment, remain alert at all times. Never work on the equipment when physically or mentally fatigued.





- Inspect the generator regularly, and promptly repair or replace all worn, damaged or defective parts using only factory-approved parts.
- Before performing any maintenance on the generator, disconnect its battery cables to prevent accidental start-up. Disconnect the cable from the battery post indicated by a NEGATIVE, NEG or (-) first. Reconnect that cable last.
- Never use the generator or any of its parts as a step. Stepping on the unit can stress and break parts, and may result in dangerous operating conditions from leaking exhaust gases, fuel leakage, oil leakage, etc.
- Generators installed with an automatic transfer switch will crank and start automatically when NORMAL (UTILITY) source voltage is removed or is below an acceptable preset level. To prevent such automatic start-up and possible injury to personnel, disable the generator's automatic start circuit (battery cables, etc.) before working on or around the unit. Then, place a "Do Not Operate" tag on the generator control panel and on the transfer switch.
- In case of accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor. **AVOID DIRECT CONTACT WITH THE VICTIM.** Use a nonconducting implement, such as a dry rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- Never wear jewelry when working on this equipment. Jewelry can conduct electricity resulting in electric shock, or may get caught in moving components causing injury.

### **ELECTRICAL HAZARDS**

- All generators covered by this manual produce dangerous electrical voltages and can cause fatal electrical shock. Utility power delivers extremely high and dangerous voltages to the transfer switch as well as the standby generator. Avoid contact with bare wires, terminals, connections, etc., on the generator as well as the transfer switch, if applicable. Ensure all appropriate covers, guards and barriers are in place before operating the generator. If work must be done around an operating unit, stand on an insulated, dry surface to reduce shock hazard.
- Do not handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. **DANGEROUS ELECTRICAL SHOCK MAY RESULT.**
- If people must stand on metal or concrete while installing, operating, servicing, adjusting or repairing this equipment, place insulative mats over a dry wooden platform. Work on the equipment only while standing on such insulative mats.
- The National Electrical Code (NEC), Article 250 requires the frame and external electrically conductive parts of the generator to be connected to an approved earth ground and/or grounding rods. This grounding will help prevent dangerous electrical shock that might be caused by a ground fault condition in the generator set or by static electricity. Never disconnect the ground wire.
- Wire gauge sizes of electrical wiring, cables and cord sets must be adequate to handle the maximum electrical current (ampacity) to which they will be subjected.
- Before installing or servicing this (and related) equipment, make sure that all power voltage supplies are positively turned off at their source. Failure to do so will result in hazardous and possibly fatal electrical shock.
- Connecting this unit to an electrical system normally supplied by an electric utility shall be by means of a transfer switch so as to isolate the generator electric system from the electric utility distribution system when the generator is operating. Failure to isolate the two electric system power sources from each other by such means will result in damage to the generator and may also result in injury or death to utility power workers due to backfeed of electrical energy.

### **FIRE HAZARDS**

- Keep a fire extinguisher near the generator at all times. Do NOT use any carbon tetra-chloride type extinguisher. Its fumes are toxic, and the liquid can deteriorate wiring insulation. Keep the extinguisher properly charged and be familiar with its use. If there are any questions pertaining to fire extinguishers, consult the local fire department.

### **EXPLOSION HAZARDS**

- Properly ventilate any room or building housing the generator to prevent build-up of explosive gas.
- Do not smoke around the generator. Wipe up any fuel or oil spills immediately. Ensure that no combustible materials are left in the generator compartment, or on or near the generator, as FIRE or EXPLOSION may result. Keep the area surrounding the generator clean and free from debris.
- Generac generator sets may operate using one of several types of fuels. All fuel types are potentially FLAMMABLE and/or EXPLOSIVE and should be handled with care. Comply with all laws regulating the storage and handling of fuels. Inspect the unit's fuel system frequently and correct any leaks immediately. Fuel supply lines must be properly installed, purged and leak tested according to applicable fuel-gas codes before placing this equipment into service.
- Diesel fuels are highly FLAMMABLE. Gaseous fluids such as natural gas and liquid propane (LP) gas are extremely EXPLOSIVE. Natural gas is lighter than air, and LP gas is heavier than air; install leak detectors accordingly.



## 1.1 GENERATOR

This equipment is a liquid-cooled, engine-driven generator set. The generator is designed to supply electrical power that operates critical electrical loads during utility power failure. The unit has been factory-installed in a weather resistant, all metal enclosure and is intended for outdoor installation only. Use this generator as a source of electrical power for the operation of 120 and/or 240VAC, single-phase loads.

### ⚠ WARNING ⚠



If this generator is used to power electrical load circuits normally powered by a utility power source, it is required by code to install a transfer switch. The transfer switch must effectively isolate the electric system from the utility distribution system when the generator is operating (NEC 701). Failure to isolate an electrical system by such means results in damage to the generator and may also result in injury or even death to utility power workers due to backfeed of electrical energy.

## 1.2 TRANSFER SWITCH

This generator system may include a matched automatic transfer switch which is intended to be used in conjunction with the Generac generator. It is supplied in either a NEMA 1 enclosure or a NEMA 3R enclosure. The NEMA 1 enclosure is intended for indoor use only. The NEMA 3R enclosure is weather proof and can be used indoors or outdoors. Follow these rules:

- Install the transfer switch on a firm, sturdy supporting structure.
- To prevent switch distortion, level the switch if necessary. This can be done by placing washers between the switch enclosure and the mounting surface.
- Never install the switch where water or any corrosive substance might drip onto the enclosure.
- Protect the switch at all times against excessive moisture, dust, dirt, lint, construction grit and corrosive vapors.

If a transfer switch is not included, one may be purchased separately from a Generac Authorized Dealer.

## 1.3 AUTOMATIC SYSTEM OPERATION

When this generator, along with a transfer switch, has been installed and interconnected, a circuit board in the generator panel constantly monitors UTILITY power source voltage. Should that voltage drop below a preset value, and remain at such a low state for a preset amount of time, the generator cranks and starts. After the generator starts, the transfer switch transfers load circuits so the generator can power them.


When utility source voltage has been restored, the switch re-transfers back to the UTILITY source voltage and the generator then shuts down.

Please reference the transfer switch manual for specific information.

## 1.4 GENERATOR AC CONNECTION SYSTEMS

The generator was shipped from the factory with its stator AC output leads connected in a single-phase, three-wire generator AC connection system (Figure 1.1). The stator assembly in this system consists of a pair of stationary windings, with two leads brought out of each winding. Each single winding can supply 120VAC, 60 Hertz. When the two windings are connected in series, a 240VAC, 60 Hertz AC output results. Typically the two HOT leads in the circuit are wires 11 and 44. The NEUTRAL leads are the junction of Wires 22 and 33. The NEUTRAL is not grounded.

**Figure 1.1 - Generator AC Connection System**

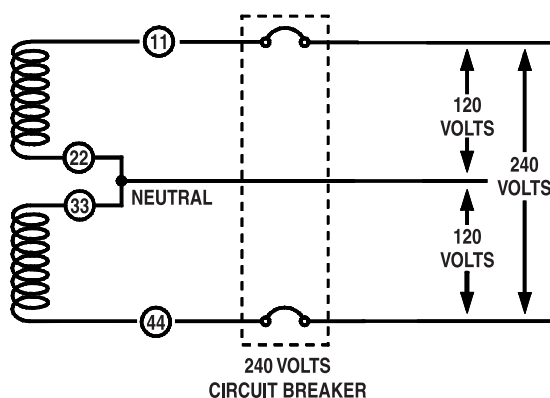

## 1.5 MAIN CIRCUIT BREAKER

The generator's main circuit breaker is included with the unit as shipped from the factory. The breaker for each unit is described in Figure 1.2.

**Figure 1.2 - Main Circuit Breaker**

Model	Rating	Phase	Actual Current	C/B Rating*	Circuit Breaker
004948-0	27,000 NG	1	112.5	150	150A QN2
	30,000 LP	1	125.0	150	150A QN2

\* Amp Rating of C/B structured under model.



## 1.6 GENERATOR FUEL SYSTEM

The unit has been factory tested and adjusted using a natural gas fuel system. If propane (LP) gas is necessary, contact an authorized service dealer.

### ⚠ WARNING ⚠




Gaseous fuels such as natural and LP (propane) gas are highly explosive. Even the slightest spark can ignite such fuels and cause an explosion. No leakage of fuel is permitted. Natural gas, which is lighter than air, tends to collect in high areas. LP gas is heavier than air and tends to settle in low areas.

## 1.7 ENGINE PROTECTIVE DEVICES

The engine has several safety switches which cause the engine to automatically shut down under the following conditions: low oil pressure, high coolant temperature, engine overspeed, low coolant level or overcrank (Figure 1.3).

*Figure 1.3 - Engine Protective Devices*

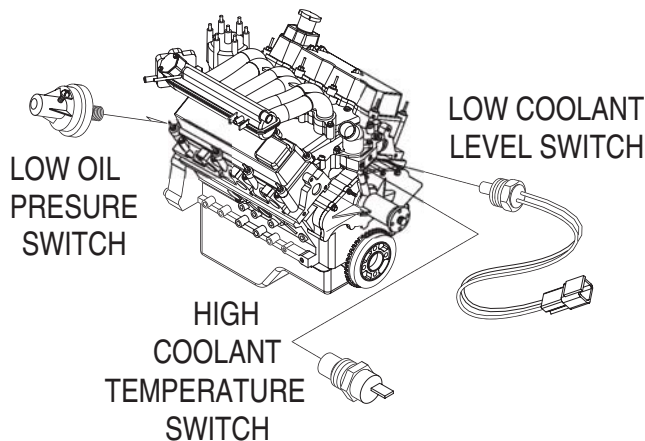


### ◆ 1.7.1 LOW OIL PRESSURE SWITCH

This switch is normally-closed (N.C.) but is held open by engine oil pressure during engine running. Should operating oil pressure drop below about 8-10 psi (55-68 kPa), the switch contacts close, the engine shuts down automatically, and the low oil pressure LED is turned ON (Figure 1.4).

#### NOTE:

**The Low Oil Pressure, High Coolant Temperature and Low Coolant Level are not monitored for the first 10 seconds of engine run time.**


*Figure 1.4 - Low Oil Pressure Switch*

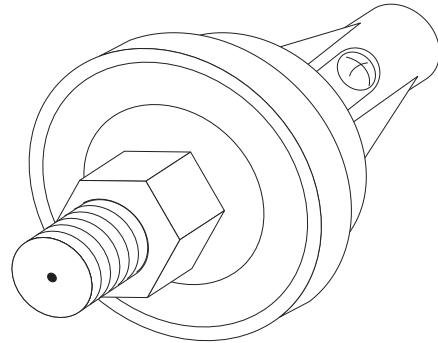

### ◆ 1.7.2 HIGH COOLANT TEMPERATURE SWITCH

Normally open (N.O.) thermostatic switch has sensing tip which is immersed in captive coolant. Should coolant temperature exceed about 230°F (110°C), the switch contacts close. This causes the engine to shut down automatically and turns on the high coolant temperature/low coolant level LED (Figure 1.5).


*Figure 1.5- High Coolant Temperature Switch*

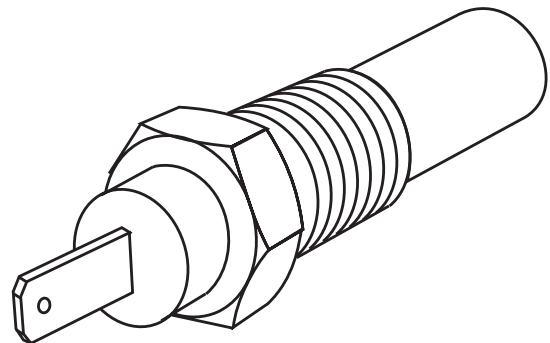

### ◆ 1.7.3 LOW COOLANT LEVEL SWITCH


Should engine coolant level drop below the level of the high coolant temperature switch, it is possible for the engine to overheat without automatic shutdown. To prevent such overheating without automatic shutdown, the engine has a low coolant level sensor. If the engine coolant drops too low, the engine automatically shuts down and turns on the high coolant temperature/low coolant level LED (Figure 1.6 on page 6).

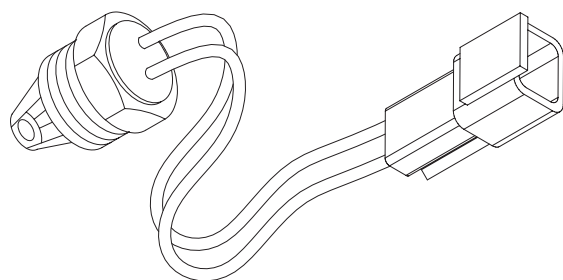

**Figure 1.6 - Low Coolant Level Sensor**


### ◆ 1.7.4 OVERSPEED SHUTDOWN

The engine control board receives AC frequency signals from an engine run winding in the alternator. Should AC frequency exceed about 72 Hertz for three seconds or 75 Hertz instantaneously, the engine shuts down and the overspeed LED turns on. Should AC frequency exceed about 72 Hertz, circuit board action will automatically shutdown the engine (Figure 1.7).

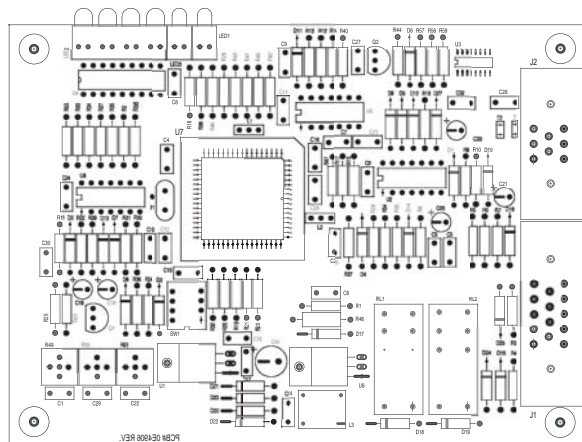**Figure 1.7 - Printed Circuit Board Assembly**


### ◆ 1.7.5 RPM SENSOR LOSS

If the engine control board does not receive a proper rpm signal from the starter during cranking or running, it shuts down the engine on rpm sensor loss and flash the overspeed LED.

### ◆ 1.7.6 OVERCRANK SHUTDOWN

The engine control board uses a cyclic cranking process when attempting to start the engine. The first crank cycle is a 15-second crank followed by a seven-second rest. This is followed by five more crank cycles each with a seven second crank followed by a seven-second rest.

If the engine fails to start after all six attempts, the start attempt is stopped and the overcrank LED turned on.

### ◆ 1.7.7 LOW BATTERY

The engine control board continually monitors the battery voltage and turns on the low battery LED if the battery voltage falls below 11.0 VDC for one minute. Low battery voltage is a non-latching alarm, which will automatically clear if the battery voltage rises above 11.0 VDC.

The control system will not attempt to start the engine if there is a low battery condition, however, if the engine is already running when the low battery condition occurs, the engine will continue to run as long as possible.

Battery voltage is NOT monitored during the crank cycle.

### ◆ 1.7.8 ALARM RESET

If the engine control board shuts down the generator for any of the above reasons, the engine remains stopped until the alarm is cleared by placing the AUTO/OFF/MANUAL switch into the OFF position.

### ◆ 1.7.9 DC FUSE

These fuses are located on the front panel of the control system. They protect the panel wiring and components from damaging overload. Always remove the 15 amp main fuse before working on the generator. The unit will not start or crank if this fuse is blown. Replace the fuse with one of the same size, type, and rating (main AGC-15, battery charger AG4).

## 1.8 UNPACKING

### ◆ 1.8.1 UNPACKING PRECAUTIONS

Handle shipping cartons and crates with care. Use care to avoid damage from dropping, bumping, collision, etc. Store and unpack cartons with the proper side up, as noted on the shipping carton.

### ◆ 1.8.2 INSPECTION

After unpacking, carefully inspect the generator for any damage that may have occurred during shipment. If loss or damage is noted at the time of delivery, have the person(s) making delivery note all damage on the freight bill or affix his signature under the consignor's memo of loss or damage.

## 1.9 LIFTING THE GENERATOR

### —▲ WARNING ▲—




When lifting or hoisting equipment is used, be careful not to touch overhead power lines. The generators weight of more than 900 pounds requires proper tools, equipment, and qualified personnel to be used in all phases of handling and unpacking.









Serious injury or damage may occur if not configured properly. Please consult an authorized Generac Service Dealer with any questions.

## 1.13 TORQUE SPECIFICATIONS

Cylinder Head .....	15 (+ 90° + 90°) ft.lb.
Intake Manifold .....	13 ft.lb.
Exhaust Manifold.....	13 ft.lb.

## 1.14 ENGINE OIL RECOMMENDATIONS

The unit has been filled with 5W-20 engine oil at the factory. Use a high-quality detergent oil classified "For Service CC, SD, SE, SF." Detergent oils keep the engine cleaner and reduce carbon deposits. Use oil having the following SAE viscosity rating, based on the ambient temperature range anticipated before the next oil change:

Temperature	Oil Grade (Recommended)
Above 80° F (27° C)	SAE 5W-20
32° to 80° F (-1° to 27° C)	SAE 5W-20
Below 32° F (0° C)	SAE 5W-20

### NOTE:

Synthetic oil is highly recommended in any element with temperatures above 90° F or below 30° F.



Any attempt to crank or start the engine before it has been properly serviced with the recommended oil may result in an engine failure.

## 1.15 COOLANT RECOMMENDATIONS

Use a mixture of half low silicate ethylene glycol base anti-freeze and half de-ionized water. Cooling system capacity is about 12 U.S. quarts (11.4 liters). Use only de-ionized water and only low silicate anti-freeze. If desired, add a high quality rust inhibitor to the recommended coolant mixture. When adding coolant, always add the recommended 50-50 mixture.



Do not use any chromate base rust inhibitor with ethylene glycol base anti-freeze or chromiumhydroxide ("green slime") forms and will cause overheating. Engines that have been operated with a chromate base rust inhibitor must be chemically cleaned before adding ethylene glycol base anti-freeze. Using any high silicate anti-freeze boosters or additives will also cause overheating. It is also recommend that any soluble oil inhibitor is NOT USED for this equipment.

## 1.16 BEFORE INSTALLATION

Before installing this equipment, check the ratings of both the generator and the transfer switch. Read "Emergency Isolation Method" and "Total Circuit Isolation Method" in the installation manual (Part No. 079699).

The generator's rated wattage/amperage capacity must be adequate to handle all electrical loads that the unit will power. The critical (essential) loads may need to be grouped together and wired into a separate "emergency" distribution panel.

This generator can be installed in conjunction with a standard Generac "GTS" type transfer switch, if necessary.

The standard transfer switch has no sensing or controlling circuit boards. Instead, the generator control console houses a "Printed Circuit Board Assembly", which controls all phases of operation, including engine start up and load transfer.

## 2.1 STANDBY GENERATOR INSTALLATION



Connecting this generator to an electrical system normally supplied by an electric utility shall be by means of a transfer switch, so as to isolate the electric system from the utility distribution system when the generator is operating. Failure to isolate the electric system by these means will result in damage to the generator and may also result in injury or death to utility workers due to backfeed of electrical energy.



If an open bottom is used, the engine-generator is to be installed over non-combustible materials and should be located such that combustible materials are not capable of accumulating under the generator set.

Only qualified, competent installation contractors or electricians thoroughly familiar with applicable codes, standards and regulations should install this standby electric power system. The installation must comply strictly with all codes, standards and regulations pertaining to the installation.




After the system has been installed, do nothing that might render the installation in noncompliance with such codes, standards and regulations.

### NOTE:

For more information about the installation of a standby system, order *Engine-Generator Standby Electric Power Systems Installer's Guide and Reference Manual* (part #046622) from the Generac Authorized Service Dealer.





### ◆ 2.1.1 NFPA STANDARDS

The following published standards booklets pertaining to standby electric systems are available from the National Fire Protection Association (NFPA), Batterymarch Park, Quincy, MA 02269:

- NFPA No. 37, STATIONARY COMBUSTION ENGINES AND GAS TURBINES.
- NFPA No. 76A, ESSENTIAL ELECTRICAL SYSTEMS FOR HEALTH CARE FACILITIES.
- NFPA No. 220, STANDARD TYPES OF BUILDING CONSTRUCTION
- NFPA No. 68, GUIDE FOR EXPLOSION VENTING
- NFPA No. 70, NATIONAL ELECTRICAL CODE.
- NFPA No. 30, FLAMMABLE AND COMBUSTIBLE LIQUIDS CODE.
- NFPA No. 10, INSTALLATION, MAINTENANCE AND USE OF PORTABLE FIRE EXTINGUISHERS.

### ◆ 2.1.2 OTHER PUBLISHED STANDARDS

In addition to NFPA standards, the following information pertaining to the installation and use of standby electric systems is available:

- Article X, NATIONAL BUILDING CODE, available from the American Insurance Association, 85 John Street, New York, N.Y. 10038.
- AGRICULTURAL WIRING HANDBOOK, obtainable from the Food and Energy Council, 909 University Avenue, Columbia, MO, 65201.
- ASAE EP-364.2, INSTALLATION AND MAINTENANCE OF FARM STANDBY ELECTRIC POWER, available from the American Society of Agricultural Engineers, 2950 Niles Road, St. Joseph, MI 49085.
- A52.1, AMERICAN NATIONAL STANDARD FOR CHIMNEYS, FIREPLACES AND VENTING SYSTEMS, available from the American National Standard Institute, 1430 Broadway, New York, N.Y. 10018.

## 2.2 GENERATOR LOCATION

Install the generator set, in its protective enclosure outdoors, where adequate cooling and ventilating air always is available. Consider these factors:

- Install the unit where air inlet and outlet openings will not become obstructed by leaves, grass, snow, etc. If prevailing winds will cause blowing or drifting, consider using a windbreak to protect the unit.
- Install the generator on high ground where water levels will not rise and endanger it.
- This genset must be installed on a level surface. The base frame must be level within 1/2 inch all around.
- Allow sufficient room on all sides of the generator for maintenance and servicing. A good rule is to allow five feet of space on all sides.

- Where strong prevailing winds blow from one direction, face the generator air inlet openings into the prevailing winds.
- Install the generator as close as possible to the transfer switch. This reduces the length of wiring and conduit.
- Install the generator as close as possible to the fuel supply, to reduce the length of piping. HOWEVER, REMEMBER THAT LAWS OR CODES MAY REGULATE THE DISTANCE.

## 2.3 GENERATOR MOUNTING AND SUPPORT

Retain the generator compartment to a concrete slab with 1/4-inch masonry type anchor bolts. Be sure the bolts are long enough to retain the compartment. The slab should be at least six inches thick and should extend beyond the enclosure to a distance of at least three inches on all sides. See Section 6 for generator major dimensions.


## 2.4 BASIC STANDBY ELECTRIC SYSTEM

Figure 2.1 shows a schematic diagram of a basic standby electric system. Both the UTILITY power supply and the STANDBY (GENERATOR) output are connected to an approved transfer switch. The transfer switch is required by electrical code and serves the following functions:

- Allows the LOAD circuits to be connected to only one power supply at a time.
- Prevents electrical backfeed between the generator and the UTILITY power circuits.

Notice that both the STANDBY and the UTILITY power supplies to the transfer switch are protected against overload by a main line circuit breaker.

**Figure 2.1 – Basic Standby Electric System**

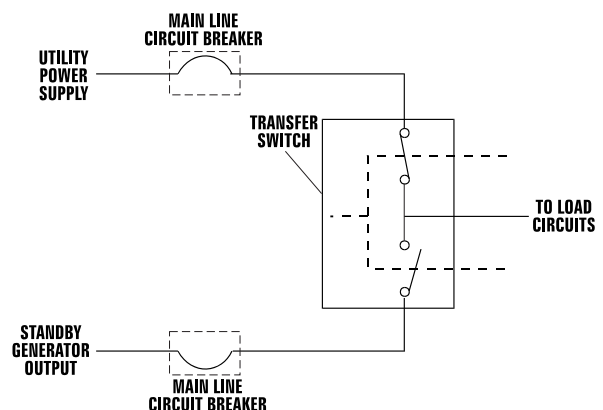





## 2.5 EMERGENCY CIRCUIT ISOLATION METHOD

This prevents overloading the generator by keeping electrical loads below the wattage/ampere capacity of the generator. If the generator is powering only critical loads, within the wattage/ampere capacity, during utility power outages, consider using the emergency circuit isolation method.

Critical electrical loads are grouped together and wired into a separate "Emergency Distribution Panel." Load circuits powered by that panel are within the wattage/ampere capacity of the generator set. When this method is used, it is difficult to overload the generator. The transfer switch must meet the following requirements:

- It must have an ampere rating equal to the total ampere rating of the emergency distribution panel circuit.
- Have it installed between the building's main distribution panel and the emergency distribution panel.

## 2.6 TOTAL CIRCUIT ISOLATION METHOD

When a generator capable of powering all electrical loads in the circuit is to be installed, use the "Total Circuit Isolation Method." It is possible for the generator to be overloaded when this isolation method is employed. The following apply to the transfer switch in this type of system.

- Ampere rating of the transfer switch must equal the ampere rating of the normal incoming utility service.
- The transfer switch is installed between the utility service entrance and the building distribution panel.

## 2.7 GROUNDING THE GENERATOR


The National Electrical Code requires the frame and external electrically conductive parts of this equipment to be properly connected to an approved earth ground and/or grounding rods. For that purpose, a GROUND LUG (Figure 2.2) is provided on the generator mounting base. Consult a qualified electrician for grounding requirements in the area. Grounding procedures must meet local regulations.



**Do not connect the ground wire to any pipe that carries a flammable or explosive substance – FIRE or an EXPLOSION may result.**

Proper grounding helps protect personnel against electrical shock in the event of a ground fault condition in the generator or in connected electrical devices. In addition, grounding helps dissipate static electricity that often builds up in ungrounded devices.

**Figure 2.2 – Generator Grounding Lug (typical)**

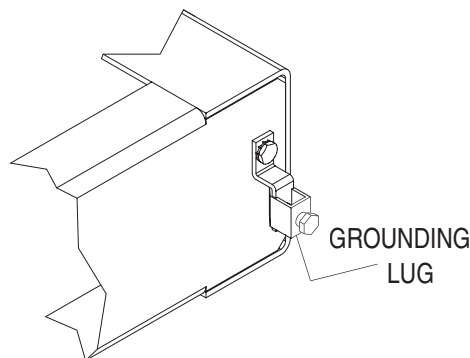

## 2.8 GENERATOR AC NEUTRAL CONNECTIONS

Generac uses an UNGROUNDED AC neutral. Grounding is recommended only at the main service entrance. If the neutral wire is grounded and one of the phase loads becomes grounded, the excessive current opens the load circuit breaker or collapses the generator field. The actual result depends on the electrical characteristics of the particular installed generator.

## 2.9 TRANSFER SWITCH SIGNAL CONNECTIONS

### ◆ 2.9.1 PRE-PACKAGED ATS


If the generator is to be installed with a pre-packaged transfer switch, it is necessary to connect the control wires to the generator and set position two of the four-position dip switch to OFF.

Setting switch two to OFF allows the control PCB to perform the ATS control functions.

Control system interconnections consist of N1 and N2, and leads 23 and 194. Control system interconnection leads must be run in a conduit that is separate from the AC power lead. Recommended wire gauge sizes for this wiring depends on the length of the wire, as recommended below:

MAXIMUM WIRE LENGTH	RECOMMENDED WIRE SIZE
460 feet (140m)	No. 18 AWG.
461 to 730 feet (223m)	No. 16 AWG.
731 to 1,160 feet (354m)	No. 14 AWG.
1,161 to 1,850 feet (565m)	No. 12 AWG.





### ◆ 2.9.2 GTS-TYPE ATS

If the generator is to be installed with an automatic transfer switch, such as a Generac GTS-type switch, it is necessary to connect the two-wire start control system.

Connect the two-wire start signal from the automatic transfer switch to the automatic start connection, which is located in the middle, on the bottom, inside the control panel. Match wires 178 and 183 in the transfer switch to 178 and 183 in the terminal strip in the control panel. The conductors for the two-wire start circuit must be in their own conduit. (See Section 3.1 for further explanation.)

## 2.10 BATTERY INSTALLATION



**!** Standby generators installed with automatic transfer switches will crank and start automatically when NORMAL (UTILITY) source voltage is removed or is below an acceptable preset level. To prevent such automatic start-up and possible injury to personnel, do not connect battery cables until certain that normal source voltage at the transfer switch is correct and the system is ready to be placed into operation.

**!** Storage batteries give off explosive hydrogen gas. This gas can form an explosive mixture around the battery for several hours after charging. The slightest spark can ignite the gas and cause an explosion. Such an explosion can shatter the battery and cause blindness or other injury. Any area that houses a storage battery must be properly ventilated. Do not allow smoking, open flame, sparks or any spark producing tools or equipment near the battery.

**!** Battery electrolyte fluid is an extremely caustic sulfuric acid solution that can cause severe burns. Do not permit fluid to contact eyes, skin, clothing, painted surfaces, etc. Wear protective goggles, protective clothing and gloves when handling a battery. If fluid is spilled, flush the affected area immediately with clear water.



**!** Do not dispose of the battery in a fire. The battery is capable of exploding.

**!** Do not open or mutilate the battery. Released electrolyte can be toxic and harmful to the skin and eyes.

**!** The battery represents a risk of high short circuit current. When working on the battery, always remove watches, rings or other metal objects, and only use tools that have insulated handles.

### ◆ 2.10.1 VENTED BATTERIES



**!** The electrolyte is a dilute sulfuric acid that is harmful to the skin and eyes. It is electrically conductive and corrosive. The following procedures are to be observed:

- Wear full eye protection and protective clothing,
- Where electrolyte contacts the skin, wash it off immediately with water,
- Where electrolyte contacts the eyes, flush thoroughly and immediately with water and seek medical attention, and
- Spilled electrolyte is to be washed down with an acid-neutralizing agent. A common practice is to use a solution of one pound (500 grams) bicarbonate of soda to one gallon (4 liters) of water. The bicarbonate of soda solution is to be added until the evidence of reaction (foaming) has ceased. The resulting liquid is to be flushed with water and the area dried.

**!** Lead acid batteries present a risk of fire because they generate hydrogen gas. The following procedure are to be followed:

- DO NOT SMOKE when near batteries,
- DO NOT cause flame or spark in battery area, and
- Discharge static electricity from body before touching batteries by first touching a grounded metal surface.

Servicing of batteries is to be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.

For recommended batteries, see "Specifications." All batteries must be at 100 percent state-of-charge before they are installed on the generator.

When using maintenance-free batteries, it is not necessary to check the specific gravity or electrolyte level. Have these procedures performed at the intervals specified in Section 4, "Maintenance." A negative ground system is used. Battery connections are shown on the wiring diagrams. Make sure all batteries are correctly connected and terminals are tight. Observe battery polarity when connecting batteries to the generator set.


#### NOTE:

**Damage will result if the battery connections are made in reverse.**

## 2.11 PREPARATION BEFORE START-UP

The instructions in this section assume that the standby generator has been properly installed, serviced, tested, adjusted and otherwise prepared for use by a competent, qualified installation contractor. Be sure to read the "Safety Rules" on Pages 2 and 3, as well as all other safety information in this manual, before attempting to operate this (and related) equipment.





### ◆ 2.11.1 PRIOR TO INITIAL START-UP



**⚠ Prior to initially starting the generator, it must be properly prepared for use. Any attempt to crank or start the engine before it has been properly serviced with the recommended types and quantities of engine fluids (oil, coolant, fuel, etc.) may result in an engine failure.**

Before starting the generator for the first time, the installer must complete the following procedures. For follow-up maintenance information and/or service intervals, please refer to Section 4, “Maintenance.”

### ◆ 2.11.2 TRANSFER SWITCH

If this generator is used to supply power to any electrical system normally powered by an electric utility, the National Electrical Code requires that a transfer switch be installed. The transfer switch prevents electrical backfeed between two different electrical systems (for additional information, see the applicable transfer switch manual for this unit). The transfer switch, as well as the generator and other standby components, must be properly located and mounted in strict compliance with applicable codes, standards and regulations.

### ◆ 2.11.3 FUEL SYSTEM

Make sure the fuel supply system to the generator (a) delivers the correct fuel at the correct pressure and (b) is properly purged and leak tested according to code. No fuel leakage is permitted. See “Specifications” (Section 1.10) for more information.

### ◆ 2.11.4 GENERATOR SET LUBRICATION

Check the engine crankcase oil level before operating and add oil to the proper level – the dipstick “FULL” mark. Never operate the engine with the oil level below the dipstick “ADD” mark. See “Specifications” (Section 1.10) and “Engine Oil Recommendations” (Section 1.14).

**NOTE:**

**This engine is shipped from the manufacturer with 5W-20 oil. This oil should be changed after 30 hours of operation.**

### ◆ 2.11.5 ENGINE COOLANT

Have the engine cooling system properly filled with the recommended coolant mixture. Check the system for leaks and other problems. See “Specifications” (Section 1.10) and “Coolant” (Section 1.15).

### ◆ 2.11.6 BELT TENSION

Check the engine fan belt tension and condition prior to placing the unit into service and at recommended intervals. Belt tension is correct when a force of approximately 22 pounds (10 kg), applied midway between pulleys, deflects the belt about 3/8- to 5/8-inch (10 to 16 mm).

### ◆ 2.11.7 ELECTRICAL SYSTEM

Make sure the generator is properly connected to an approved earth ground and/or ground rod.

Make sure the generator battery is fully charged, properly installed and interconnected, and ready for use.

Check to ensure that there are no loose electrical connections. Restrain any loose wires to keep them clear of any moving generator set components.

## 3.1 USING A STANDARD “GTS” TRANSFER SWITCH

When required, the pre-packaged standby generator can be installed with a standard Generac “GTS” type automatic transfer switch.

In this application, the GTS is responsible for utility sensing, weekly exercising, and load transferring.

Position two of the four-position dip switch is used to turn over this control to the GTS.

### Pos2 ON – GTS Application

- The control board will NOT monitor utility.
- The control board will NOT perform a weekly exercise. (The five red LEDs will not flash in this mode.)
- The control board will NOT activate the transfer output.
- The control board WILL monitor all engine conditions and shut down on all the faults listed in this document.

### Pos2 OFF – ATS Application

- The control board will perform all of the automatic features listed in this document.
- The two-wire start connections should NOT be used.


### GTS Mode Operation

When in GTS mode, the control board will respond as follows based on the AUTO/OFF/MANUAL switch position.

**OFF** — The generator will not start and run in this position.

**MANUAL** — The control board will start and run the generator whenever the switch is in the manual position.





**AUTO** — The control board will monitor the two-wire start circuit. When a two-wire start is issued the control board will immediately start and run the generator. When the two-wire start is removed the control board will immediately stop the generator.


**NOTE:**

If the generator is installed in conjunction with a standard GTS type transfer switch, refer to the applicable transfer switch manual for exact operating parameters and timing sequences.

## 3.2 CONTROL CONSOLE COMPONENTS

The components of a home standby generator control console (Figure 3.1) are as follows:

**Figure 3.1 - Home Standby Generator Panel**

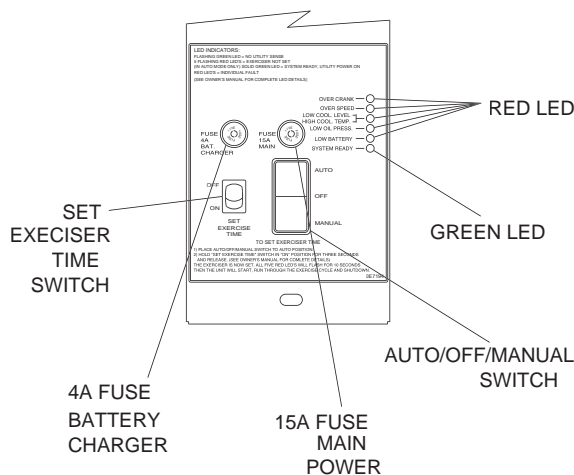

### 3.2.1 AUTO/OFF/MANUAL SWITCH

Use this three-position switch as follows:

- Set the switch to AUTO for fully automatic operation. See “Automatic Operation” (Section 3.5).
- Set switch to MANUAL position to crank and start the generator engine.
- Set switch to OFF position to shut down an operating engine. With OFF selected, operation will not be possible.



**!** With switch set to AUTO, engine can crank and start suddenly without warning. Such automatic start up normally occurs when utility source voltage drops below a pre-set level. To prevent possible injury that might be caused by such sudden starts, set AUTO/OFF/MANUAL switch to OFF before working on or around the unit. Then, place a “DO NOT OPERATE” tag on control console.

### 3.2.2 FAULT INDICATOR LED

This LED goes ON when one or more of the following engine faults occurs and when engine shuts down.

- Low Oil Pressure
- Overcrank
- Low Battery
- Overspeed/RPM Sensor Loss
- High Coolant Temperature/Low Coolant Level

See Section 1.7 for further explanation of engine protection functions.

### 3.2.3 15 AMP FUSE

Fuse protects the control console’s DC control circuit against electrical overload. If the fuse has melted open because of an overload, engine cranking and startup cannot occur. If the fuse needs to be replaced, use only an identical 15-amp replacement fuse. (Type AGC)

### 3.2.4 4.0 AMP INLINE FUSE

This fuse protects the battery charger against electrical overload. If the fuse needs to be replaced, use only an identical 4 amp replacement fuse (type AG).

**NOTE:**

**This fuse will not remove the + battery input power from the PCB when it opens. This means the exercise timer will not be reset.**

### 3.2.5 SET EXERCISE TIME SWITCH

This switch allows programming the generator to start and exercise automatically. “See Weekly Exercise Cycle.”

### 3.2.6 SYSTEM READY LED


The System Ready LED (green) has two main purposes. First, the LED will be ON when the AUTO/OFF/MANUAL switch is in the AUTO position, utility is present, and there are no system alarms. This ON state indicates the system is fully ready for automatic operation.

The system ready LED will be OFF when the switch is in the MANUAL or OFF positions.

The system ready LED is also used to indicate the presence of utility sensing at the PCB when the switch is either in the AUTO or MANUAL modes. The LED will flash at the rate of 1/2 second on, 1/2 second off if the utility sensing level is below the transfer back threshold.

This secondary function is only available with dip switch two in the OFF position (standard ATS application).





### 3.3 MANUAL TRANSFER AND START-UP

To transfer electrical loads to the Standby (EMERGENCY) power source side and start the engine manually, refer to the Owner's Manual of the particular transfer switch.


### 3.4 ENGINE GOVERNOR ADJUSTMENTS

Engine speed governing is also controlled by the engine control board. Connector J2 on the engine control board interfaces with a governor driver module and the Bosch throttle body. The engine governor has been set by the factory during final testing of the generator and, in most cases, should not be adjusted.

If, however, adjustments are necessary, or a new engine control board is installed in the generator, the following procedure should be followed (Figure 3.2):

1. Set all three potentiometers (pots) fully counter-clockwise.
2. Under no load condition, increase the GAIN pot as much as possible without causing instability.
3. Apply 1/4, 1/2, 3/4 and full load to the unit. Decrease the GAIN pot if there is instability at any load point.
4. Under full load condition, increase the STABILITY pot until the unit returns to 60 Hertz (or 50 Hertz in 50 Hertz applications).
5. Reduce load to 3/4, 1/2, 1/4 and no load. Decrease the STABILITY pot if there is instability at any load point.
6. Adjust differential pot to make the recovery to load changes even faster and minimize load change undershoot and overshoot. If it is set too high it may introduce oscillations at some load. It can be set to zero (full CCW) if a small amount causes oscillations at some load.

**Figure 3.2 — Engine Governor Adjustment**

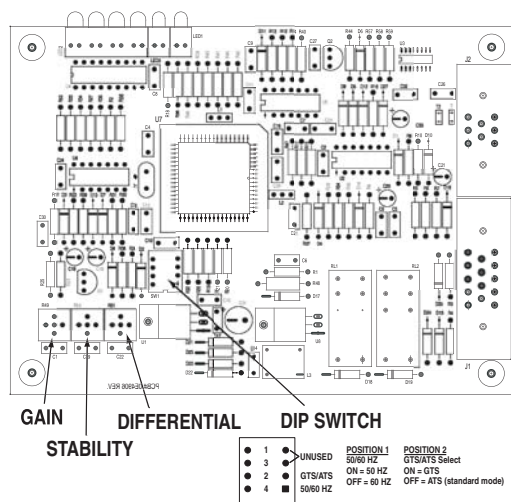

### 3.5 RETRANSFER AND SHUTDOWN

When utility power source voltage has been restored, electrical loads may be transferred back to that source and the generator can be shut down as follows:

- Verify that utility power supply voltage to the transfer switch has been positively turned OFF, using whatever means provided (such as utility main line circuit breaker).
- Set the generator's main circuit breaker to its OFF or OPEN position.
- Let the generator engine run at no-load for a few minutes, to stabilize internal unit temperatures.
- On the generator console, set the AUTO/OFF/MANUAL switch to OFF. Wait for engine to come to a complete stop.
- For transfer to utility position, refer to the Owner's Manual of the particular transfer switch.
- Turn on the utility power supply to the transfer switch, using whatever means provided (such as a utility main line circuit breaker). The utility power source now powers the loads.

### 3.6 AUTOMATIC OPERATION

To set the system for fully automatic operation, proceed as follows:

- Check that load circuits are connected to the utility power supply.
- Set the AUTO/OFF/MANUAL switch to its AUTO position.
- Set the generator main circuit breaker to its ON or CLOSED position.

### 3.7 WEEKLY EXERCISE CYCLE

The engine control board will start and run the generator once every seven days for approximately 12 minutes. If utility should fail during this exercise period, the engine control board will transfer the load to the generator output and continue to run until utility returns.


On the day, and at the time of day chosen for the generator to exercise, set the weekly exercise cycle as follows:

1. Place the AUTO/OFF/MANUAL switch in the AUTO position.
2. Press and hold the "Set Exercise" switch for three seconds, then release.

At this time all five red LEDs will flash for approximately 10 seconds, then the engine will start and run for its 12 minute exercise period, then shut down. The generator will now start and run each week at the same time.

If DC power to the control board is lost, the weekly exercise setting will be lost. This is indicated by all five red LEDs continually flashing. In this state the generator will still start and run in manual mode, or automatically start and run if UTILITY is lost while in AUTO mode, but it will not perform a weekly exercise cycle.




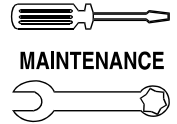

MAINTENANCE

If a failure occurs while running in this mode, the five red LEDs will stop flashing, the individual fault LED will turn on and the engine will shut down. Once the AUTO/OFF/MANUAL switch has been switch to OFF, the individual fault LED will turn OFF and the five red LEDs will begin flashing to show exercise has still not been set.

**Figure 3.2 - "Set Exercise" Switch**

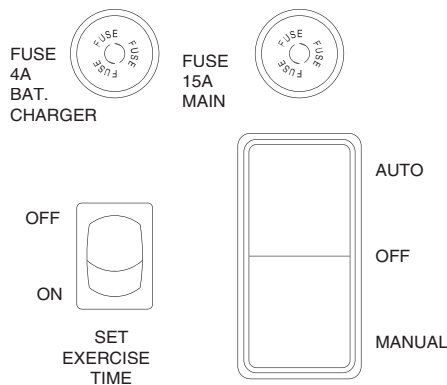

## 4.1 MAINTENANCE PERFORMED BY AUTHORIZED SERVICE FACILITIES

### A. EVERY THREE MONTHS

1. Check battery state of charge and condition.
2. Inspect and test fuel system.
3. Check transfer switch.
4. Inspect exhaust system.
5. Check engine ignition system.
6. Check fan belts.

### B. ONCE EVERY SIX MONTHS

1. Test Engine Safety Devices (low oil pressure, low coolant level, high coolant temperature).

### C. ONCE ANNUALLY

1. Test engine governor. Adjust or repair, if needed.
2. Clean, inspect generator.
3. Flush cooling system.

### D. FIRST 100 OPERATING HOURS

1. Change engine oil and oil filter. (After initial change, service engine oil and filter at 150 operating hours or 6 months, whichever comes first.)
2. Retorque cylinder head. (See Torque Specs, Section 1.13.)
3. Retorque intake and exhaust manifold. (See Torque Specs, Section 1.13.)

### E. EVERY 500 OPERATING HOURS

1. Service air cleaner.
2. Check starter.
3. Check engine DC alternator.

## 4.2 COOLING SYSTEM

Air intake and outlet openings in the generator compartment must be open and unobstructed for continued proper operation. This includes such obstructions as high grass, weeds, brush, leaves and snow.

Without sufficient cooling and ventilating air flow, the engine/generator quickly overheats, which causes it to shut down. (See Section 6 for installation drawings and vent locations.)

**WARNING**

The exhaust system parts from this product get extremely hot and remain hot after shutdown. High grass, weeds, brush, leaves, etc. must remain clear of the exhaust. Such materials may ignite and burn from the heat of the exhaust system.

## 4.3 OVERLOAD PROTECTION FOR ENGINE DC ELECTRICAL SYSTEM

Engine cranking, start up and running are controlled by a solid state Engine Controller circuit board. Battery voltage is delivered to that circuit board via a 15 amp fuse. These overcurrent protection devices will open if the circuit is overloaded.

**CAUTION**

If a circuit breaker opens or a fuse element melts, find the cause of the overload before resetting the circuit breaker or replacing the fuse.

## 4.4 CHECKING FLUID LEVELS

### ◆ 4.4.1 CHECK ENGINE OIL

Check engine crankcase oil level (Figure 4.1) at least every 20 hours of operation, or prior to use.

- Remove oil dipstick and wipe dry with a clean, lint-free cloth.
- Install oil dipstick, then remove again.
- Oil should be between FULL and ADD marks.
- If oil level is below the dipstick ADD mark, remove oil fill cap. Add the recommended oil to bring oil level up to the FULL mark. DO NOT FILL ABOVE THE "FULL" MARK. See Section 1.14 for recommended oils.







Figure 4.1 - Oil Dipstick and Oil Fill Cap

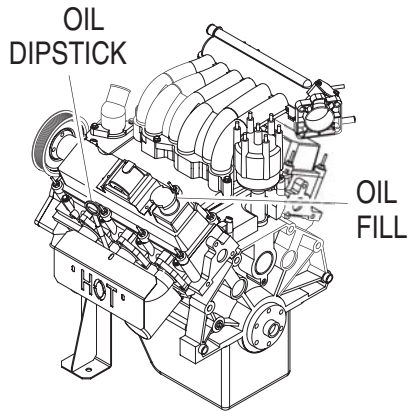

#### ◆ 4.4.2 BATTERY FLUID

Check battery electrolyte fluid at least once weekly. Fluid should cover separators in all battery cells. If fluid level is low, add distilled water to cover tops of separators. DO NOT USE TAP WATER IN BATTERY.

#### ◆ 4.4.3 ENGINE COOLANT

Check coolant level in coolant recovery bottle. See Specifications, Section 1.10.

- Add recommended coolant mixture as necessary.
- Periodically remove radiator pressure cap to make sure the coolant recovery system is functioning properly. Coolant should be at bottom of radiator filler neck. If coolant level is low, inspect gasket in radiator pressure cap. Replace cap, if necessary. To have pressure cap tested, contact an authorized Generac Service Dealer. Inspect cooling system and coolant recovery system for leaks.

### 4.5 MAINTENANCE OWNER/OPERATOR CAN PERFORM

#### ◆ 4.5.1 CHECK ENGINE OIL LEVEL

Refer to “Checking Fluid Levels” in Section 4.4.

#### ◆ 4.5.2 CHECK BATTERY

- Check battery fluid level each week as outlined under “Check Fluid Levels”.
- Check battery cables for condition, tightness, corrosion or damage. Clean, tighten or replace as necessary.

#### ◆ 4.5.3 EXERCISE SYSTEM

Start the generator engine at least once every seven days and let it run at least 20 minutes. See Section 3.6, “Weekly Exercise Cycle”.

#### ◆ 4.5.4 INSPECT COOLING SYSTEM

- Inspect engine cooling system at least once each month.
- Check hoses for damage, deterioration, leaks, etc. Correct any discrepancies found.
- Check hose clamps for tightness.

#### ◆ 4.5.5 CHECK ENGINE COOLANT LEVEL

See “Checking Fluid Levels” in Section 4.4.

#### ◆ 4.5.6 PERFORM VISUAL INSPECTION

Complete a thorough visual inspection of the entire engine-generator monthly. Look for obvious damage, loose, missing or corroded nuts, bolts and other fasteners. Look for fuel, oil or coolant leaks.

#### ◆ 4.5.7 INSPECT EXHAUST SYSTEM

Inspect the exhaust system at least once every three months. Check all exhaust system pipes, mufflers, clamps, etc. for condition, tightness, leaks, security, damage.

#### ◆ 4.5.8 CHECK FAN BELT

- Inspect fan belts every three months. Replace any damaged, deteriorated, worn or otherwise defective belt.
- Check fan belt tension. Thumb pressure, exerted midway between pulleys, should deflect about 3/8 to 3/4 inch. Adjust belt tension as required.


#### ◆ 4.5.9 INSPECT ENGINE GOVERNOR

Visually inspect electronic governor.



**DANGER:** Do not attempt to adjust the governor. Only qualified service facilities should adjust the governor. Excessively high operating speeds are dangerous and increase the risk of personal injury. Low speeds impose a heavy load on the engine when adequate engine power is not available and may shorten engine life. Correct rated frequency and voltage are supplied only at the proper governed speed. Some connected electrical load devices may be damaged by incorrect frequency and/or voltage. Only qualified service technicians should adjust the governed speed.



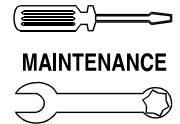

#### ◆ 4.5.10 CHANGING ENGINE OIL

Refer to maintenance performed by authorized service facilities for engine oil and filter change frequencies.

Drain the oil while the engine is still warm from running. This means warm up the engine, shut it down and drain immediately as follows:

1. Remove OIL DRAIN HOSE from its retaining clip.
2. Loosen and remove OIL DRAIN HOSE CAP. Drain oil completely into suitable container.
3. When all oil has drained, install and tighten OIL DRAIN HOSE CAP, and re-install into its retaining clip.
4. Turn OIL FILTER (Figure 4.2) counterclockwise and remove. Dispose of old filter.
5. Apply light coating of new engine oil to seal of new oil filter. Install FILTER and tighten by hand only. DO NOT OVERTIGHTEN.
6. Remove OIL FILL CAP. Add recommended oil (see SPECIFICATIONS). DO NOT FILL ABOVE THE DIPSTICK "FULL" MARK. Crankcase oil capacity is 4.0 U.S. quarts (3.8 liters).




CAUTION



After refilling the crankcase with oil, always check oil level on dipstick. NEVER OPERATE ENGINE WITH OIL BELOW THE DIPSTICK "ADD" MARK.

7. Start engine and check for oil leaks.


**Figure 4.2 - Oil Filter**

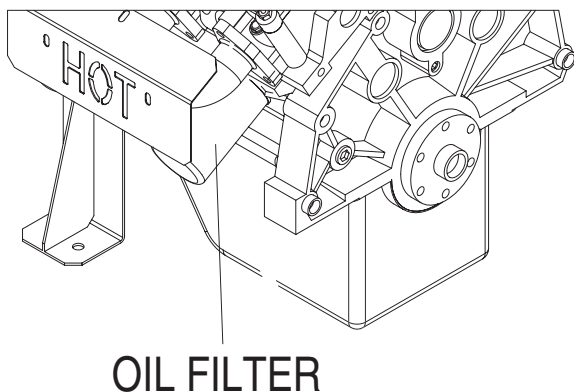

#### ◆ 4.5.11 CHANGING THE ENGINE AIR CLEANER

To replace the engine air cleaner, (part number 059402), remove the air cleaner cover and replace the air filter making sure it is positioned properly before reattaching the cover (Figure 4.3).

**Figure 4.3 – Engine Air Cleaner**

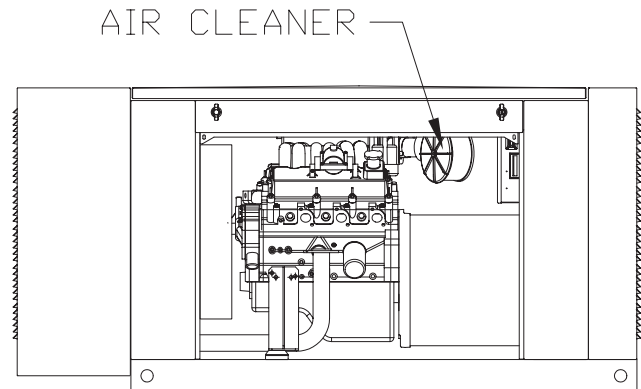

See the "Service Schedule," Section 6, for air cleaner maintenance.


#### ◆ 4.5.12 SPARK PLUGS

Reset the spark plug gap or replace the spark plugs as necessary. See Section 6.

1. Clean the area around the base of the spark plugs to keep dirt and debris out of the engine. Clean by scraping or washing using a wire brush and commercial solvent. Do not blast the spark plugs to clean.
2. Remove the spark plugs and check the condition. Replace the spark plugs if worn or if reuse is questionable. See the "Service Schedule," Section 6, for recommended inspection.
3. Check the spark plug gap using a wire feeler gauge. Adjust the gap to 0.5-0.6 mm (0.020-0.025 inch) by carefully bending the ground electrode (Figure 4.4).

**Figure 4.4 – Setting the Spark Plug Gap**


SET PLUG GAP AT 0.5-0.6 mm  
(0.020-0.025 inch)

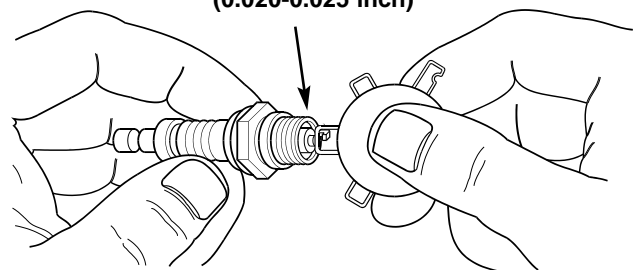

#### ◆ 4.5.13 COOLANT CHANGE

Every year, have Authorized Service Facility drain, flush and refill the cooling system. See SPECIFICATIONS (Section 1.10) for cooling system recommendations.



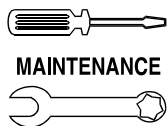

## Section 4 – Maintenance

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators

## 4.6 MISCELLANEOUS MAINTENANCE

### ◆ 4.6.1 CLEANING THE GENERATOR

Keep the generator as clean and as dry as possible. Dirt and moisture that accumulates on internal generator windings have an adverse effect on insulation resistance.

Periodically clean generator exterior surfaces. A soft brush may be used to loosen caked on dirt. Use a vacuum system or dry, low pressure air to remove any accumulations of dirt. The generator is housed inside an all-weather enclosure, clean the enclosure with a soft, damp cloth or sponge and water.

Once each year, have the generator cleaned and inspected by an Authorized Service Dealer. That dealer will use dry, low pressure air to clean internal windings. Parts inside the control console should be cleaned and inspected at this time as well.

Finally, have the insulation resistance of stator and rotor windings checked. If insulation resistances are excessively low, the generator may require drying.

### ◆ 4.6.2 BATTERY

All lead-acid storage batteries discharge when not in use. Refer to specific instructions and warnings that accompany the battery. If such information is not available, observe the following precautions when handling a battery:

- DO NOT use jumper cables and a booster battery to crank or start the generator engine.
- DO NOT recharge a weak battery while it is installed in the generator. Remove battery from generator and recharge in a well-ventilated area, away from fuel vapors, sparks, heat or flames.
- Battery electrolyte fluid is an extremely caustic sulfuric acid solution that can cause severe burns. DO NOT permit fluid to contact eyes, skin, clothing, painted surfaces, wiring insulation, etc. If any battery fluid is spilled, flush the affected area with clear water immediately.
- Always wear safety glasses, rubber apron and gloves when handling a battery.
- Batteries give off explosive hydrogen gas while charging. The gas can form an explosive mixture around the battery for several hours after charging. Any spark, heat or flames can ignite the gas and cause an explosion which can shatter the battery, causing blindness or other serious injury.

### ◆ 4.6.3 BATTERY MAINTENANCE

The battery should be inspected per the “Service Schedule,” Section 6. The following procedure should be followed for inspection:

1. Inspect the battery posts and cables for tightness and corrosion. Tighten and clean as necessary.

2. Check the battery fluid level of unsealed batteries and, if necessary, fill with DISTILLED WATER ONLY. DO NOT USE TAP WATER IN BATTERIES.
3. Have the state of charge and condition checked. This should be done with an automotive-type battery hydrometer.



**DANGER**



**Storage batteries give off explosive hydrogen gas. This gas can form an explosive mixture around the battery for several hours after charging. The slightest spark can ignite the gas and cause an explosion. Such an explosion can shatter the battery and cause blindness or other injury. Any area that houses a storage battery must be properly ventilated. Do not allow smoking, open flame, sparks or any spark producing tools or equipment near the battery.**



**Battery electrolyte fluid is an extremely caustic sulfuric acid solution that can cause severe burns. Do not permit fluid to contact eyes, skin, clothing, painted surfaces, etc. Wear protective goggles, protective clothing and gloves when handling a battery. If the fluid is spilled, flush the affected area immediately with clear water.**



**Do not use any jumper cables or booster battery to crank and start the generator engine. If the battery has completely discharged, remove it from the generator for recharging.**



**WARNING**



**Be sure the AUTO/OFF/MANUAL switch is set to the OFF position before connecting the battery cables. If the switch is set to AUTO or MANUAL, the generator can crank and start as soon as the battery cables are connected.**



**Be sure the UTILITY power supply is turned off, or sparking may occur at the battery posts as the cables are attached and cause an explosion.**

### ◆ 4.6.4 BATTERY REPLACEMENT

When replacing batteries, use the same number and the type of battery that follows:


BCI Group No.	CCA
26/26R	525 @ 0 deg. F
27	600 @ 0 deg. F

**NOTE:**

**The BCI number should be located directly on the battery.**

PERIODIC REPLACEMENT PARTS	
Part Name	Generac's Part Number
Oil Filter	# 0E7180
Radiator Cap	# 046627
Air Cleaner	# 0C8127
Spark Plug	# 0E7079



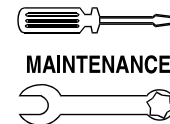

## 4.7 SCHEDULED MAINTENANCE

Following is a recommended maintenance schedule for Generac small standby and residential generator sets. The established intervals in the schedule are the *maximum* recommended when the unit is used in an average service application. They will need to be decreased (performed more frequently) if the unit is used in a severe application. Use the unit hour meter or calendar time, whichever occurs first, from the previous maintenance interval to determine the next required maintenance interval.

### Service Maintenance Interval Information:

The various service maintenance intervals are designated by interval numbers as follows:

- 1 An early inspection of the generator set to ensure it is ready to operate when required and to identify any potential problem areas.

*Performed monthly or following each 10 hours of operation of the unit and requires approximately **.5 man-hours** per unit to complete.*

*This inspection may be performed by the end user providing the following safety steps are taken to prevent the engine from starting automatically without warning:*

**To prevent injury, perform the following steps in the order indicated before starting any maintenance:**

- Disable the generator set from starting and/or connecting to the load by setting the control panel AUTO-OFF-MANUAL switch to the "OFF" position.
- Remove the control panel fuse.
- Turn off the battery charger.
- Remove the negative battery cable.

**The battery charger must be turned off BEFORE removing the battery cable to prevent an over current condition from burning out sensitive control panel components and circuits.**

**Following all maintenance, reverse these steps to insure the unit is returned to standby setup for normal operation when required.**

- 2 A break-in service inspection of the generator set to ensure it is ready to operate and carry the load when required, and to identify any potential problem areas.

*Performed **ONLY ONCE** following the first three months or the first 30 hours of operation after purchase of the unit and requires approximately **2.5 man-hours** per unit to complete.*

*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by an authorized Generac Service Dealer.*

- 3 An operational inspection of the generator set to ensure it is ready to operate and carry the load when required, and to identify any potential problem areas.

*Performed semi-annually or following each 50 hours of operation of the unit and requires approximately **1.5 man-hours** per unit to complete.*



*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by an authorized Generac Service Dealer.*

- 4 A mid-level inspection of the generator set to ensure it is ready to operate and carry the load when required, and to identify any potential problem areas.

*Performed annually or following each 100 hours of operation of the unit and requires approximately **4.0 man-hours** per unit to complete.*

*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by an authorized Generac Service Dealer.*




**MAINTENANCE****Section 4 – Maintenance****Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**

<b>Maintenance Tasks</b>	<b>Level 1</b> Recom- mended to be done monthly/ 10 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 2</b> Required to be done 3 months/ Break-in 30 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 3</b> Required to be done Semi- annually/ 50 hrs.	<b>Task</b> Comp. (Date- Initials)	<b>Level 4</b> Required to be done Annually/ 100 hrs.	<b>Task</b> Comp. (Date- Initials)
1. Disable the unit from operating per the first page warning.								
2. Check the engine oil level. Adjust as necessary.								
3. Check the engine coolant level. Adjust as necessary.								
4. Check the engine coolant thermal protection level. Correct as necessary.								
5. Check the natural gas delivery system on gas engine driven units. Tighten connections as necessary.								
6. Check the air inlets and outlets for debris. Clean as necessary.								
7. Check the battery electrolyte level if accessible. Adjust as necessary.								
8. Check the battery posts, cables, and charger for loose connections, corrosion, and proper operation. Correct as necessary.								
9. Check the unit wiring for loose connections, corrosion, and damage. Correct as necessary.								
10. Check the engine accessory drive belts for wear, weather cracking, and damage. Replace as necessary.								
11. Visually inspect the unit looking for leaks, wear or damage, loose connections or components, and corrosion. Correct as necessary.								
12. Test the engine and transfer switch safety devices. Correct and/or adjust as necessary.								



## Section 4 – Maintenance

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators

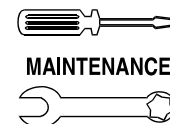

MAINTENANCE

Maintenance Tasks	Level 1 Recommended to be done monthly/ 10 hrs.	Task Comp. (Date-Initials)	Level 2 Required to be done 3 months/ Break-in 30 hrs.	Task Comp. (Date-Initials)	Level 3 Required to be done Semi-annually/ 50 hrs.	Task Comp. (Date-Initials)	Level 4 Required to be done Annually/ 100 hrs.	Task Comp. (Date-Initials)
13. Initiate an automatic start and transfer of the unit to site load and exercise it for at least 1 hour looking for leaks, loose connections or components, and abnormal operating conditions. Correct as necessary.								
14. Start and exercise the unit at full rated load (use a load bank if the site load is not enough) for at least 2 hours looking for leaks, loose connections or components, and abnormal operating conditions. Correct as necessary.								
15. Change the engine oil.								
16. Replace the engine oil filter(s).								
17. Replace the engine air filter(s).								
18. Replace the engine fuel filter(s) on diesel engine driven units and re-prime the fuel system.								
19. Check the engine spark plugs on gas engine driven units. Clean and re-gap or replace as necessary.								
20. Perform a 5 minute no-load operational run of the unit looking for any post service problems.								
21. Return the unit to standby setup for operation when required.								





## Section 5 — Troubleshooting

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators


## TROUBLESHOOTING POINTS

PROBLEM	CAUSE	CORRECTION
Engine won't crank.	<ol style="list-style-type: none"> <li>15 amp fuse blown.</li> <li>Loose or corroded or defective battery cables.</li> <li>Defective starter contactor.</li> <li>Defective starter motor.</li> <li>Dead or Defective Battery.</li> </ol>	<ol style="list-style-type: none"> <li>Replace fuse.</li> <li>Tighten, clean or replace battery cables as necessary.</li> <li>Replace contactor.</li> <li>Replace starter motor.</li> <li>Remove, change or replace battery.</li> </ol>
Engine cranks, but won't start	<ol style="list-style-type: none"> <li>Out of fuel.</li> <li>Fuel solenoid (FS) is defective</li> <li>Open Wire #14 from Engine Control circuit board.</li> <li>Spark plugs defective.</li> </ol>	<ol style="list-style-type: none"> <li>Replenish fuel.</li> <li>Replace solenoid.</li> <li>Reconnect wire.</li> <li>Clean, regap or replace plugs.</li> </ol>
Engine starts hard, runs rough.	<ol style="list-style-type: none"> <li>Flame arrestor (air cleaner) plugged or damaged.</li> <li>Plugged fuel line.</li> <li>Defective spark plugs.</li> </ol>	<ol style="list-style-type: none"> <li>Clean or replace as needed.</li> <li>Unclog fuel line.</li> <li>Clean, regap or replace plugs.</li> </ol>
Engine starts, then shuts down.	<ol style="list-style-type: none"> <li>Engine oil level is low.</li> <li>Engine is overheated.</li> <li>Defective Low Oil Pressure Switch</li> <li>Defective Coolant Temperature Switch</li> <li>Defective Control Module circuit board.</li> <li>Coolant Level is Low.</li> <li>Defective Low Coolant Level Switch</li> </ol>	<ol style="list-style-type: none"> <li>Check oil and add oil as needed.</li> <li>Check cooling system for leaks.</li> <li>Replace switch.</li> <li>Replace switch.</li> <li>Replace board.</li> <li>Repair leak - Add coolant.</li> <li>Replace Switch.</li> </ol>
AUTO/OFF/MANUAL Switch at, OFF engine continues to run	<ol style="list-style-type: none"> <li>Defective AUTO/OFF/MANUAL switch</li> <li>Open/disconnected wire #15A between AUTO/OFF/MANUAL switch and Control Module circuit board.</li> <li>Defective Control Module circuit board</li> </ol>	<ol style="list-style-type: none"> <li>Replace switch.</li> <li>Reconnect/close wire.</li> <li>Replace board.</li> </ol>
No AC output from generator.	<ol style="list-style-type: none"> <li>Check main line circuit breaker.</li> <li>Check circuit breaker &amp; fuses.</li> <li>Transfer switch set to NORMAL position</li> <li>Generator internal failure.</li> <li>Thermal circuit breaker open.</li> </ol>	<ol style="list-style-type: none"> <li>Reset to ON or CLOSED.</li> <li>Reset and replace, if necessary.</li> <li>Set to GENERATOR position.</li> <li>Contact an Authorized Generac facility.</li> <li>Auto-reset - Wait 5 min. and attempt restart.</li> </ol>







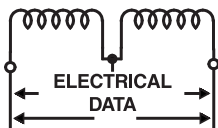


## Section 7 - Electrical Data

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators Wiring Diagram – Engine – Drawing No. 0E6199-D

#### NOTE:

ALL WIRES ARE 18 AWG 300  
VOLT UL LISTED UNLESS  
OTHERWISE NOTED AS SHOWN:

SIZE (AWG)

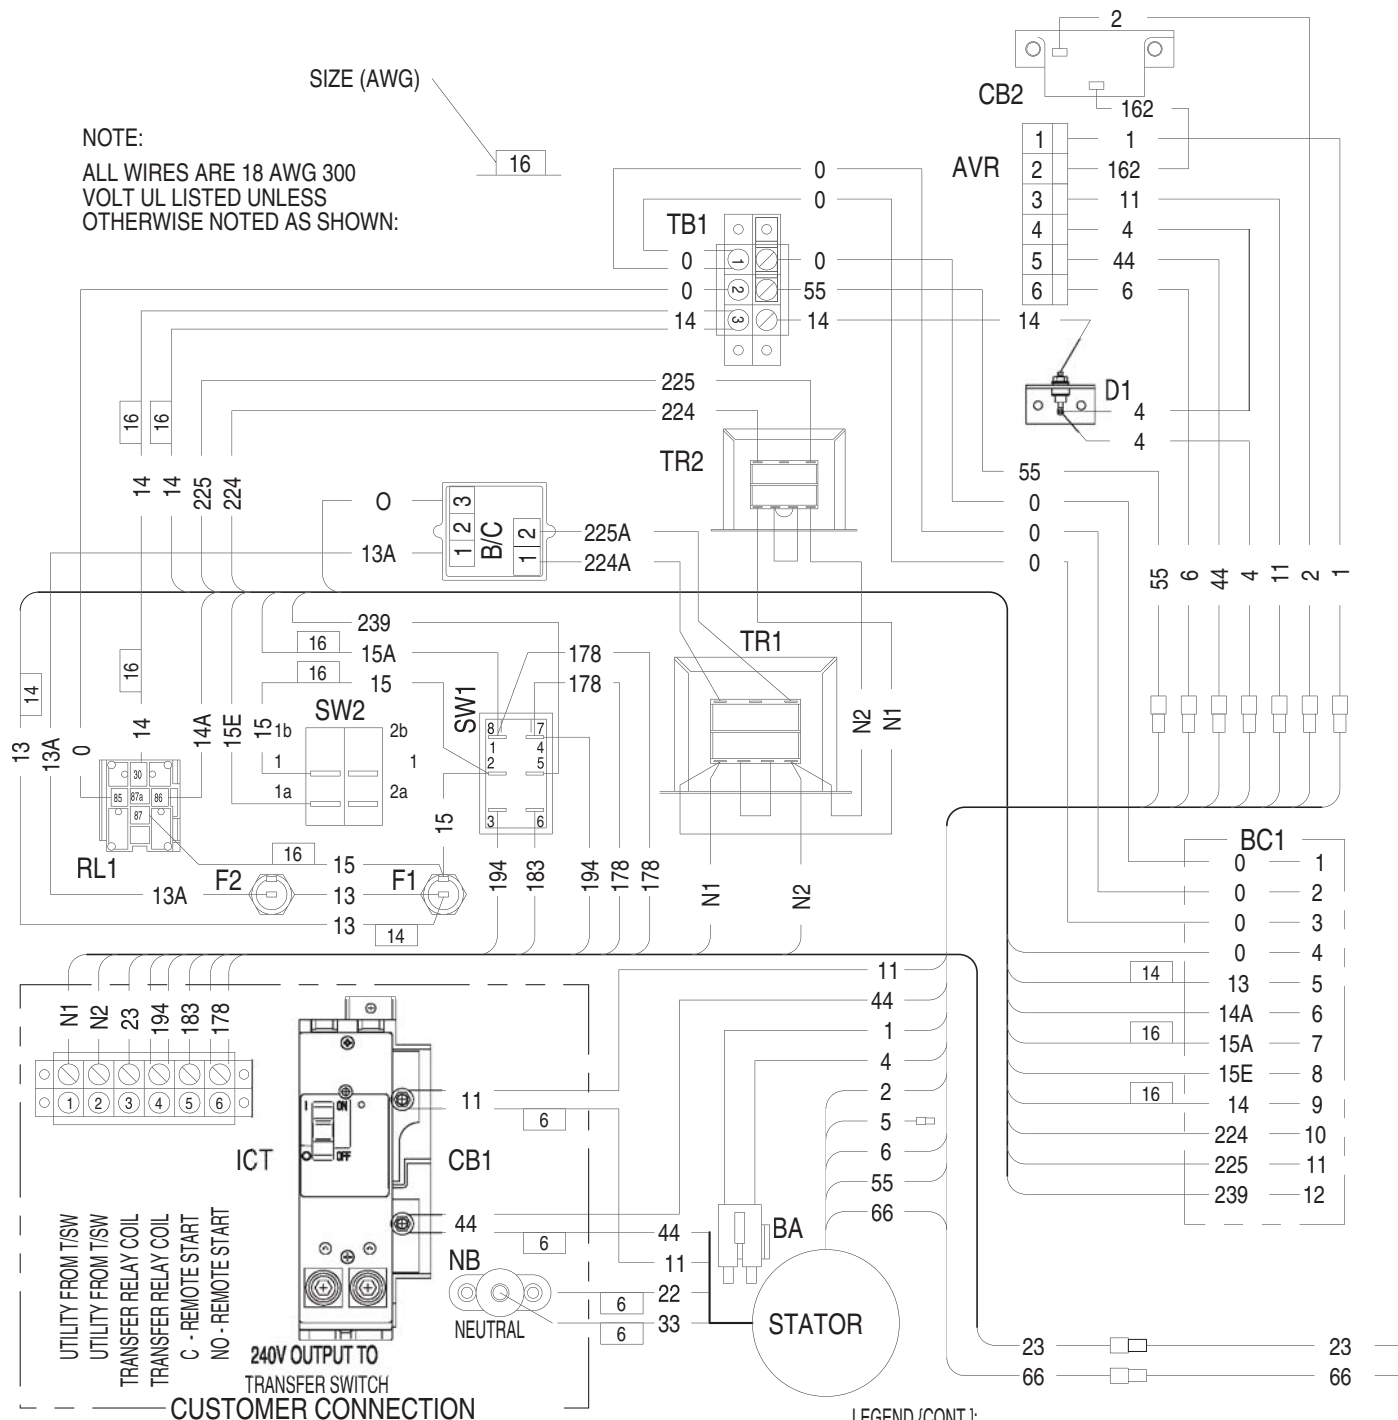

#### LEGEND (CONT.):



#### LEGEND:

AVR - AUTOMATIC VOLTAGE REGULATOR  
BA - BRUSH ASSEMBLY (GENERATOR)  
B/C - BATTERY CHARGER  
BC1 - BULKHEAD CONNECTOR 1 (ENGINE)  
CB1 - CIRCUIT BREAKER (OUTPUT)  
CB2 - CIRCUIT BREAKER (EXCITATION)  
D1 - DIODE [FIELD BOOST]  
F1 - FUSE, BAT. POWER (15A AGC TYPE)

F2 - FUSE, B/C (4A AGC TYPE)  
ICT - INTERCONNECT. TERMINAL BLOCK  
NB - NEUTRAL BLOCK  
RL1 - RELAY 1  
SW1 - AUTO/OFF/MANUAL SWITCH  
SW2 - SET EXERCISER SWITCH  
TB1 - TERMINAL BLOCK 1  
TR1 - TRANSFORMER 1 (56 VA 240/16 VAC)  
TR2 - TRANSFORMER 2 (6 VA 240/16 VAC)



**Section 7 - Electrical Data**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Wiring Diagram – Engine – Drawing No. 0E6199-D**

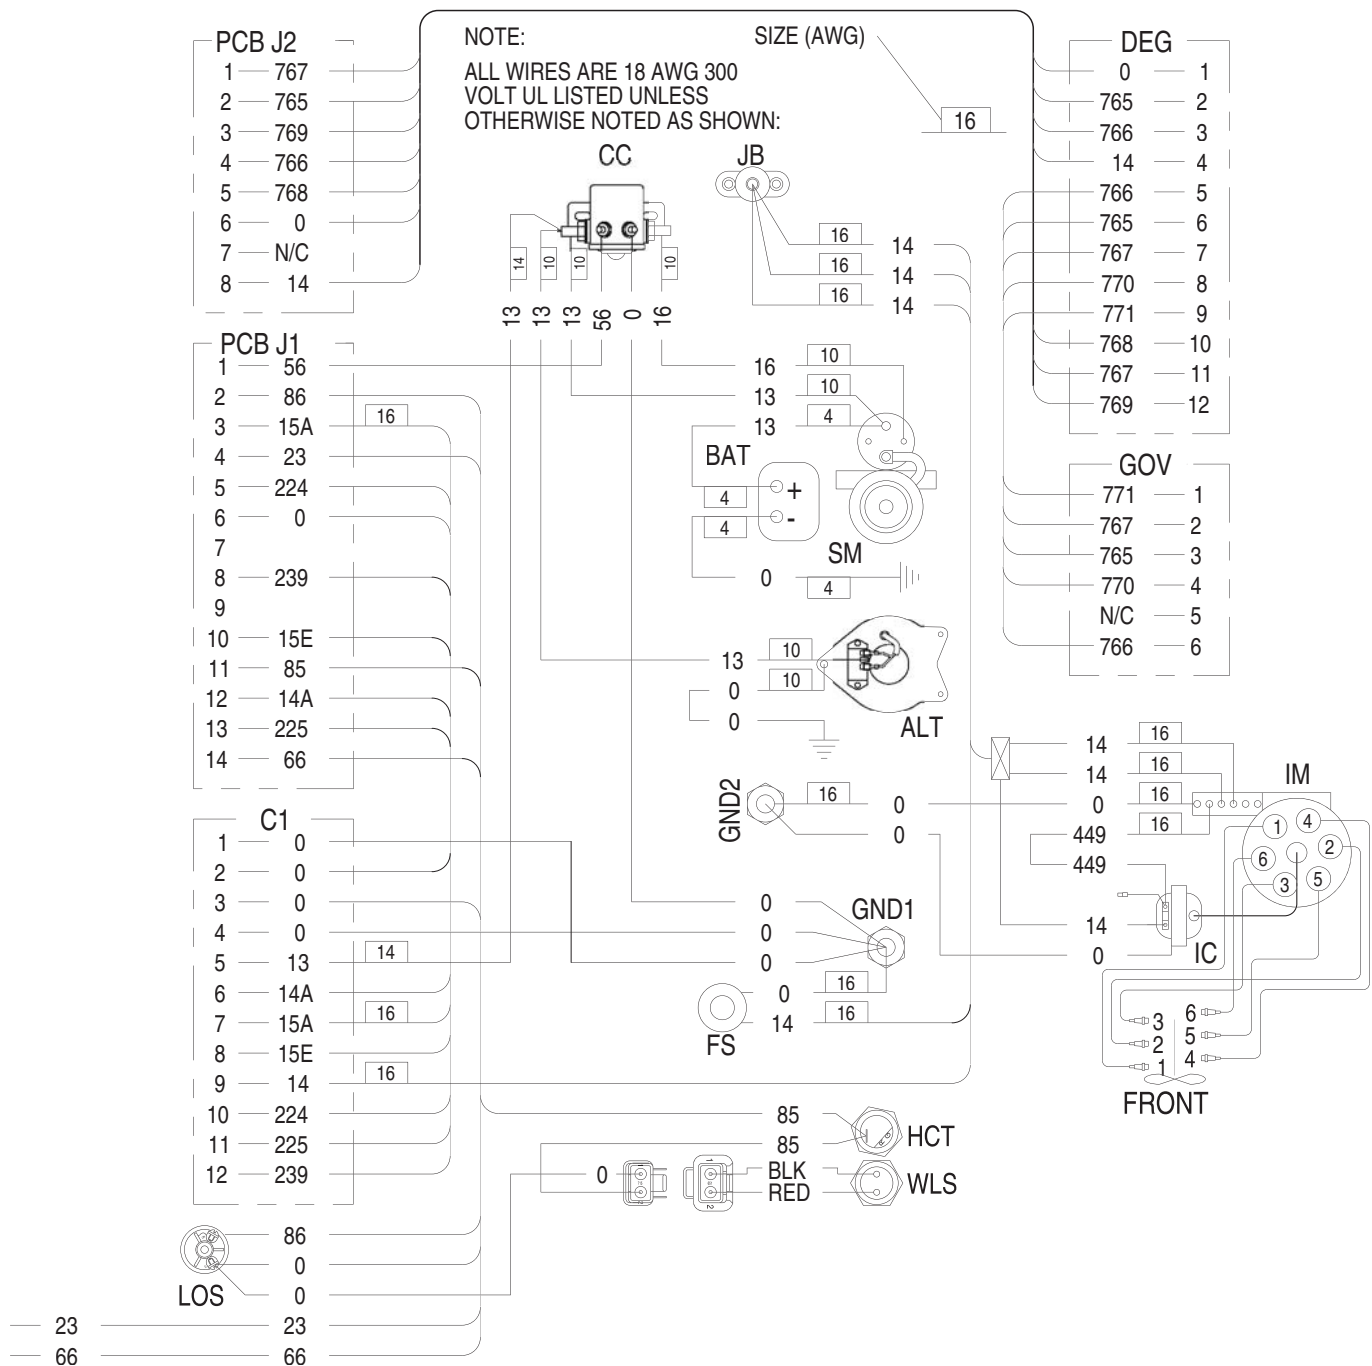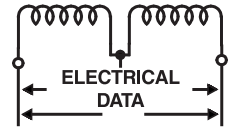


**LEGEND:**

ALT - D.C. CHARGE ALTERNATOR  
 BAT - 12VDC BATTERY  
 C1 - CONNECTOR 1 (ENGINE)  
 CC - STARTER CONTACTOR  
 DEG - DRIVER ELEC. GOVERNOR  
 FS - FUEL SOLENOID  
 GND1- GROUND (SENSING/LOW AMP)  
 GND2- GROUND (POWER/HIGH AMP)  
 GOV - ELEC. GOVERNOR ACTUATOR

**LEGEND [CONT.]:**

HCT - HIGH COOLANT TEMP SWITCH  
 IC - IGNITION COIL  
 IM - IGNITION MODULE (ON DISTRIBUTOR)  
 J-1 - JUNCTION 1 (ON PCB)  
 J-2 - JUNCTION 2 (ON PCB)  
 JB - JUNCTION BLOCK (RUN POWER)  
 LOS - LOW OIL PRESSURE SWITCH  
 SM - STARTER MOTOR  
 WLS - COOLANT LEVEL SWITCH



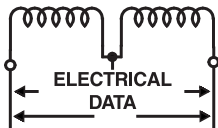

## Section 7 - Electrical Data

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators


#### Electrical Schematic – Engine – Drawing No. 0E6200

#### LEGEND:

AR - ALTERNATOR ROTOR  
 AS - ALTERNATOR STATOR  
 AVR - AUTOMATIC VOLTAGE REGULATOR  
 BA - BRUSH ASSEMBLY (GENERATOR)  
 B/C - BATTERY CHARGER  
 BCW - BATTERY CHARGE WINDING  
 CB1 - CIRCUIT BREAKER (OUTPUT)  
 CB2 - CIRCUIT BREAKER (EXCITATION)  
 D1 - DIODE [FIELD BOOST]  
 DPE - DISPLACED PHASE EXCITATION



#### LEGEND (CONT.):

F1 - FUSE, BAT. POWER (15A AGC TYPE)  
 F2 - FUSE, B/C (4A AGC TYPE)  
 ICT - TERMINAL BLOCK, INTERCONNECT.  
 NB - NEUTRAL BLOCK  
 RL1 - RELAY 1  
 SW1 - SWITCH, AUTO/OFF/MANUAL  
 SW2 - SWITCH, SET EXERCISER  
 TR1 - TRANSFORMER 1 (56 VA 240/16 VAC)  
 TR2 - TRANSFORMER 2 (6 VA 240/16 VAC)

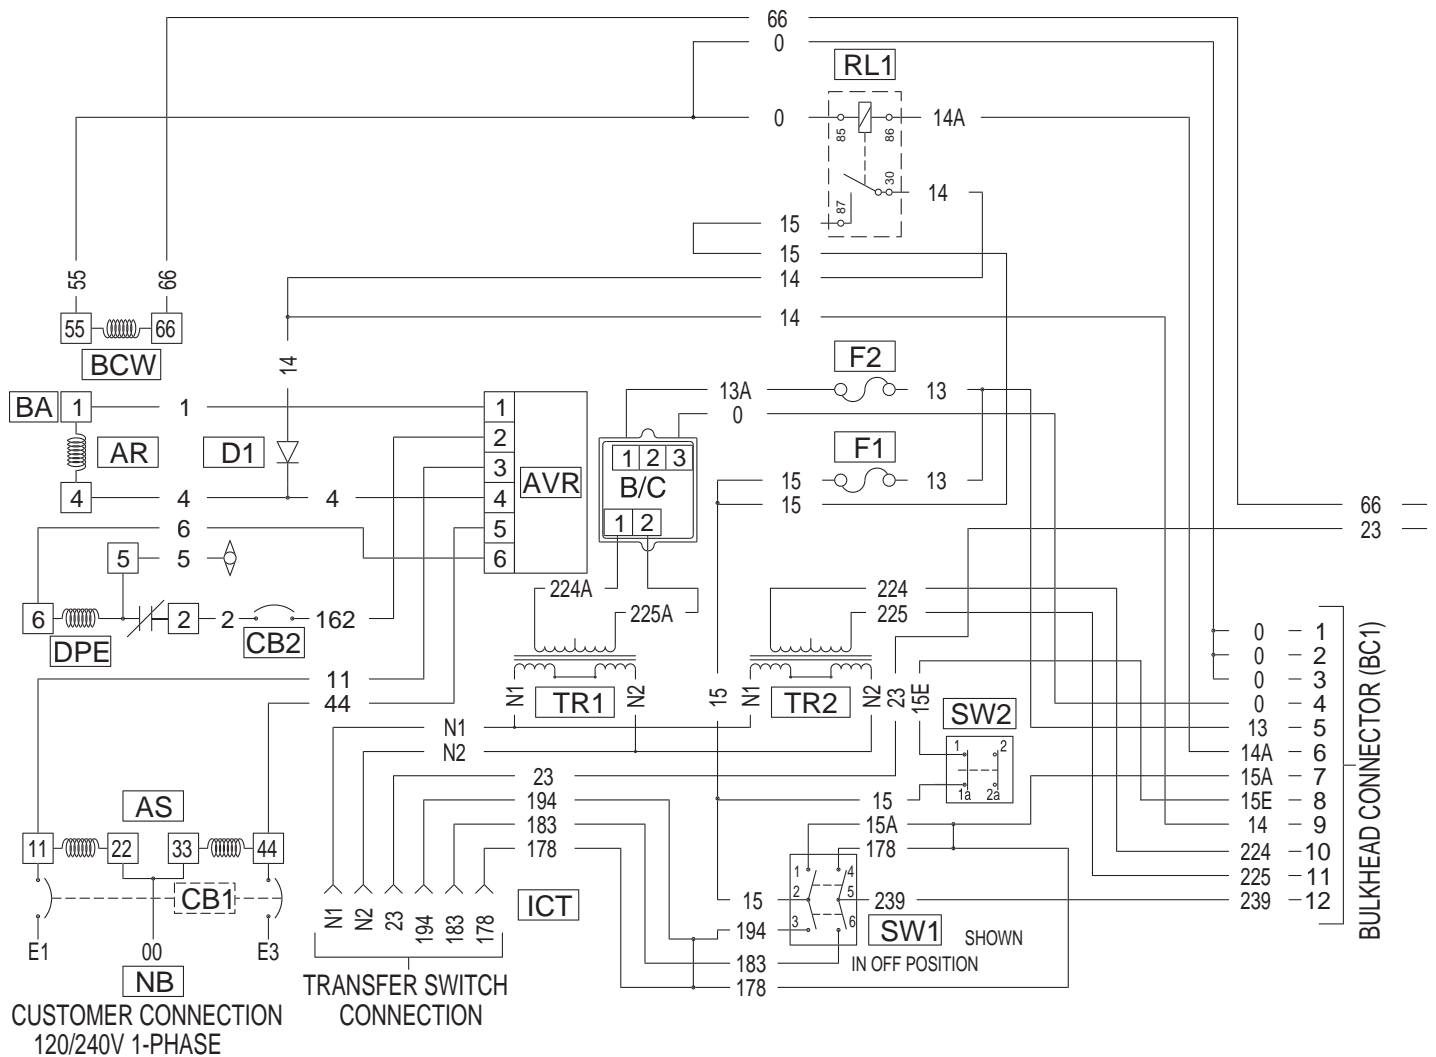




**Section 7 - Electrical Data**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Electrical Schematic – Engine – Drawing No. 0E6200**

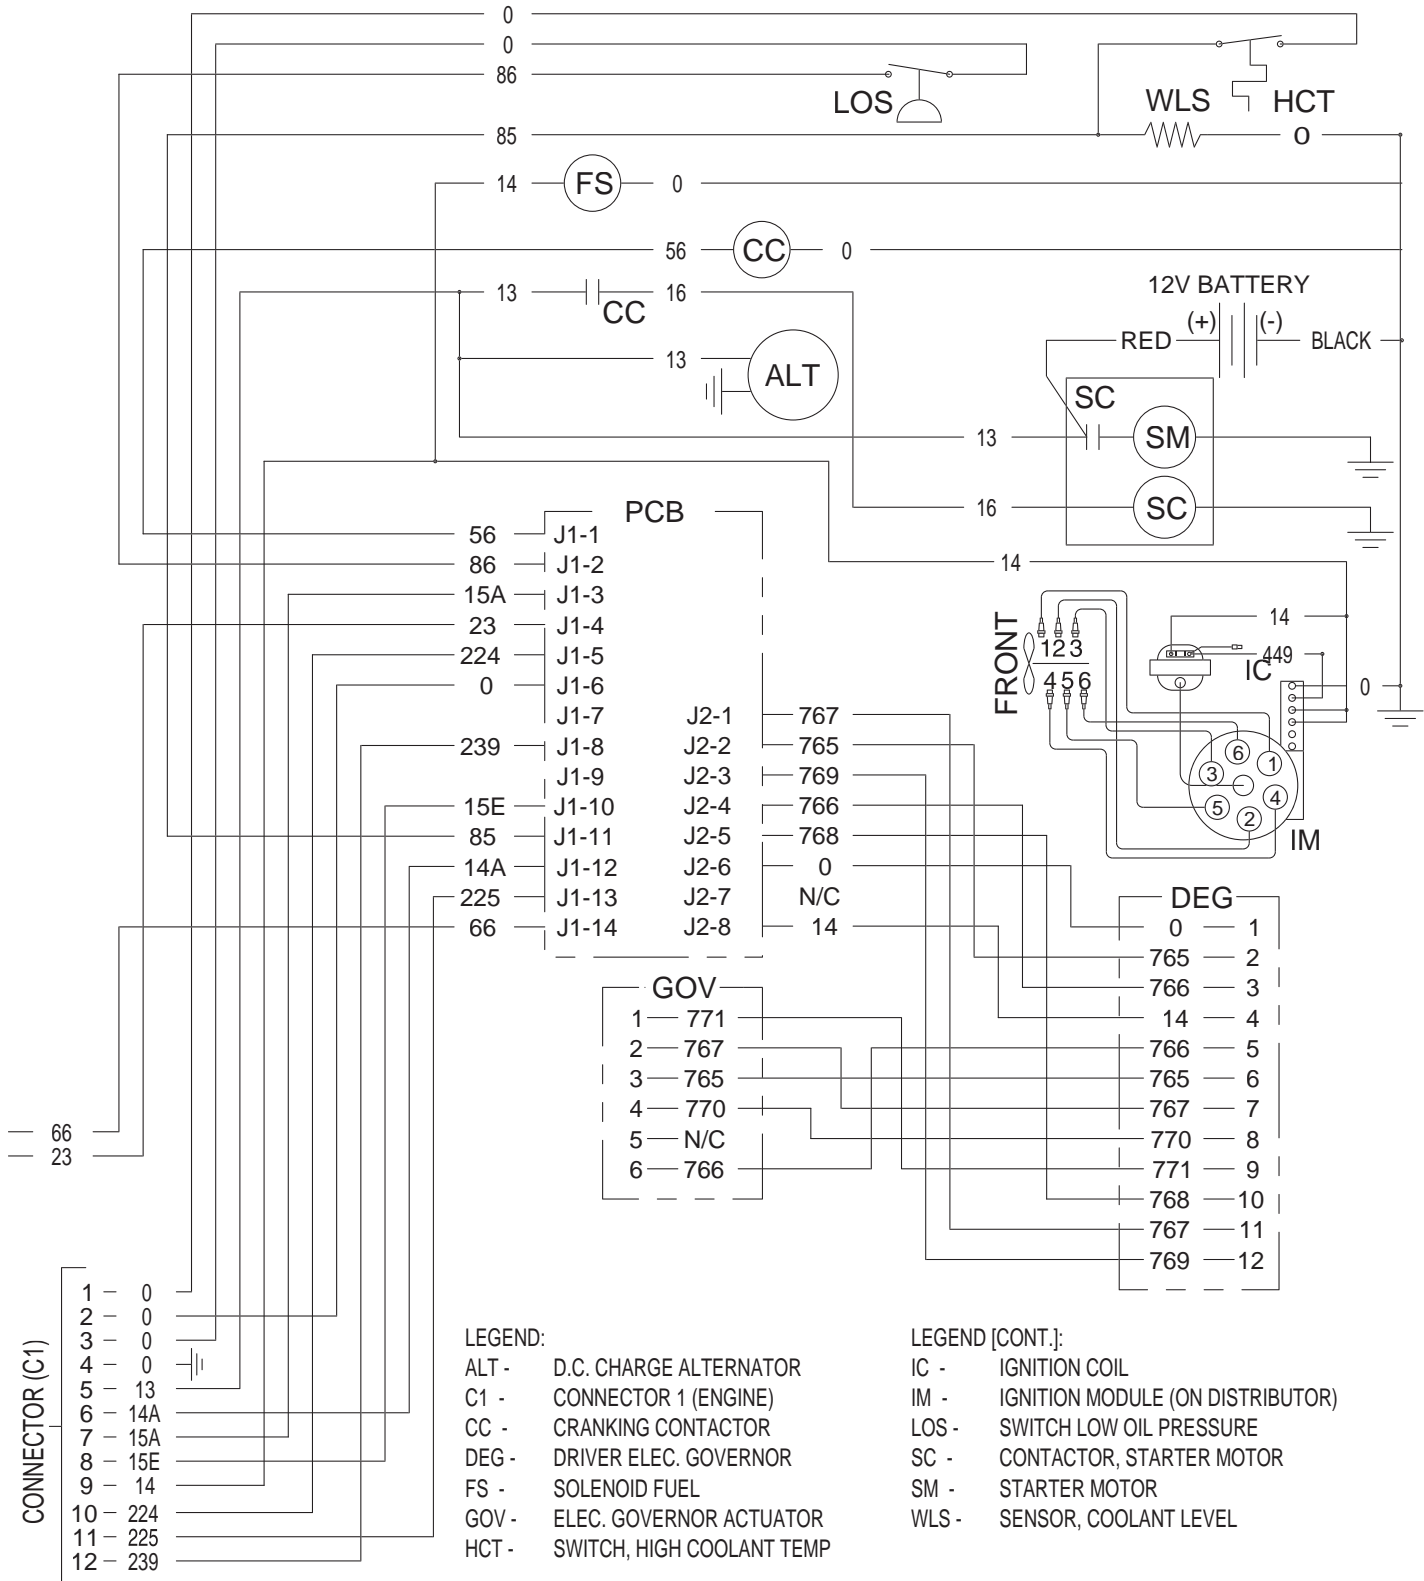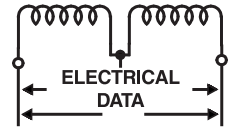




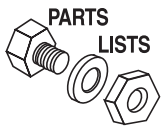


## Section 8 - Exploded Views and Parts

## Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators Mounting Base – Drawing No. 0E6266-D

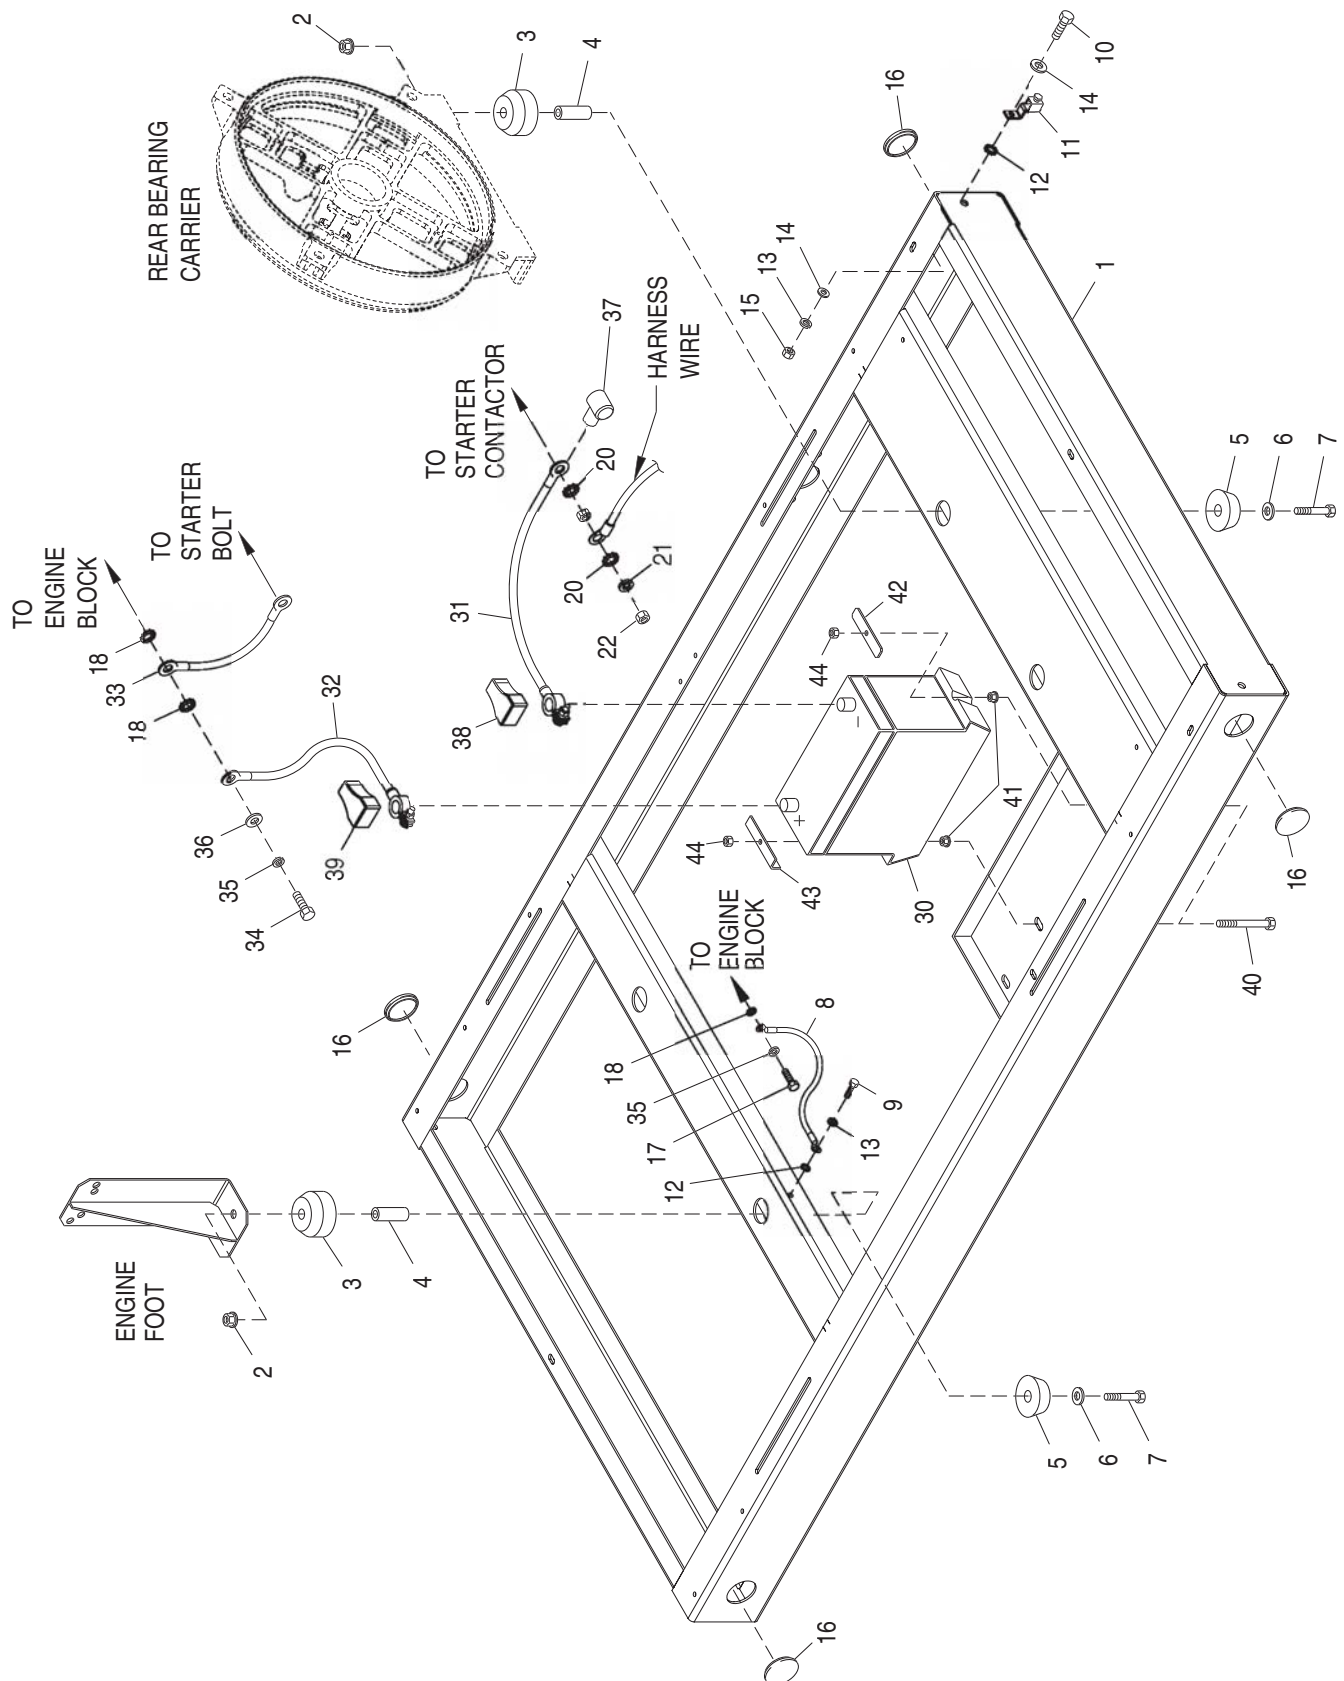




**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Mounting Base – Drawing No. 0E6266-D**

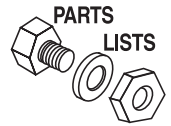

ITEM	PART NO.	QTY.	DESCRIPTION
1	0E5822	1	BASEFRAME, WELDMENT 3.0L FORD
2	052860	4	NUT FLANGED HEX M12-1.75
3	052251	4	DAMPENER VIBRATION 40 BLUE
4	052257	4	SPACER .49 X .62 X 1.87 PWDR/ZNC
5	052252	4	DAMPENER VIBRATION
6	052259	4	WASHER FLAT M12
7	052891	4	SCREW HHC M12-1.75 X 80 G8.8
8	0536210213	1	ASSY GRNDWIRE 11"/3/8 & 5/16 LUG
9	074906	1	SCREW HHTT M6-1.0 X 20 BP
10	047411	1	SCREW HHC M6-1.0 X 16 BP
11	055414	1	LUG SLDLSS #2-#8 X 17/64 CU
12	026850	2	WASHER SHAKEPROOF EXT 1/4 STL
13	022097	1	WASHER LOCK M6-1/4
14	022473	2	WASHER FLAT M6-1/4 ZINC
15	049813	1	NUT HEX M6 -1.0 G8 YEL CHR
16	0A1694	4	1-1/2" BUTTON PLUG
17	052213	1	SCREW HHC M10-1.25 X 20 G8.8
18	025507	3	WASHER SHAKEPROOF EXT 7/16 STL
20	027482	2	WASHER SHAKEPROOF EXT 5/16 STL
21	022129	1	WASHER LOCK M8-5/16
22	045771	1	NUT HEX M8-1.25 G8 YEL CHR
23 *	051756	1	SCREW HHC M10-1.5 X 20 G8.8
24 *	046526	1	WASHER LOCK M10
25 *	022131	1	WASHER FLAT 3/8-M10 ZINC
26 *	055934M	1	CLAMP VINYL .75 X .343 Z
30	077483	REF.	BATT 12VDC 75-AH 26
	058665	REF.	BATT 12VDC 90-AH 27F
31	038804D	1	CABLE BATT RED #4 X 20.00
32	038805J	1	CABLE BATT BLK #1 X 30.00
33	021991	1	EARTH STRAP
34	049814	1	SCREW HHC M10-1.5 X 25 G8.8
35	046526	2	WASHER LOCK M10
36	022131	1	WASHER FLAT 3/8 ZINC
37	075763	1	BOOT BATTERY CABLE
38	050331	1	BATTERY POST COVER BACK -
39	050331A	1	BATTERY POST COVER RED +
40	0A4010	2	SCREW HHC M8-1.25 X 60 G8.8 FT
41	052858	2	NUT TOP LOCK FL M8-1.25
42	061902	1	HOLD DOWN BATTERY
43	059473	1	HOLD DOWN BATTERY
44	049820	2	NUT HEX LOCK M8-1.25 NY INS


\* NOT SHOWN-USED TO HOLD DOWN I/N 32



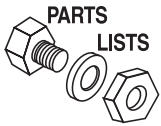


## Section 8 - Exploded Views and Parts

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators Compartment – Drawing No. 0E7828

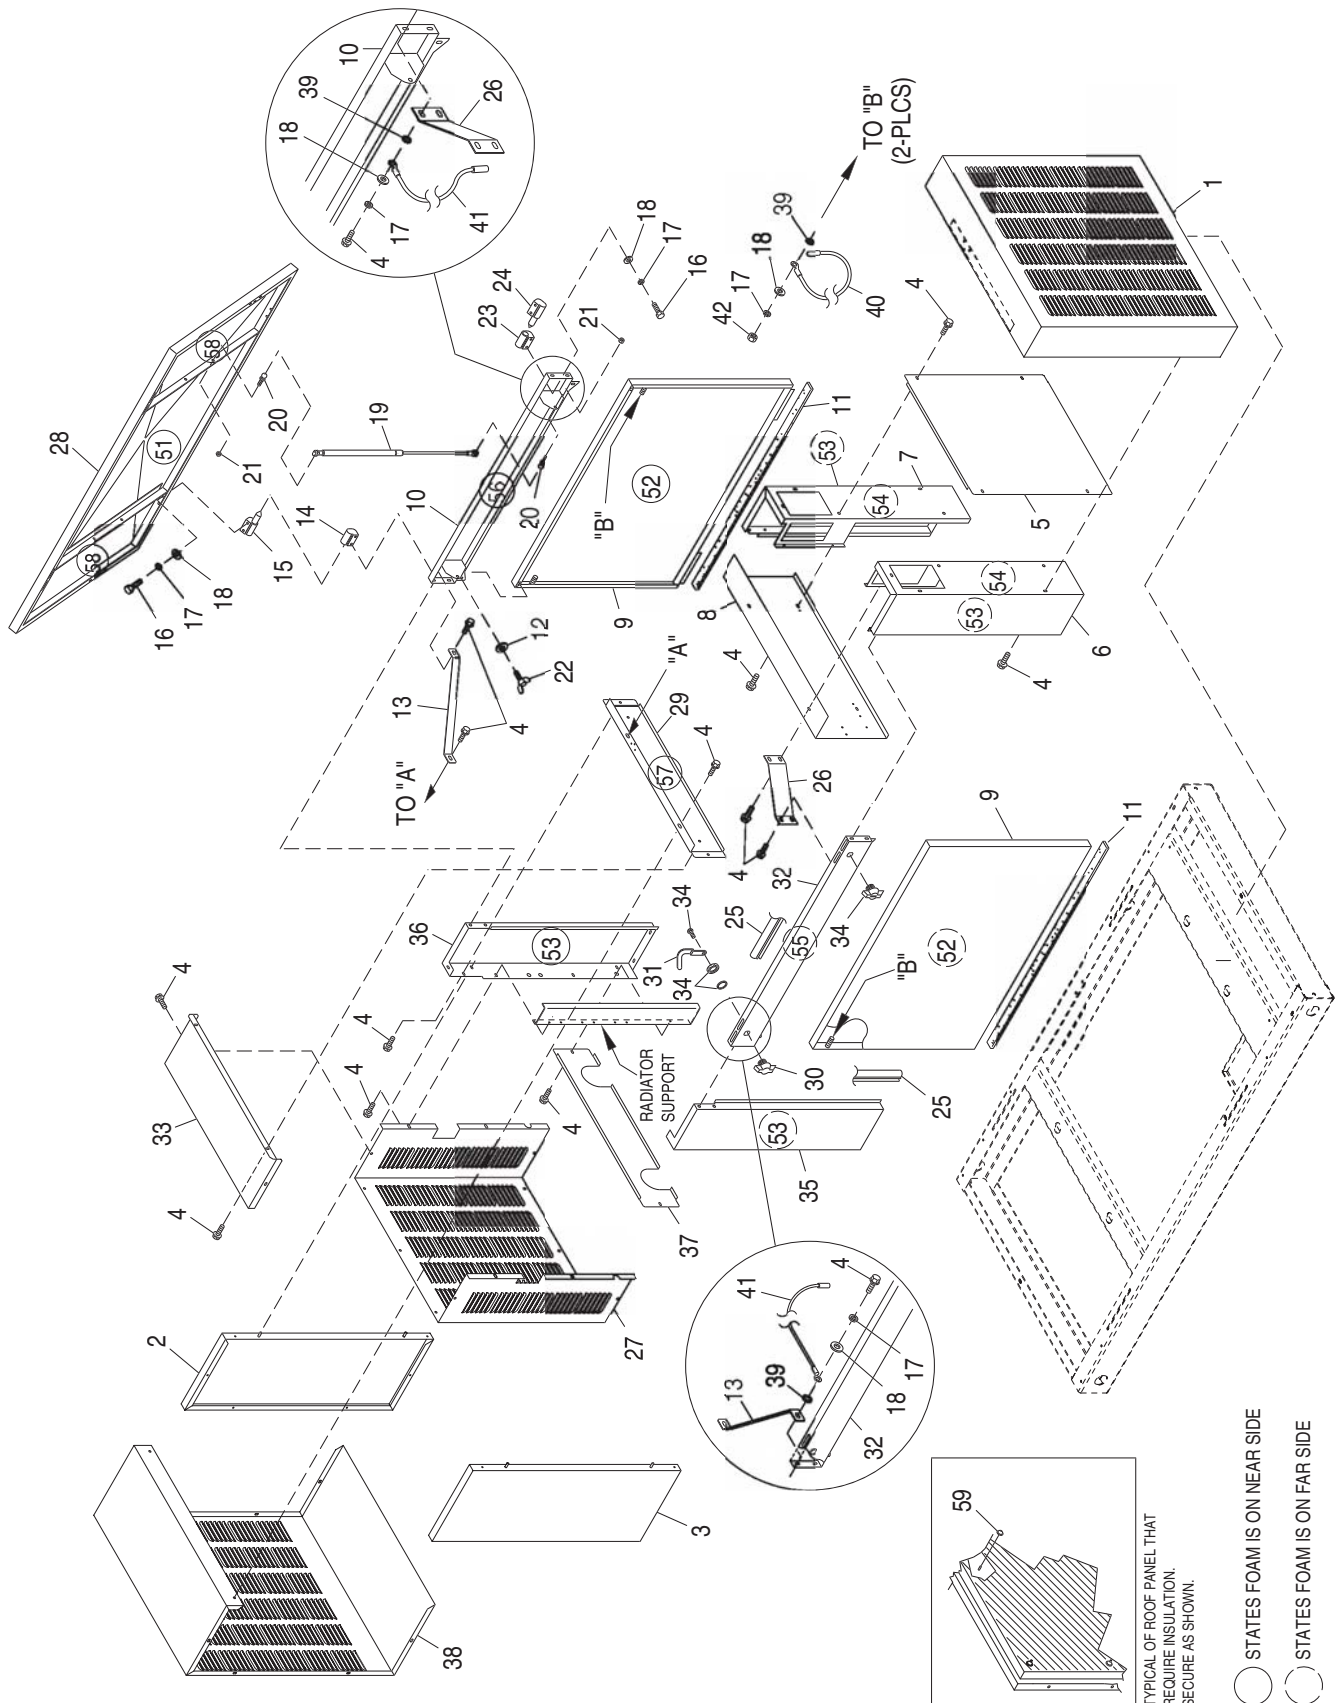




**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Compartment – Drawing No. 0E7828**

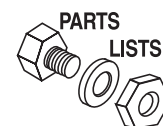

ITEM	PART NO.	QTY.	DESCRIPTION
1	0E8322	1	INTAKE DUCT HSB
2	0E6998	1	DUCT DISCHARGE RH FRONT
3	0E6997	1	DUCT DISCHARGE LH FRONT
4	0C2454	60	SCREW TH-FRM M6-1 X 16 N WA Z/JS
5	0E6991	1	BAFFLE REAR BOTTOM
6	0E6995	1	POST CORNER LH REAR
7	0E6996	1	POST CORNER RH REAR
8	0E6990	1	BAFFLE REAR TOP
9	0E6986	2	DOOR COMPARTMENT SIDE
10	0E8061	1	SUPPORT W/GAS SPRING MNT RH SD
11	089961	2	FOAM STRIP 3/4" WIDE X 3/16" THK (40" LG)
12	0A2115	4	WASHER NYLON .257
13	0E7868	2	BRACKET STIFFENING 3.0L FORD FRONT
14	0D2538A	1	HINGE LIFT OFF TYPE B KNUCKLE
15	0D2538	1	HINGE LIFT OFF TYPE B PIN
16	043116	8	SCREW HHC M6-1.0 X 12 G8.8
17	022097	12	WASHER LOCK M6-1/4
18	022473	12	WASHER FLAT 1/4-M6 ZINC
19	0E7570	2	GAS SPRING
20	0E7571	4	BALL STUD GAS SPRING MOUNT
21	070015	4	NUT HEX 5/16-18 LOCK
22	0E7662	4	SCREW WING M6-1.00 X 25
23	0D2537A	1	HINGE LIFT OFF TYPE A KNUCKLE
24	0D2537	1	HINGE LIFT OFF TYPE A PIN
25	0D2023	3	GASKET CLIP-ON SELF GRIPPING (84" LG)
26	0E7869	2	BRACKET STIFFENING 3.0L FORD BACK
27	0E7198	1	MUFFLER BOX 3.0L FORD
28	0E8060	1	ROOF W/GAS SPRING MNT 3.0L FRD
29	0E6988	1	BRACE FRONT TOP
30	0D3037A	1	LATCH 1/4 TURN NONLOCKING
31	0C7781	2	PAWL DOOR HSB
32	0E6984	1	SUPPORT LH SIDE
33	0E7198A	1	MUFFLER BOX TOP & BOTTOM SS
34	0D3037	1	LATCH QUARTER TURN LOCKING
35	0E6993	1	POST CORNER LH FRONT
36	0E6994	1	POST CORNER RH FRONT
37	0E6989	1	BRACE FRONT BOTTOM
38	0E7001	1	DUCT DISCHARGE MID FRONT
39	026850	4	WASHER SHAKEPROOF EXT 1/4 STL
40	0912970063	1	ASSY GRD WIRE 99HSB
41	0912970064	1	ASSEMBLY,BASE-DOOR GROUND WIRE
42	049813	2	NUT HEX M6 X 1.0 G8 YEL CHR
50 *	0E8164	1	KIT INSULATION 3.0L HSB
51	0E7829A	1	AI ROOF PANEL 1
52	0E7829B	2	AI DOOR PANEL
53	0E7829C	4	AI CORNER POST PANEL 1
54	0E7829D	2	AI CORNER POST PANEL 2
55	0E7829K	1	AI SUPPORT LH PANEL
56	0E7829L	1	AI SUPPORT RH PANEL
57	0E7829M	1	AI FRONT BRACE PANEL
58	0E7829N	2	AI ROOF PANEL 2
59	078115	8	WASHER SELF LOCKING DOME


\* ALL ITEMS NOTATED WITH "AI" ARE COMPONENTS OF 0E8164



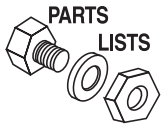


## Section 8 - Exploded Views and Parts

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators Control Panel – Drawing No. 0E7118-C

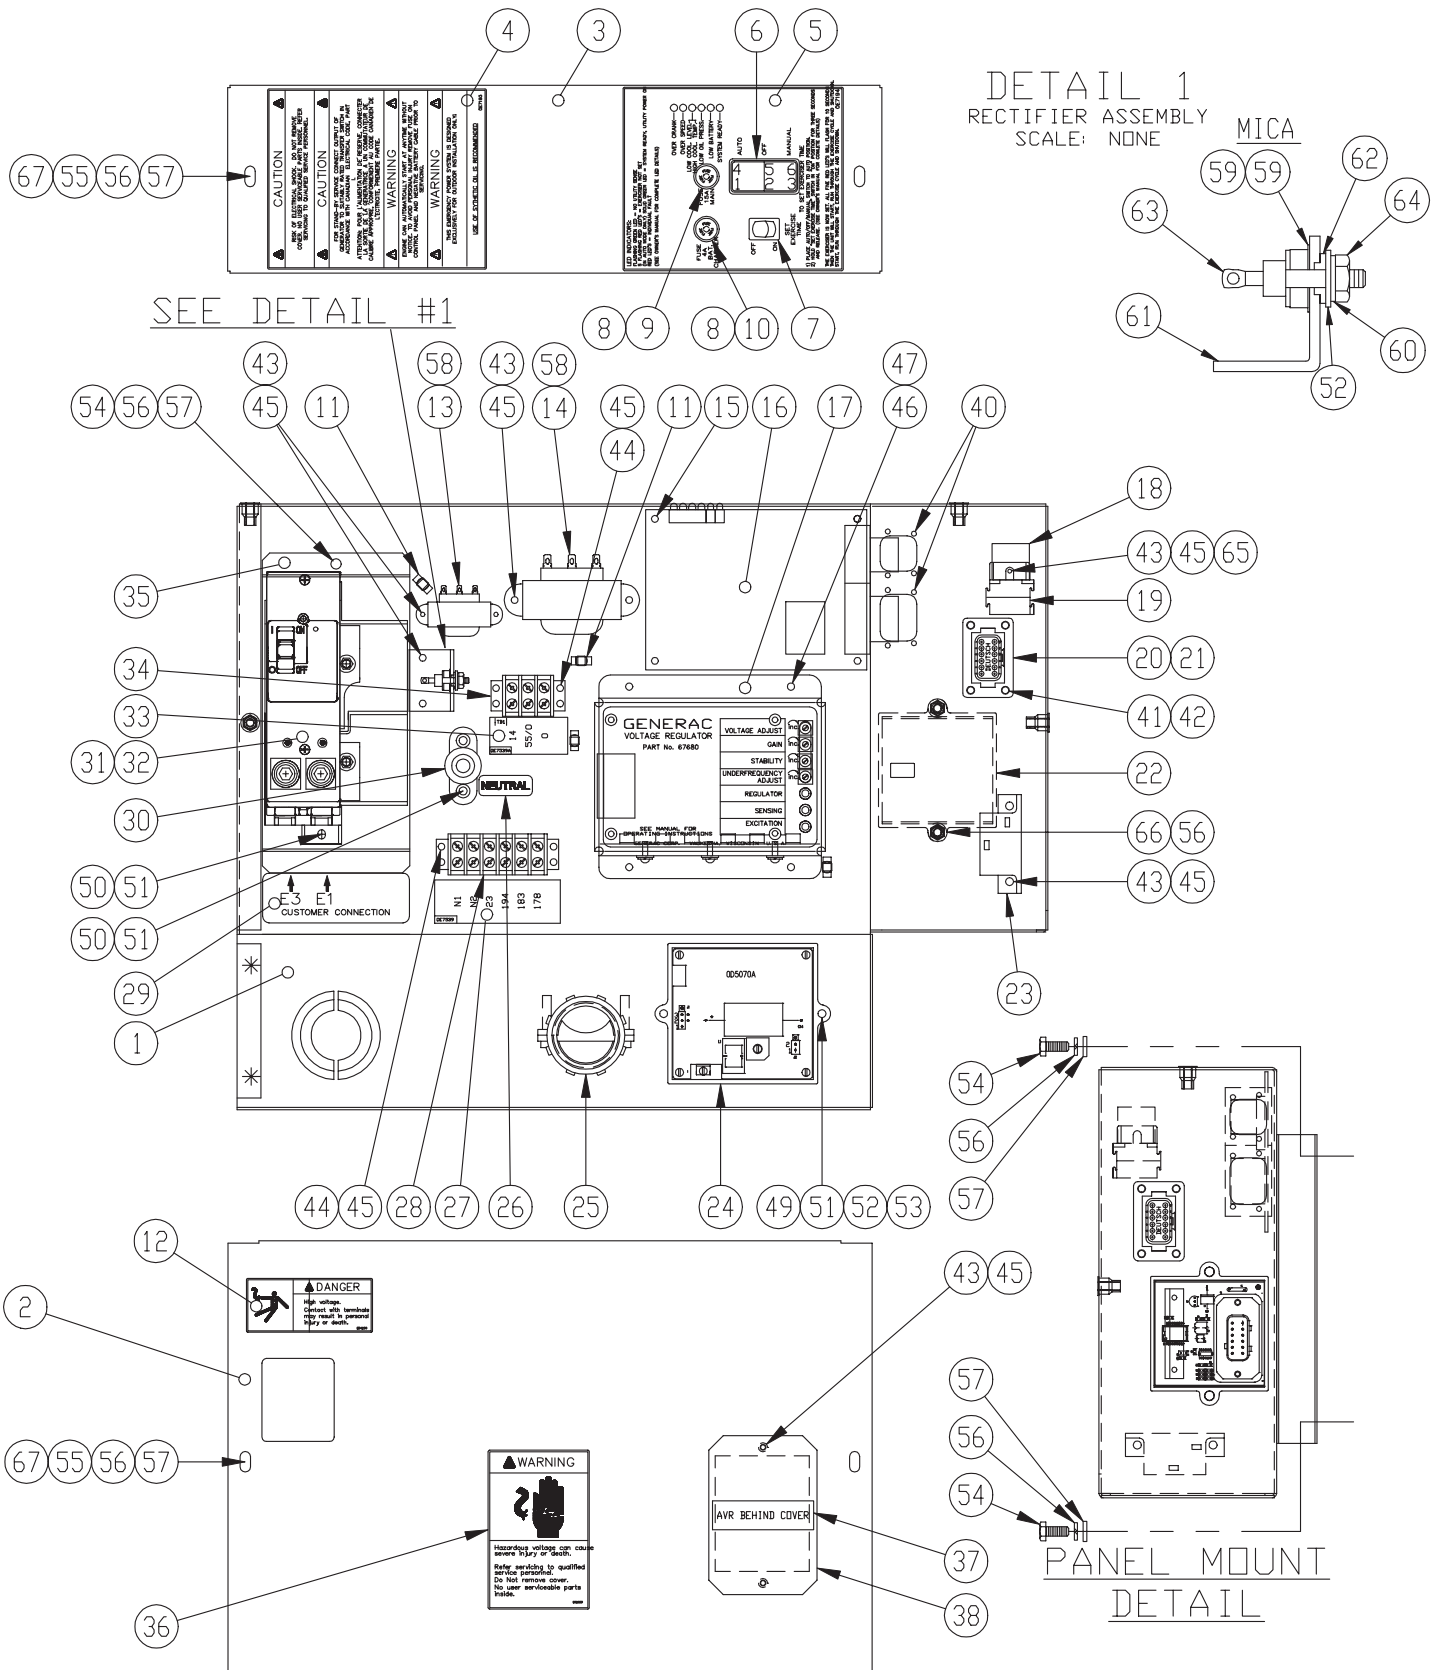



**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Control Panel – Drawing No. 0E7118-C**

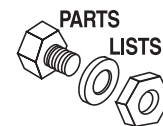


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0E7195	1	CONTROL BOX HSB	34	0D4698 *	REF.	BLOCK TERM 20A 6 X 3 X 1100V
2	0E7196	1	COVER FRONT PANEL HSB	35	0E7252	1	BRACKET CB 221.5 X 102
3	0E7197	1	COVER TOP PANEL HSB	36	0C1229	1	DECAL WARNING ELECTRICAL SHOCK
4	0E7193	1	DECAL WARNINGS HSB				
5	0E7194	1	DECAL CONTROLS HSB	37	0C1127	1	DECAL AVR COVER
6	0E4494	1	SWITCH ROC DPDT ON-OFF-ON	38	0A1441B	1	COVER PLATE, AVR
7	082573	1	SWITCH ROCKER DPST 125V SPD	39	0E7128	1	HARNESS CNTRL PNL 3.0L FORD (NOT SHOWN)
8	032300	2	HOLDER FUSE				
9	022676	1	FUSE 15A X AGC15	40	0E7358	8	SCREW PPPH HI-LO #4-24-1/2" LG
10	067682B	1	FUSE 4A SLO BLO GLASS	41	074908	4	SCREW HHTT M5-0.8 X 10 BP
11	063378	2	HOLDER CABLE TIE	42	0C5141	1	CONN DEUTSCH GASKET 8/12 POS DT
12	054199	1	DECAL DANGER HIGH VOLTAGE				
13	0C2657	1	TRANSFRMR 16V 6VA	43	0C2699	11	SCREW PHTT #6-32 X 3/8 ZYC
14	099076	1	TRANSFORMER 16V 56VA	44	0C2323	4	SCREW PHTT #6-32 X 5/8 ZYC
15	040213	2	PCB SUPPORT SNAP-IN 1/4"	45	022155	15	WASHER LOCK #6
16	0E4905	1	ASSY HSB CONTROLLER 3.0L FORD	46	0C2265	4	SCREW PHTT M4-0.7 X 12 ZYC
				47	022264	4	WASHER LOCK #8-M4
17	067680	1	ASSY VOLTAGE REGULATOR 60HZ	49	020911	2	SCREW PPHM M5-0.8 X 30 ZINC
18	0E6875A	1	RELAY 12VDC C FORM W/DIODE	50	066849	4	SCREW HHTT M5-0.8 X 16
19	0E6881 *	REF.	SOCKET RELAY	51	022152	6	WASHER LOCK #10
20	0C5139 *	REF.	CONN DEUTSCH RECEPT GY/FLN	52	023897	3	WASHER FLAT #10 ZINC
21	0E5142 *	REF.	CONN DEUTSCH RECEPT WDGE BLKHD	53	051716	2	NUT HEX M5-0.8 G8 YEL CHR
				54	090388	6	SCREW HHTT M6-1.0 X 12 ZINC
22	0E3161	1	ASSY BOSCH GOV DRIVER	55	042568	4	SCREW HHC M6-1.0 X 20 G8.8
23	054450	1	CIRCT BRK 5.5 X 1 ETA 46-500-P	56	022097	12	WASHER LOCK M6-1/4
24	0D5070A	1	ASSY 2A 12V UL BATTERY CHARGER	57	022473	10	WASHER FLAT 1/4-M6 ZINC
				58	0441140187	2	WIRE ASSY 3" X (2) 3/16" TABS
25	0E2514	1	FITTING CONDUIT STR 1-1/2"	59	070370	2	WASHER MICA .203
26	0A9457	1	DECAL NEUTRAL	60	023762	1	WASHER SHAKEPROOF EXT #10 STL
27	0E7539	1	DECALCUSTOMER CNNCTN XFER SW				
28	046357 *	REF.	BLOCK TERM 20A 6 X 6 X 1100V	61	055444	1	HEATSINK
29	0D3719B	1	DECAL CUSTOMER CNNCTN E1 E3 N	62	030468	1	WASHER STEP NYLON .20
				63	049939	1	RECTIFIER MSC 12A 600V 1N1206R
30	057073	1	JUNCTION BLOCK 3/8-16	64	022158	1	NUT HEX #10-32 STEEL
31	0E7283	1	CB 0150A2P240V S QN2 LL	65	022985	1	WASHER FLAT #6 ZINC
	0E3628	1	CB 0200A2P240V S QN2 LL	66	038750	2	SCREW HHC M6-1.0 X 30 G8.8
32	0E3664	1	BASE QN CIRCUIT BREAKER	67	0A2115	4	WASHER NYLON .257
33	0E7539A	1	DECAL TB1 HSB CONTROL PANEL	* ITEM INCLUDED AS PART OF I/N 39			



## Section 8 - Exploded Views and Parts


### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators

Engine — Drawing No. 0E8170-B

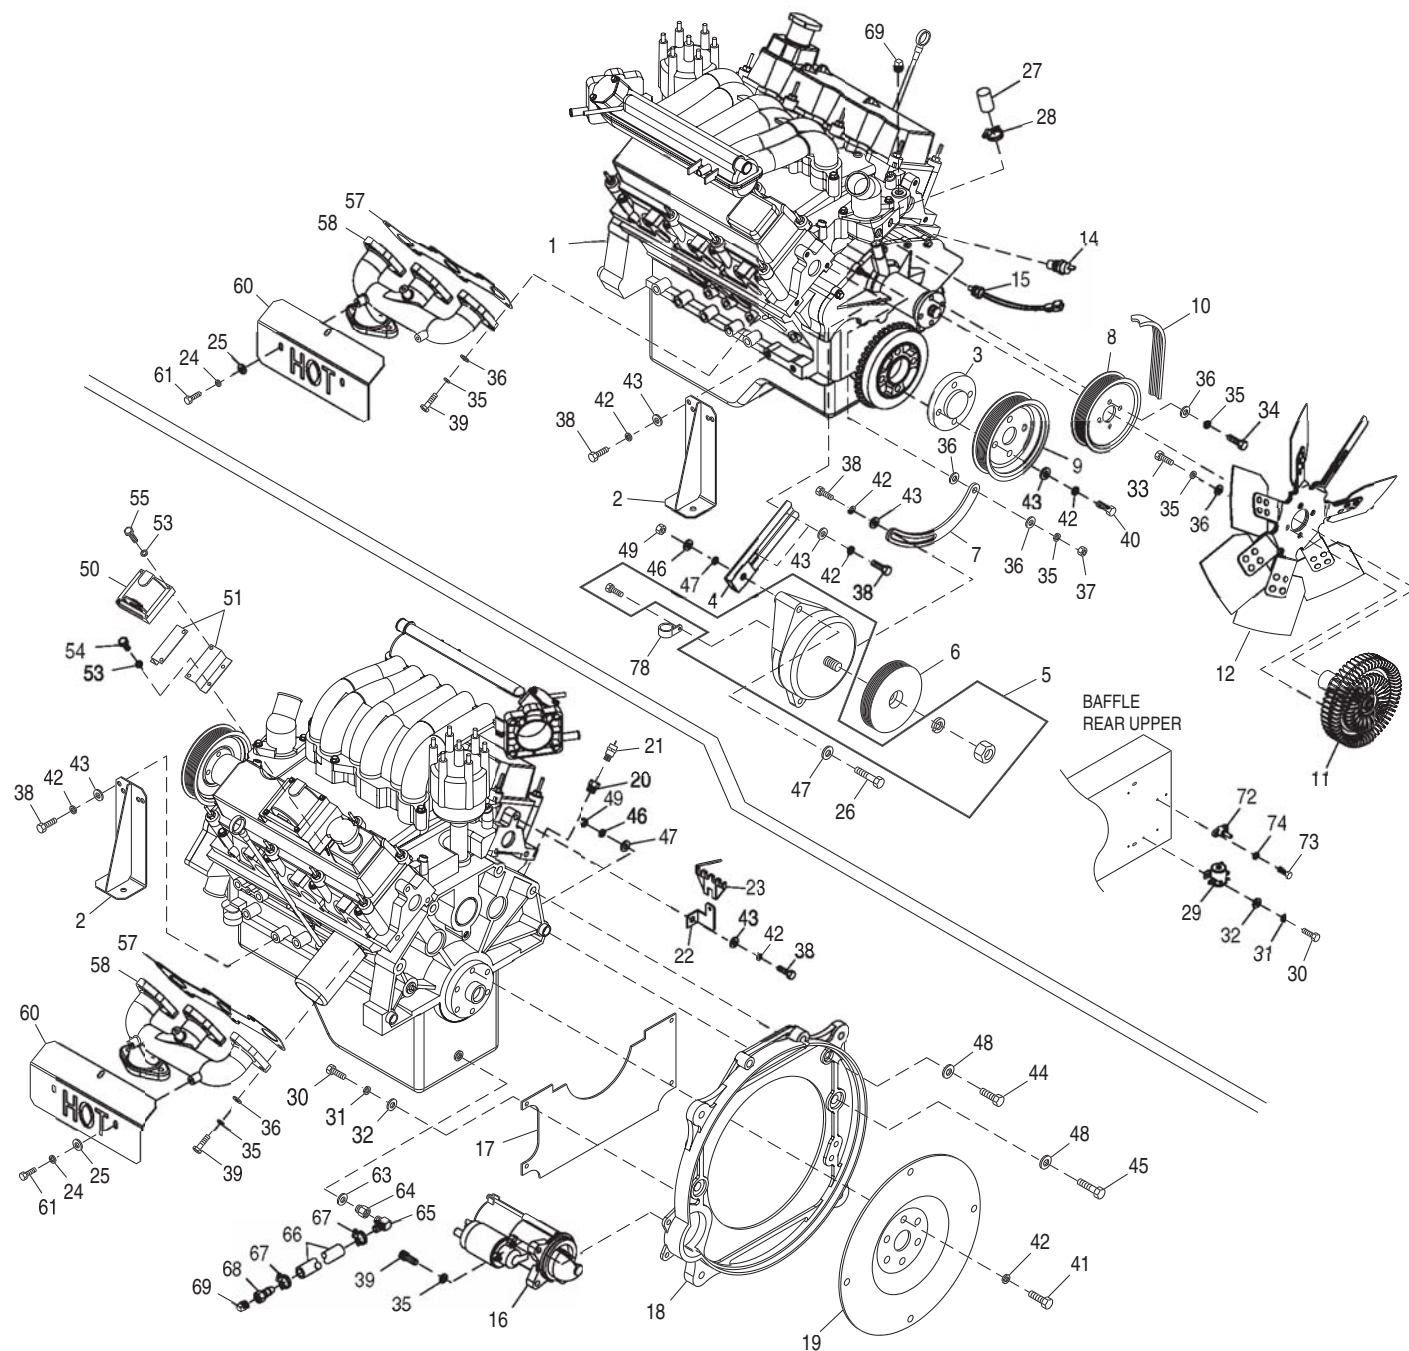




**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Engine — Drawing No. 0E8170-B**

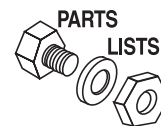

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0E6202	1	ENGINE 3.0L FORD (RD) (MAKE)	42	046526	18	WASHER LOCK M10
2	0E5104	2	ENGINE FOOT 3.0L FORD	43	022131	12	WASHER FLAT 3/8-M10 ZINC
3	0E6313	1	SPACER PULLEY 3.0L FORD (RD)	44	059982	4	SCREW SHC M12-1.75 X 45 G10.9
4	0E6690	1	BRACKET DC ALT 3.0LFORD	45	098780	2	SCREW HHC M12-1.75 X 65 G8.8
5	0A1232	1	D.C. ALTERNATOR ASSY	46	051769	3	WASHER LOCK M12
6	0A7801B	1	PULLEY POLY-V 82 OD.	47	049808	2	WASHER FLAT M12
7	0A5610	1	BRACKET ALTERNATOR	48	051430	6	WASHER SHAKEPROOF INT 1/2
8	0E6308	1	PULLEY WATERPUMP 3.0L FORD (RD)	49	045773	3	NUT HEX M12-1.75 G8 YEL CHR
9	0E6309	1	PULLEY CRANKSHAFT 3.0L FORD	50	0E6203C	1	COIL IGNITION 3.0L FORD
10	0E6310	1	FAN BELT 3.0L FORD	51	0E6679	2	BRACKET IGN COIL 3.0L FORD
11	0E7996	1	CLUTCH COOLING FAN FORD	53	049226	7	WASHER LOCK M5
14	035606	1	SENSOR HI COOLANT SHUTDOWN	54	091526	3	SCREW PPHM M5-0.8 X 12 ZNC
15	0E0561	1	ASSY WATER LEVEL SENSOR C/E PL	55	093278	4	SCREW HHTT M5-0.8 X 25 BP
16	0E6729	1	STARTER DELCO-REMY 12V	56	0E6517	1	HARNESS ENGINE 3.0L FORD HSB (NOT SHOWN)
17	0E6703	1	COVER FLYWHEEL ACCESS 3.0LHSB	57	0E7163	2	GASKET EXHAUST 3.0L FORD
18	0E6667	1	ENGINE ADAPTER 3L FORD	58	0E5527	2	MANIFOLD EXHAUST 3.0L FORD
19	0E5048	1	FLEXPLATE 3.0L FORD	60	0E7202	2	HEAT SHIELD 260 X 80 HOT
20	035579	1	BUSHING REDUCER 1/4 TO 1/8	61	085296	6	SCREW HHC 1/4-20 X 1/2 SS
21	0A8584	1	SWITCH OIL PRESSURE 10PSI 2POL	62	0E6203D	1	WIRE SET 3.0L FORD (NOT SHOWN)
22	044101	1	BRACKET SPARK PLUG WIRE	63	057772	1	WASHER NYLON .565
23	058030	1	RETAINER PLUG WIRES	64	057765	1	ADAPTER M14-1.50 X 3/8 NPT
24	083896	6	WASHER LOCK 1/4-M6 SS	65	061696	1	BARBED EL 90 3/8 NPT X 1/2
25	084929	6	WASHER FLAT 1/4 SS	66	052223	1	HOSE 1/2 ID SAE-30R2 FUEL/OIL
26	052891	1	SCREW HHC M12-1.75 X 80 G8.8	67	057822	2	CLAMP HOSE #8 .53-1.00
27	077996	1	CAP HOSE	68	0D3038C	1	BARBED STR FE 3/8 NPT X 1/2
28	057823	1	CLAMP HOSE #10 .56-1.06	69	026925	2	PLUG STD PIPE 3/8 STEEL SQ HD
29	056739	1	RELAY SOLENOID 12VDC PNL MNT	70 *	065853	1	SPRING CLIP .75-1.12
30	047411	6	SCREW HHC M6-1.0 X 16 G8.8	71 *	0A2111	1	SCREW SWAGE 10-32 X 5/16 Z/YC
31	022097	6	WASHER LOCK M6-1/4	72	057073	1	JUNCTION BLOCK 3/8-16
32	022473	6	WASHER FLAT 1/4-M6 ZINC	73	066849	2	SCREW HHTT M5-0.8 X 16
33	042907	4	SCREW HHC M8-1.25 X 16 G8.8	74	022152	2	WASHER LOCK #10
34	040976	4	SCREW SHC M8-1.25 X 20 G12.9	75	0E7880	2	CLIP SPARK PLUG 3P SCREW-MOUNT (NOT SHOWN)
35	022129	24	WASHER LOCK M8-5/16	76	0E7880A	4	CLIP SPARK PLUG 2P SCREW-MOUNT (NOT SHOWN)
36	022145	22	WASHER FLAT 5/16-M8 ZINC	77	0E7880B	1	CLIP SPARK PLUG 3P FREEHANG (NOT SHOWN)
37	045771	1	NUT HEX M8-1.25 G8 YEL CHR	78	055934C	1	CLAMP VINYL .5 X .406 Z
38	051756	8	SCREW HHC M10-1.5 X 20 G8.8				
39	049821	15	SCREW SHC M8-1.25 X 30 G12.9				
40	0A7387	4	SCREW HHC M10-1.5 X 40 G10.9				
41	0D5417	REF.	SCREW HHC M10-1.0 X 25 G10.9				


\* NOT SHOWN-USED TO HOLD OIL DRAIN ASSEMBLY.



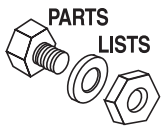


## Section 8 - Exploded Views and Parts

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators Radiator – Drawing No. 0E6267-B

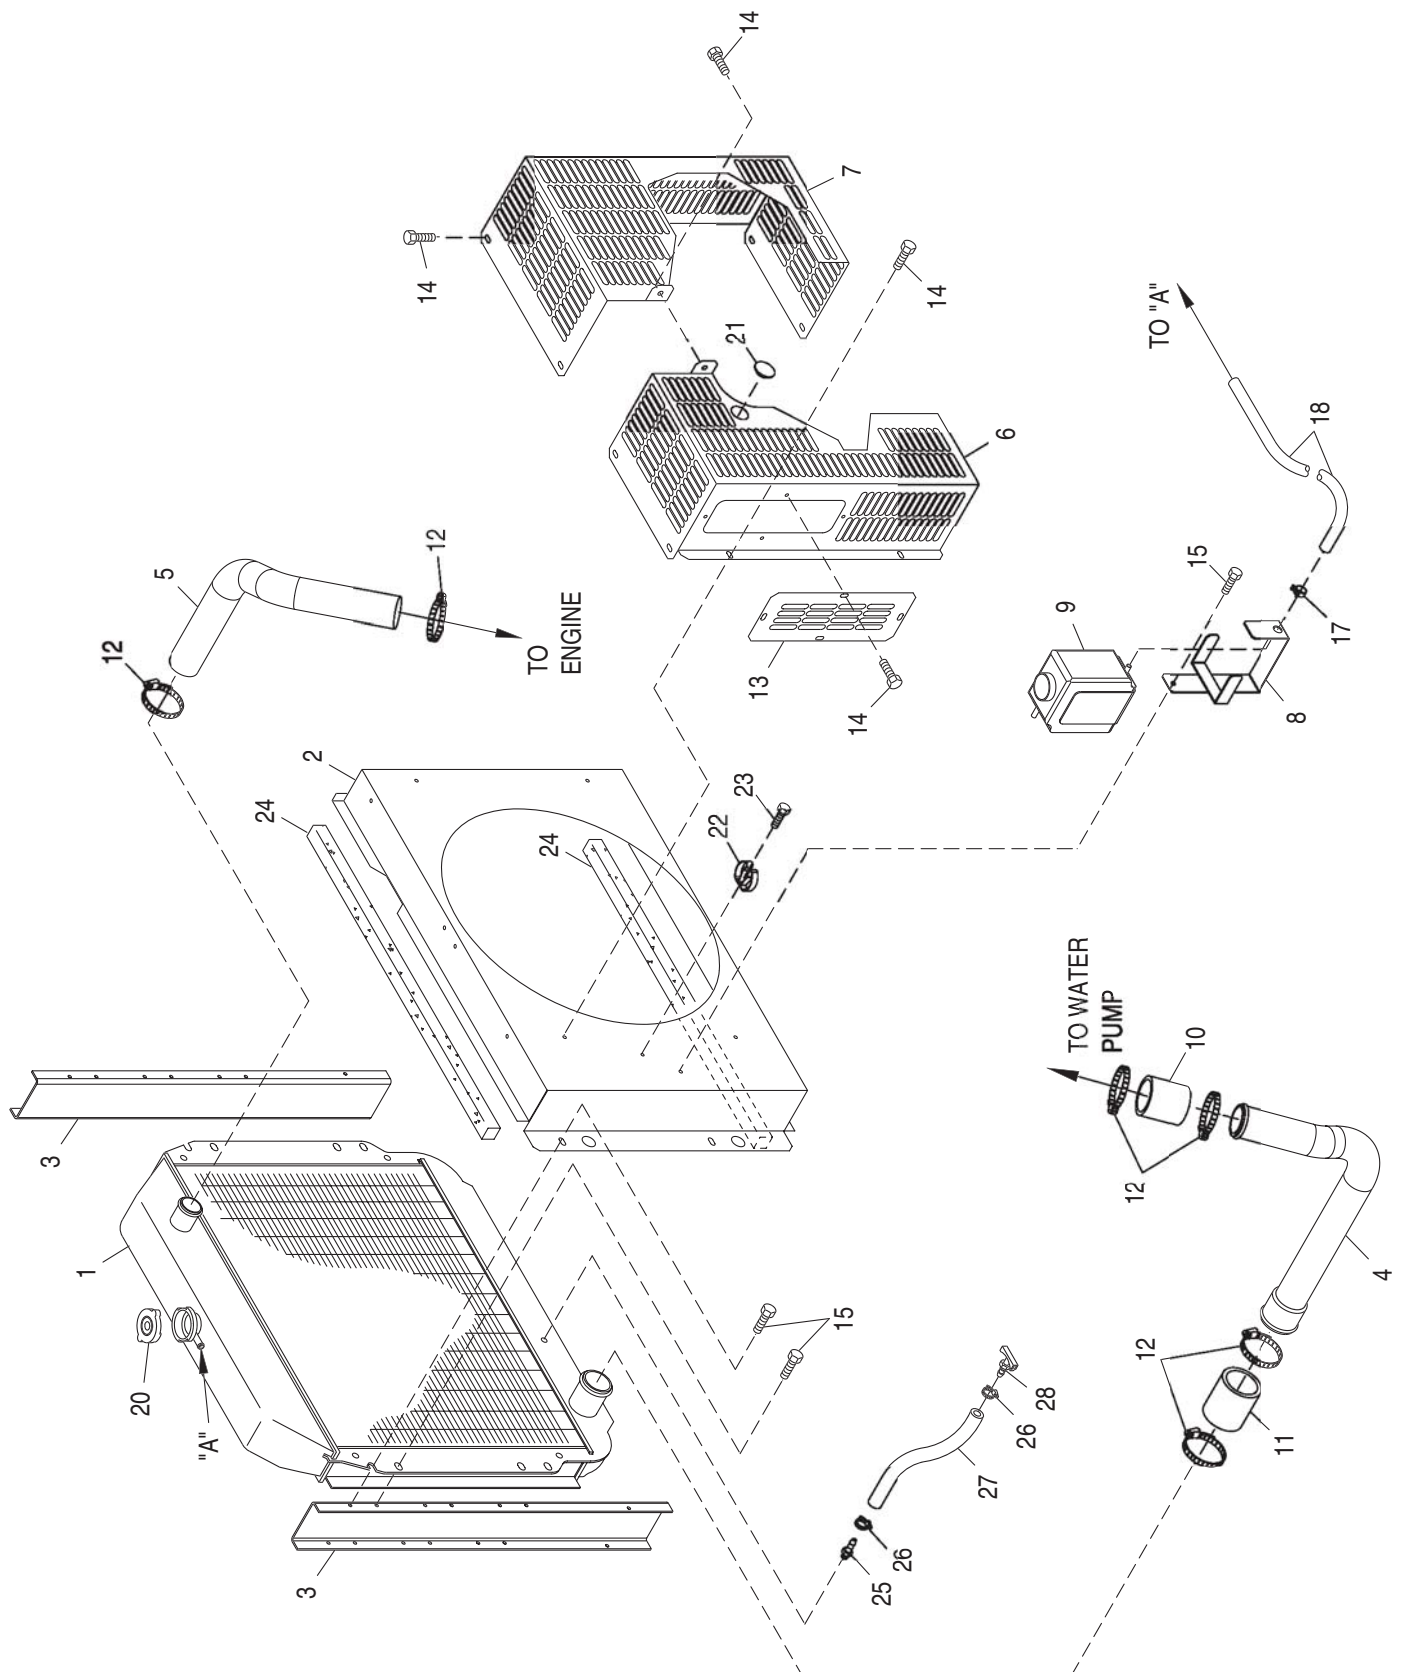



**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Radiator – Drawing No. 0E6267-B**

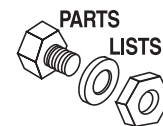


ITEM	PART NO.	QTY.	DESCRIPTION
1	0C3829	1	RADIATOR 14FIN 3LHA
2	0E6340	1	VENTURI 3.0L FORD HSB
3	0E6992	2	SUPPORT RADIATOR
4	0E6398	1	TUBE LOWER RAD 3.0L FORD HSB
5	0E6397	1	HOSE UPPER RAD 3.0LFORD HSB
6	0E6409	1	FAN GUARD LH 3.0L FORD HSB
7	0E6438	1	FAN GUARD RH 3.0L FORD HSB
8	080713	1	BRACKET COOLANT TANK
9	076749	1	TANK COOLANT RECOVERY
10	057753A	1	HOSE 1.5 ID X 3 LG 20R4
11	066187A	1	HOSE 1.75 ID X 3 LG 20R4
12	035685	6	CLAMP HOSE #28 1.32-2.25
13	0E4629	1	GUARD ACCESS COVER SMALL L-ONE
14	058443	17	SCREW CRIMPTITE 1/4-20 X 5/8
15	0C2454	5	SCREW TH-FRM M6-1X16 N WA Z/JS
17	048031C	1	CLAMP HOSE BAND 1/4
18	029032	1	HOSE 9/32 ID (30" LG)
20	046627	1	CAP RADIATOR
21	023484S	1	BUSHING SNAP SB-1093-937
22	065852	1	SPRING CLIP HOLDER .37-.62
23	0A2111	1	SCREW SWAGE 10-32 X 5/16 Z/YC
24	052250	2	TAPE FOAM 1 X 1 (27"LG)
25	035461	1	BARBED STR 1/4NPT X 3/8
26	0C7649	1	CLAMP HOSE .38-.87
27	047290A	1	ASSY RAD DRAIN HOSE
28	036865	1	DRAINCOCK



## Section 8 - Exploded Views and Parts


### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### Fuel System – Drawing No. 0E8190-A

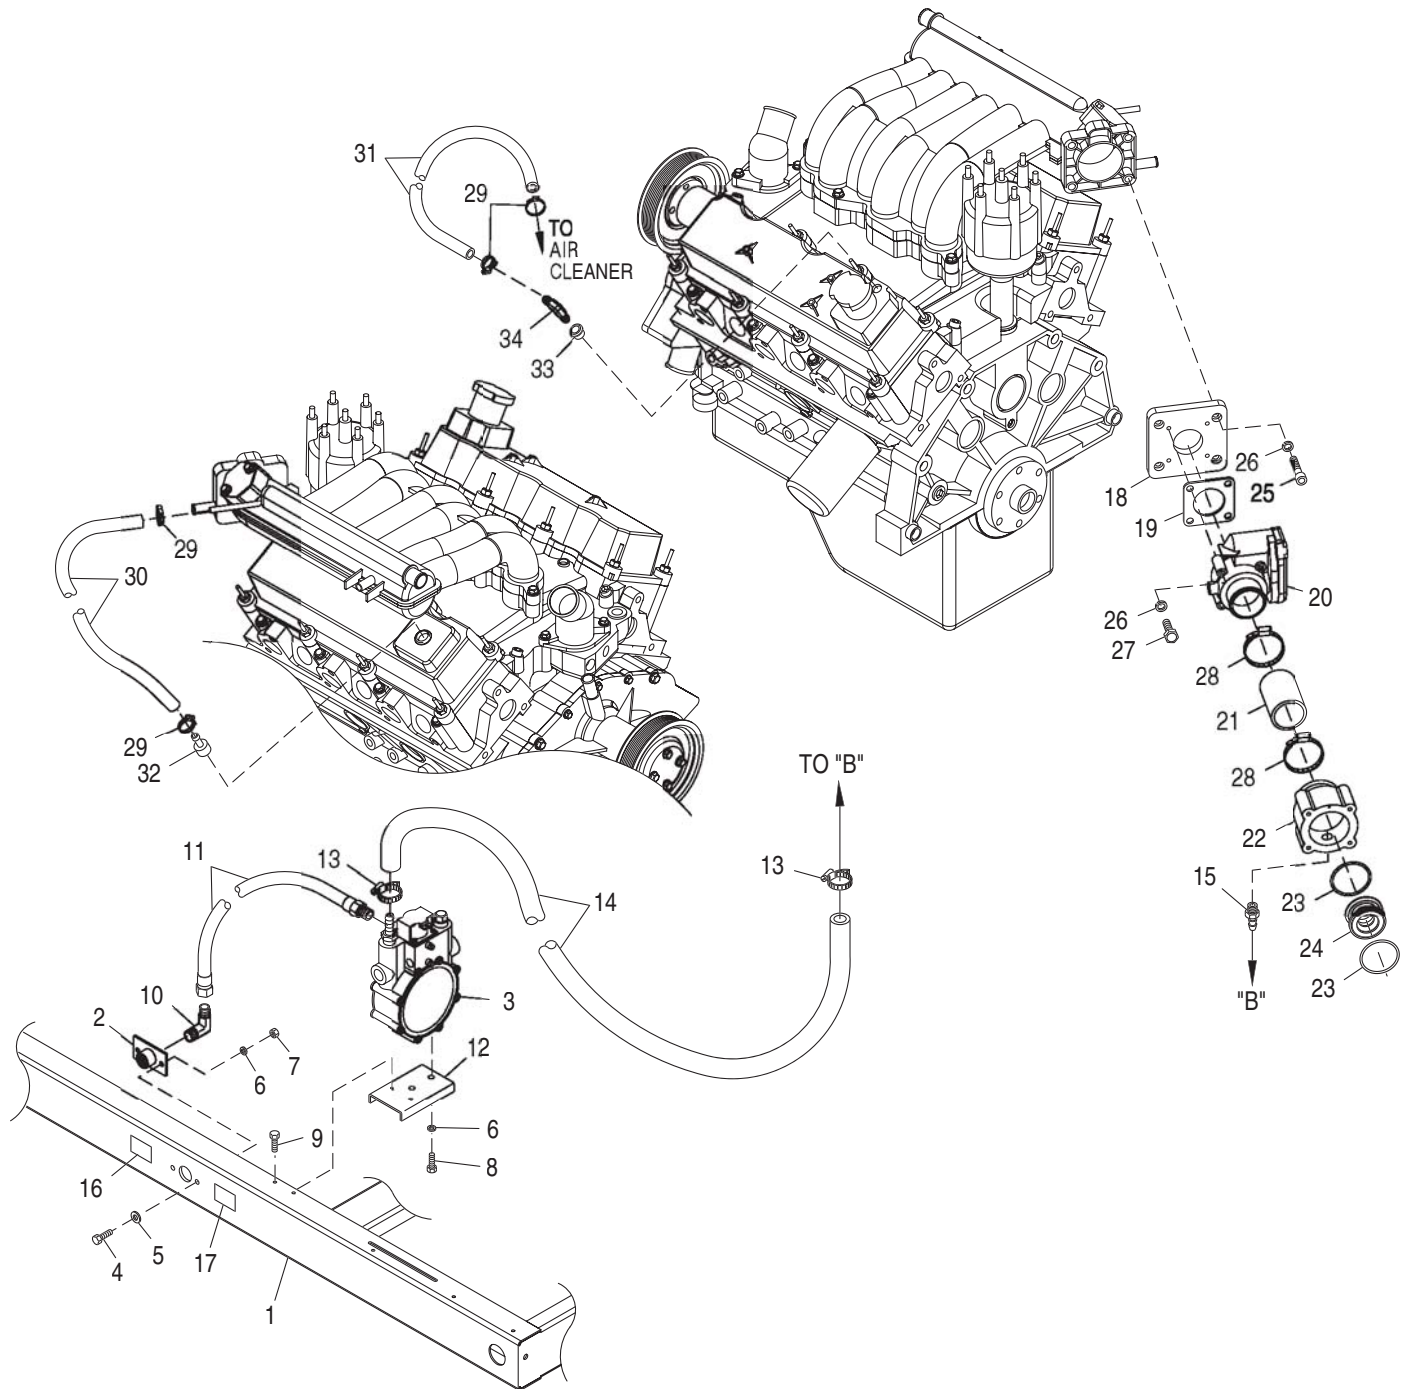



**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Fuel System – Drawing No. 0E8190-A**

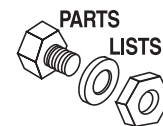

ITEM	PART NO.	QTY.	DESCRIPTION
1 *	-----	1	WELDMENT MOUNTING BASE
2	075580	1	FLANGE FUEL INLET
3	0E7691	1	ASSY REGULATOR 3.0L NG OR LPV
4	039253	2	SCREW HHC M8-1.25 X 20 G8.8
5	022145	2	WASHER FLAT 5/16 ZINC
6	022129	4	WASHER LOCK M8-5/16
7	045771	2	NUT HEX M8-1.25 G8 YEL CHR
8	042907	2	SCREW HHC M8-1.25 X 16 G8.8
9	0C2454	2	SCREW TH-FRM M6-1 X 16 N WA Z/JS
10	026307	1	ELBOW 90D STREET 3/4
11	0E1056	1	FUEL HOSE ASSY NAT.GAS/L.P.V.
12	0E6584	1	BRACKET REGULATOR 3.0L FORD HSB
13	057823	2	CLAMP HOSE #10 .56 - 1.06
14	059194	1	HOSE 5/8 ID LPG & NG (20" LG)
15	044117	1	BARBED STR 3/8 NPT X 5/8
16	0D1509	1	DECAL INLET PRESSURE
17	050279	1	DECAL FUEL INLET NG
18	0E6123	1	INTAKE ADAPTER 3.0L FORD-BOSCH
19	0E6586	1	GASKET BOSCH 32
20	0E4395	1	ACTUATOR BOSCH 32 GOVERNOR
21	057753B	1	HOSE 1.5 ID X 2 LG 20R4
22	0E6382A	1	VENTURI HOLDER W/32MM ACTUATOR
23	0E7121	2	O-RING 47.625 ID X 2.38 WIDTH
24	0E6376A	1	VENTURI 27 ID THROTTLE W/CHOK
25	047487	4	SCREW SHC M6-1.0 X 18 G12.9
26	022097	8	WASHER LOCK M6-1/4
27	051751	4	SCREW HHC M6-1.0 X 50 G8.8
28	035685	2	CLAMP HOSE #28 1.32-2.25
29	057823	4	CLAMP HOSE #10 .56-1.06
30	047290	1	HOSE 3/8 ID SINGLE BRAID (305mm [12"] LONG)
31	047290	1	HOSE 3/8 ID SINGLE BRAID (432mm [17"] LONG)
32	0A4121	1	VALVE PCV
33	0E6609	1	GROMMET ROCKER COVER 3.0LFORD
34	049099	1	BARBED EL 90 3/8 X 3/8 PLST
35 **	055934M	1	CLAMP VINYL .75 X .343 Z
36 **	047411	1	SCREW HHC M6-1.0 X 16 G8.8
37 **	022097	1	WASHER LOCK M6-1/4
38 **	022473	1	WASHER FLAT 1/4-M6 ZINC


\* SHOWN IN OTHER VIEW

\*\* NOT SHOWN-USED TO HOLD #31 IN PLACE




## Section 8 - Exploded Views and Parts

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators Alternator – Drawing No. 0E5146-B

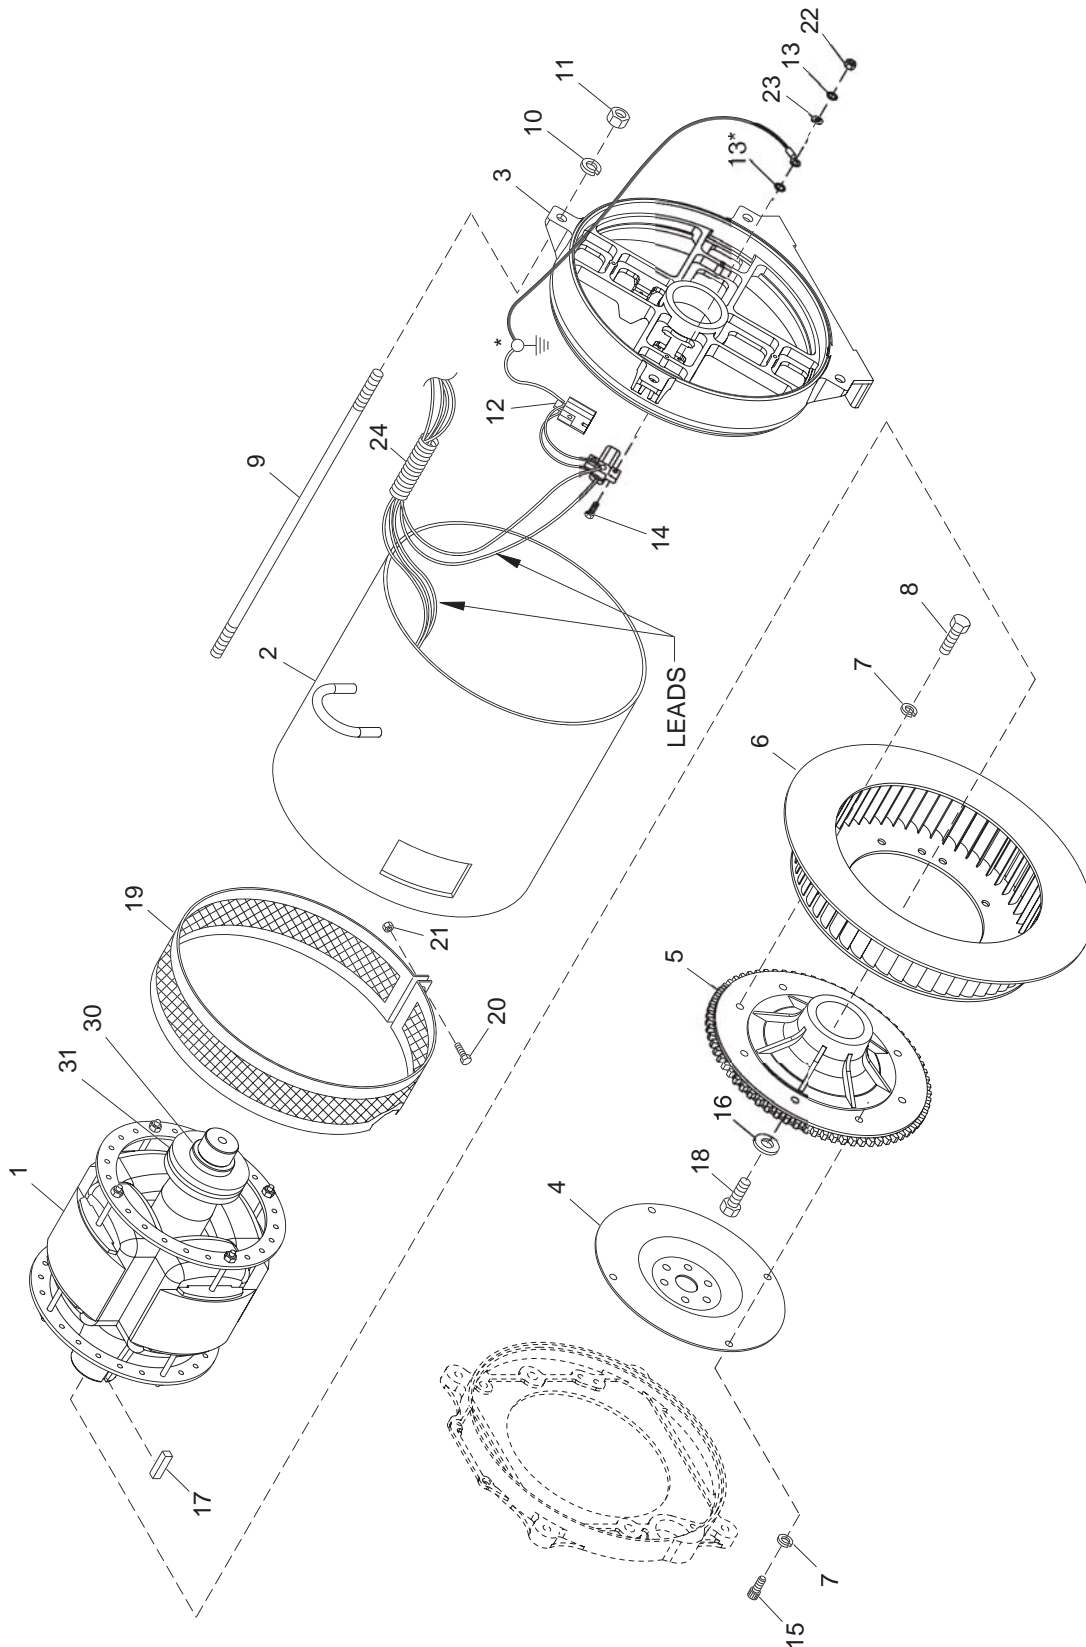




**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Alternator – Drawing No. 0E5146-B**

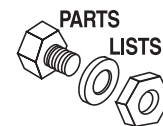


ITEM	PART NO.	QTY.	DESCRIPTION
1	0E5093A	1	ROTOR 390 30KW 1P DIRECT HSB
	0E7413A	1	ROTOR 390 40KW 1P DIRECT HSB
2	0E5094A	1	STR-390--35AD1 HSB (382MM LONG)(3.0LFORD)
	0E7412A	1	STR-390--40AD HSB (433MM LONG)(3.9L CHRYSLER)
3	0E5706	1	REAR BEARING CARRIER 390/DRCT
4	0E5048	REF	FLEXPLATE 3.0L FORD
	0E5048A	REF	FLEXPLATE 3.9L HSB
5	0E6668	1	FLYWHEEL ASSY 3.0L HSB LG GEAR
6	0E6076	1	REVCOR FAN 10.75 X 2 W/PRESS DIS
7	046526	8	WASHER LOCK M10
8	051755	4	SCREW HHC M10-1.5 X 16 G8.8
9	04576100BK	4	STUD M14-2.0 X 490 G5 ZINC (3.0L FORD)
	04576100BF	4	STUD M14-2.0 X 540 G5 ZINC (3.9L CHRYSLER)
10	043123	4	WASHER LOCK M14
11	051779	4	NUT HEX M14-2.0 G8 YEL CHR
12	0E7587	1	ASSY BRUSH HOLDER 390/HSB
13	023365	5	WASHER SHAKEPROOF INT #8
14	092980	4	SCREW PPHM M4-0.7 X 25
15	052625	4	SCREW SHC M10-1.5 X 35 G12.9
16	0A2602	1	WASHER FLAT .688 ID X 3.25 OD
17	042558	1	KEY SQ 3/8 X 1 STEEL
18	0A2601	1	SCREW HHC M16-2.0 X 45 G8.8
19	0E7226	1	GUARD STATOR 390
20	045757	2	SCREW HHC M6-1.0 X 25 G8.8
21	052857	2	NUT TOP LOCK FL M6-1.0
22	051715	4	NUT HEX M4-0.7 G8 YEL CHR
23	038150	4	WASHER FLAT #8 ZINC
24	077043F	1	CONDUIT FLEX 1-1/4" (30" LG)
ROTOR REPLACEMENT PARTS			
30	047248	1	BALL BEARING-45 MM
31	070892	1	SLIP RING -MACHINED-



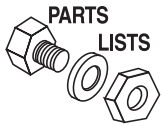

## Section 8 - Exploded Views and Parts



### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators Muffler – Drawing No. 0E6479-D

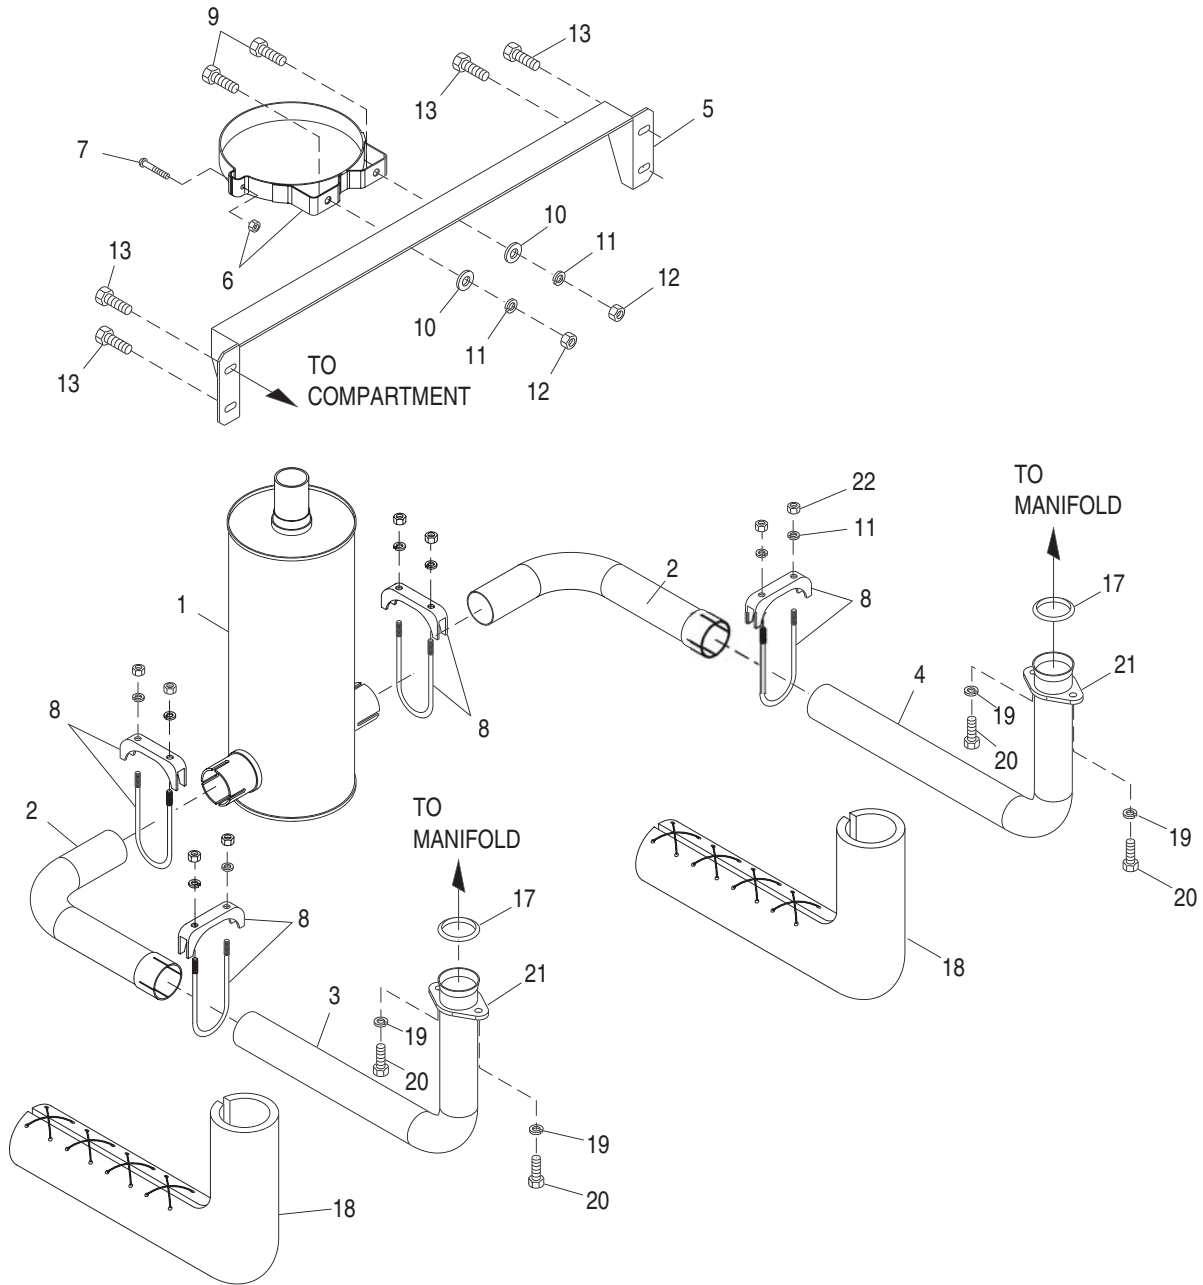

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0E6134	1	MUFFLER, 3.0L FORD	11	022129	10	WASHER LOCK M8-5/16
2	0E6464	2	EXHAUST ELBOW 3.0L FORD HSB	12	045771	2	NUT HEX M8-1.25 G8 YEL CHR
3	0E6465	1	EXHAUST PIPE LH 3.0L FORD HSB	13	0C2454	4	SCREW TH-FRM M6-1X16 N WA Z/JS
4	0E6465A	1	EXHAUST PIPE RH 3.0L FORD HSB	17	044149	2	GASKET EXHAUST RING
5	0E5914	1	BRACKET MUFFLER 3.0L FORD HSB	18	0E0170A	2	EXHAUST BLANKET 3.0L FORD HSB
6	060366	1	MUFFLER STRAP 6IN DIA	19	085917	4	WASHER LOCK 3/8 SS
7	027837	1	SCREW RHM 1/4-20 X 2-1/4	20	0D2611	4	SCREW HHC 3/8-16 X 1-3/4 SS
8	036797	4	BOLT U 5/16-18 X 2.25	21	081265	2	MOUNTING FLANGE
9	039253	2	SCREW HHC M8-1.25 X 20 G8.8	22	022259	8	NUT HEX 5/16-18 STEEL
10	022145	2	WASHER FLAT 5/16-M8 ZINC				



**Section 8 - Exploded Views and Parts**  
**Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators**  
**Air Cleaner – Drawing No. 0E8189**

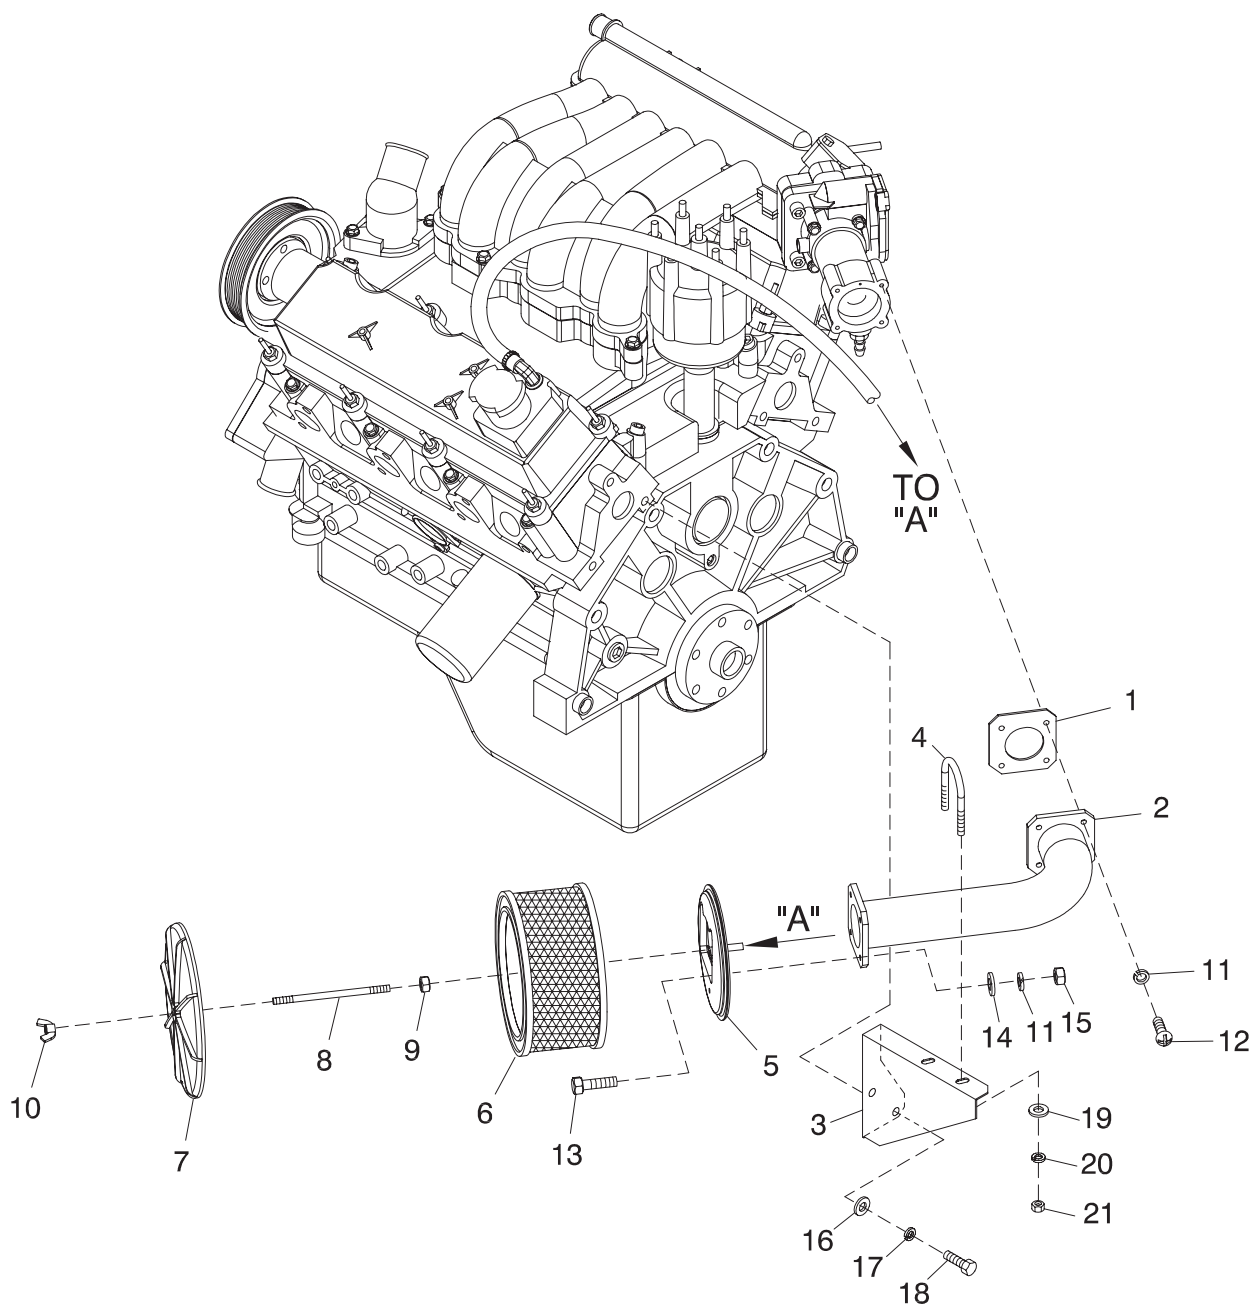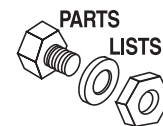

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0E5193	1	PLATE AIR CLEANER ADAPTER	11	049226	8	WASHER LOCK M5
2	0E8200	1	TUBE AIR INTAKE 3.0L FORD	12	091526	4	SCREW PPHM M5-0.8 X 12 ZNC
3	0E8201	1	BRACKET AIR INTAKE 3.0L FORD	13	052619	4	SCREW HHC M5-0.8 X 20 G8.8
4	036434	1	BOLT U 5/16-18 X 2.09	14	051713	4	WASHER FLAT M5
5	0E0519A	1	ADAPTER, CARBURETOR W/PVC CONN	15	051716	4	NUT HEX M5-0.8 G8 YEL CHR
6	0C8127	1	ELEMENT, AIR CLEANER	16	022131	2	WASHER FLAT 3/8-M10
7	0A5547	1	COVER - AIR CLEANER	17	046526	2	WASHER FLAT M10
8	062974	1	STUD TH 1/4-20 X 4-1/2 G2 ZNC	18	051755	2	SCREW HHC M10-1.5 X 16 G8.8
9	022127	1	NUT HEX 1/4-20 STEEL	19	022145	2	WASHER FLAT 5/16-M8 ZINC
10	037561	1	NUT WING 1/4-20 NYLK	20	022129	2	WASHER LOCK M8-5/16
				21	022259	2	NUT HEX 5/16-18 STEEL



## NOTES

## Section 9 - Notes

## Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



[illegible]





## Section 10 – Warranty

### Generac Liquid-cooled 15 kW, 20 kW and 25 kW Generators

#### GENERAC POWER SYSTEMS STANDARD TWO-YEAR LIMITED WARRANTY FOR GENERAC RESIDENTIAL AND LIGHT COMMERCIAL UNITS

**NOTE: IT IS RECOMMENDED THAT A STARTUP INSPECTION BE PERFORMED  
BY AN AUTHORIZED GENERAC DEALER.**

For a period of 2 (two) years or 2,000 (two thousand) hours of operation from the date of sale, whichever occurs first, Generac Power Systems, Inc. will, at its option, repair or replace any part(s) which, upon examination, inspection, and testing by Generac Power Systems or a Generac Power Systems Authorized Warranty Service Facility, is found to be defective under normal use and service, in accordance with the warranty schedule set forth below. Any equipment that the purchaser/owner claims to be defective must be returned to, and examined by the nearest Generac Power Systems Authorized Warranty Service Facility. All transportation costs under the warranty, including return to the factory, are to be borne and prepaid by the purchaser/owner. This warranty applies only to Generac Power Systems Generators used in "Standby" applications, as Generac Power Systems, Inc. have defined Standby, provided said generator has been initially installed and inspected on-site by a Generac Power Systems Authorized Service Dealer or branch thereof. A scheduled maintenance agreement with a local Authorized Generac Power Systems Dealer is highly recommended to verify adequate service has been performed on the unit throughout the warranty period.

**This warranty pertains to the following model numbers ONLY: 04673, 04674, 04675, 04742, 04744, 04746, 04748, and 04749.**

#### WARRANTY SCHEDULE

**YEARS ONE and TWO** - 100% (one hundred percent) coverage on \*Travel, Labor and Part(s) listed (proof of purchase and maintenance is required):

- | • <b>Engine - All Components</b>   | • <b>Alternator - All Components</b> | • <b>Transfer System - All Components</b> |
|--|--------------------------------------|---|
| • *Travel allowance for <b>Air Cooled Units</b> is limited to 60 miles and 2.0 hours maximum or \$100.00 maximum (per occurrence, whichever is less), <b>round trip</b> , to the nearest authorized Generac Service Facility, and only applies to permanently wired and mounted units. |                                      |   |
| • *Travel allowance for <b>Liquid Cooled Units</b> is limited to 300 miles maximum and 7.5 hours maximum (per occurrence), <b>round trip</b> , to the nearest authorized Generac Service Facility, and only applies to permanently wired and mounted units.                            |                                      |   |
| • A Generac Power Systems, Inc. Transfer Switch is highly recommended to be used in conjunction with the genset. If a Non - Generac Power Systems, Inc. Transfer Switch is substituted for use and directly causes damage to the genset, no warranty coverage shall apply.             |                                      |   |
| • All warranty expense allowances <b>are</b> subject to the conditions defined in Generac Power Systems Warranty, Policies, and Procedures Flat Rate Manual.   |                                      |   |
| • Units that have been resold <b>are not</b> covered under the Generac Power Systems Warranty, as this Warranty <b>is not</b> transferable.  |                                      |   |

#### **THIS WARRANTY SHALL NOT APPLY TO THE FOLLOWING:**

1. Any unit built/manufactured prior to July 1, 2002.
2. Unit enclosure is only covered against rust or corrosion the first year of the warranty provision.
3. Costs of normal maintenance i.e. tune-ups, associated part(s), adjustments, loose/leaking clamps, installation and start-up.
4. Use of Non-Generac replacement part(s) will void the warranty in its entirety.
5. Any failure caused by contaminated fuels, oils, coolants/antifreeze or lack of proper fuels, oils or coolants/antifreeze.
6. Units sold, rated or used for "Prime Power", "Trailer Mounted" or "Rental Unit" applications as Generac Power Systems have defined Prime Power, Trailer Mounted or Rental Unit. Contact a Generac Power Systems Distributor for Prime Power, Trailer Mounted or Rental Unit definition and warranty.
7. Failures due, but not limited to, normal wear and tear, accident, misuse, abuse, negligence, or improper installation or sizing.
8. Failures caused by any external cause or act of God such as collision, fire, theft, freezing, vandalism, riot or wars, lightning, earthquake, windstorm, hail, volcanic eruption, water or flood, tornado, hurricane, terrorist acts or nuclear holocaust.
9. Products that are modified or altered in a manner not authorized by Generac Power Systems in writing.
10. Any incidental, consequential or indirect damages caused by defects in materials or workmanship, or any delay in repair or replacement of the defective part(s).
11. Failure due to misapplication, misrepresentation, or bi-fuel conversion.
12. Telephone, telegraph, teletype or other communication expenses.
13. Living or travel expenses of person(s) performing service, except as specifically included within the terms of a specific unit warranty period.
14. Rental equipment used while warranty repairs are being performed i.e. rental generators, cranes, etc..
15. Overtime labor or more than one person performing repairs.
16. Any and all expenses incurred investigating performance complaints unless defective Generac materials and or workmanship were the direct cause of the problem.
17. Engine coolant heaters (block-heaters), heater controls and circulating pumps after the first year.
18. Starting batteries, fuses, light bulbs, engine fluids, and overnight freight cost for replacement part(s).

THIS WARRANTY IS IN PLACE OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, SPECIFICALLY, GENERAC POWER SYSTEMS MAKES NO OTHER WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

GENERAC POWER SYSTEMS ONLY LIABILITY SHALL BE THE REPAIR OR REPLACEMENT OF PART(S) AS STATED ABOVE. IN NO EVENT SHALL GENERAC POWER SYSTEMS BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF SUCH DAMAGES ARE A DIRECT RESULT OF GENERAC POWER SYSTEMS, INC. NEGLIGENCE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. Purchaser/owner agrees to make no claims against Generac Power Systems, Inc. based on negligence.

This warranty gives you specific legal rights. You also may have other rights that vary from state to state.

**GENERAC® POWER SYSTEMS, INC. • P.O. BOX 8 • WAUKESHA, WI 53187**  
**PH: (262) 544-4811 • FAX: (262) 544-4851**

Bulletin 0166550SBY / Printed in USA 8.03