


Serial Number

**QT**  
**1.5L**  
**20kW**

**Model: 005211-0**

## STANDBY GENERATOR OWNER'S MANUAL

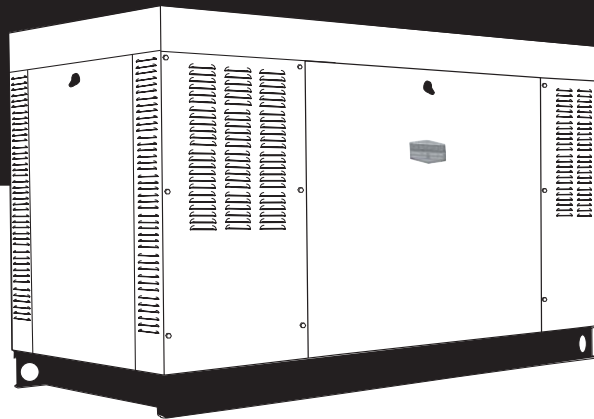

*A new standard of reliability*

# (((QUIETSOURCE™

⚠ Not intended for use in critical life support applications. ⚠

— ⚠ **CAUTION** ⚠ —

**ONLY QUALIFIED ELECTRICIANS OR CONTRACTORS SHOULD ATTEMPT INSTALLATION!**  
**DEADLY EXHAUST FUMES. OUTDOOR INSTALLATION ONLY!**

This manual should remain with the unit.

| <b>SECTION</b>                            | <b>PAGE</b> |   |             |
|---|-------------|---|-------------|
| <b>SAFETY RULES</b>                       | <b>1-1</b>  | <b>OPERATION</b>                              | <b>9-1</b>  |
| <b>INTRODUCTION</b>                       | <b>1-3</b>  | Generator Control and Operation               | 9-1         |
| Read this Manual Thoroughly               | 1-3         | Operating Unit with Manual Transfer Switch    | 9-1         |
| Operation and Maintenance                 | 1-3         | Engine Start-up and Transfer                  | 9-1         |
| How to Obtain Service                     | 1-3         | Retransfer and Shutdown                       | 9-1         |
| <b>IDENTIFICATION RECORD</b>              | <b>2-1</b>  | Operating Unit with Automatic Transfer Switch | 9-1         |
| Data Label                                | 2-1         | <b>MAINTENANCE</b>                            | <b>10-1</b> |
| <b>EQUIPMENT DESCRIPTION</b>              | <b>3-1</b>  | Maintenance Performed by Authorized           |             |
| Equipment Description                     | 3-1         | Service Facilities                            | 10-1        |
| Engine Oil Recommendations                | 3-1         | Every Three Months                            | 10-1        |
| Coolant Recommendations                   | 3-1         | Once Every Six Months                         | 10-1        |
| <b>ENGINE PROTECTIVE DEVICES</b>          | <b>4-1</b>  | Once Annually                                 | 10-1        |
| High Coolant Temperature Switch           | 4-1         | First 100 Operating Hours                     | 10-1        |
| Low Coolant Level Sensor                  | 4-1         | Every 500 Operating Hours                     | 10-1        |
| Low Oil Pressure Switch                   | 4-1         | Every 800 Operating Hours                     | 10-1        |
| Overcrank Shutdown                        | 4-1         | Exhaust Manifold Procedure                    | 10-1        |
| Overspeed Shutdown                        | 4-1         | Intake Manifold Procedure                     | 10-1        |
| RPM Sensor Loss Shutdown                  | 4-1         | Cylinder Head Procedure                       | 10-1        |
| DC Fuse                                   | 4-1         | Cooling System                                | 10-2        |
| <b>FUEL SYSTEMS</b>                       | <b>5-1</b>  | Overload Protection for Engine DC             |             |
| Fuel Requirements                         | 5-1         | Electrical System                             | 10-2        |
| Natural Gas Fuel System                   | 5-1         | Checking Fluid Levels                         | 10-2        |
| Propane Vapor Withdrawal Fuel System      | 5-1         | Check Engine Oil                              | 10-2        |
| LP Fuel System                            | 5-1         | Battery Fluid                                 | 10-2        |
| <b>SPECIFICATIONS</b>                     | <b>6-1</b>  | Engine Coolant                                | 10-2        |
| Generator                                 | 6-1         | Maintenance Owner/Operator Can Perform        | 10-3        |
| Engine                                    | 6-1         | Check Engine Oil Level                        | 10-3        |
| Cooling System                            | 6-1         | Check Battery                                 | 10-3        |
| Fuel System                               | 6-1         | Exercise System                               | 10-3        |
| Electrical System                         | 6-1         | Inspect Cooling System                        | 10-3        |
| Cold Weather Kit                          | 6-2         | Check Engine Coolant Level                    | 10-3        |
| Reconfiguring the Fuel System             | 6-2         | Perform Visual Inspection                     | 10-3        |
| <b>GENERAL INFORMATION</b>                | <b>7-1</b>  | Inspect Exhaust System                        | 10-3        |
| Generator AC Lead Connections             | 7-1         | Check Fan Belt                                | 10-3        |
| Four-lead, Single-phase Stator            | 7-1         | Inspect Engine Governor                       | 10-3        |
| Alternator Power Winding Connections      | 7-1         | Changing Engine Oil                           | 10-3        |
| 3-phase Alternators                       | 7-1         | Changing the Engine Air Cleaner               | 10-3        |
| <b>INSTALLATION</b>                       | <b>8-1</b>  | Spark Plugs                                   | 10-4        |
| Installation                              | 8-1         | Coolant Change                                | 10-4        |
| Preparation Before Start-up               | 8-1         | Miscellaneous Maintenance                     | 10-4        |
| Transfer Switch                           | 8-1         | Cleaning the Generator                        | 10-4        |
| Fuel System                               | 8-1         | Battery                                       | 10-4        |
| Generator Set Lubrication                 | 8-1         | Battery Maintenance                           | 10-4        |
| Prior to Initial Start-up                 | 8-1         | Battery Replacement                           | 10-5        |
| Engine Coolant                            | 8-1         | <b>SERVICE SCHEDULE</b>                       | <b>11-1</b> |
| Belt Tension                              | 8-1         | <b>TROUBLESHOOTING</b>                        | <b>12-1</b> |
| Electrical System                         | 8-1         | Troubleshooting Guide                         | 12-1        |
| Initial Inspection for QT Genset Start-up | 8-1         | <b>NOTES</b>                                  |             |
| Start-up Checklist                        | 8-2         | <b>EXPLODED VIEWS &amp; PARTS LISTS</b>       |             |
| Preparation for Start-up                  | 8-2         | <b>WIRING DIAGRAMS &amp; SCHEMATICS</b>       |             |
| Start-up Inspection                       | 8-2         | <b>WARRANTY</b>                               |             |



## Standby Generator Sets Important Safety Instructions



**⚠ SAVE THESE INSTRUCTIONS** – The manufacturer suggests that these rules for safe operation be copied and posted in potential hazard areas. Safety should be stressed to all operators, potential operators, and service and repair technicians for this equipment. **⚠**



### WARNING:



**The engine exhaust from this product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.**



### WARNING:



**This product contains or emits chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.**

Study these SAFETY RULES carefully before installing, operating or servicing this equipment. Become familiar with this Owner's Manual and with the unit. The generator can operate safely, efficiently and reliably only if it is properly installed, operated and maintained. Many accidents are caused by failing to follow simple and fundamental rules or precautions.

The manufacturer cannot anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and on tags and decals affixed to the unit are, therefore, not all inclusive. If a procedure, work method or operating technique is used that the manufacturer does not specifically recommend, ensure that it is safe for others. Also make sure the procedure, work method or operating technique utilized does not render the generator unsafe.

### — ⚠ DANGER ⚠ —

**⚠ Despite the safe design of this generator, operating this equipment imprudently, neglecting its maintenance or being careless can cause possible injury or death. Permit only responsible and capable persons to install, operate or maintain this equipment.**

**⚠ Potentially lethal voltages are generated by these machines. Ensure all steps are taken to render the machine safe before attempting to work on the generator.**

**⚠ Parts of the generator are rotating and/or hot during operation. Exercise care near running generators.**

### ⚠ GENERAL HAZARDS ⚠

- For safety reasons, the manufacturer recommends that this equipment be installed, serviced and repaired by an Authorized Service Dealer or other competent, qualified electrician or installation technician who is familiar with applicable codes, standards and regulations. The operator also must comply with all such codes, standards and regulations.
- Installation, operation, servicing and repair of this (and related) equipment must always comply with applicable codes, standards, laws and regulations. Adhere strictly to local, state and national electrical and building codes. Comply with regulations the Occupational Safety and Health Administration (OSHA) has established. Also, ensure that the generator is installed, operated and serviced in accordance with the manufacturer's instructions and recommendations. Following installation, do nothing that might render the unit unsafe or in noncompliance with the aforementioned codes, standards, laws and regulations.
- The engine exhaust fumes contain carbon monoxide gas, which can be DEADLY. This dangerous gas, if breathed in sufficient concentrations, can cause unconsciousness or even death. For that reason, adequate ventilation must be provided. Exhaust gases must be piped safely away from any building or enclosure that houses the generator to an area where people, animals, etc., will not be harmed. This exhaust system must be installed properly, in strict compliance with applicable codes and standards.
- Keep hands, feet, clothing, etc., away from drive belts, fans, and other moving or hot parts. Never remove any drive belt or fan guard while the unit is operating.
- Adequate, unobstructed flow of cooling and ventilating air is critical in any room or building housing the generator to prevent buildup of explosive gases and to ensure correct generator operation. Do not alter the installation or permit even partial blockage of ventilation provisions, as this can seriously affect safe operation of the generator.
- Keep the area around the generator clean and uncluttered. Remove any materials that could become hazardous.
- When working on this equipment, remain alert at all times. Never work on the equipment when physically or mentally fatigued.
- Inspect the generator regularly, and promptly repair or replace all worn, damaged or defective parts using only factory-approved parts.



## Standby Generator Sets Important Safety Instructions



- Before performing any maintenance on the generator, disconnect its battery cables to prevent accidental start-up. Disconnect the cable from the battery post indicated by a **NEGATIVE**, **NEG** or **(-)** first. Reconnect that cable last.
- Never use the generator or any of its parts as a step. Stepping on the unit can stress and break parts, and may result in dangerous operating conditions from leaking exhaust gases, fuel leakage, oil leakage, etc.

### **ELECTRICAL HAZARDS**

- All generators covered by this manual produce dangerous electrical voltages and can cause fatal electrical shock. Utility power delivers extremely high and dangerous voltages to the transfer switch as well as the standby generator. Avoid contact with bare wires, terminals, connections, etc., on the generator as well as the transfer switch, if applicable. Ensure all appropriate covers, guards and barriers are in place before operating the generator. If work must be done around an operating unit, stand on an insulated, dry surface to reduce shock hazard.
- Do not handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. **DANGEROUS ELECTRICAL SHOCK MAY RESULT.**
- If personnel must stand on metal or concrete while installing, operating, servicing, adjusting or repairing this equipment, place insulative mats over a dry wooden platform. Work on the equipment only while standing on such insulative mats.
- The National Electrical Code (NEC) requires the frame and external electrically conductive parts of the generator to be connected to an approved earth ground. This grounding will help prevent dangerous electrical shock that might be caused by a ground fault condition in the generator set or by static electricity. Never disconnect the ground wire.
- Wire gauge sizes of electrical wiring, cables and cord sets must be adequate to handle the maximum electrical current (ampacity) to which they will be subjected.
- Before installing or servicing this (and related) equipment, make sure that all power voltage supplies are positively turned off at their source. Failure to do so will result in hazardous and possibly fatal electrical shock.
- Connecting this unit to an electrical system normally supplied by an electric utility shall be by means of a transfer switch so as to isolate the generator electric system from the electric utility distribution system when the generator is operating. Failure to isolate the two electric system power sources from each other by such means will result in damage to the generator and may also result in injury or death to utility power workers due to backfeed of electrical energy.
- Generators installed with an automatic transfer switch will crank and start automatically when normal (utility) source voltage is removed or is below an acceptable preset level. To prevent such automatic start-up and possible injury to personnel, disable the generator's automatic start circuit (battery cables, etc.) before working on or around the unit. Then, place a "Do Not Operate" tag on the generator control panel and on the transfer switch.
- In case of accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor. **AVOID DIRECT CONTACT WITH THE VICTIM.** Use a nonconducting implement, such as a dry rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- Never wear jewelry when working on this equipment. Jewelry can conduct electricity resulting in electric shock, or may get caught in moving components causing injury.

### **FIRE HAZARDS**

- Keep a fire extinguisher near the generator at all times. Do **NOT** use any carbon tetra-chloride type extinguisher. Its fumes are toxic, and the liquid can deteriorate wiring insulation. Keep the extinguisher properly charged and be familiar with its use. If there are any questions pertaining to fire extinguishers, consult the local fire department.

### **EXPLOSION HAZARDS**

- Properly ventilate any room or building housing the generator to prevent build-up of explosive gas.
- Do not smoke around the generator. Wipe up any fuel or oil spills immediately. Ensure that no combustible materials are left in the generator compartment, or on or near the generator, as **FIRE** or **EXPLOSION** may result. Keep the area surrounding the generator clean and free from debris.
- These generator sets may operate using one of several types of fuels. All fuel types are potentially **FLAMMABLE** and/or **EXPLOSIVE** and should be handled with care. Comply with all laws regulating the storage and handling of fuels. Inspect the unit's fuel system frequently and correct any leaks immediately. Fuel supply lines must be properly installed, purged and leak tested according to applicable fuel-gas codes before placing this equipment into service.
- Diesel fuels are highly **FLAMMABLE**. Gaseous fluids such as natural gas and liquid propane (LP) gas are extremely **EXPLOSIVE**. Natural gas is lighter than air, and LP gas is heavier than air; install leak detectors accordingly.





## Standby Generator Sets Important Safety Instructions



### INTRODUCTION

Thank you for purchasing this model of the standby generator set product line.

Every effort was expended to make sure that the information and instructions in this manual were both accurate and current at the time the manual was written. However, the manufacturer reserves the right to change, alter or otherwise improve this product(s) at any time without prior notice.

#### ◆ READ THIS MANUAL THOROUGHLY

If any portion of this manual is not understood, contact the nearest Authorized Service Dealer for starting, operating and servicing procedures.

Throughout this publication, and on tags and decals affixed to the generator, DANGER, WARNING, CAUTION and NOTE blocks are used to alert personnel to special instructions about a particular service or operation that may be hazardous if performed incorrectly or carelessly. Observe them carefully. Their definitions are as follows:



**After this heading, read instructions that, if not strictly complied with, will result in personal injury or property damage.**



**After this heading, read instructions that, if not strictly complied with, may result in personal injury or property damage.**



**After this heading, read instructions that, if not strictly complied with, could result in damage to equipment and/or property.**


#### NOTE:

**After this heading, read explanatory statements that require special emphasis.**

These safety warnings cannot eliminate the hazards that they indicate. Common sense and strict compliance with the special instructions while performing the service are essential to preventing accidents.

Four commonly used safety symbols accompany the DANGER, WARNING and CAUTION blocks. The type of information each indicates is as follows:

 This symbol points out important safety information that, if not followed, could endanger personal safety and/or property of others.

 This symbol points out potential explosion hazard.

 This symbol points out potential fire hazard.

 This symbol points out potential electrical shock hazard.

The operator is responsible for proper and safe use of the equipment. The manufacturer strongly recommends that the operator read this Owner's Manual and thoroughly understand all instructions before using this equipment. The manufacturer also strongly recommends instructing other users to properly start and operate the unit. This prepares them if they need to operate the equipment in an emergency.

#### ◆ OPERATION AND MAINTENANCE

It is the operator's responsibility to perform all safety checks, to make sure that all maintenance for safe operation is performed promptly, and to have the equipment checked periodically by an Authorized Service Dealer. Normal maintenance service and replacement of parts are the responsibility of the owner/operator and, as such, are not considered defects in materials or workmanship within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of the generator ensure a minimum number of problems and keep operating expenses at a minimum. See an Authorized Service Dealer for service aids and accessories.

Operating instructions presented in this manual assume that the standby electric system has been installed by an Authorized Service Dealer or other competent, qualified contractor. Installation of this equipment is not a "do-it-yourself" project.

#### ◆ HOW TO OBTAIN SERVICE

When the generator requires servicing or repairs, simply contact an Authorized Service Dealer for assistance. Service technicians are factory-trained and are capable of handling all service needs.

When contacting an Authorized Service Dealer or the factory about parts and service, always supply the complete model number of the unit as given on the front cover of this manual or on the DATA LABEL affixed to the unit.



#### AUTHORIZED SERVICE DEALER LOCATION

To locate the nearest AUTHORIZED SERVICE DEALER, please call this number:

**1-800-333-1322**

or locate us on the web at:

**www.generac.com**



IDENTIFICATION RECORD

◆ DATA LABEL

Every generator set has a DATA LABEL that contains important information pertinent to the generator. The data label, which can be found attached to the generator's lower connection box, lists the unit's serial number and its rated voltage, amps, wattage capacity, phase, frequency, rpm, power factor, etc.

NOTE:

For actual information related to this particular model, please refer to the Manual Drawing Listing located at the end of this manual, or to the data label affixed to the unit.

✦ Generator Model and Serial Number

This number is the key to numerous engineering and manufacturing details pertaining to your unit. Always supply this number when requesting service, ordering parts or seeking information.

Data Label

GENERATOR SET DATA

MADE IN USA

MODEL  SERIAL

RATED KW  RATED KVA  PHASE

RATED VOLTAGE  RATED AMPS

POWER FACTOR  HERTZ  ALT RPM


ENGINE RPM  PRODUCTION DATE

ALTERNATOR SUBTRANSIENT REACTANCE


ALTERNATOR TRANSIENT REACTANCE

CLASS ☐ ROTOR ☐ STATOR WINDING INSULATION AT 25°C AMBIENT

GENERAC POWER SYSTEMS, INC.



## Standby Generator Sets Equipment Description



### EQUIPMENT DESCRIPTION

This equipment is a revolving field, alternating current generator set. It is powered by a gaseous fueled engine operating at 1800 rpm for 4-pole direct drive units, 3600 rpm for 2-pole direct drive units and 2300 - 3000 rpm for quiet drive gear units. See the Specifications section for exact numbers. The unit comes complete with a sound attenuated enclosure, internally mounted muffler, control console, main-line circuit breaker, battery charger, and protective alarms as explained in the following paragraph.

All AC connections, including the power leads from the alternator, 120 volt battery charger input and control connections to the transfer switch are available in the main connection box.

The generator incorporates the following generator features:

- Rotor and Stator insulation is Class F rated as defined by NEMA MG1-32.6, NEMA MG1-1.66. The generator is self ventilated and drip-proof constructed.
- The voltage waveform deviation, total harmonic content of the AC waveform and telephone influence factor have been evaluated and are acceptable according to NEMA MG1-32.

### ENGINE OIL RECOMMENDATIONS

The unit has been filled with 15W-40 engine oil at the factory. Use a high-quality detergent oil classified "For Service CC, SD, SE, SF." Detergent oils keep the engine cleaner and reduce carbon deposits. Use oil having the following SAE viscosity rating, based on the ambient temperature range anticipated before the next oil change:

| Temperature                | Oil Grade (Recommended) |
|----------------------------|-------------------------|
| Above 80° F (27° C)        | SAE 30W or 15W-40       |
| 32° to 80° F (0° to 27° C) | SAE 20W-20 or 15W-40    |
| Below 32° F (0° C)         | See Note                |

#### CAUTION

- ⚠ Any attempt to crank or start the engine before it has been properly serviced with the recommended oil may result in an engine failure.

#### NOTE:

For temperatures below 32° F, it is strongly recommended to use the optional Cold Weather Start Kit (part number listed in the Specification Section). The oil grade for temperatures below 32° F is 5W-30 synthetic oil.

### COOLANT RECOMMENDATIONS



Use a mixture of half low silicate ethylene glycol base anti-freeze and deionized water. Cooling system capacity is listed in the specifications. Use only deionized water and only low silicate anti-freeze. If desired, add a high quality rust inhibitor to the recommended coolant mixture. When adding coolant, always add the recommended 50-50 mixture.

#### CAUTION

- ⚠ Do not use any chromate base rust inhibitor with ethylene glycol base anti-freeze or chromium hydroxide ("green slime") forms and will cause overheating. Engines that have been operated with a chromate base rust inhibitor must be chemically cleaned before adding ethylene glycol base anti-freeze. Using any high silicate anti-freeze boosters or additives will also cause overheating. The manufacturer also recommends that any soluble oil inhibitor is NOT used for this equipment.

#### DANGER

- ⚠ Do not remove the radiator pressure cap while the engine is hot or serious burns from boiling liquid or steam could result.
- ⚠ Ethylene glycol base antifreeze is poisonous. Do not use mouth to siphon coolant from the radiator, recovery bottle or any container. Wash hands thoroughly after handling. Never store used antifreeze in an open container because animals are attracted to the smell and taste of antifreeze even though it is poisonous to them.

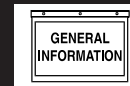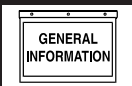

### ENGINE PROTECTIVE DEVICES

The standby generator may be required to operate for long periods of time without an operator on hand to monitor such engine conditions as coolant temperature, oil pressure or rpm. For that reason, the engine has several devices designed to protect it against potentially damaging conditions by automatically shutting down the unit when the oil pressure is too low, the coolant temperature is too high, the coolant level is too low, or the engine is running too fast.

#### NOTE:

**Engine protective switches and sensors are mentioned here for the reader's convenience. Also refer to the applicable control panel manual for additional automatic engine shutdown information.**

#### ◆ HIGH COOLANT TEMPERATURE SWITCH

This switches contacts close if the temperature should exceed approximately 140° C (284° F), initiating an engine shutdown. The generator will automatically restart and the LED will reset once the temperature has returned to a safe operating level.

#### ◆ LOW COOLANT LEVEL SENSOR

Should the engine coolant level drop below the level of the high coolant temperature switch, it is possible for the engine to overheat without automatic shutdown. To prevent such overheating, the engine has a low coolant level sensor. If the level of engine coolant drops below the level of the low coolant level sensor, the engine automatically shuts down.

#### ◆ LOW OIL PRESSURE SWITCH

This switch has normally closed contacts that are held open by engine oil pressure during cranking and operating. Should oil pressure drop below the 8 psi range, switch contacts close, and the engine shuts down. The unit should not be restarted until oil is added, and the AUTO/OFF/MANUAL switch must be turned to OFF and then back to AUTO.

#### ◆ OVERCRANK SHUTDOWN

After a prespecified duration of cranking, this function ends the cranking if the engine has failed to start. The overcrank LED will turn ON. Turn OFF the AUTO/OFF/MANUAL switch, then turn switch back to AUTO to reset the generator control board.

#### NOTE:

**If the fault is not corrected, the overcrank feature will continue to activate.**

#### Approximate Crank Cycle Times

- 15 seconds ON
  - 7 seconds OFF
  - 7 seconds ON
  - 7 seconds OFF
  - Repeat for 45 seconds
- Approximately 90 seconds total.

#### ◆ OVERSPEED SHUTDOWN

A speed circuit controls engine cranking, start-up, operation and shutdown. Engine speed signals are delivered to the circuit board whenever the unit is running. Should the engine overspeed above a safe, preset value, the circuit board initiates an automatic engine shutdown. Contact the nearest Authorized Dealer if this failure occurs.



#### ◆ RPM SENSOR LOSS SHUTDOWN

If the speed signal to the control panel is lost, engine shutdown will occur.

#### ◆ DC FUSE

This fuse is located inside of the control panel. It protects the panel wiring and components from damaging overload. **Always remove this fuse before commencing work on the generator.** The unit will not start or crank if the fuse is blown. Replace the fuse with one of the same size, type, and rating. (See the exploded views and parts lists at the end of this manual for replacement part number.)



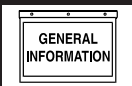

## FUEL SYSTEM

### ◆ FUEL REQUIREMENTS

The standby generator may be equipped with one of the following fuel systems:

- Natural gas fuel system
- Propane vapor (PV) fuel system

The Manual Drawing Listing that is affixed to the unit includes the "Identification Code," which may be used to identify the type of fuel system installed on the unit.

Recommended fuels should have a Btu content of at least 1,000 Btus per cubic foot for natural gas; or at least 2,520 Btus per cubic foot for LP gas. Ask the fuel supplier for the Btu content of the fuel.

Required fuel pressure for **natural gas is 5 inches to 14 inches water column (0.18 to 0.5 psi); and for liquid propane, 5 inches to 14 inches of water column (0.18 to 0.5 psi).**

#### NOTE:

**Any piping used to connect the generator to the fuel supply should be of adequate size to ensure the fuel pressure NEVER drops below five inches water column for natural gas or 5 inches water column for propane vapor for all load ranges.**

#### NOTE:

**It is the responsibility of the installer to make sure that only the correct recommended fuel is supplied to the generator fuel system. Thereafter, the owner/operator must make certain that only the proper fuel is supplied.**

### ◆ NATURAL GAS FUEL SYSTEM

Natural gas is supplied in its vapor state. In most cases, the gas distribution company provides piping from the main gas distribution line to the standby generator site. The following information applies to natural gas fuel systems.

- Gas pressure in a building is usually regulated by national, state and local codes.
- To reduce gas pressure to a safe level before the gas enters a building, a primary regulator is needed. The natural gas supplier may or may not supply such a regulator.
- It is the responsibility of the gas supplier to make sure sufficient gas pressure is available to operate the primary regulator.
- Gas pressure at the inlet to the fuel shutoff solenoid should not exceed approximately 14 inches water column (0.5 psi). Optimum pressure at the fuel shutoff solenoid is 11 inches water column (0.4 psi).

### ◆ PROPANE VAPOR WITHDRAWAL FUEL SYSTEM

This type of system utilizes the vapors formed above the liquid fuel in the supply tank. Approximately 10 to 20 percent of the tank capacity is needed for fuel expansion from the liquid to the vapor state. The vapor withdrawal system is generally best suited for smaller engines that require less fuel. The installer should be aware of the following:

- The natural gas and LP gas systems are similar. However, the natural gas system delivers gas at a pressure of approximately five inches water column to the carburetor.
- When ambient temperatures are low and engine fuel consumption is high, the vapor withdrawal system may not function efficiently.
- Ambient temperatures around the supply tank must be high enough to sustain adequate vaporization, or the system will not deliver the needed fuel volume.
- In addition to the cooling effects of ambient air, the vaporization process itself provides an additional cooling effect.


### ◆ LP FUEL SYSTEM

LP is supplied as a liquid in pressure tanks. It is usually made up of propane, butane, or a mixture of the two gases. Propane tends to vaporize readily even at temperatures as low as -20° F (-29° C). However, butane reverts to its liquid state when temperatures drop below 32° F (0° C).

LP in a liquid withdrawal system must be converted to its gaseous state before it is introduced into the engine carburetor. A vaporizer-converter is generally used to accomplish this. In such a converter, heated engine coolant is ported through the converter to provide the necessary heat for conversion of the fuel from a liquid to a gaseous state.



# Standby Generator Sets Specifications



## SPECIFICATIONS

### ◆ GENERATOR

Type ..... Synchronous  
Rotor Insulation ..... Class F  
Stator Insulation ..... Class F  
Total Harmonic Distortion ..... < 5%  
Telephone Interference Factor (TIF) ..... < 50  
Alternator Output Leads 3-phase ..... 4-wire  
Bearings ..... Sealed Ball  
Coupling ..... Flexible Disc  
Load Capacity (Standby Rating) ..... 20kW\*

\* NOTE: Generator rating and performance in accordance with ISO8528-5, BS5514, SAE J1349, ISO3046 and DIN 6271 Standards. KW rating is based on LPG fuel and may derate with natural gas.

Excitation System ..... Direct  
Generator Output Voltage/kW - 60 Hz  

|                           | kW | Amp | CB Size |
|---------------------------|----|-----|---------|
| 120/240V, 1-phase, 1.0 pf | 20 | 83  | 100     |
| 120/208V, 3-phase, 0.8 pf | 20 | 69  | 80      |

  
Generator Locked Rotor KVA Available @ Voltage Dip of 35%  
Single-phase or 208 3-phase ..... 34 KVA

### ◆ ENGINE

Make ..... Generac  
Model ..... In Line  
Cylinders and Arrangement ..... 4  
Displacement ..... 1.5 Liter  
Bore ..... 2.97 in.  
Stroke ..... 3.23 in.  
Compression Ratio ..... 9.4-to-1  
Air Intake System ..... Naturally Aspirated  
Valve Seats ..... Replaceable  
Lifter Type ..... Hydraulic

#### Engine Parameters

Rated Synchronous RPM ..... 60 Hz, 3600  
HP at rated kW ..... 60 Hz, 32

#### Exhaust System

Exhaust Flow at Rated Output 60 Hz ..... 177 cfm  
Exhaust Temperature at Rated Output ..... 910° F

#### Combustion Air Requirements (Natural Gas)

Flow at rated power, 60 Hz ..... 70 cfm

#### Governor

Type ..... Electronic  
Frequency Regulation ..... Isochronous  
Steady State Regulation ..... ± .25%  
Adjustments:  
Speed ..... Selectable

### Engine Lubrication System

Type of Oil Pump ..... Gear  
Oil Filter ..... Full Flow, Cartridge  
Crankcase Oil Capacity ..... 4 U.S. qts.

### ◆ COOLING SYSTEM

Type ..... Closed  
Water Pump ..... Belt Driven  
Fan Speed ..... 2550  
Fan Diameter ..... 15 inches  
Fan Mode ..... Pusher  
Air Flow (inlet air including alternator and combustion air) ..... 1528 ft<sup>3</sup>/min.  
Coolant Capacity ..... 2.0 U.S. gal.  
Heat Rejection to Coolant ..... 107,000 Btu/h  
Maximum Operating Air Temp. on Radiator ..... 60° C (150° F)  
Maximum Ambient Temperature ..... 50° C (140° F)

### ◆ FUEL SYSTEM

Type of Fuel ..... Natural Gas, Propane Vapor  
Carburetor ..... Down Draft  
Secondary Fuel Regulator ..... Standard  
Fuel Shut-off Solenoid ..... Standard  
Operating Fuel Pressure ..... 5 in. - 14 in. Water Column

#### Fuel Consumption - ft<sup>3</sup>/hr (Natural Gas/LPV)

| Exercise     | 25%         | 50%         | 75%         | 100%        |
|--------------|-------------|-------------|-------------|-------------|
| <u>Cycle</u> | <u>Load</u> | <u>Load</u> | <u>Load</u> | <u>Load</u> |
| 60/24        | 124/49      | 188/75      | 250/99      | 315/125     |

### ◆ ELECTRICAL SYSTEM

Battery Charge Alternator ..... 12V, 15 Amp  
Static Battery Charger ..... 2 Amp  
Recommended Battery ..... Group 26, 525CCA  
System Voltage ..... 12 Volts

#### Voltage Regulator


Type ..... Electronic  
Sensing ..... Single-phase  
Regulation ..... ± 1%  
Features ..... V/F Adjustable, Adjustable  
Voltage and Gain LED Indicators

#### Power Adjustment for Ambient Conditions

Temperature Deration  
3% for every 10° C above °C ..... 25  
1.65% for every 10° above °F ..... 77  
Altitude Deration  
1% for every 100 m above m ..... 182  
3% for every 1000 ft. above ft. .... 600

Controller ..... R-100

**Figure 1 — Interconnections**

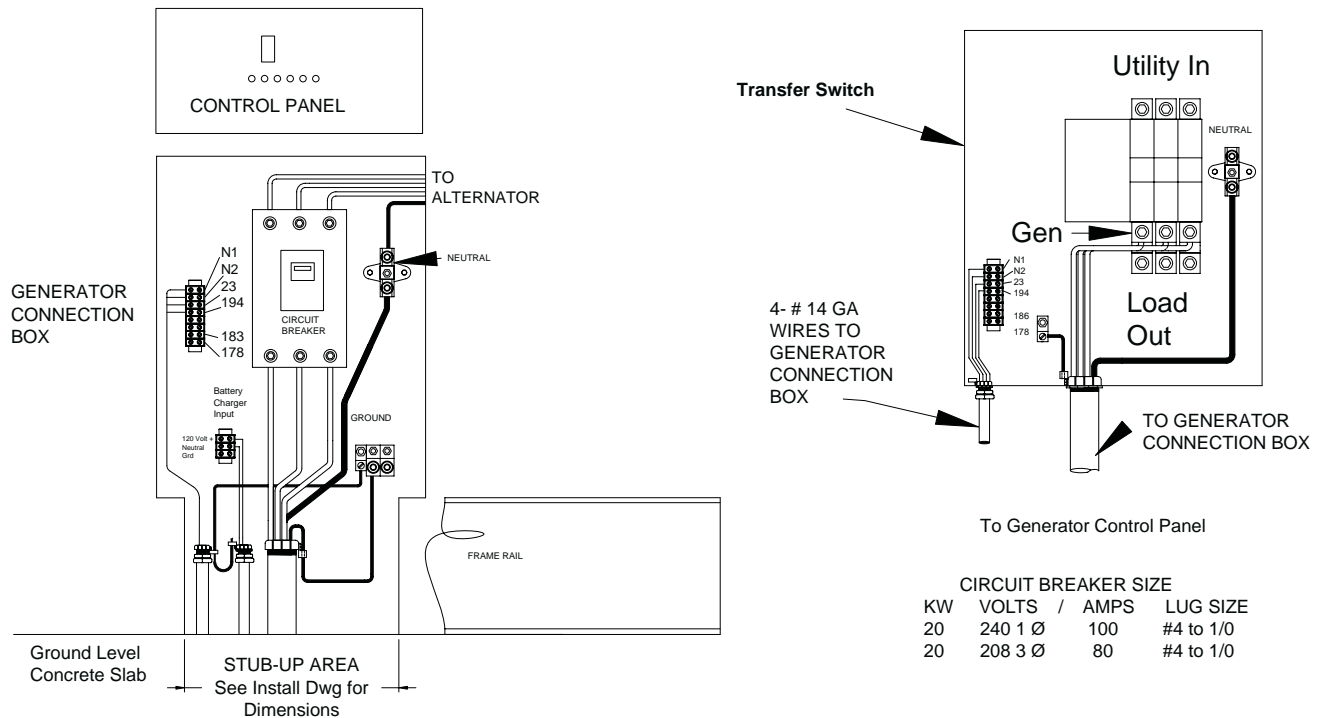

## ◆ COLD WEATHER KIT

For cold climates, optional cold weather kit (part number 0F6148) is recommended. The kit includes:

- Battery Warmer
- 4" Junction Box with hardware
- 6 qt. pack 5W-30 synthetic oil (engine)

## ◆ RECONFIGURING THE FUEL SYSTEM

### NOTE:

**All models are configured for natural gas or LP vapor from the factory.**


To reconfigure the fuel system from NG to LP, follow these steps:

1. Turn the main gas supply off.
2. Remove the carburetor fuel hose from the outlet port (Port 1) of the demand regulator (Figure 6.2).
3. Remove the brass hose fitting from the outlet port (Port 1) of the demand regulator.
4. Remove pipe plug from Port 2.
5. Install brass hose fitting into Port 2.
6. Install pipe plug into Port 1.
7. Connect carburetor gas hose to brass fitting.
8. Tighten all clamps and plugs.
9. Make sure fuel supply is of the proper pressure and type for configuration.

10. Reverse the procedure to convert back to natural gas.

11. The Dip switch inside the control panel must be in the LP or NG position when switching to different fuels.

**Figure 6.2 — Reconfigure the Fuel System**

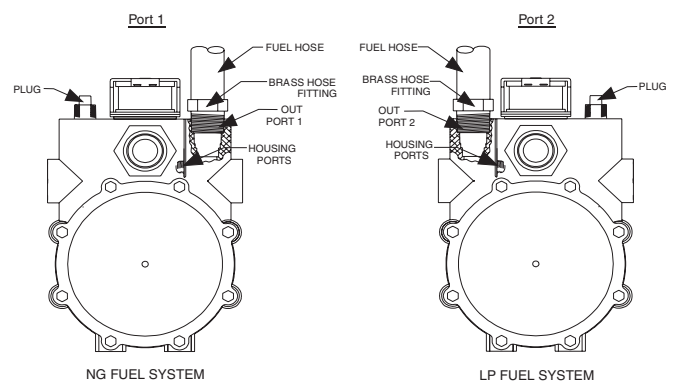

### NOTE:

**Port 1 is for NG only and Port 2 is for LP vapor only. No provision for dual fuel has been made.**

**⚠ DANGER ⚠**

**⚠ Serious injury or damage may occur if not configured properly. Please consult an Authorized Dealer with any questions.**

## GENERATOR AC LEAD CONNECTIONS

See "Voltage Codes". This generator may be rated at any one of three voltages, either single-phase or three-phase. The electrical wires in the unit's AC connection (lower) panel should be installed according to the number of leads and the voltage/phase required for the application. If there are any questions regarding lead connection, refer to the wiring diagrams at the back of this manual.


Voltage codes apply to the type of stator assembly installed on a particular generator.

### ◆ FOUR-LEAD, SINGLE-PHASE STATOR

Four-lead generators (see Figure 7.1) are designed to supply electrical loads with voltage code "A" (240V, 1-phase, 60 Hz). Electrical power is produced in the stator power windings. These windings were connected at the factory to the main circuit breaker as shown in Figure 7.1.

The rated voltage between each circuit breaker terminal is 240V. The rated voltage between each circuit breaker terminal and the neutral point 00 is 120V.

**Figure 7.1 — Four-lead, Single-phase Stator**

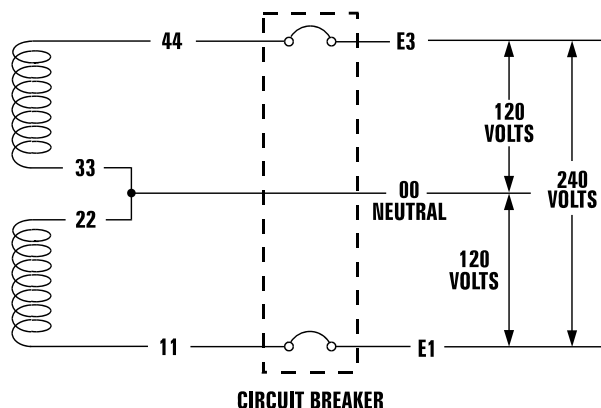

## ALTERNATOR POWER WINDING CONNECTIONS


### ◆ 3-PHASE ALTERNATORS

The generator is designed to supply 3-phase electrical loads. Electric power is produced in the alternator power windings. These windings were connected at the factory to the main circuit breaker with a "Y" configuration as shown in Figures 7.2 and 7.3.


The rated voltage between circuit breaker terminals E1-E2, E1-E3 and E2-E3 is either 480V or 208V depending on the model.


The rated voltage between each circuit breaker terminal and the neutral point 00 is either 277V or 120V depending on the model.

**Figure 7.2 — Stator Power Winding Connections - 3-phase, 277/480V (6 Lead)**

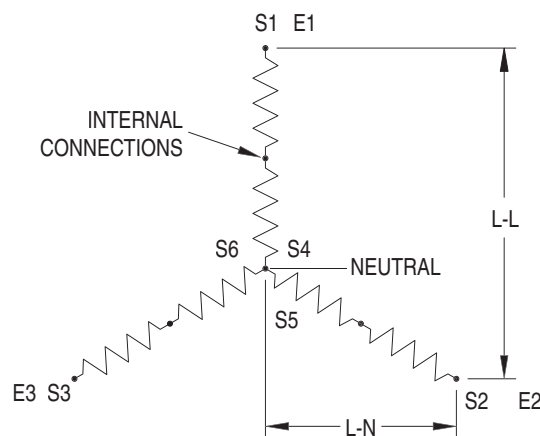

**Figure 7.3 — Stator Power Winding Connections - 3-phase, 120/208V (6 Lead)**

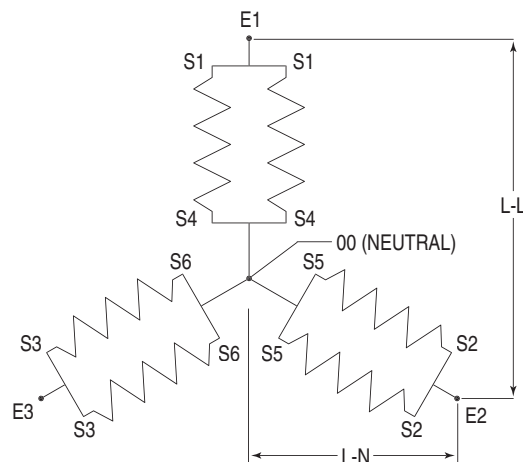



## INSTALLATION

Refer to the separate "Installation Guide QT Product Line" supplied with the unit.

### PREPARATION BEFORE START-UP

The instructions in this section assume that the standby generator has been properly installed, serviced, tested, adjusted and otherwise prepared for use by a competent, qualified installation contractor. Be sure to read the "Safety Rules", as well as all other safety information in this manual, before attempting to operate this (and related) equipment.

Before starting the generator for the first time, the installer must complete the following procedures. For follow-up maintenance information and/or service intervals, please refer to the "Maintenance" section and the "Service Schedule".

#### ◆ TRANSFER SWITCH

If this generator is used to supply power to any electrical system normally powered by an electric utility, the National Electrical Code requires that a transfer switch be installed. The transfer switch prevents electrical backfeed between two different electrical systems. (For additional information, see the applicable transfer switch manual for this unit.) The transfer switch, as well as the generator and other standby components, must be properly located and mounted in strict compliance with applicable codes, standards and regulations.

#### ◆ FUEL SYSTEM

Make sure the fuel supply system to the generator (a) delivers the correct fuel at the correct pressure and (b) is properly purged and leak tested according to code. No fuel leakage is permitted. See "Specifications" for more information.

#### ◆ GENERATOR SET LUBRICATION

Check the engine crankcase oil level before operating and add oil to the proper level – the dipstick "FULL" mark. Never operate the engine with the oil level below the dipstick "ADD" mark. See "Specifications" and "Engine Oil Recommendations".

#### NOTE:

**This engine is shipped from the manufacturer with "break-in" oil. This oil should be changed after 30 hours of operation.**

Check the oil level in the generator gearbox (if so equipped) prior to initial use and at the intervals indicated by the "Service Schedule." The recommended oil is SAE 90 gear lubricant.

Also, if the engine is equipped with a mechanical governor, make sure the governor is properly lubricated with clean engine oil.

### ◆ PRIOR TO INITIAL START-UP



⚠ Prior to initially starting the generator, it must be properly prepared for use. Any attempt to crank or start the engine before it has been properly serviced with the recommended types and quantities of engine fluids (oil, coolant, fuel, etc.) may result in an engine failure.

#### ◆ ENGINE COOLANT

Have the engine cooling system properly filled with the recommended coolant mixture. Check the system for leaks and other problems. See "Specifications" and "Coolant" sections.

#### ◆ BELT TENSION

Check the engine-fan belt tension and condition prior to placing the unit into service and at recommended intervals. Belt tension is correct when a force of approximately 22 pounds (10 kg), applied midway between pulleys, deflects the belt about 3/8- to 5/8-inch (10 to 16 mm).

#### ◆ ELECTRICAL SYSTEM

Make sure the generator is properly connected to an approved earth ground.

Make sure the generator battery is fully charged, properly installed and interconnected, and ready for use.

Check to ensure that there are no loose electrical connections. Restrain any loose wires to keep them clear of any moving generator set components.

## INITIAL INSPECTION FOR QT GENSET STARTUP

Inspect for the following.

- Freight Damage.
- Manuals present.
- Fluid Levels (Oil, coolant, battery, Gear Drive).
- Correct fuel piping.
- Correct muffler installation for external application.
- Adequate air flow, clearances and ventilation per installation drawings and applicable codes.
- Correct AC and DC wire size, connections and grounding. Control and communication wiring to/from the transfer switch must be run in a separate conduit from the AC power leads.
- Battery charger connection to 120 VAC.
- Communication wires connected between transfer switch and generator (HTS only).
- Unit secured to pad.





## START-UP CHECKLIST



### WARNING

**⚠ Before working on the generator, ensure the following:**

- **The AUTO/OFF/MANUAL switch is in the OFF position.**
- **The 120VAC supply to the battery charger is switched OFF.**

### ◆ PREPARATION FOR START-UP

- Ensure that the 120VAC circuit breaker to the battery charger is open.
- Remove the fuse from the the control panel. For the H-100 and R-series: Open the front door of the control box and remove the 15 Amp ATO fuse in the lower left-hand corner of the control box.
- Connect the battery cables to the battery. Attach negative battery cable last.
- Close the 120VAC circuit breaker to the battery charger.
- Measure the voltage at the battery before and after the charger is turned on.
- Verify all AC electrical connections are tight at the circuit breaker and transfer switch.
- Visually inspect entire area looking for loose paper, plastic wrappings, leaves, etc.
- Check all hoses clamps fittings for leaks or damage.
- Check all electrical plugs throughout the generator. Ensure each plug is seated correctly and fully inserted into its receptacle.
- Verify the AUTO/OFF/MANUAL switch is in OFF position.
- Open the valve to the engine fuel line.
- Bleed the fuel system of air. (necessary for long fuel lines).
- Open the generator main line circuit breaker.
- Connect a manometer to the gas line and record the static pressure. It must be as listed in the Specifications.
- Insert the fuse into the control panel.
- Move the AUTO/OFF/MANUAL switch to the MANUAL position. The engine should now crank and start.

- Check voltage at the generator terminals.
- For 3-phase units, check phase rotation at the transfer switch terminals. The generator phase rotation must match the utility phase rotation.
- Check for coolant, fuel, oil, and exhaust leaks.
- Close the generators main line circuit breaker.
- Turn the generator set off.
- Connect the UTILITY supply to the transfer switch.
- Set the AUTO/OFF/MANUAL switch to AUTO.
- Disconnect utility power before the transfer switch.

Engine should start, transfer to load.



Run at least 15 minutes on generator power. Make certain all 3-phase loads are functioning correctly (correct phase rotation).

- Reconnect Utility power  
Transfer switch will transfer back to Utility and engine will shut down within the given time parameters set up for the specific transfer switch and controller.
- Install all covers, access plates and door panels.
- Put the Owners Manual in a safe and accessible place.
- Make certain the AUTO/OFF/MANUAL switch is in the AUTO position.

### ◆ START-UP INSPECTION

When a start-up is performed by an Authorized Service Dealer, a standard three-part form titled "Start-up Inspection for Standby Power Systems" (part no. 067377), should be completed by the installation technician or engineer. See page 1-3 for information on locating the nearest Authorized Service Dealer. The installer should complete the form and disseminate copies as follows:

- White copy: Mail to Generac Warranty Department, P.O. Box 340, 211 Murphy Dr., Eagle, WI 53119-2062.
- Pink Copy: For service file of installing dealer.
- Yellow Copy: For the customer's records.



## GENERATOR CONTROL AND OPERATION

Refer to the appropriate control panel operator's manual for this unit.

## OPERATING UNIT WITH MANUAL TRANSFER SWITCH

If the generator was installed in conjunction with a transfer switch capable of manual operation only, the following procedure applies. A manually operated transfer switch is one that will not provide automatic start-up and does not include an intelligence circuit.

### ◆ ENGINE START-UP AND TRANSFER

For additional information, refer to the applicable control panel manual for this unit, as well as any literature pertaining to the specific transfer switch.



⚠ The Maintenance Disconnect Switch and the AUTO/OFF/MANUAL switches (if so equipped) must be set properly, or the generator will crank and start as soon as the utility power to the transfer switch is turned off. Refer to applicable control panel and transfer switch manuals for more information.

⚠ Do not proceed until certain that utility source voltage is available to the transfer switch and the transfer switch main contacts are set to UTILITY.

⚠ Do not attempt manual operation until all power supplies to the transfer switch have been positively turned off, or extremely dangerous - possibly lethal - electrical shock will result.

⚠ Transfer switch enclosure doors should be kept closed and locked. Only authorized personnel should be allowed access to the transfer switch interior. Extremely high and dangerous voltages are present in the transfer switch.

In order to transfer load from the utility source to the generator, follow these directions:

- Turn OFF or disconnect the utility power circuit to the transfer switch, using the means provided (such as the utility source main line circuit breaker).
- Set the transfer handle to its UTILITY (NORMAL) position with load circuits connected to the utility power supply.
- Set the standby generator's main line circuit breaker to its OFF (or OPEN) position.
- Start the generator.



⚠ Do not crank the engine continuously for longer than 30 seconds, or the heat may damage the starter motor.

- Let engine stabilize and warm up.
- Check all applicable instrument and gauge readings. When certain that all readings are correct, move the transfer switch manual handle to its STANDBY (GENERATOR) position, i.e., load circuits supplied by the generator.
- Set the standby generator's main line circuit breaker to its ON (or CLOSED) position.
- Load circuits are now powered by the standby generator.

### ◆ RETRANSFER AND SHUTDOWN

For additional information, refer to the applicable control panel manual for this unit, as well as any literature pertaining to the specific transfer switch.

To transfer the load back to the utility power source and shut down the generator, follow these directions:

- Set the standby generator's main line circuit breaker to its OFF (or OPEN) position.
- Manually move the transfer switch handle to its UTILITY (NORMAL) position, i.e., load circuits connected to the utility.
- Turn ON the utility power supply to the transfer switch, using the means provided (such as the utility power source main line circuit breaker).
- Let the generator run at no-load for a few minutes to stabilize internal temperatures.
- Shut down the generator.

## OPERATING UNIT WITH AUTOMATIC TRANSFER SWITCH

If the generator has been installed with an automatic transfer switch, such as an RTS, HTS, or GTS-type transfer switch, the engine may be started and stopped automatically or manually.

### NOTE:

**Refer to the applicable manual for your transfer switch and to "Transfer Switch Start Signal Connections". In addition, please note the dangers under "Engine Start-up and Transfer."**



### MAINTENANCE PERFORMED BY AUTHORIZED SERVICE FACILITIES

#### ⚠ WARNING ⚠

⚡ Before working on the generator, ensure the following:

- The **AUTO/OFF/MANUAL** switch is in the **OFF** position.
- The **15A** fuse has been removed from the control box.
- The **120VAC** supply to the battery charger is switched **OFF**.

#### ◆ EVERY THREE MONTHS

1. Check battery condition.
2. Inspect and test fuel system.
3. Check transfer switch.
4. Inspect exhaust system.
5. Check engine ignition system.
6. Check fan belts.

#### ◆ ONCE EVERY SIX MONTHS

1. Test Engine Safety Devices (low oil pressure, low coolant level, high coolant temperature).

#### ◆ ONCE ANNUALLY

1. Test engine governor; adjust or repair, if needed.
2. Clean, inspect generator.
3. Flush cooling system.

#### ◆ FIRST 30 OPERATING HOURS

1. Change engine "break-in" oil and filter.

#### ◆ FIRST 100 OPERATING HOURS

1. Change engine oil and oil filter. After initial change, service engine oil and filter at 100 operating hours or six months, whichever comes first.
2. Retorque cylinder head.
3. Retorque intake and exhaust manifold.

#### ◆ EVERY 500 OPERATING HOURS

1. Service air cleaner.
2. Check starter.
3. Check engine DC alternator.

#### ◆ EVERY 800 OPERATING HOURS

1. Retorque cylinder head.
2. Retorque intake and exhaust manifold.
3. Check engine compression.
4. Check valve clearance.

### COOLING SYSTEM

Air intake and outlet openings in the generator compartment must be open and unobstructed for continued proper operation. This includes such obstructions as high grass, weeds, brush, leaves and snow.

Without sufficient cooling and ventilating air flow, the engine/generator quickly overheats, which causes it to shut down. (See the installation diagram.)

#### ⚠ WARNING ⚠

⚡ The exhaust system parts from this product get extremely hot and remains hot after shutdown. High grass, weeds, brush, leaves, etc. must remain clear of the exhaust. Such materials may ignite and burn from the heat of the exhaust system.

### OVERLOAD PROTECTION FOR ENGINE DC ELECTRICAL SYSTEM

Engine cranking, start up and running are controlled by a solid state Engine Controller circuit board. Battery voltage is delivered to that circuit board via a 15 amp fuse. These overcurrent protection devices will open if the circuit is overloaded.

#### ⚠ CAUTION ⚠


⚡ If a circuit breaker opens or a fuse element melts, find the cause of the overload before resetting the circuit breaker or replacing the fuse.

### CHECKING FLUID LEVELS

#### ◆ CHECK ENGINE OIL

Check engine crankcase oil level (Figure 10.1) at least every 20 hours of operation, or prior to use.


- Remove oil dipstick and wipe dry with a clean, lint-free cloth.
- Install oil dipstick, then remove again.
- Oil should be between **FULL** and **ADD** marks.
- If oil level is below the dipstick **ADD** mark, remove oil fill cap-. Add the recommended oil to bring oil level up to the **FULL** mark. **DO NOT FILL ABOVE THE "FULL" MARK.** See "Engine Oil Recommendations" for recommended oils.



## Standby Generator Sets Maintenance



**Figure 10.1 - Oil Dipstick and Oil Fill Cap**

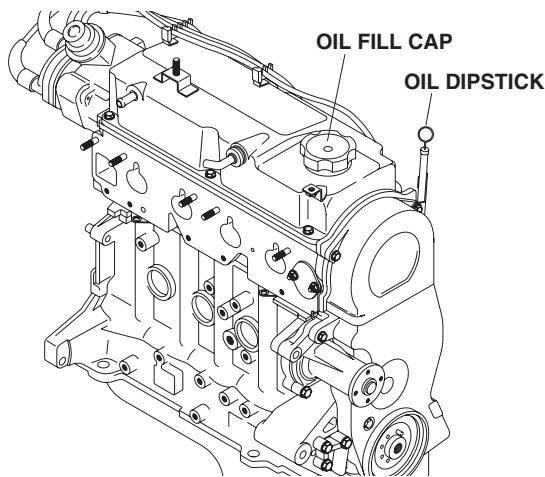

### ◆ BATTERY FLUID

Check battery electrolyte fluid based on the Maintenance Schedule. Fluid should cover separators in all battery cells. If fluid level is low, add distilled water to cover tops of separators. **DO NOT USE TAP WATER IN BATTERY.**

### ◆ ENGINE COOLANT

Check coolant level in coolant recovery bottle. See Specifications.

- Add recommended coolant mixture as necessary.
- Periodically remove radiator pressure cap (only when engine has cooled down) to make sure the coolant recovery system is functioning properly. Coolant should be at bottom of radiator filler neck. If coolant level is low, inspect gasket in radiator pressure cap. Replace cap, if necessary. To have pressure cap tested, contact an Authorized Service Dealer. Inspect cooling system and coolant recovery system for leaks.

## MAINTENANCE OWNER/ OPERATOR CAN PERFORM

### ◆ CHECK ENGINE OIL LEVEL

Refer to “Checking Fluid Levels”.

### ◆ CHECK BATTERY

- See “Checking Fluid Levels”.
- Check battery cables for condition, tightness, corrosion or damage. Clean, tighten or replace as necessary.

### ◆ EXERCISE SYSTEM

Start the generator engine at least once every seven days and let it run at least 20 minutes. See “Weekly Exercise Cycle”.

### ◆ INSPECT COOLING SYSTEM

- Inspect engine cooling system. See “Maintenance Schedule”.
- Check hoses for damage, deterioration, leaks, etc. Correct any discrepancies found.
- Check hose clamps for tightness.

### ◆ CHECK ENGINE COOLANT LEVEL

See “Checking Fluid Levels”.

### ◆ PERFORM VISUAL INSPECTION

Complete a thorough visual inspection of the entire engine-generator monthly. Look for obvious damage, loose, missing or corroded nuts, bolts and other fasteners. Look for fuel, oil or coolant leaks.

### ◆ INSPECT EXHAUST SYSTEM

Inspect the exhaust system at least once every three months. Check all exhaust system pipes, mufflers, clamps, etc. for condition, tightness, leaks, security, damage.

### ◆ CHECK FAN BELT

- Inspect fan belts every three months. Replace any damaged, deteriorated, worn or otherwise defective belt.
- Check fan belt tension. Thumb pressure, exerted midway between pulleys, should deflect about 3/8 to 5/8 of an inch. Adjust belt tension as required.



### ◆ INSPECT ENGINE GOVERNOR

Visually inspect electronic governor.



- ⚠ Do not attempt to adjust the governor. Only qualified service facilities should adjust the governor. Excessively high operating speeds are dangerous and increase the risk of personal injury. Low speeds impose a heavy load on the engine when adequate engine power is not available and may shorten engine life. Correct rated frequency and voltage are supplied only at the proper governed speed. Some connected electrical load devices may be damaged by incorrect frequency and/or voltage. Only qualified service technicians should adjust the governed speed.






## ◆ CHANGING ENGINE OIL

Refer to maintenance performed by authorized service facilities for engine oil and filter change frequencies.

Drain the oil while the engine is still warm from running. This means warm up the engine, shut it down and drain immediately as follows:

1. Remove OIL DRAIN HOSE from its retaining clip.
2. Loosen and remove OIL DRAIN HOSE CAP. Drain oil completely into suitable container.
3. When all oil has drained, install and tighten OIL DRAIN HOSE CAP, and re-install into its retaining clip.
4. Turn OIL FILTER (Figure 10.2) counterclockwise and remove. Properly dispose of old filter.

**Figure 10.2 – Oil Filter**

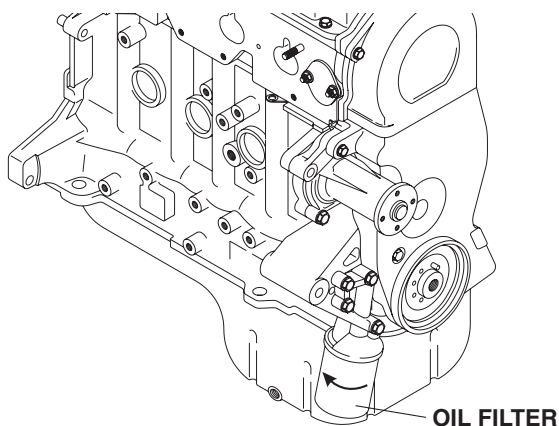

5. Apply light coating of new engine oil to seal of new oil filter. Install FILTER and tighten by hand only. DO NOT OVER TIGHTEN.
6. Remove OIL FILL CAP. Add recommended oil (see SPECIFICATIONS). DO NOT FILL ABOVE THE DIPSTICK "FULL" MARK. Crankcase oil capacity is 4.0 U.S. quarts (3.8 liters).



⚠ **After refilling the crankcase with oil, always check oil level on dipstick. NEVER OPERATE ENGINE WITH OIL BELOW THE DIPSTICK "ADD" MARK.**


7. Start engine and check for oil leaks.

## ◆ CHANGING THE ENGINE AIR CLEANER

To replace the engine air cleaner, (part number 059402), simply remove the air cleaner cover and replace the air filter making sure it is positioned properly before reattaching the cover (Figure 10.3).

See the "Service Schedule," for air cleaner maintenance.

**Figure 10.3 – Engine Air Cleaner**

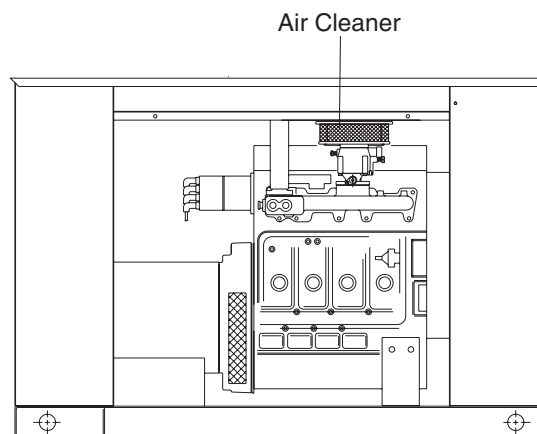


(Doors Removed for Clarity)

## ◆ SPARK PLUGS

Reset the spark plug gap or replace the spark plugs as necessary (Figure 10.4).

1. Clean the area around the base of the spark plugs to keep dirt and debris out of the engine. Clean by scraping or washing using a wire brush and commercial solvent. Do not blast the spark plugs to clean.
2. Remove the spark plugs and check the condition. Replace the spark plugs if worn or if reuse is questionable. See the "Service Schedule," Section 6, for recommended inspection.
3. Check the spark plug gap using a wire feeler gauge. Adjust the gap to 0.5-0.6 mm (0.020-0.025 inch) by carefully bending the ground electrode (Figure 10.4).


**Figure 10.4 – Setting the Spark Plug Gap**

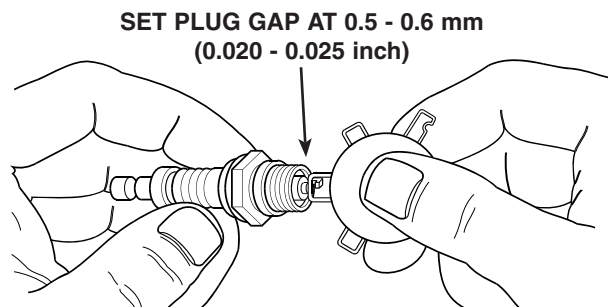

## ◆ COOLANT CHANGE

Every year, have an Authorized Service Facility drain, flush and refill the cooling system. See "Specifications" for cooling system recommendations.





## Standby Generator Sets Maintenance



### MISCELLANEOUS MAINTENANCE

#### ◆ CLEANING THE GENERATOR

Keep the generator as clean and as dry as possible. Dirt and moisture that accumulates on internal generator windings have an adverse effect on insulation resistance.

Periodically clean generator exterior surfaces. A soft brush may be used to loosen caked on dirt. Use a vacuum system or dry, low pressure air to remove any accumulations of dirt. The generator is housed inside an all-weather enclosure, clean the enclosure with a soft, damp cloth or sponge and water.

Once each year have the generator cleaned and inspected by an Authorized Service Dealer. That dealer will use dry, low pressure air to clean internal windings. Parts inside the control console should be cleaned and inspected at this time as well.

Finally, have the insulation resistance of stator and rotor windings checked. If insulation resistances are excessively low, the generator may require drying.

#### ◆ BATTERY

All lead-acid storage batteries discharge when not in use. Refer to specific instructions and warnings that accompany the battery. If such information is not available, observe the following precautions when handling a battery:

- DO NOT use jumper cables and a booster battery to crank or start the generator engine.
- DO NOT recharge a weak battery while it is installed in the generator. Remove battery from generator and recharge in a well-ventilated area, away from fuel vapors, sparks, heat or flames.
- Battery electrolyte fluid is an extremely caustic sulfuric solution that can cause severe burns. DO NOT permit fluid to contact eyes, skin, clothing, painted surfaces, wiring insulation, etc. If any battery fluid is spilled, flush the affected area with clear water immediately.
- Always wear safety glasses, rubber apron and gloves when handling a battery.
- Batteries give off explosive hydrogen gas while charging. The gas can form an explosive mixture around the battery for several hours after charging. Any spark, heat or flames can ignite the gas and cause an explosion which can shatter the battery, causing blindness or other serious injury.


#### ◆ BATTERY MAINTENANCE


The battery should be inspected per Section 4.7, Scheduled Maintenance. The following procedure should be followed for inspection:


1. Inspect the battery posts and cables for tightness and corrosion. Tighten and clean as necessary.

2. Check the battery fluid level of unsealed batteries and, if necessary, fill with DISTILLED WATER ONLY. DO NOT USE TAP WATER IN BATTERIES.
3. Have the state of charge and condition checked. This should be done with an automotive-type battery hydrometer.


—  **DANGER**  —

 **Storage batteries give off explosive hydrogen gas. This gas can form an explosive mixture around the battery for several hours after charging. The slightest spark can ignite the gas and cause an explosion. Such an explosion can shatter the battery and cause blindness or other injury. Any area that houses a storage battery must be properly ventilated. Do not allow smoking, open flame, sparks or any spark producing tools or equipment near the battery.**

 **Battery electrolyte fluid is an extremely corrosive sulfuric acid solution that can cause severe burns. Do not permit fluid to contact eyes, skin, clothing, painted surfaces, etc. Wear protective goggles, protective clothing and gloves when handling a battery. If fluid is spilled, flush the affected area immediately with clear water.**

 **Do not use any jumper cables or booster battery to crank and start the generator engine. If the battery has completely discharged, remove it from the generator for recharging.**

—  **WARNING**  —

 **Be sure the AUTO/OFF/MANUAL switch is set to the OFF position, before connecting the battery cables. If the switch is set to AUTO or MANUAL, the generator can crank and start as soon as the battery cables are connected.**

 **Be sure the 120VAC power supply to the battery is turned OFF, or sparking may occur at the battery posts as the cables are attached and cause an explosion.**

#### ◆ BATTERY REPLACEMENT

When replacing batteries, use the same number and the type of battery that follows:

| BCI Group No. | CCA            |
|---------------|----------------|
| 26            | 525 @ 0 deg. F |

**NOTE:**

**The BCI number should be located directly on the battery.**

| ◆ PERIODIC REPLACEMENT PARTS |              |
|------------------------------|--------------|
| Part Name                    | Part Number  |
| Oil Filter                   | # 0A4531A244 |
| Radiator Cap                 | # 046627     |
| Air Cleaner                  | # 059402     |
| Spark Plug                   | # 0A45310275 |



## Standby Generator Sets Service Schedule



### SERVICE SCHEDULE

The following is a recommended maintenance schedule for small standby and residential generator sets. The established intervals in the schedule are the *maximum* recommended when the unit is used in an average service application. They will need to be decreased (performed more frequently) if the unit is used in a severe application. Use calendar time or accumulated run time, from the previous maintenance interval to determine the next required maintenance interval.

#### Service Maintenance Interval Information:

The various service maintenance intervals are designated by interval numbers as follows:

- 1 An early inspection of the generator set to insure it is ready to operate when required and to identify any potential problem areas.

*Performed monthly this requires approximately .5 man-hours per unit to complete.*

*This inspection may be performed by the end user providing the following safety steps are taken to prevent the engine from starting automatically without warning:*

**To prevent injury, perform the following steps in the order indicated before starting any maintenance:**

- Disable the generator set from starting and/or connecting to the load by setting the control panel AUTO/OFF/MANUAL switch to the OFF position.
- Remove the 5 amp and 15 amp control panel fuses.
- Turn off the battery charger (turn OFF utility supply to ATS).
- Remove the negative battery cable.

**The battery charger must be turned off BEFORE removing the battery cable to prevent an over current condition from burning out sensitive control panel components and circuits.**

**Following all maintenance, reverse these steps to insure the unit is returned to standby setup for normal operation when required.**

- 2 A break-in service inspection of the generator set to insure it is ready to operate and carry the load when required, and to identify any potential problem areas.

*Performed **ONLY ONCE** following the first three months, or 30 run time hours of operation after purchase of the unit and requires approximately 2.5 man-hours per unit to complete.*

*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by a Service Dealer.*

- 3 An operational inspection of the generator set to insure it is ready to operate and carry the load when required, and to identify any potential problem areas.


*Performed semi-annually this requires approximately 1.5 man-hours per unit to complete.*

*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by a Service Dealer.*


- 4 A mid-level inspection of the generator set to insure it is ready to operate and carry the load when required, and to identify any potential problem areas.

*Performed annually this requires approximately 4.0 man-hours per unit to complete.*


*This inspection contains some maintenance tasks which require special tools, equipment, and/or knowledge to accomplish and should be performed only by a Service Dealer.*




## Standby Generator Sets Service Schedule



| Maintenance Tasks  | Level 1<br>Recommended to be done monthly 10 Hrs. | Task Comp. (Date-Initials) | Level 2<br>Required to be done 3 months/<br>Break-in 30 Hrs. | Task Comp. (Date-Initials) | Level 3<br>Required to be done Semi-annually 50 Hrs. | Task Comp. (Date-Initials) | Level 4<br>Required to be done Annually 100 Hrs. | Task Comp. (Date-Initials) |
|--|---|----------------------------|--|----------------------------|--|----------------------------|--|----------------------------|
| 1. Disable the unit from operating per the first page warning.   |   |                            |  |                            |  |                            |  |                            |
| 2. Check the engine oil level. Adjust as necessary.  |   |                            |  |                            |  |                            |  |                            |
| 3. Check the engine coolant level. Adjust as necessary.  |   |                            |  |                            |  |                            |  |                            |
| 4. Check the engine coolant thermal protection level. Correct as necessary.  |   |                            |  |                            |  |                            |  |                            |
| 5. Check the natural gas delivery system on gas engine driven units. Tighten connections as necessary.                                 |   |                            |  |                            |  |                            |  |                            |
| 6. Check the air inlets and outlets for debris. Clean as necessary.  |   |                            |  |                            |  |                            |  |                            |
| 7. Check the battery electrolyte level if accessible. Adjust as necessary.   |   |                            |  |                            |  |                            |  |                            |
| 8. Check the battery posts, cables, and charger for loose connections, corrosion, and proper operation. Correct as necessary.          |   |                            |  |                            |  |                            |  |                            |
| 9. Check the unit wiring for loose connections, corrosion, and damage. Correct as necessary.   |   |                            |  |                            |  |                            |  |                            |
| 10. Check the engine accessory drive belts for wear, weather cracking, and damage. Replace as necessary.                               |   |                            |  |                            |  |                            |  |                            |
| 11. Visually inspect the unit looking for leaks, wear or damage, loose connections or components, and corrosion. Correct as necessary. |   |                            |  |                            |  |                            |  |                            |
| 12. Test the engine and transfer switch safety devices. Correct and/or adjust as necessary.  |   |                            |  |                            |  |                            |  |                            |



## Standby Generator Sets Service Schedule



| Maintenance Tasks   | Level 1  |   | Level 2  |                                      | Level 3  |                                      | Level 4  |                                      |
|---|--|---|--|--------------------------------------|--|--------------------------------------|--|--------------------------------------|
|   | Recom-<br>mended<br>to be done<br>monthly<br>10 Hrs. | Task<br>Comp.<br>(Date-<br>In initials) | Required<br>to be done<br>3 months/<br>Break-in<br>30 Hrs. | Task<br>Comp.<br>(Date-<br>Initials) | Required<br>to be done<br>Semi-<br>annually<br>50 Hrs. | Task<br>Comp.<br>(Date-<br>Initials) | Required<br>to be done<br>Annually<br>100 Hrs. | Task<br>Comp.<br>(Date-<br>Initials) |
| 13. Initiate an automatic start and transfer of the unit to site load and exercise it for at least 1 hour looking for leaks, loose connections or components, and abnormal operating conditions. Correct as necessary.                |  |   |  |                                      |  |                                      |  |                                      |
| 14. Start and exercise the unit at full rated load (use a load bank if the site load is not enough) for at least 2 hours looking for leaks, loose connections or components, and abnormal operating conditions. Correct as necessary. |  |   |  |                                      |  |                                      |  |                                      |
| 15. Change the engine oil.  |  |   |  |                                      |  |                                      |  |                                      |
| 16. Replace the engine oil filter(s).   |  |   |  |                                      |  |                                      |  |                                      |
| 17. Replace the engine air filter(s).   |  |   |  |                                      |  |                                      |  |                                      |
| 18. Replace the engine fuel filter(s) on diesel engine driven units and re-prime the fuel system.   |  |   |  |                                      |  |                                      |  |                                      |
| 19. Check the engine spark plugs on gas engine driven units. Clean and re-gap or replace as necessary.  |  |   |  |                                      |  |                                      |  |                                      |
| 20. Perform a 5 minute no-load operational run of the unit looking for any post service problems.   |  |   |  |                                      |  |                                      |  |                                      |
| 21. Return the unit to standby setup for operation when required.   |  |   |  |                                      |  |                                      |  |                                      |



## Standby Generator Sets Troubleshooting



### TROUBLESHOOTING GUIDE

| PROBLEM  | CAUSE  | CORRECTION   |
|--|--|--|
| Engine won't crank.                                    | <ol style="list-style-type: none"> <li>15 amp fuse blown.</li> <li>Loose or corroded or defective battery cables.</li> <li>Defective starter contactor.</li> <li>Defective starter motor.</li> <li>Dead or Defective Battery.</li> <li>5 amp fuse blown.</li> </ol>  | <ol style="list-style-type: none"> <li>Replace fuse.</li> <li>Tighten, clean or replace battery cables as necessary.</li> <li>Replace contactor.*</li> <li>Replace starter motor.*</li> <li>Remove, change or replace battery.</li> <li>Replace fuse.*</li> </ol>      |
| Engine cranks but won't start                          | <ol style="list-style-type: none"> <li>Out of fuel.</li> <li>Fuel solenoid (FS) is defective</li> <li>Open Wire #14A from Engine Control circuit board.</li> <li>Spark plugs defective.</li> <li>Door on tank not closed.</li> </ol>   | <ol style="list-style-type: none"> <li>Replenish fuel.</li> <li>Replace solenoid.*</li> <li>Reconnect wire.</li> <li>Clean, regap or replace plugs.</li> <li>Close door on tank.</li> </ol>  |
| Engine starts hard, runs rough.                        | <ol style="list-style-type: none"> <li>Flame arrestor (air cleaner) plugged or damaged.</li> <li>Plugged fuel line.</li> <li>Defective spark plugs.</li> <li>Fuel pressure incorrect.</li> </ol>   | <ol style="list-style-type: none"> <li>Clean or replace as needed.</li> <li>Unclog fuel line.</li> <li>Clean, regap or replace plugs.</li> <li>Confirm fuel pressure to regulator is as recommended in SPECIFICATIONS.</li> </ol>                                      |
| Engine starts then shuts down.                         | <ol style="list-style-type: none"> <li>Engine oil level is low.</li> <li>Engine is overheated.</li> <li>Defective Low Oil Pressure Switch</li> <li>Defective Coolant Temperature Switch</li> <li>Defective Control Module circuit board.</li> <li>Coolant Level is Low.</li> <li>Defective Low Coolant Level Switch</li> </ol> | <ol style="list-style-type: none"> <li>Check oil and add oil as needed.</li> <li>Check cooling system for leaks.</li> <li>Replace switch.*</li> <li>Replace switch.*</li> <li>Replace board.*</li> <li>Repair leak - Add coolant.</li> <li>Replace Switch.*</li> </ol> |
| AUTO/OFF/MANUAL Switch at OFF, engine continues to run | <ol style="list-style-type: none"> <li>Defective AUTO/OFF/MANUAL switch</li> <li>Open/disconnected wire #15A between AUTO/OFF/MANUAL switch and Control Module circuit board.</li> <li>Defective Control Module circuit board</li> </ol>   | <ol style="list-style-type: none"> <li>Replace switch.*</li> <li>Reconnect/close wire.</li> <li>Replace board.*</li> </ol>   |
| No AC output from generator.                           | <ol style="list-style-type: none"> <li>Check main line circuit breaker.</li> <li>Check circuit breaker &amp; fuses.</li> <li>Transfer switch set to NORMAL position</li> <li>Generator internal failure.</li> <li>Thermal circuit breaker open.</li> </ol>   | <ol style="list-style-type: none"> <li>Reset to ON or CLOSED.</li> <li>Reset and replace, if necessary.</li> <li>Set to GENERATOR position.</li> <li>*</li> <li>Auto-reset - Wait 5 min. and attempt restart.</li> </ol>   |

**\*Contact the nearest Authorized Dealer for assistance.**



## Standby Generator Sets

## NOTES

NOTES

## Standby Generator Sets Notes

NOTES


NOTES

## Standby Generator Sets Notes

NOTES

## Standby Generator Sets

# GROUP A

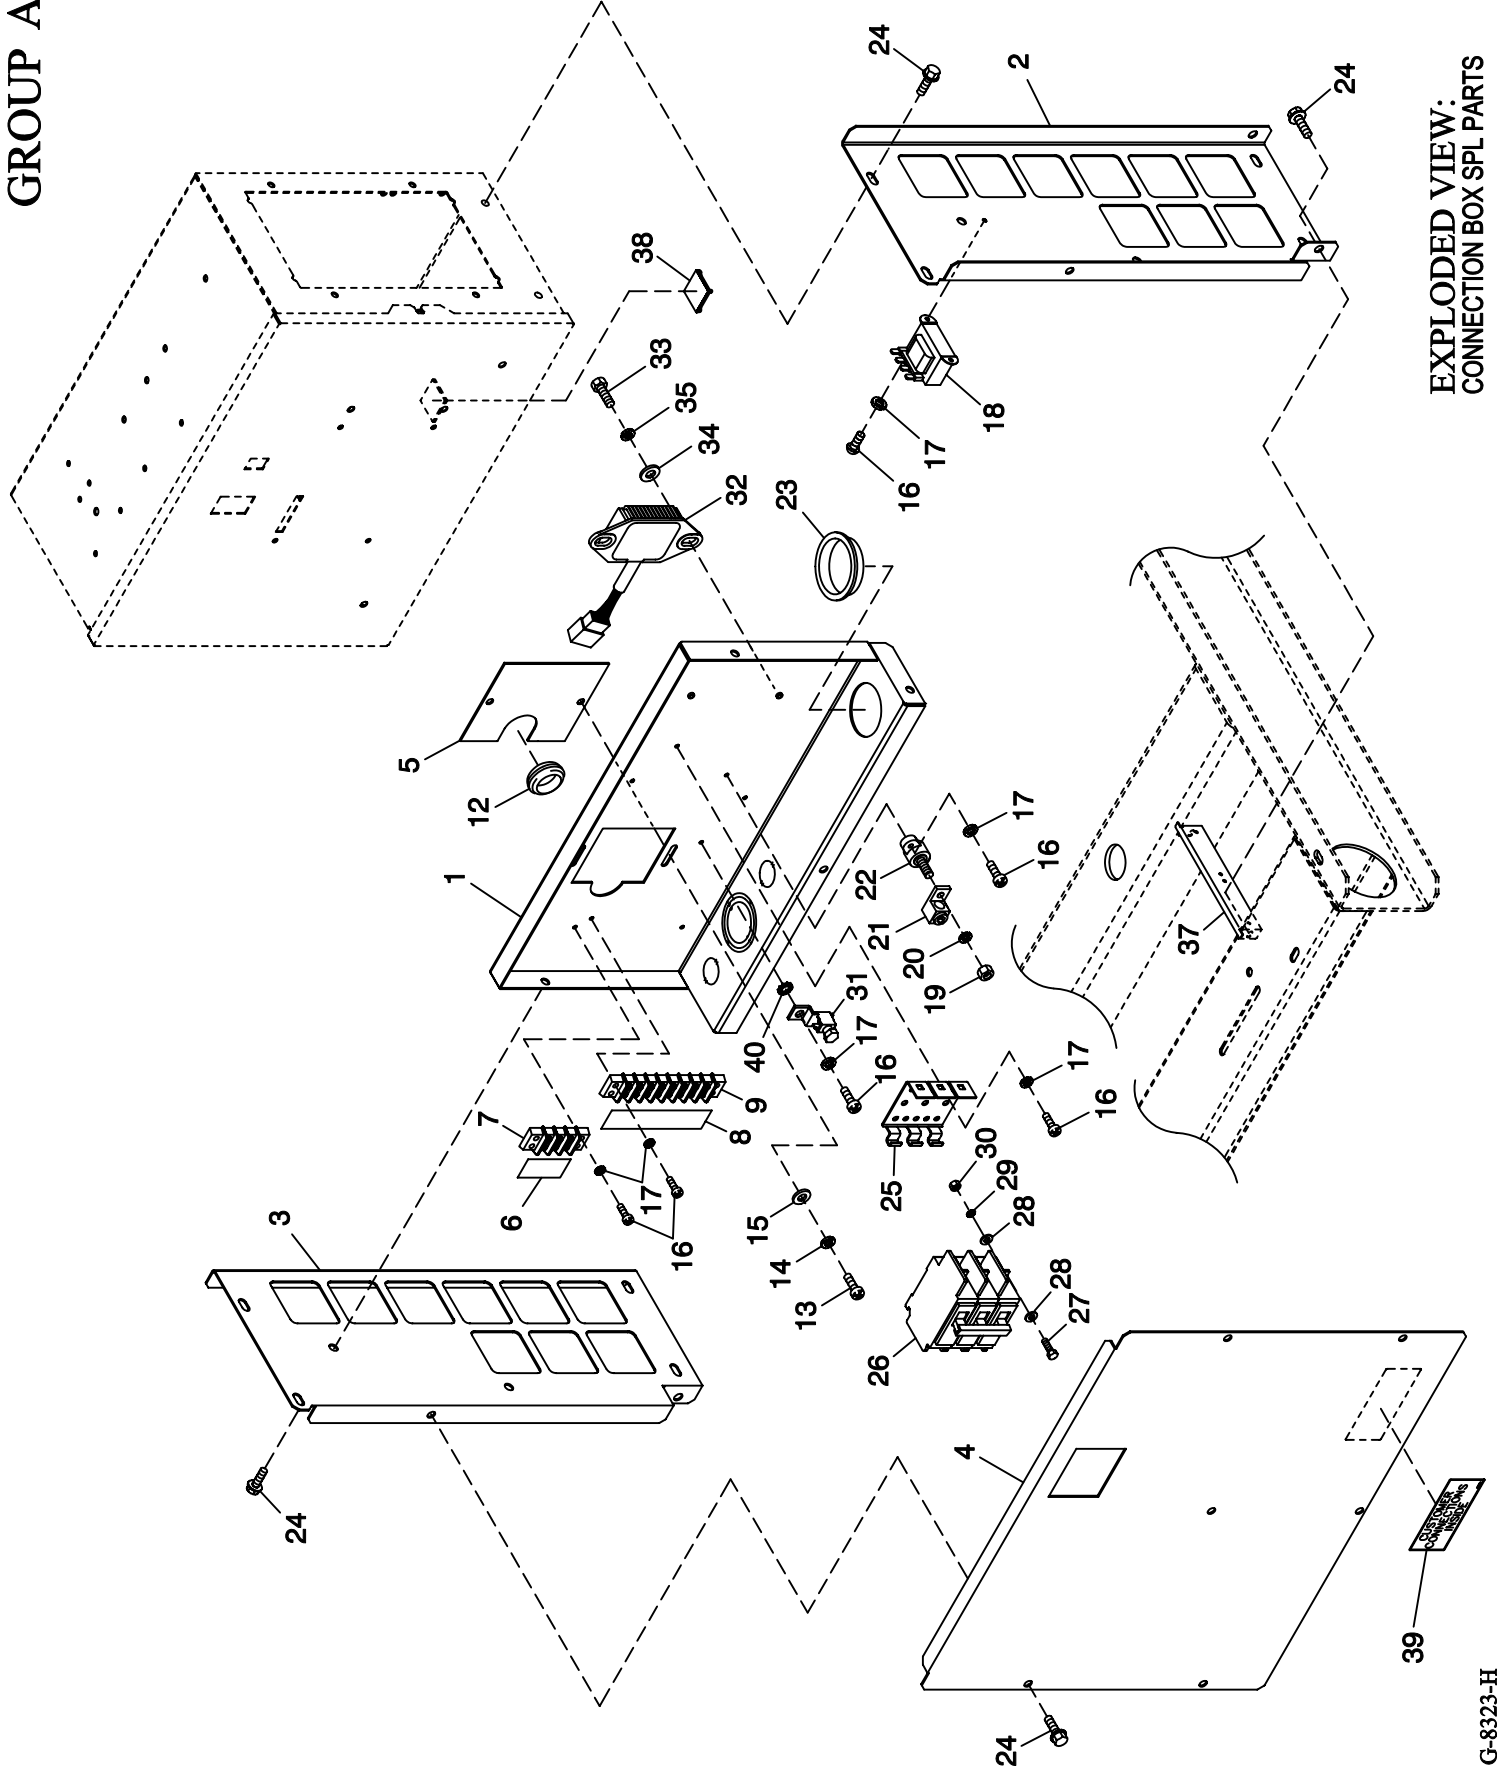

EXPLODED VIEW:  
CONNECTION BOX SPL PARTS  
DRAWING #: 0F7352



## EXPLODED VIEW: CONNECTION BOX SPL PARTS


DRAWING #: 0F7352

GROUP A

APPLICABLE TO:

| ITEM | PART #  | QTY. | DESCRIPTION                              |
|------|---------|------|--|
| 1    | 0F7135  | 1    | BREAKER TRAY BACK/BOTTOM                 |
| 2    | 0F7022  | 1    | SUPPORT CONTROL PANEL SIDE RH            |
| 3    | 0F7021  | 1    | SUPPORT CONTROL PANEL SIDE LH            |
| 4    | 0F7260  | 1    | COVER CIRCUIT BREAKER 2P                 |
|      | 0F7136  | 1    | COVER CIRCUIT BREAKER 3P                 |
| 5    | 0F6156  | 1    | PLATE WIRE SNGL GALV                     |
| 6    | 0F4464  | 1    | DECAL CUST CONN 120V UTILITY             |
| 7    | 0D4698  | REF  | BLOCK TERM 20A 6 X 3 X 1100V             |
| 8    | 0F3824  | 1    | DECAL UTIL SENSE/CUST CONN               |
| 9    | 057701  | REF  | BLOCK TERM 20A 8 X 6 X 1100V             |
| 10   | 0F6146  | 1    | HANG TAG 2 WIRE START (NOT SHOWN)        |
| 12   | 081008  | 1    | GROMMET 1.25 X .25 X .75                 |
| 13   | 0C2267  | 2    | SCREW HHTT M5-0.8 X 12 BP                |
| 14   | 049226  | 2    | WASHER LOCK M5                           |
| 15   | 051713  | 2    | WASHER FLAT M5                           |
| 16   | 0C2212  | 11   | SCREW PHTT M4-0.7 X 16 ZYC               |
| 17   | 022264  | 11   | WASHER LOCK #8-M4                        |
| 18   | 0F6366A | 1    | XFMR DUAL 104V/16V (3 PHASE)             |
|      | 0F6366B | 1    | XFMR DUAL 120V/16V (1 PHASE)             |
| 19   | 022241  | 1    | NUT HEX 3/8-16 STEEL                     |
| 20   | 022237  | 1    | WASHER LOCK 3/8                          |
| 21   | 057329  | 1    | LUG SLDLSS 350-#6 X 13/32 AL/CU          |
| 22   | 057073  | 1    | JUNCTION BLOCK 3/8-16                    |
| 23   | 023484J | 1    | BUSHING SNAP SB-2000-26                  |
| 24   | 0E3257  | 15   | SCREW HWHTF M6-1.0 X 16                  |
| 25   | 0E7890  | REF  | BRKT CB MTG BACK 2P                      |
|      | 0E6002  | REF  | MTG TRACK BQ SIEMENS CB 3P               |
| 26   | 0D5544  | REF  | CB 0100A 2P 240V S BQ2 LL (1.5L 2 POLE)  |
|      | 062812  | REF  | CB 0080A 3P 240V S BQ3 LL (1.5L 3 POLE)  |
|      | 0A2077  | REF  | CB 0125A 2P 240V S BQ2 LL (2.5L 2 POLE)  |
|      | 040532  | REF  | CB 0100A 3P 240V S BQ3 LL (2.5L 3 POLE)  |
| 27   | 052619  | REF  | SCREW HHC M5-0.8 X 20 G8.8 (NOT SHOWN)   |
| 28   | 023897  | REF  | WASHER FLAT #10 ZINC (NOT SHOWN)         |
| 29   | 049226  | REF  | WASHER LOCK M5 (NOT SHOWN)               |
| 30   | 051716  | REF  | NUT HEX M5-0.8 G8 CLEAR ZINC (NOT SHOWN) |
| 31   | 025433  | 1    | LUG SLDLSS #6-14 X 13/64 CU              |
| 32 * | 0A1354A | REF  | REGULATOR - DC ALT                       |
| 33 * | 0E3257  | REF  | SCREW HWHTF M6-1.0 X 16                  |
| 34 * | 022473  | REF  | WASHER FLAT 1/4-M6 ZINC                  |
| 35 * | 022097  | REF  | WASHER LOCK M6-1/4                       |
| 37 * | 0F7194  | 2    | BRACKET PANEL SUPPORT 1.5L C1            |
| 38   | 057593  | 1    | CABLE TIE MOUNT BLACK                    |
| 39   | 0F1733  | 1    | DECAL CUSTOMER CONNECT INSIDE            |
| 40   | 023762  | 1    | WASHER SHAKEPROOF EXT #10 STL            |

\* USED ON 1.5L ONLY.

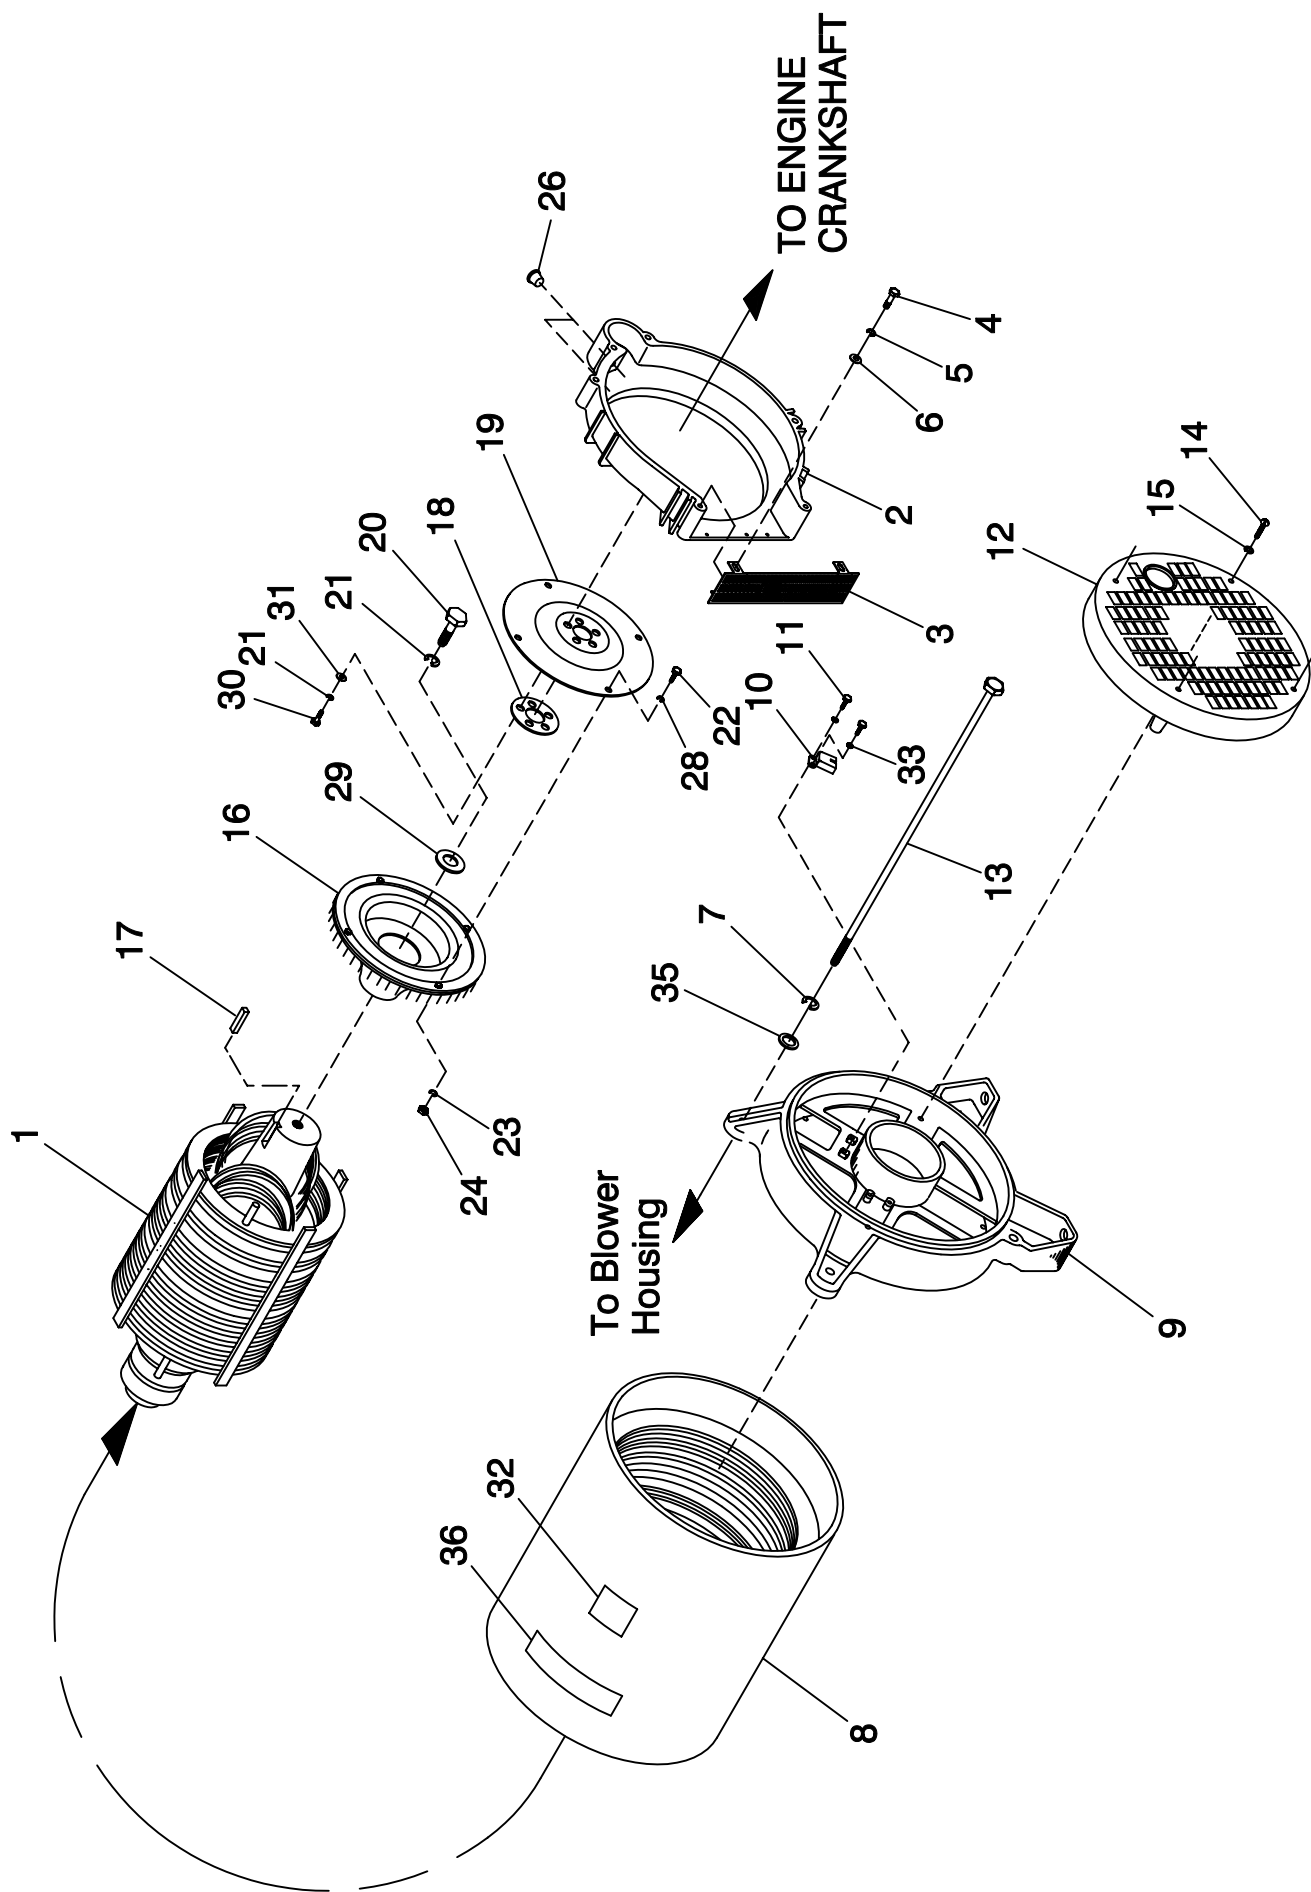


EXPLODED VIEW:  
GENERATOR  
DRAWING #: 0F8222

**EXPLODED VIEW: GENERATOR****DRAWING #: 0F8222****GROUP A****APPLICABLE TO:**

| <b>ITEM</b> | <b>PART #</b> | <b>QTY.</b> | <b>DESCRIPTION</b>                |
|-------------|---------------|-------------|-----------------------------------|
| 1           | 098675        | 1           | ASSY ROTOR 20KW                   |
| 2           | 0A5336A       | 1           | HOUSING BLOWER                    |
| 3           | 0A1659        | 1           | SCREEN AIR OUTLET                 |
| 4           | 020746        | 4           | SCREW PPHM M5-0.8 X 8 ZINC        |
| 5           | 049226        | 4           | WASHER LOCK M5                    |
| 6           | 051713        | 4           | WASHER FLAT M5                    |
| 7           | 022129        | 4           | WASHER LOCK M8-5/16               |
| 8           | 0F8218        | 1           | ASSY STATOR 20KW 1PH A            |
|             | 0F8220        | 1           | ASSY STATOR 20KW 3PH GJK          |
| 9           | 0A5382        | 1           | BEARING CARRIER REAR              |
| 10          | 075591        | 1           | ASSY HOLDER BRUSH                 |
| 11          | 075476        | 4           | SCREW PPHM M4-0.7 X 16            |
| 12          | 0A5601A       | 1           | COVER REAR BEARING                |
| 13          | 075554B       | 4           | BOLT STATOR X 16" LG              |
| 14          | 0A9375        | 4           | SCREW RHM #10-24 X 2              |
| 15          | 022152        | 4           | WASHER LOCK #10                   |
| 16          | 097146        | 1           | FAN & RING GEAR ASSEM.            |
| 17          | 042558        | 1           | KEY SQ 3/8 X 1 STEEL              |
| 18          | 0A5061        | 1           | SPACER-FLEX PLATE                 |
| 19          | 0A4989        | 1           | PLATE FLEX                        |
| 20          | 053607        | 1           | SCREW HHC M12-1.75 X 35 G8.8      |
| 21          | 051769        | 6           | WASHER LOCK M12                   |
| 22          | 049541        | 4           | SCREW HHC M10-1.5 X 35 G8.8       |
| 23          | 046526        | 4           | WASHER LOCK M10                   |
| 24          | 045772        | 4           | NUT HEX M10-1.5 G8 YEL CHR        |
| 26 *        | 087599        | 2           | PLUG PLASTIC 3/8 NPT              |
| 27          | 077043E       | 1           | FLEX CONDUIT 1" BLACK (NOT SHOWN) |
| 28          | 022131        | 4           | WASHER FLAT 3/8-M10 ZINC          |
| 29          | 072578        | 1           | SPACER ROTOR SHAFT                |
| 30          | 0A7043        | 5           | SCREW HHC M12-1.25 X 25 G8.8      |
| 31          | 049808        | 5           | WASHER FLAT M12                   |
| 32          | 058589        | 1           | DECAL WARN ENG START              |
| 33          | 023365        | 4           | WASHER SHAKEPROOF INT #8          |
| 35          | 0A8830        | 4           | WASHER FLAT .34 ID X .75 OD       |
| 36          | 072080        | 1           | DECAL DANGER STANBY UNITS         |


# GROUP B

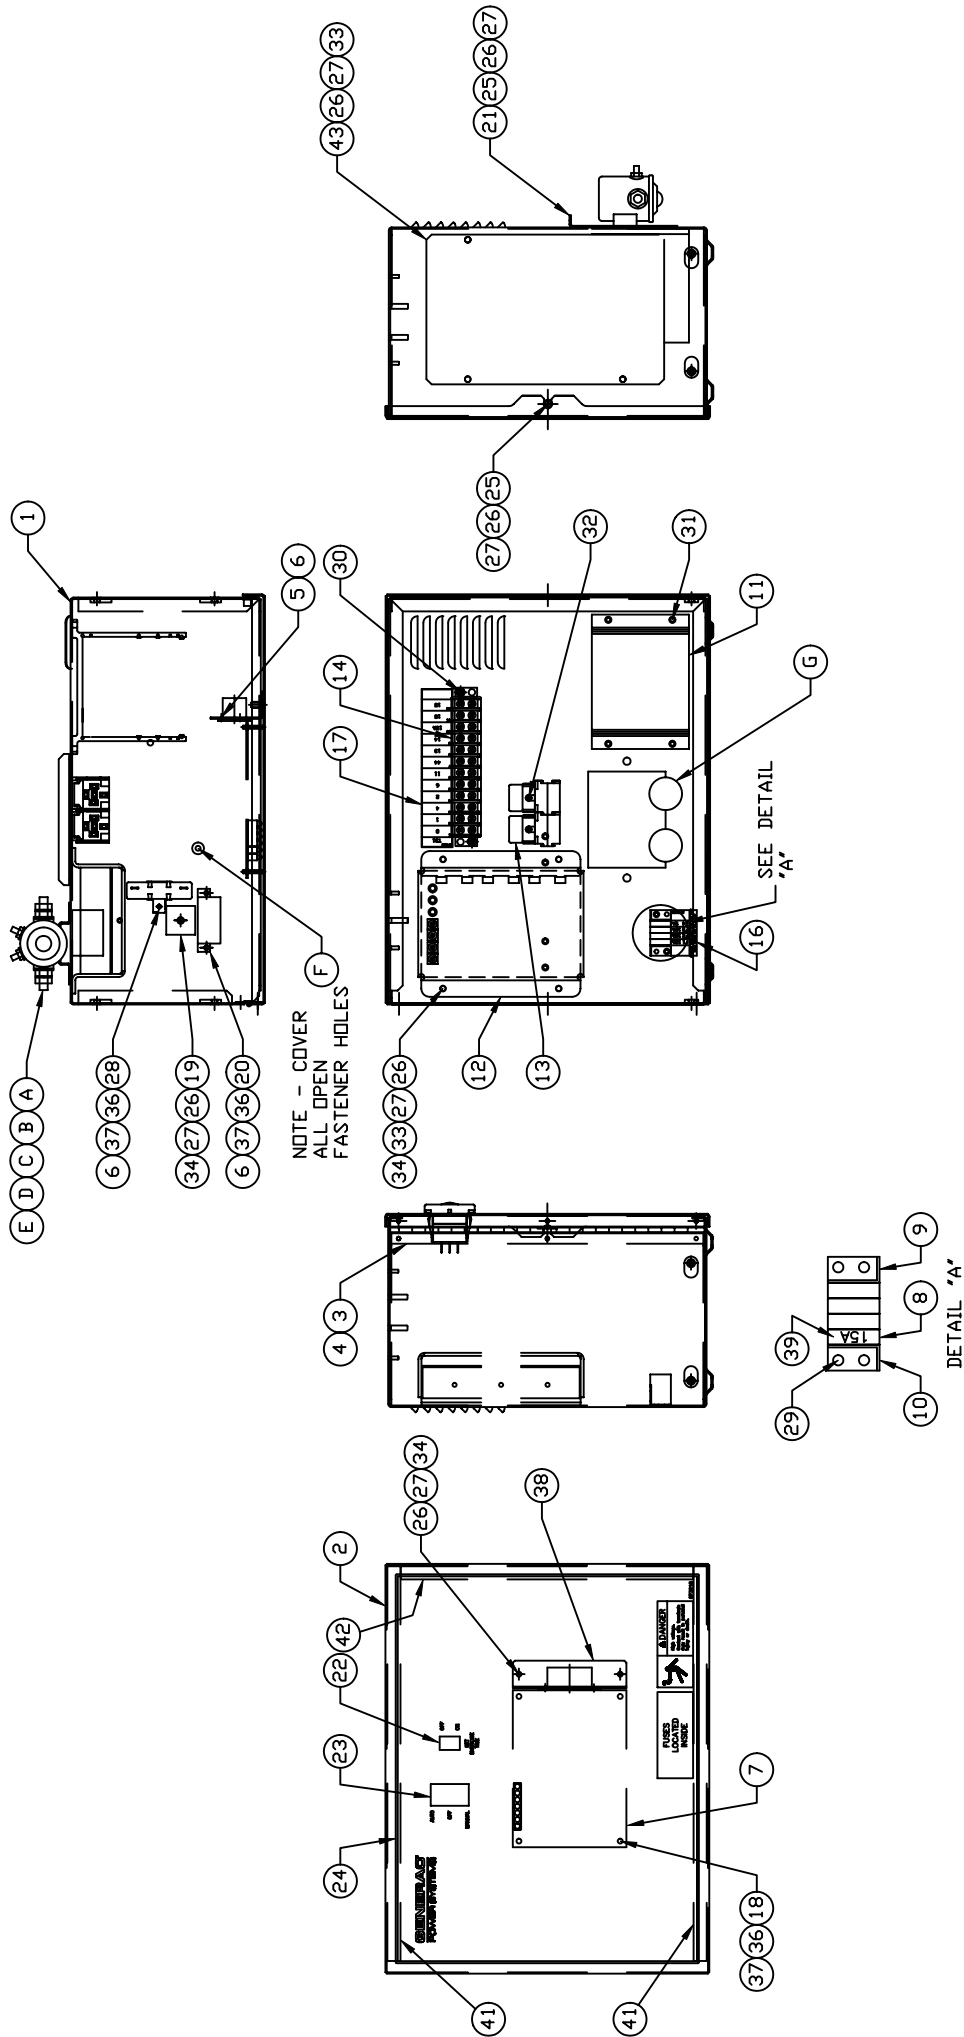

EXPLODED VIEW:  
R-100 3600 RPM 1.5L 240V  
DRAWING #: 0F7380D

APPLICABLE TO:

| ITEM                             | PART #  | QTY. | DESCRIPTION                                |
|----------------------------------|---------|------|--|
| 1                                | 0F1823A | 1    | ENCL HSB CONTROL PANEL                     |
| 2                                | 0F3078  | 1    | COVER CONTROL PANEL                        |
| 3                                | 0F2606  | 1    | HINGE CONTINUOUS H-PNL                     |
| 4                                | 036261  | 6    | RIVET POP .125 X .275 SS                   |
| 5                                | 043181  | 4    | SCREW PHM M3-0.5 X 10MM                    |
| 6                                | 052777  | 7    | WASHER FLAT M3                             |
| 7                                | 0F4245F | 1    | ASSY PCB CPL CTRLR 3600 RPM                |
| 8                                | 0F1262  | 4    | HOLDER FUSE WICKMANN 178.6150              |
| 9                                | 0F1263  | 1    | ADPTR RH SIDE WICKMAN 178.6191             |
| 10                               | 0F1264  | 1    | ADPTR LH SIDE WICKMAN 178.6192             |
| 11                               | 0F1725C | 1    | ASSY PCB 2AMP 12V UL BATT CHGR             |
| 12                               | 067680  | 1    | ASSY VOLTAGE REGULATOR 60HZ                |
| 13                               | 0E6875A | 2    | RELAY 12VDC C FORM W/DIODE                 |
| 14                               | 055911  | 1    | BLOCK TERM 20A 12 X 6 X 1100V              |
| 16                               | 0F5459  | 1    | DECAL CPL CONTROL PANEL FUSES              |
| 17                               | 0F5462  | 1    | DECAL CPL 3.9L TB1                         |
| 18                               | 0A5062J | 4    | SPACER 9.5H 3.2 ID                         |
| 19                               | 029673  | 1    | DIO BRIDGE 25A 600V                        |
| 20                               | 049350  | 1    | CB 4 X 1 ETA 46-500-P                      |
| 21                               | 0F1958  | 1    | PLATE HARNESS CLAMP                        |
| 22                               | 082573  | 1    | SWITCH RKR DPST 125V SPD                   |
| 23                               | 0E4494  | 1    | SWITCH RKR DPDT ON-OFF-ON                  |
| 24                               | 0F3215  | 1    | DECAL CONTROL HSB                          |
| 25                               | 0F5886  | 3    | SCREW HHPM M5-0.8 X 12                     |
| 26                               | 051713  | 14   | WASHER FLAT M5                             |
| 27                               | 049226  | 14   | WASHER LOCK M5                             |
| 28                               | 0F5752B | 1    | RES WW 25R 5% 25W QK CONN                  |
| 29                               | 0F5884  | 2    | SCREW PHTT M3.5-0.6 X 10                   |
| 30                               | 0F5896  | 2    | SCREW PHTT M3.5-0.6 X 16                   |
| 31                               | 0C2265  | 4    | SCREW PHTT M4-0.7 X 12 ZYC                 |
| 32                               | 0C3990  | 2    | SCREW PHTT M4-0.7 X 10 ZYC                 |
| 33                               | 091526  | 8    | SCREW PPHM M5-0.8 X 12 ZNC                 |
| 34                               | 051716  | 7    | NUT HEX M5-0.8 G8 CLEAR ZINC               |
| 36                               | 043182  | 7    | WASHER LOCK M3                             |
| 37                               | 051714  | 7    | NUT HEX M3-0.5 G8 YEL CHR                  |
| 38                               | 0F3192  | 1    | SUPPORT ANGLE PCB                          |
| 39                               | 0E7403C | 1    | FUSE ATO TYPE 15 AMP (BLUE)                |
| 40                               | 0F4416  | 1    | HARN 1800RPM R-100 CONTROL PNL (NOT SHOWN) |
| 41                               | 0F6305  | 2    | SEAL COVER 3.18 X 12.7 X 382               |
| 42                               | 0F6305A | 1    | SEAL COVER 3.18 X 12.7 X 283               |
| 43                               | 0F2627  | 1    | PLATE COVER H PANEL                        |
| COMPONENTS INSTALLED PER 0F7380D |         |      |  |
| A                                | 056739  | 1    | RELAY SOLENOID 12VDC PNL MNT               |
| B                                | 022287  | 2    | SCREW HHC 1/4-20 X 3/4 G5                  |
| C                                | 022473  | 4    | WASHER FLAT 1/4-M6 ZINC                    |
| D                                | 022097  | 2    | WASHER LOCK M6-1/4                         |
| E                                | 022127  | 2    | NUT HEX 1/4-20 STEEL                       |
| F                                | 0F6145  | A/R  | SEAL WEATHER .45" DIA                      |

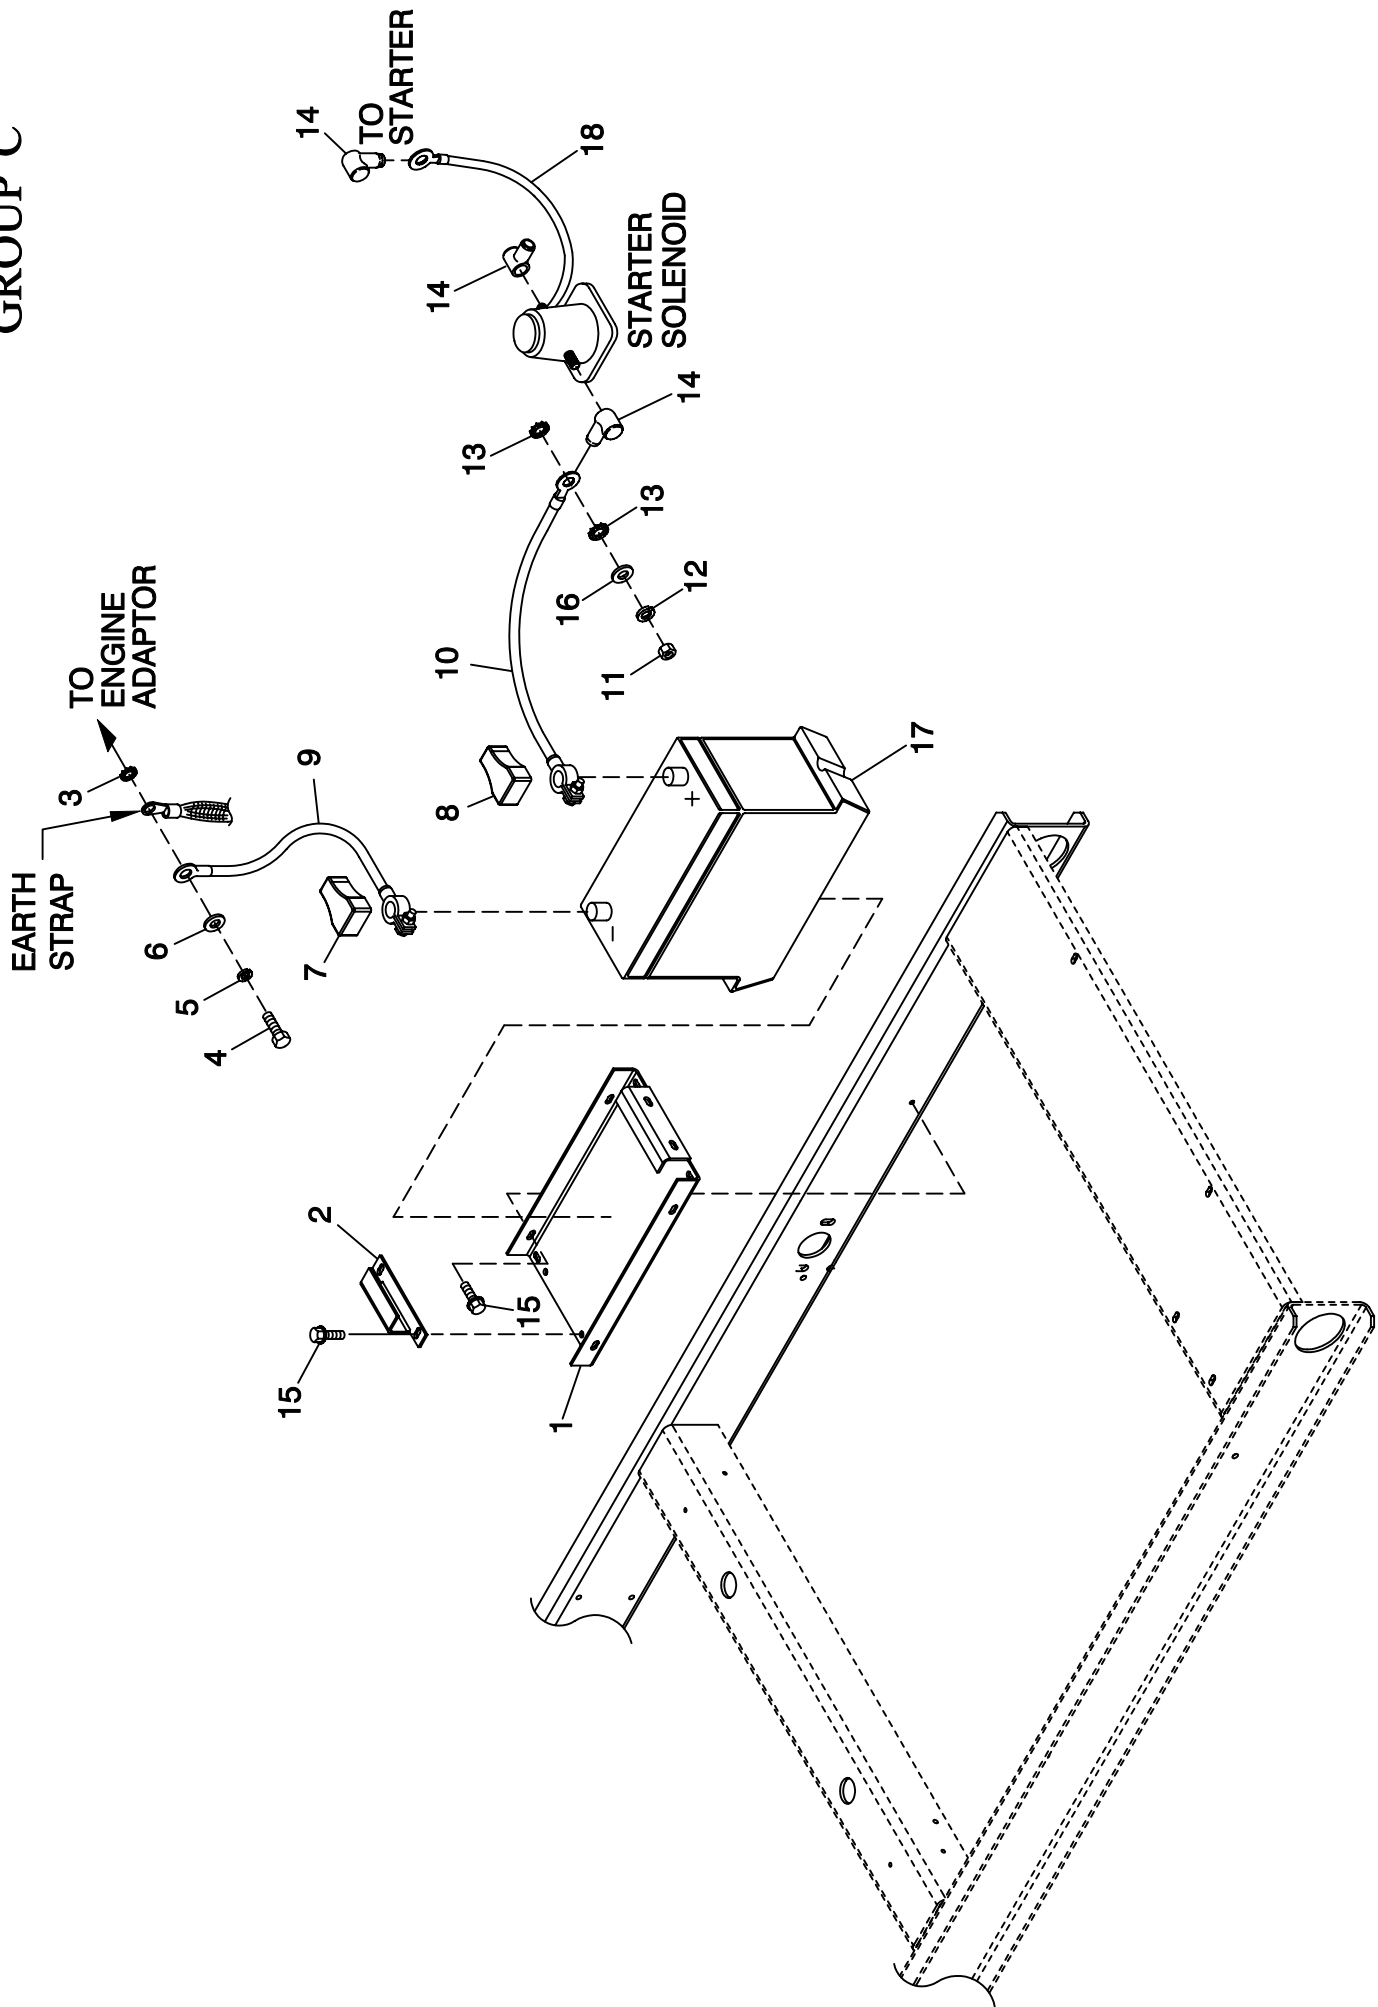




EXPLODED VIEW: BATTERY C1 CPL  
DRAWING #: 0F7422

GROUP C

APPLICABLE TO:

| ITEM | PART #     | QTY. | DESCRIPTION                    |
|------|------------|------|--------------------------------|
| 1    | 0F3408B    | 1    | BATTERY TRAY C1 CPL            |
| 2    | 0F3411     | 1    | STRAP BATTERY RETAINMENT       |
| 3    | 025507     | REF  | WASHER SHAKEPROOF EXT 7/16 STL |
| 4    | 052647     | REF  | SCREW SHC M10-1.5 X 25 G12.9   |
| 5    | 046526     | REF  | WASHER LOCK M10                |
| 6    | 022131     | REF  | WASHER FLAT 3/8-M10 ZINC       |
| 7    | 050331A    | REF  | BATT POST COVER RED +          |
| 8    | 050331     | REF  | BATT POST COVER BLK -          |
| 9    | 038805J    | 1    | CABLE BATTERY BLK #1 X 30.00   |
| 10   | 038804U    | 1    | CABLE BATTERY RED #1 X 28.00   |
| 11   | 045771     | REF  | NUT HEX M8-1.25 G8 YEL CHR     |
| 12   | 022129     | REF  | WASHER LOCK M8-5/16            |
| 13   | 027482     | REF  | WASHER SHAKEPROOF EXT 5/16 STL |
| 14   | 0F3976     | 3    | BOOT CONTACTOR CABLES          |
| 15   | 0C2454     | 4    | SCREW THF M6-1 X 16 N WA Z/JS  |
| 16   | 022145     | REF  | WASHER FLAT 5/16-M8 ZINC       |
| 17   | 077483     | REF  | BATTERY 12VDC 75-AH 26         |
| 18   | 0742600131 | 1    | ASSY WIRE #16 RED 1.6          |

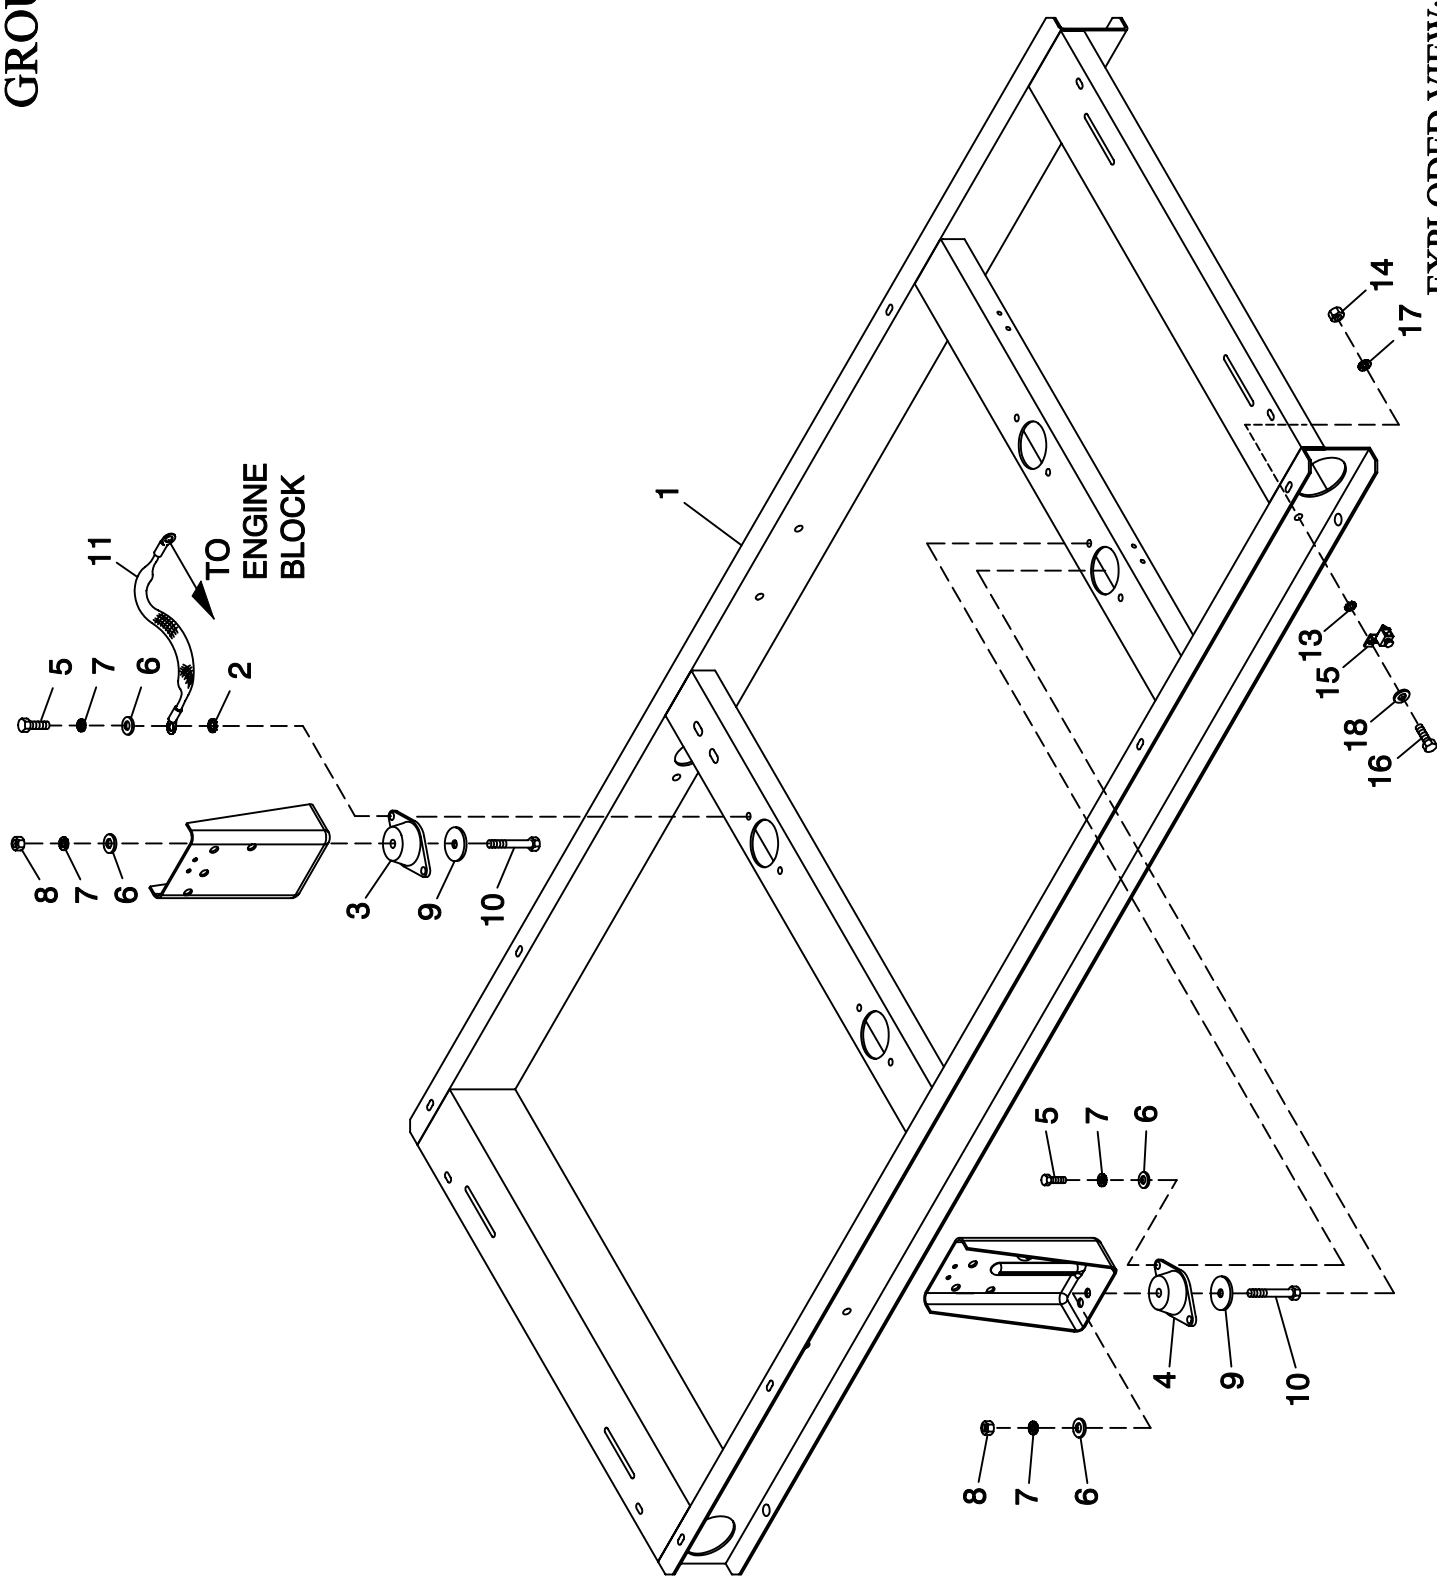

EXPLODED VIEW:  
MOUNTING BASE  
DRAWING #: 0F7456


EXPLODED VIEW: MOUNTING BASE  
DRAWING #: 0F7456

GROUP C

APPLICABLE TO:


| ITEM | PART #  | QTY. | DESCRIPTION                    |
|------|---------|------|--------------------------------|
| 1    | 0F7155  | 1    | MOUNTING BASE 1.5L C1 CPL      |
| 2    | 027482  | 2    | WASHER SHAKEPROOF EXT 5/16 STL |
| 3    | 070936  | 2    | DAMPENER VIBRATION             |
| 4    | 070936C | 2    | VIB. ISO. 70-75 DURO           |
| 5    | 039253  | 8    | SCREW HHC M8-1.25 X 20 G8.8    |
| 6    | 022145  | 12   | WASHER FLAT 5/16 ZINC          |
| 7    | 022129  | 12   | WASHER LOCK M8-5/16            |
| 8    | 045771  | 4    | NUT HEX M8-1.25 G8 YEL CHR     |
| 9    | 071956  | 4    | WASHER FLAT M8                 |
| 10   | 051730  | 4    | SCREW HHC M8-1.25 X 60 G8.8    |
| 11   | 021991  | 1    | EARTH STRAP                    |
| 13   | 026850  | 1    | WASHER SHAKEPROOF EXT 1/4 STL  |
| 14   | 049813  | 1    | NUT HEX M6 X 1.0 G8 YEL CHR    |
| 15   | 055414  | 1    | LUG SLDLSS #2-#8 X 17/64 CU    |
| 16   | 047411  | 1    | SCREW HHC M6-1.0 X 16 G8.8     |
| 17   | 022097  | 1    | WASHER LOCK M6-1/4             |
| 18   | 022473  | 1    | WASHER FLAT 1/4-M6 ZINC        |

# GROUP C

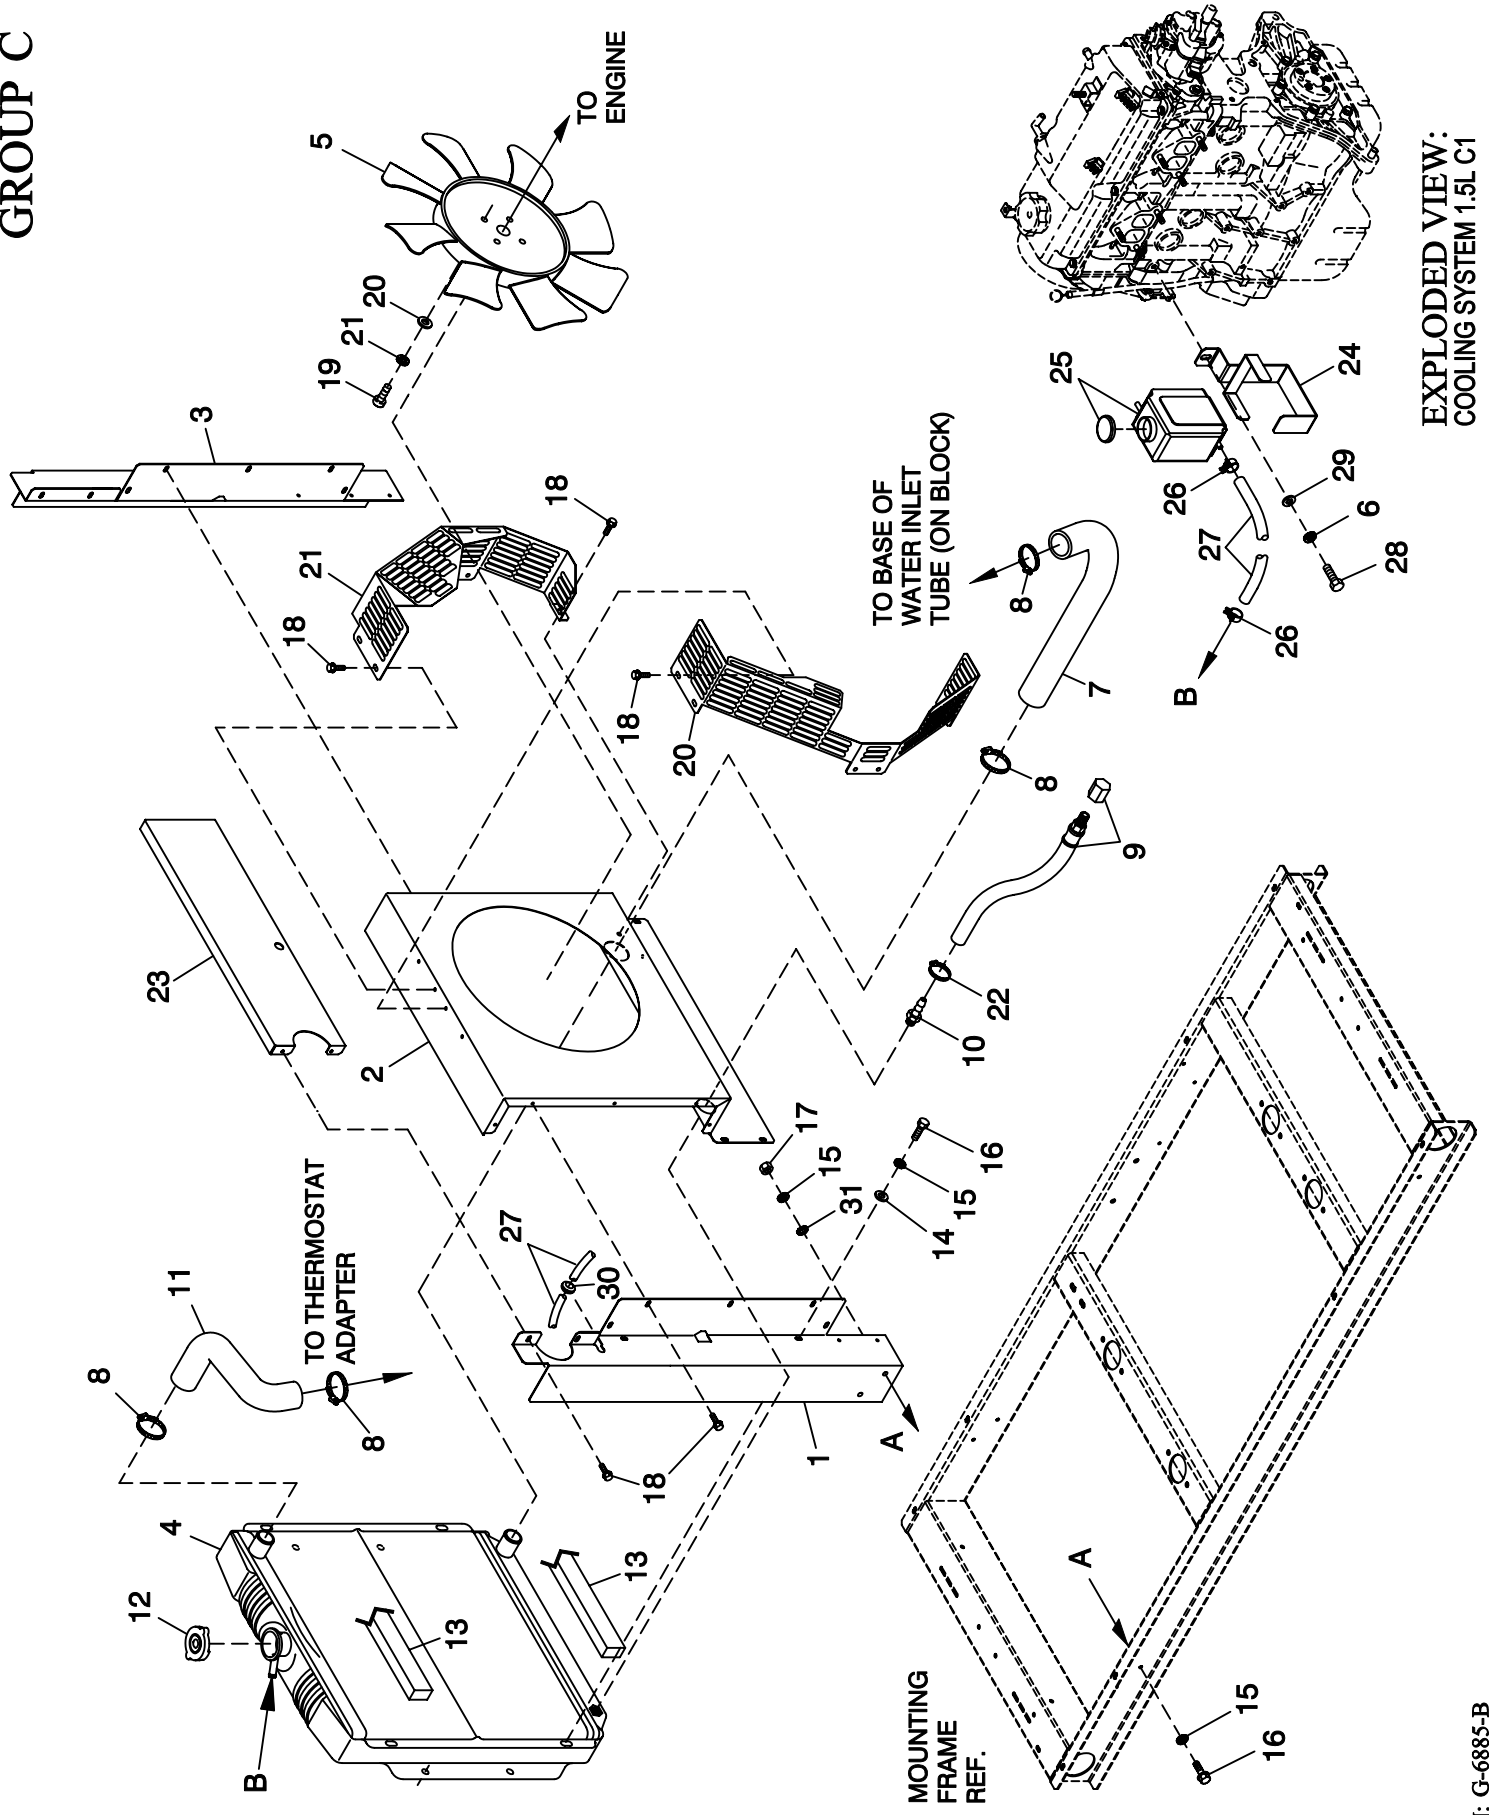

**EXPLODED VIEW: COOLING SYSTEM 1.5L C1****DRAWING #: 0F7466****GROUP C****APPLICABLE TO:**

| <b>ITEM</b> | <b>PART #</b> | <b>QTY.</b> | <b>DESCRIPTION</b>             |
|-------------|---------------|-------------|--------------------------------|
| 1           | 0F7211        | 1           | SUPPORT RADIATOR LH SIDE       |
| 2           | 0F7209        | 1           | VENTURI 15" DIA FAN            |
| 3           | 0F7210        | 1           | SUPPORT RADIATOR RH SIDE       |
| 4           | 0E9837A       | 1           | RADIATOR 2.5L CPL              |
| 5           | 0E1936        | 1           | FAN COOLING 15"                |
| 6           | 022129        | 1           | WASHER LOCK M8-5/16            |
| 7           | 0F7166        | 1           | RADIATOR HOSE LWR 1.5L C1 CPL  |
| 8           | 099502        | 4           | CLAMP HOSE #24 B1.06-2.00      |
| 9           | 069860C       | 1           | HOSE OIL DRAIN ASSY 21"        |
| 10          | 035461        | 1           | BARBED STR 1/4 NPT X 3/8       |
| 11          | 0A6258        | 1           | HOSE - UPPER RADIATOR          |
| 12          | 046627        | 1           | CAP RADIATOR                   |
| 13          | 052250        | 2           | TAPE FOAM 1 X 1 (17" LG)       |
| 14          | 022473        | 4           | WASHER FLAT 1/4-M6 ZINC        |
| 15          | 022097        | 8           | WASHER LOCK M6-1/4             |
| 16          | 0C8566        | 8           | SCREW HHFC M6-1.0 X 20 G8.8    |
| 17          | 049813        | 4           | NUT HEX M6 X 1.0 G8 YEL CHR    |
| 18          | 0C2454        | 24          | SCREW THF M6-1 X 16 N WA Z/JS  |
| 19          | 055816        | 4           | SCREW HHC M6-1.0 X 70 G8.8     |
| 20          | 0F7594        | 4           | GUARD FAN LH C1 CPL            |
| 21          | 0F7595        | 4           | GUARD FAN RH C1 CPL            |
| 22          | 0C7649        | 1           | CLAMP HOSE .38-.87             |
| 23          | 0F7320        | 1           | BLOCK OFF UPPER                |
| 24          | 0F1433        | 1           | BRACKET 2.5L FORD WATER BOTTLE |
| 25          | 076749        | 1           | TANK COOLANT RECOVERY          |
| 26          | 048031C       | 2           | CLAMP HOSE BAND 1/4            |
| 27          | 029032        | 1           | HOSE 9/32 ID (40" LG)          |
| 28          | 040976        | 1           | SCREW SHC M8-1.25 X 20 G12.9   |
| 29          | 022145        | 1           | WASHER FLAT 5/16-M8 ZINC       |
| 30          | 029107        | 1           | GROMMET 7/8 X 3/16 X 5/8       |
| 31          | 026850        | 4           | WASHER SHAKEPROOF EXT 1/4 STL  |

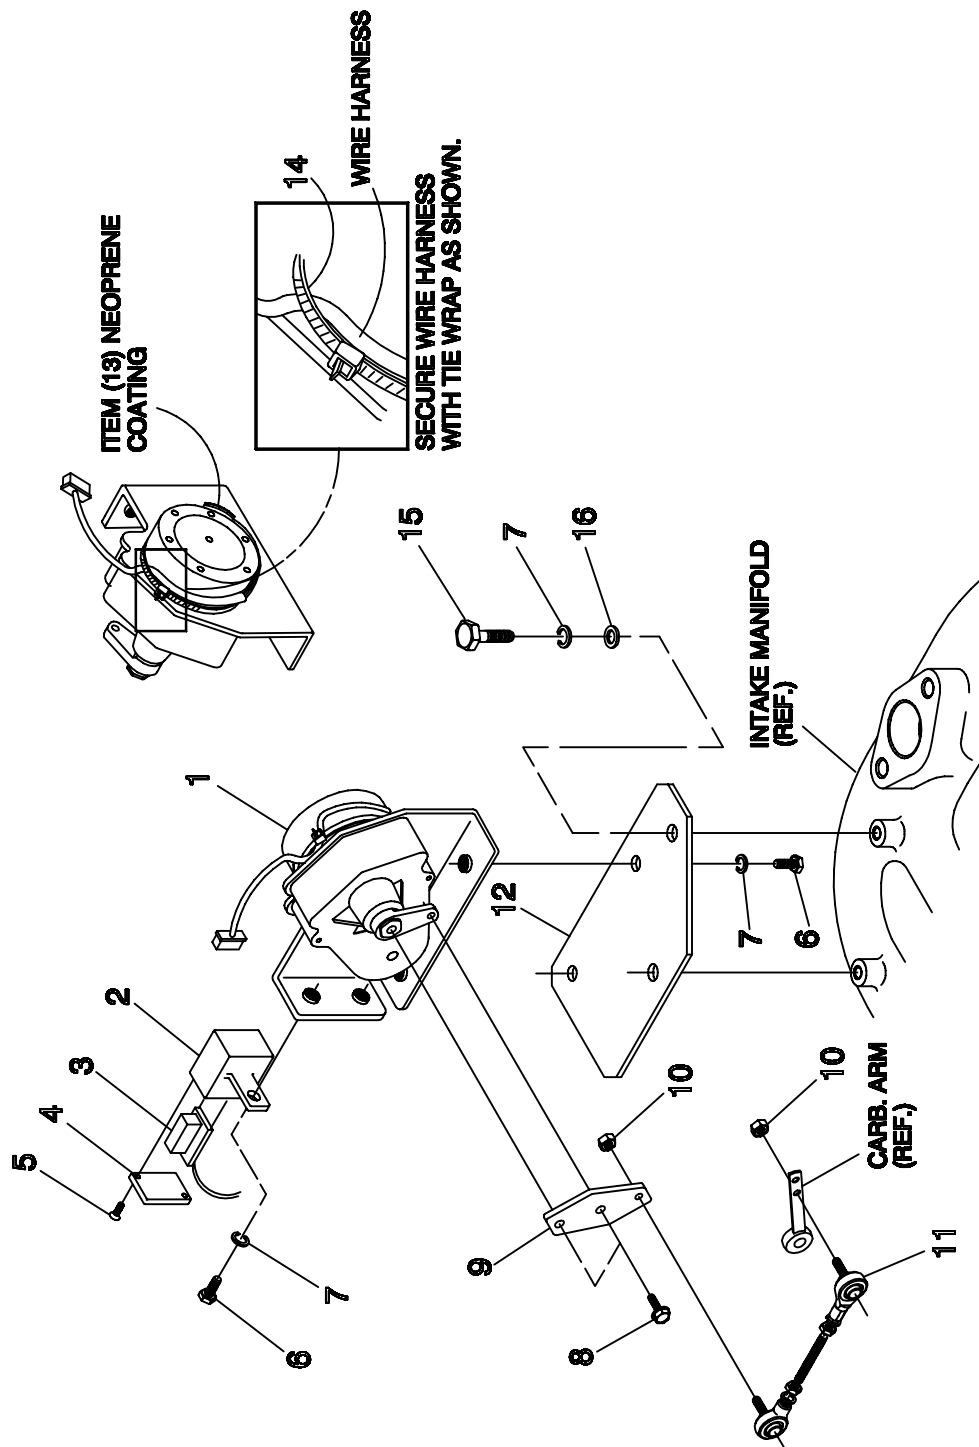


EXPLODED VIEW:  
GOVERNOR ASSEMBLY  
DRAWING #: 0A7216



**EXPLODED VIEW: GOVERNOR ASSEMBLY****DRAWING #: 0A7216****GROUP D****APPLICABLE TO:**

| <b>ITEM</b> | <b>PART #</b> | <b>QTY.</b> | <b>DESCRIPTION</b>             |
|-------------|---------------|-------------|--------------------------------|
| 1           | 098290        | 1           | ASM MOTOR STEPPER              |
| 2           | 098941A       | 1           | HOUSING GOVERNOR CONNECTOR     |
| 3           | 098958A       | 1           | CONNECTOR INTERFACE ASSEMBLY   |
| 4           | 098942A       | 1           | COVER CONNECTOR HOUSING        |
| 5           | 098225        | 2           | SCREW FHM #2 X 5/8 SELF TAP    |
| 6           | 043146        | 3           | SCREW HHC M6-1.0 X 10 G8.8     |
| 7           | 022097        | 5           | WASHER LOCK M6-1/4             |
| 8           | 064526        | 2           | SCREW TAP HWH #6-25 X 3/8 ZINC |
| 9           | 098783        | 1           | LEVER STEPPER MOTOR            |
| 10          | 037398        | 2           | NUT LOCK HEX #10-32 NYL INS    |
| 11          | 0A7041        | 1           | ASSEMBLY CARBURATOR LINKAGE    |
| 12          | 0A7106        | 1           | BRACKET STEPPER MOTOR          |
| 13          | 074031        | -           | LIQUID NEOPRENE                |
| 14          | 029333A       | 1           | TIE WRAP 7.4"X.19" BLK UL      |
| 15          | 022507        | 2           | SCREW HHC 1/4-20 X 1/2 G5      |
| 16          | 022473        | 2           | WASHER FLAT 1/4 ZINC           |

# GROUP D

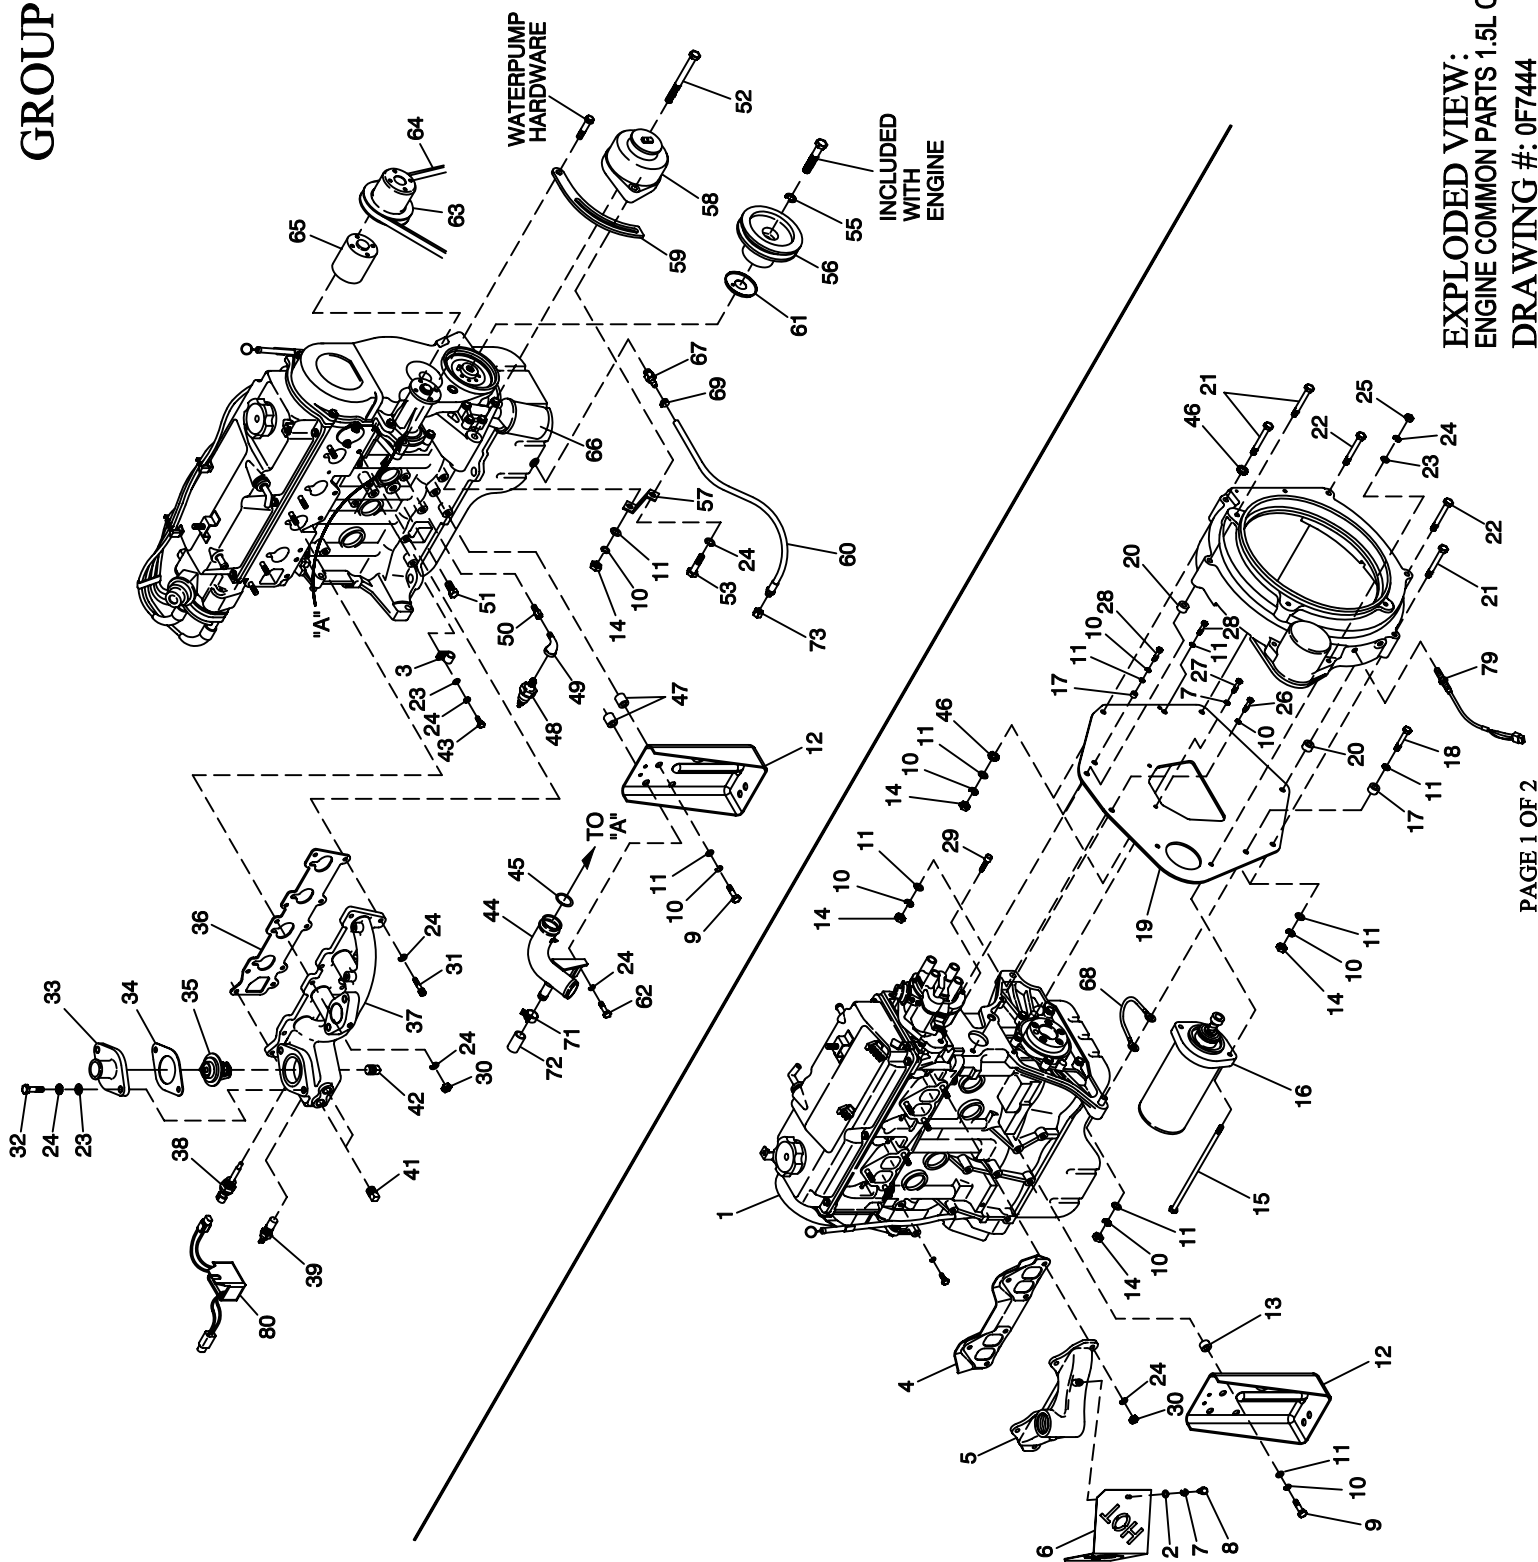

EXPLODED VIEW:  
ENGINE COMMON PARTS 1.5L CPL  
DRAWING #: 0F7444

# EXPLODED VIEW: ENGINE COMMON PARTS 1.5L CPL DRAWING #: 0F7444

## GROUP D



APPLICABLE TO:

| ITEM | PART #     | QTY. | DESCRIPTION                    |
|------|------------|------|--------------------------------|
| 1    | 0A4531     | REF. | ENGINE-1.5L                    |
| 2    | 022473     | 2    | WASHER FLAT 1/4 ZINC           |
| 3 *  | 055934C    | 1    | CLAMP VINYL .5 X .406 Z        |
| 4    | 0A45310258 | REF. | GASKET-EXHAUST MANIFOLD        |
| 5    | 0A4355     | 1    | MANIFOLD-EXHAUST               |
| 6    | 0E2632     | 1    | HEAT SHIELD EXH 1.5L           |
| 7    | 022097     | 4    | WASHER LOCK M6-1/4             |
| 8    | 022507     | 2    | SCREW HHC 1/4-20 X 1/2 G5      |
| 9    | 052212     | 4    | SCREW HHC M10-1.25 X 25 G8.8   |
| 10   | 046526     | 4    | WASHER-LOCK-M10                |
| 11   | 022131     | 20   | WASHER FLAT 3/8 ZINC           |
| 12   | 0C2499     | 2    | STAMPING ENG FOOT              |
| 13   | 055993     | 1    | SPACER .41 X .75 X .12 STL/ZNC |
| 14   | 045772     | 1    | NUT HEX M10-1.5 G8 YEL CHR     |
| 15   | 023586     | 2    | SCREW SHC 5/16-18 X 2 G8.8 NZ  |
| 16   | 020692     | 1    | STARTER-12V                    |
| 17   | 0A7005     | 2    | SPACER .56 X 1 X .37 ST/ZNC    |
| 18   | 052243     | 1    | SCREW HHC M10-1.5 X 60 G8.8    |
| 19   | 0A4772     | 1    | ENGINE PLATE                   |
| 20   | 070901     | 2    | SLEEVE DOWEL BLHSG             |
| 21   | 051735     | 3    | SCREW HHC M10-1.5 X 70 G8.8    |
| 22   | 056768     | 3    | SCREW HHC M10-1.5 X 90 G8.8    |
| 23   | 022145     | 12   | WASHER FLAT 5/16 ZINC          |
| 24   | 022129     | 19   | WASHER LOCK M8-5/16            |
| 25   | 022259     | 2    | NUT HEX 5/16-18 STEEL          |
| 26   | 052213     | 11   | SCREW HHC M10-1.25 X 20 G8.8   |
| 27   | 047411     | 2    | SCREW HHC M6-1.0 X 16 G8.8     |
| 28   | 052830     | 1    | SCREW HHC M10-1.25 X 45 G8.8   |
| 29   | 0C3153     | 1    | SCREW TBH M8-1.25 X 30         |
| 30   | 045771     | 12   | NUT HEX M8-1.25 G8 YEL CHR     |
| 31   | 058306     | 5    | SCREW SHC M8-1.25 X 25 G12.9   |
| 32   | 030795     | 2    | SCREW HHC 5/16-18 X 1 G5       |
| 33   | 0A2711A    | 1    | ADAPTER-THERMOSTAT             |
| 34   | 048665     | 1    | GASKET THERMOSTAT              |
| 35   | 075885     | 1    | THERMOSTAT 195 DEG             |
| 36   | 0A45310257 | REF. | GASKET INLET MANIFOLD          |
| 37   | 0E1100     | 1    | MANIFOLD INTAKE MACHINED       |
| 38   | 0E2507     | 1    | PROBE, COOLANT LEVEL 3/8NPTF   |
| 39   | 0A6751     | 1    | SW-TMP 245 DEG 3/8 NPT         |
| 41   | 026925     | 2    | PLUG STD PIPE 3/8 STEEL SQ HD  |
| 42   | 061012     | 1    | PLUG STD PIPE 1/8 SCKT HD      |
| 43   | 039253     | 5    | SCREW HHC M8-1.25 X 20 G8.8    |
| 44   | 0A5110     | 1    | PIPE WATER-INLET               |
| 45   | 0A7006     | 1    | O-RING 1-1/16 X 1-5/16 X 1/8   |
| 46   | 025507     | 2    | WASHER SHAKEPROOF EXT 7/16 STL |
| 47   | 022500B    | 2    | SPACER .41 X .75 X .25 ST/ZNC  |
| 48   | 0A8584     | 1    | SWITCH OIL PRESSURE            |
| 49   | 036277     | 1    | ELBOW 90D STREET 1/8           |
| 50   | 042574     | 1    | ADAPTOR 1/8 NPTF TO 1/8-28     |
| 51   | 026073A    | 1    | PLUG STD PIPE 1/4 STEEL SQ HD  |
| 52   | 0A6701     | 1    | SCREW HHC M10-1.5 X 110 G8.8   |
| 53   | 039414     | 1    | SCREW HHC M8-1.25 X 35 G8.8    |
| 55   | 051769     | 1    | WASHER LOCK M12                |
| 56   | 0A4800A    | 1    | PULLEY-CRANKSHAFT (3600 RPM)   |
| 57   | 0A5839     | 1    | BRACKET - ALT SUPPRT           |
| 58   | 0A1354B    | 1    | DC ALTERNATOR-12V              |
| 59   | 0A4839     | 1    | ARM ADJUST ALTERNATOR          |
| 60   | 069860C    | 1    | HOSE ASM.-OIL DRAIN            |
| 61   | 0F3856     | 1    | GUARD CRANKSHAFT 1.5L          |
| 62   | 058443     | 2    | SCREW CRIMPTITE 1/4-20 X 5/8   |
| 63   | 0A2628     | 1    | PULLEY - FAN 95 DIA            |
| 64   | 0A5586     | 1    | V-BELT 3/8 X 28.9D             |
| 65   | 0A4814     | 1    | SPACER PULLEY                  |
| 66   | 0A45310244 | REF. | FILTER OIL                     |
| 67   | 0C1852     | 1    | ADAPTER DRAIN OIL              |
| 68   | 0912970066 | 1    | GROUND WIRE (STARTER)          |
| 69   | 070928     | 1    | CLAMP HOSE - OIL DRAIN         |
| 70   | 069860C    | 1    | HOSE OIL DRAIN ASSY 21"        |


| ITEM  | PART #  | QTY. | DESCRIPTION                    |
|-------|---------|------|--------------------------------|
| 71    | 035473  | 1    | CLAMP HOSE #12 .50-1.25        |
| 72    | 077996  | 1    | CAP ANTIFREEZE RUBBER          |
| 73    | 069811  | 1    | CAP HEX 1/4 NPT BRASS          |
| 74 ** | 0A1354A | 1    | REGULATOR - DC ALT             |
| 75 ** | 0E3257  | 2    | SCREW HWHTF M6-1.0 X 16        |
| 76 ** | 022473  | 2    | WASHER FLAT 1/4-M6 ZINC        |
| 77 ** | 022097  | 2    | WASHER LOCK M6-1/4             |
| 79    | 0D2244M | 1    | ASSY MAGPICKUP (3/8-24 MALE)   |
| 80    | 0F9483  | 1    | ASSY PCB WATERLEVEL SNSR INTFC |

\* CLAMP FOR WIRING HARNESS (NOT SHOWN)

\*\* NOT SHOWN

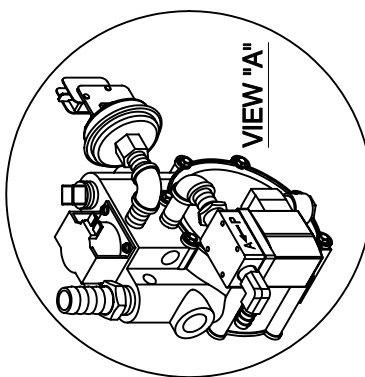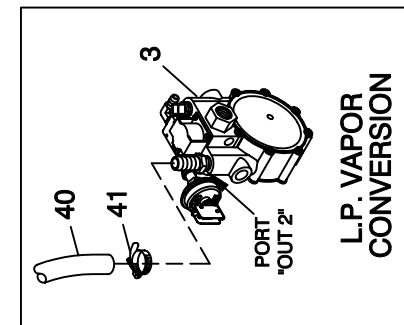

**IMPORTANT**  
SOLENOID MUST BE  
INSTALLED WITH FLOW  
ARROW POINTING IN  
DIRECTION SHOWN IN  
ILLUSTRATION ABOVE.

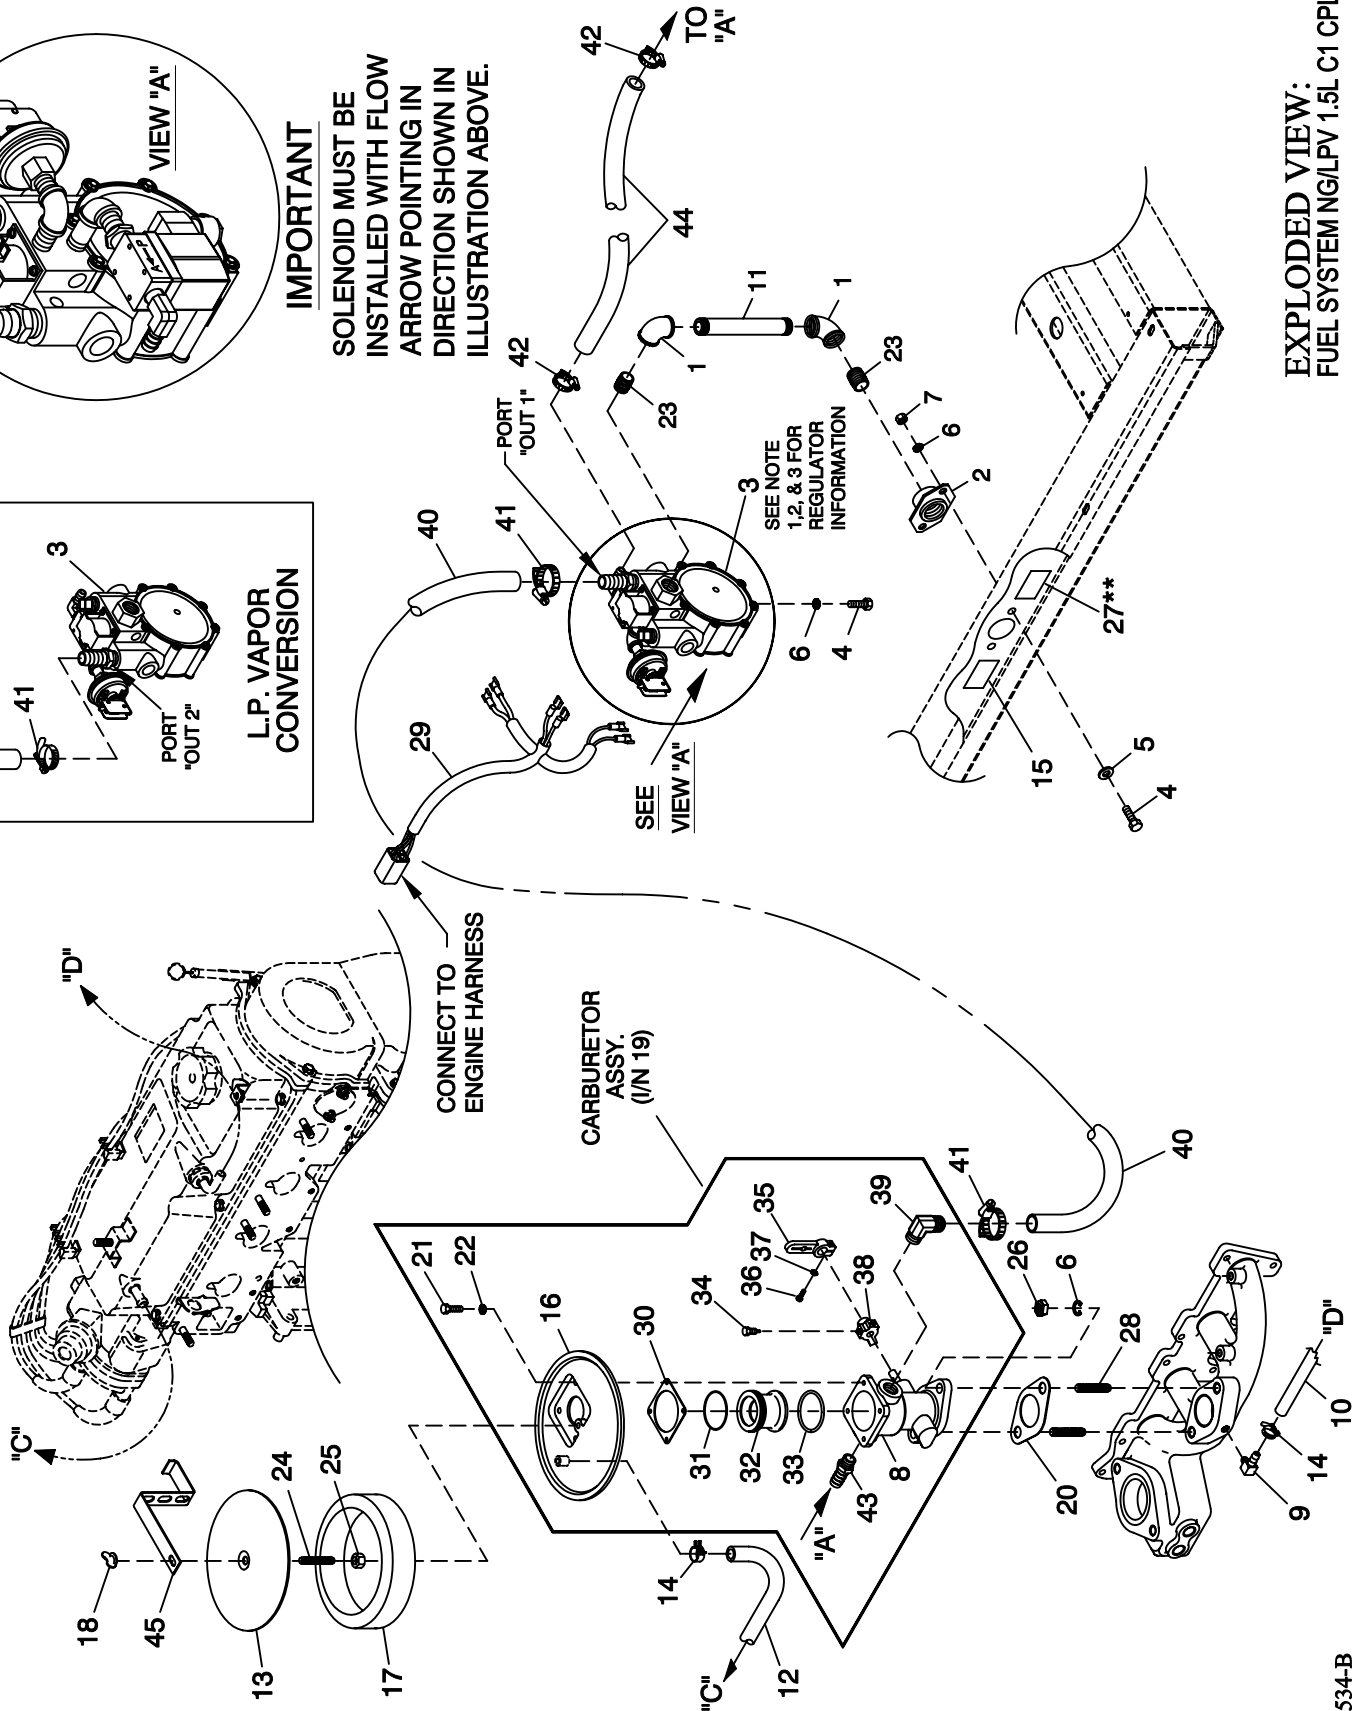

EXPLODED VIEW:  
FUEL SYSTEM NG/LPV 1.5L C1 CPL  
DRAWING #: 0F7494

## EXPLODED VIEW: FUEL SYSTEM NG/LPV 1.5L C1 CPL

DRAWING #: 0F7494

GROUP E

APPLICABLE TO: 1.5L

| ITEM  | PART #  | QTY. | DESCRIPTION                    |
|-------|---------|------|--------------------------------|
| 1     | 026812  | 2    | ELBOW 90D 3/4 NPT              |
| 2     | 075580  | 1    | FLANGE FUEL INLET              |
| 3     | 0F6364A | 1    | FUEL RGLTR 1.5L REWORK         |
| 4     | 039253  | 4    | SCREW HHC M8-1.25 X 20 G8.8    |
| 5     | 022145  | 2    | WASHER FLAT 5/16 ZINC          |
| 6     | 022129  | 6    | WASHER LOCK M8-5/16            |
| 7     | 045771  | 2    | NUT HEX M8-1.25 G8 YEL CHR     |
| 8 *   | 0F1570  | 1    | BODY CARBURETOR ASSEMBLY       |
| 9     | 032552  | 1    | BARBED EL 90 5/16 X 1/8 NPT    |
| 10    | 029032  | 1    | HOSE 9/32 ID                   |
| 11    | 025424  | 1    | NIPPLE PIPE 3/4 NPT X 6        |
| 12    | 0F0397  | 1    | HOSE CRANKCASE BREATHER        |
| 13    | 0A5547  | 1    | COVER AIR CLEANER              |
| 14    | 048031C | 4    | CLAMP HOSE BAND 1/4            |
| 15    | 0D1509  | 1    | DECAL INLET PRESSURE           |
| 16 *  | 0E0591  | 1    | ADAPTER CARB. TO AIR CLNR      |
| 17    | 059402  | 1    | FILTER ELEMENT                 |
| 18    | 037561  | 1    | NUT WING 1/4-20 NYLK           |
| 19    | 0E1028C | 1    | ASSY CARBURETOR 1.5L C1 CPL    |
| 20    | 059401  | 1    | CARBURETOR GASKET              |
| 21 *  | 091526  | 4    | SCREW PPHM M5-0.8 X 12 ZNC     |
| 22 *  | 049226  | 4    | WASHER LOCK M5                 |
| 23    | 026915  | 2    | NIPPLE CLOSE 3/4 X 1.375       |
| 24    | 062522  | 1    | STUD TH 1/4-20 X 3 G2 ZNC FULL |
| 25    | 022127  | 1    | NUT HEX 1/4-20 STEEL           |
| 26    | 022259  | 2    | NUT HEX 5/16-18 STEEL          |
| 27 ** | 050279  | 1    | DECAL FUEL INLET NG            |
|       | 050280  | 1    | DECAL FUEL INLET LPG           |
| 28    | 0A6125  | 2    | STUD 5/16-18 X 1.25 F THR      |
| 29    | 0F6155  | 1    | HARNESS FUEL JUMPER SINGLE REG |
| 30 *  | 0E1104  | 1    | GASKET AIR CLEANER ADAPTER     |
| 31 *  | 0E0668  | 1    | O-RING 2-028 1.38 X 1.50 X .06 |
| 32 *  | 0E0590  | 1    | VENTURI 18MM                   |
| 33 *  | 0C5133  | 1    | O-RING 29.82 X 2.62            |
| 34 *  | 0E0665  | 1    | SCREW THROTTLE PIN STOP        |
| 35 *  | 0E1108  | 1    | THROTTLE ARM REWORK            |
| 36 *  | 033138  | 1    | SCREW HHM #10-32 X 5/8         |
| 37 *  | 022152  | 1    | WASHER LOCK #10                |
| 38 *  | 0E0645  | 1    | LEVER THROTTLE STOP            |
| 39 *  | 034339  | 1    | BARBED EL 90 3/8 NPT X 5/8     |
| 40    | 059193D | 1    | HOSE 5/8 ID X 20.5" LG         |
| 41    | 057823  | 2    | CLAMP HOSE #10 .56 - 1.06      |
| 42    | 040173  | 2    | CLAMP HOSE #5.5 .62-.62        |
| 43 *  | 089617  | 1    | BARBED STR 1/4 NPT X 1/4 MALE  |
| 44    | 030340  | 1    | HOSE 1/4 ID SAE 30R7           |
| 45    | 0A7040  | 1    | BRACKET-RAD HOSE               |


\* INCLUDED IN ITEM 19 (CARBURETOR ASSY)

## NOTES:

1. REGULATOR (I/N 3) AS SHOWN IN ILLUSTRATION IS SET UP FOR NATURAL GAS APPLICATION.
2. TO CONFIGURE REGULATOR FOR LP VAPOR, SWITCH HOSE BARB, HOSE CLAMP (I/N 41) AND HOSE (I/N 40) FROM "OUT-1" TO "OUT-2". REPLACE PIPE PLUG FROM "OUT-2" TO "OUT-1". USE PIPE SEALANT ON HOSE BARB AND PIPE PLUG. MAKE SURE TO KEEP PORTS FREE FROM DEBRIS DURING RECONFIGURATION PROCESS.
- 3.\*\* FOR LP VAPOR APPLICATION SUBSTITUTE LPG FUEL INLET DECAL P/N 050280 FOR NG FUEL INLET DECAL P/N 050279 (ITEM 27).
4. WHEN SWITCHING FUEL TYPES, THE PROPER DIP SWITCH SETTINGS MUST BE MADE TO THE CONTROL PANEL. SEE OWNERS MANUAL, FUEL SECTION FOR MORE DETAILS.


# GROUP F

- INSULATION AND RETAINERS LOCATED ON THE NEAR SIDE.
- INSULATION AND RETAINERS LOCATED ON THE FAR SIDE.

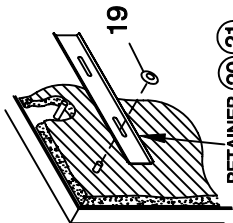

RETAINER (20) (21)

TYPICAL MOUNTING OF ACOUSTIC INSULATION.

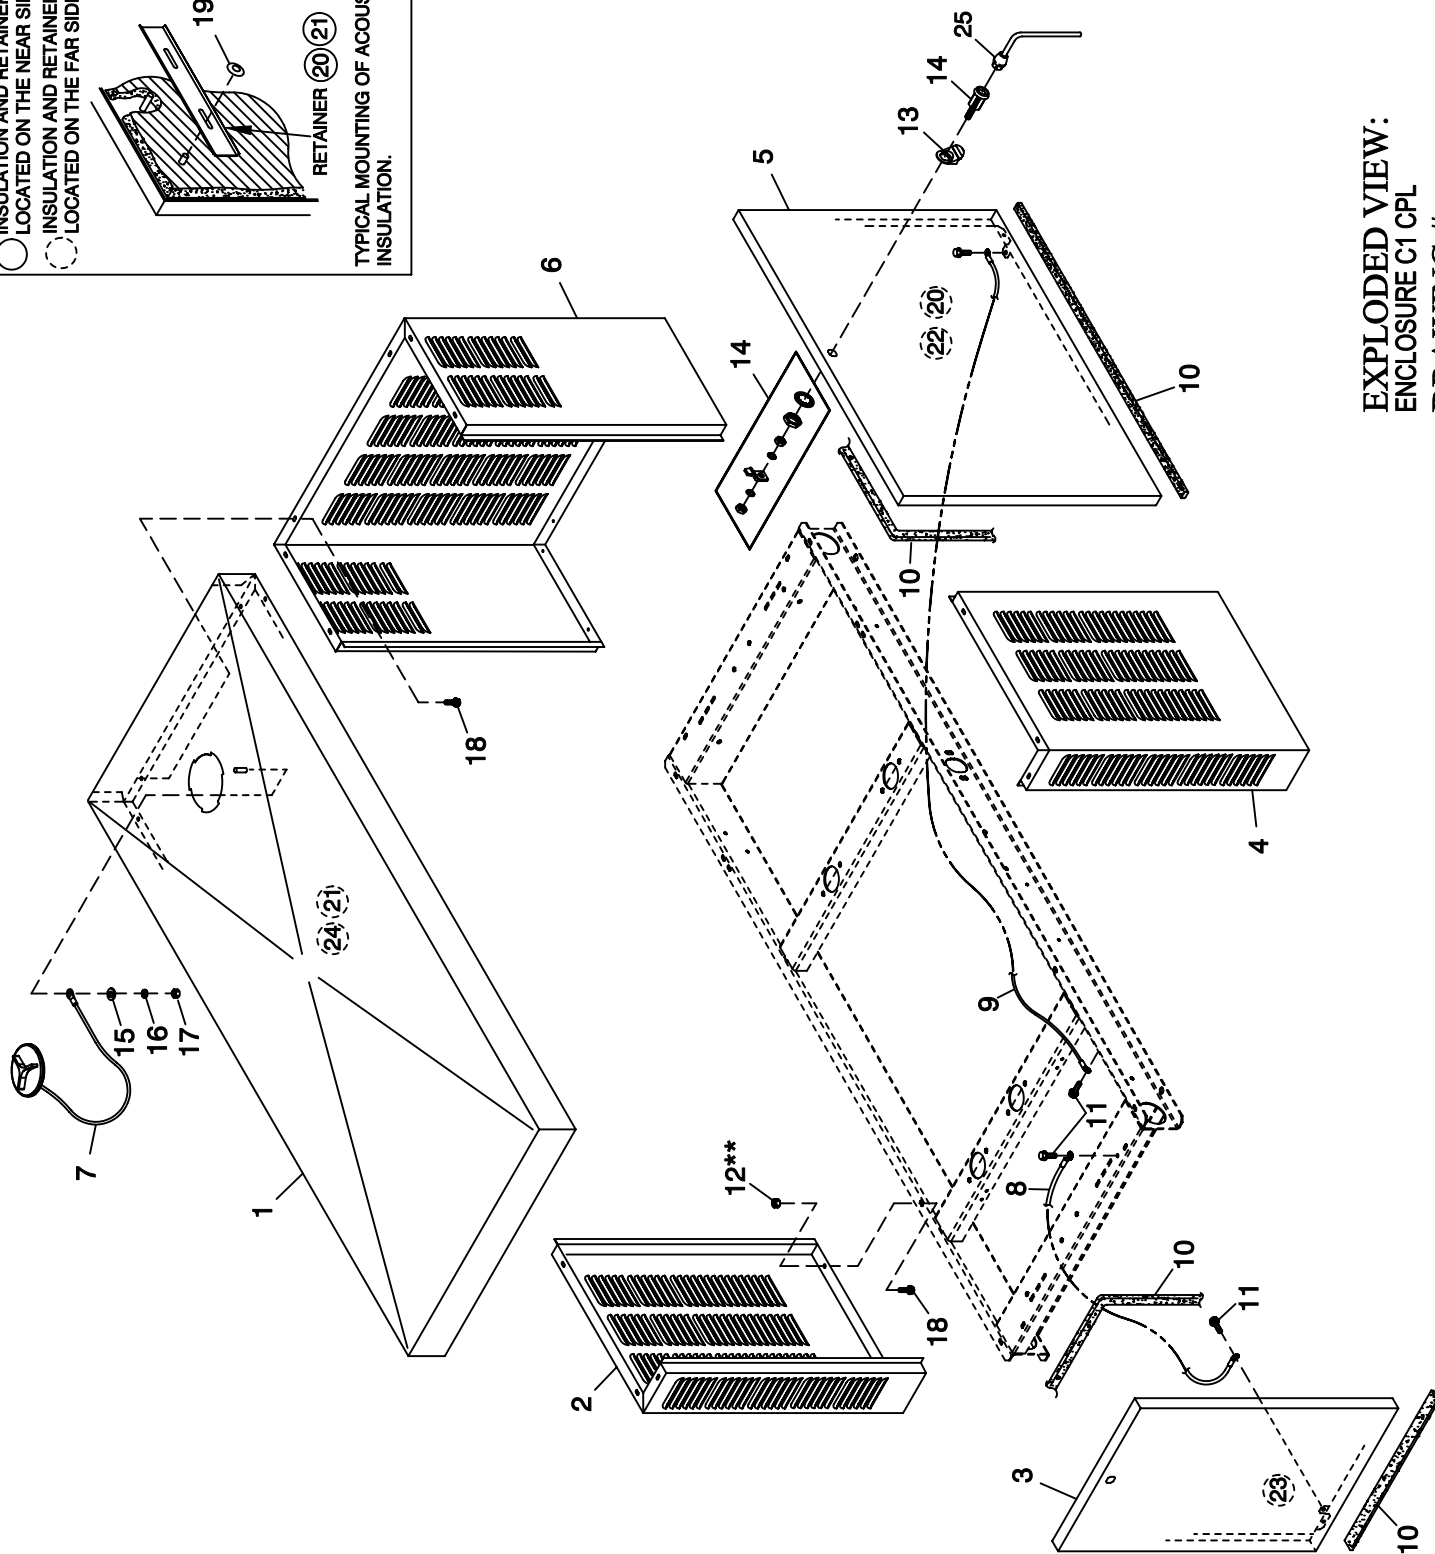

EXPLODED VIEW:  
ENCLOSURE C1 CPL  
DRAWING #: 0F7356



EXPLODED VIEW: ENCLOSURE C1 CPL  
DRAWING #: 0F7356

GROUP F


APPLICABLE TO:

| ITEM  | PART #      | QTY. | DESCRIPTION                    |
|-------|-------------|------|--------------------------------|
| 1     | 0F7003 (XX) | 1    | ROOF C1 CPL                    |
| 2     | 0F7004 (XX) | 1    | CORNER POST LH SIDE C1 CPL     |
| 3     | 0F7008 (XX) | 1    | DOOR REAR C1 CPL               |
| 4     | 0F7005 (XX) | 1    | CORNER POST RH SIDE C1 CPL     |
| 5     | 0F7007 (XX) | 2    | DOOR LH & RH SIDE C1 CPL       |
| 6     | 0F7006 (XX) | 1    | DUCT FRONT DISCHARGE C1 CPL    |
| 7     | 0C2634A     | 1    | ASSEMBLY COVER ACCESS          |
| 8     | 0912970091  | 1    | ASSY WIRE 14AWG 13.8" GRN/YEL  |
| 9     | 0912970090  | 2    | ASSY WIRE 14AWG 33.5" GRN/YEL  |
| 10    | 0E5968      | 1    | GASKET EXTRUDED TRIM (356" LG) |
| 11    | 0E3257      | 6    | SCREW HWHTF M6-1.0 X 16        |
| 12 ** | 077992      | 18   | NUT HEX LOCK M6-1.0 SS NY INS  |
| 13    | 0F5049      | 3    | TAB PULL                       |
| 14    | 0F5048D     | 3    | WISE-ACTION LATCH SLOTTED CIR  |
| 15    | 022473      | 1    | WASHER FLAT 1/4-M6 ZINC        |
| 16    | 022097      | 1    | WASHER LOCK M6-1/4             |
| 17    | 022127      | 1    | NUT HEX 1/4-20 STEEL           |
| 18    | 0C2454      | 24   | SCREW THF M6-1 X 16 N WA Z/J5  |
| 19    | 078115      | 20   | WASHER SELF LOCKING DOME       |
| 20    | 0F3890B     | 2    | RETAINER INSULATION (820)      |
| 21    | 0F3890      | 4    | RETAINER INSULATION (450)      |
| 22    | 0F7365      | 2    | INSULATION SIDE DOOR C1        |
| 23    | 0F7365B     | 1    | INSULATION REAR DOOR C1 CPL    |
| 24    | 0F7365A     | 1    | INSULATION ROOF C1 CPL         |
| 25    | 0F8869D     | 1    | KEY WISE-ACTION LATCH SLOT CIR |

OPTIONAL COMPARTMENT MATERIALS:  
ALL P/N'S WITH AN (XX) SUFFIX INDICATE A MULTIPLE MATERIAL AND COLOR OPTION.  
USE THE FOLLOWING LEGEND TO IDENTIFY THE CORRECT PART NUMBER:

| PART NO. | MATERIAL | COLOR |
|----------|----------|-------|
| 0XXXXXSN | STEEL    | TAN   |
| 0XXXXXAN | ALUMINUM | TAN   |
| 0XXXXXSG | STEEL    | GRAY  |
| 0XXXXXAG | ALUMINUM | GRAY  |

\*\* ALUMINUM ENCLOSURE NOTE: ALL ENCLOSURE PANELS THAT FASTEN TO THE BASE FRAME MUST BE SECURED USING ITEM 18 & 11 THREAD FORMING FASTENER AND ITEM 12 LOCK NUT. LOCK NUT IS TO BE INSTALLED AFTER THREAD FORMING FASTENER HAS PENETRATED THROUGH EXTRUSIONS IN ENCLOSURE PANELS. ALL ROOF PANELS ARE TO BE SECURED IN THE SAME MANNER.

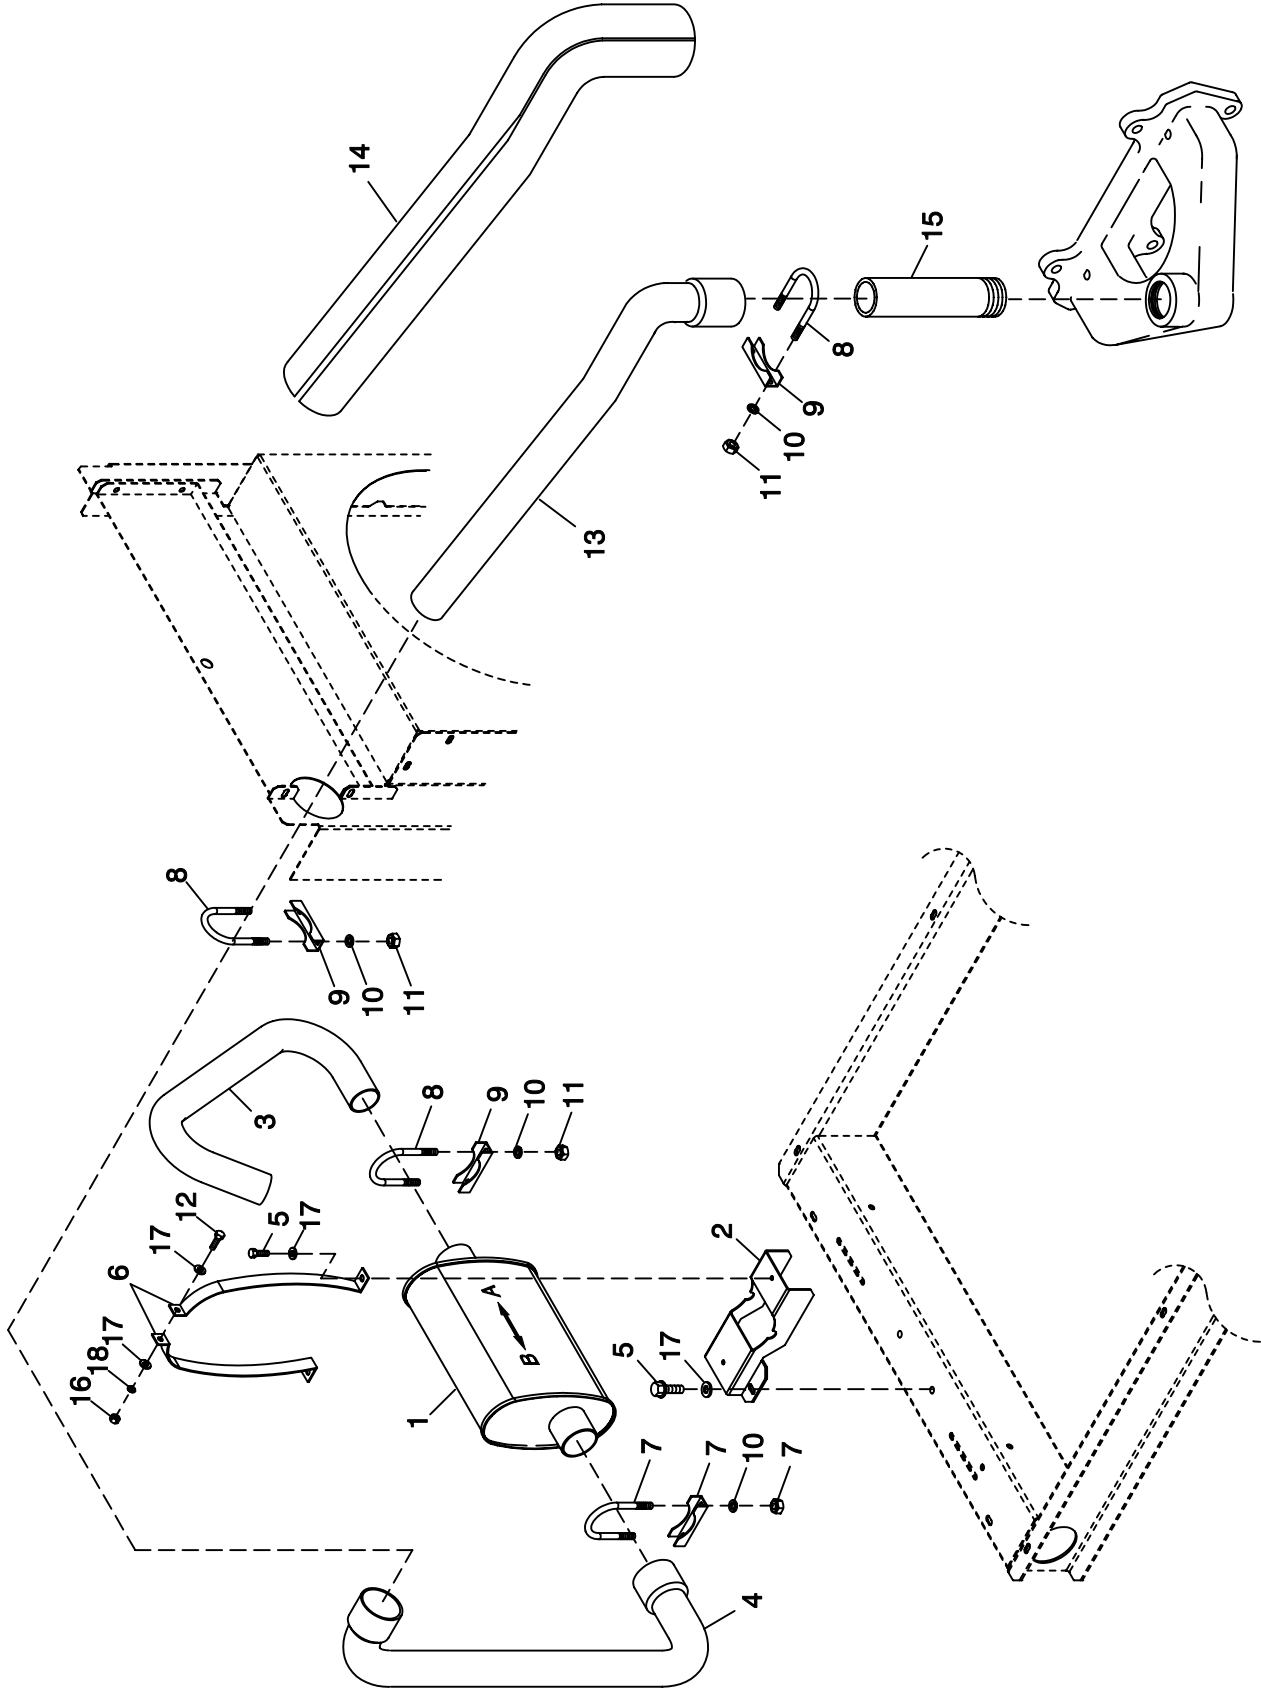

EXPLODED VIEW: EXHAUST SYSTEM  
DRAWING #: 0F7492

GROUP F

APPLICABLE TO:

| ITEM | PART # | QTY. | DESCRIPTION                    |
|------|--------|------|--------------------------------|
| 1    | 0F7366 | 1    | MUFFLER C1                     |
| 2    | 0F7647 | 1    | MUFFLER SADDLE                 |
| 3    | 0F8095 | 1    | PIPE EXHAUST OUTLET            |
| 4    | 0F7538 | 1    | PIPE EXH INLET MUFLR SIDE 1.5L |
| 5    | 0E3257 | 4    | SCREW HWHTF M6-1.0 X 16        |
| 6    | 0F7644 | 2    | MUFFLER STRAP                  |
| 7    | 0C6119 | 1    | BOLT U 5/16-18 X 2-1/4         |
| 8    | 036434 | 3    | BOLT U 5/16-18 X 2.09          |
| 9    | 036449 | 3    | SADDLE 2 INCH                  |
| 10   | 022129 | 8    | WASHER LOCK M8-5/16            |
| 11   | 022259 | 6    | NUT HEX 5/16-18 STEEL          |
| 12   | 038750 | 1    | SCREW HHC M6-1.0 X 30 G8.8     |
| 13   | 0F7539 | 1    | PIPE EX INLET MANIFLD SIDE 1.5 |
| 14   | 0E0170 | 1    | EXHAUST BLANKET 800MM          |
| 15   | 0E2844 | 1    | NIPPLE TOE 1.5NPTX5.5 BLK IRON |
| 16   | 049813 | 1    | NUT HEX M6 X 1.0 G8 YEL CHR    |
| 17   | 022473 | 6    | WASHER FLAT 1/4-M6 ZINC        |
| 18   | 022097 | 1    | WASHER LOCK M6-1/4             |

## CONTROL PANEL LEGEND


AVR - AUTOMATIC VOLTAGE REGULATOR  
 BCH - BATTERY CHARGER  
 BR1 - DIODE (FIELD BOOST)  
 CB2 - CIRCUIT BREAKER (EXCITATION)  
 F1 - FUSE, BAT. POWER (15A ATD TYPE)  
 J2 - CONNECTOR 2 (ON PCB)  
 J3 - CONNECTOR 3 (ON PCB)  
 R4 - FIELD BOOST RESISTOR, 25 OHM  
 RL1 - RELAY 1 (START RELAY)  
 RL2 - RELAY 2 (ENGINE RUN)  
 SW1 - AUTO/OFF/MANUAL SWITCH  
 SW2 - SET EXERCISER SWITCH  
 TB - TERMINAL BLOCK  
 TR1 - TRANSFORMER 1

## CUSTOMER CONNECTION

### & ALTERNATOR LEGEND:

BA - BRUSH ASSEMBLY (GENERATOR)  
 ICT - INTERCONNECT TERMINAL BLOCK  
 MCB - MAINLINE CIRCUIT BREAKER  
 NB - NEUTRAL BLOCK  
 UCT - UTILITY CONNECT TERMINAL BLOCK

NOTE: ALL WIRES ARE  
 18 AWG UL LISTED UNLESS  
 OTHERWISE NOTED AS SHOWN:

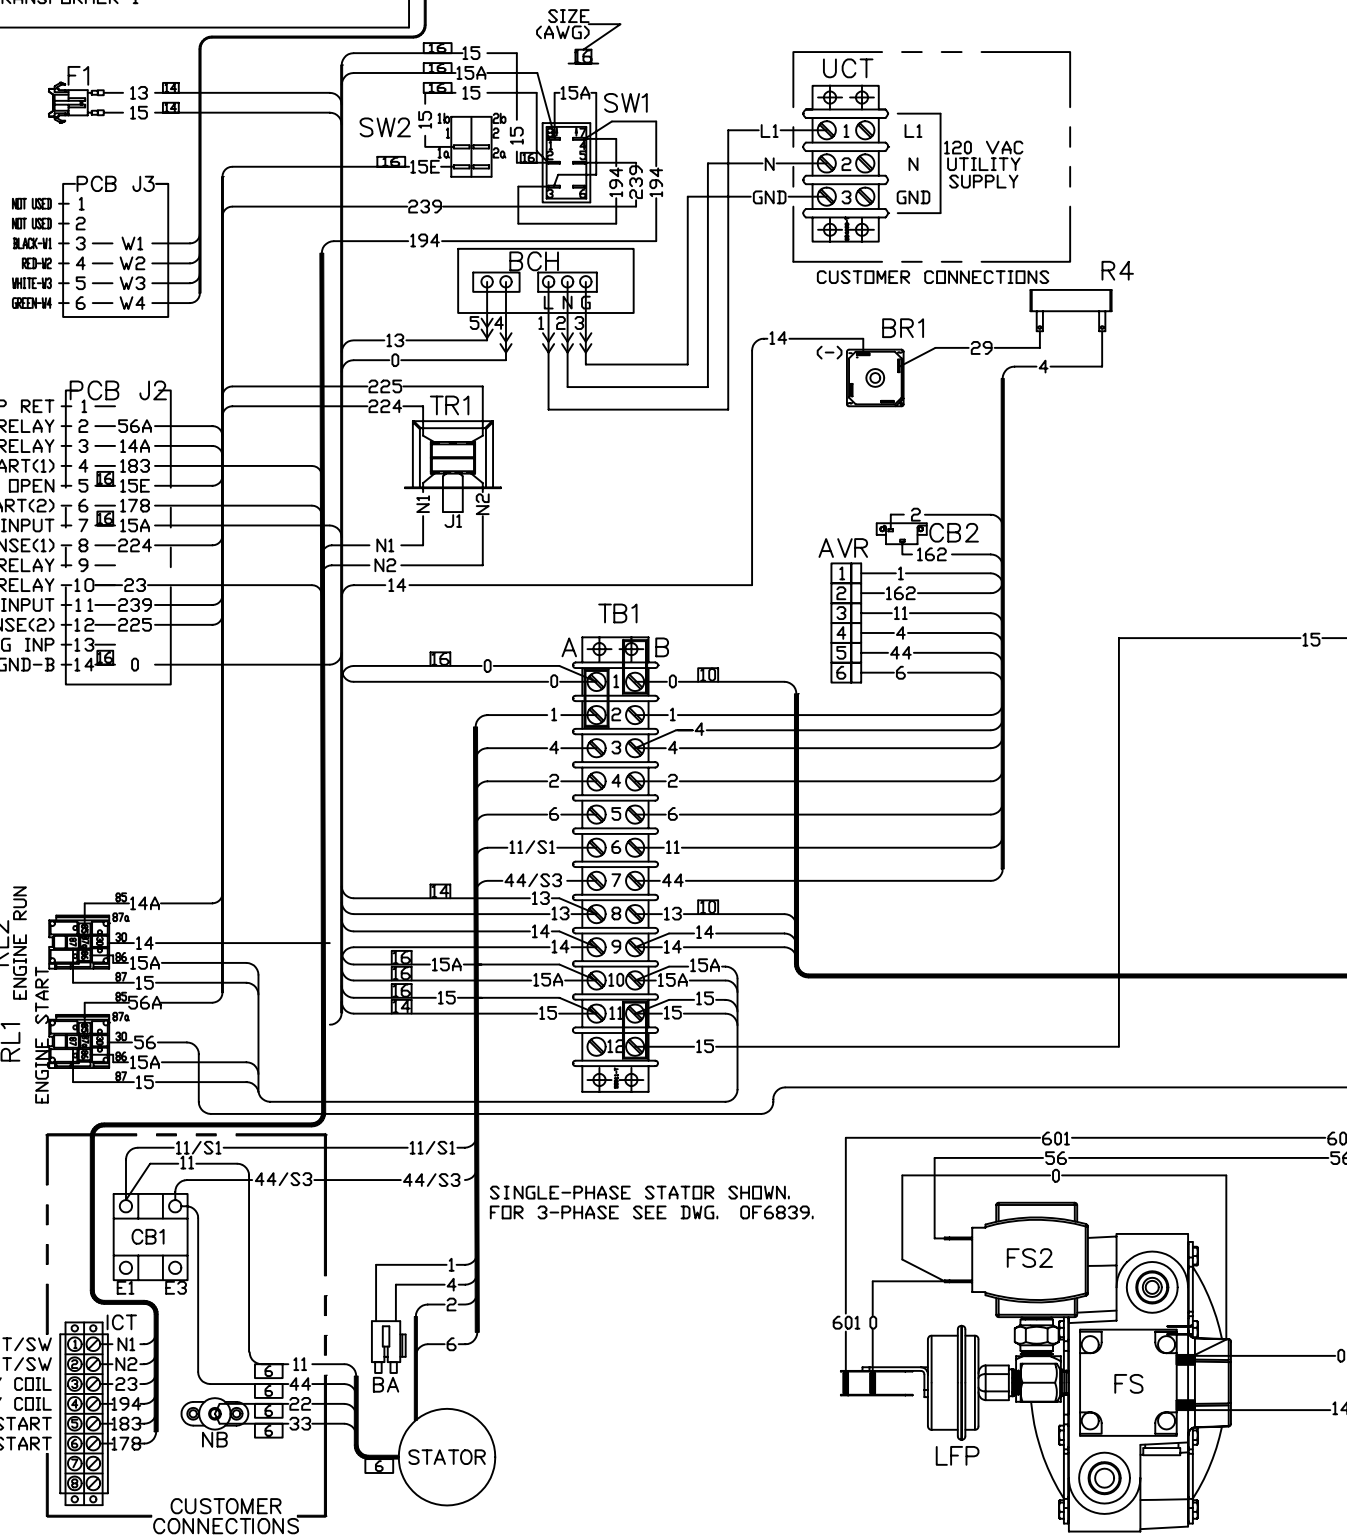


## WIRING - DIAGRAM

1.5L COMMERCIAL PROD LINE


DRAWING #: 0F7132

REVISION: \*

DATE: 05/24/05

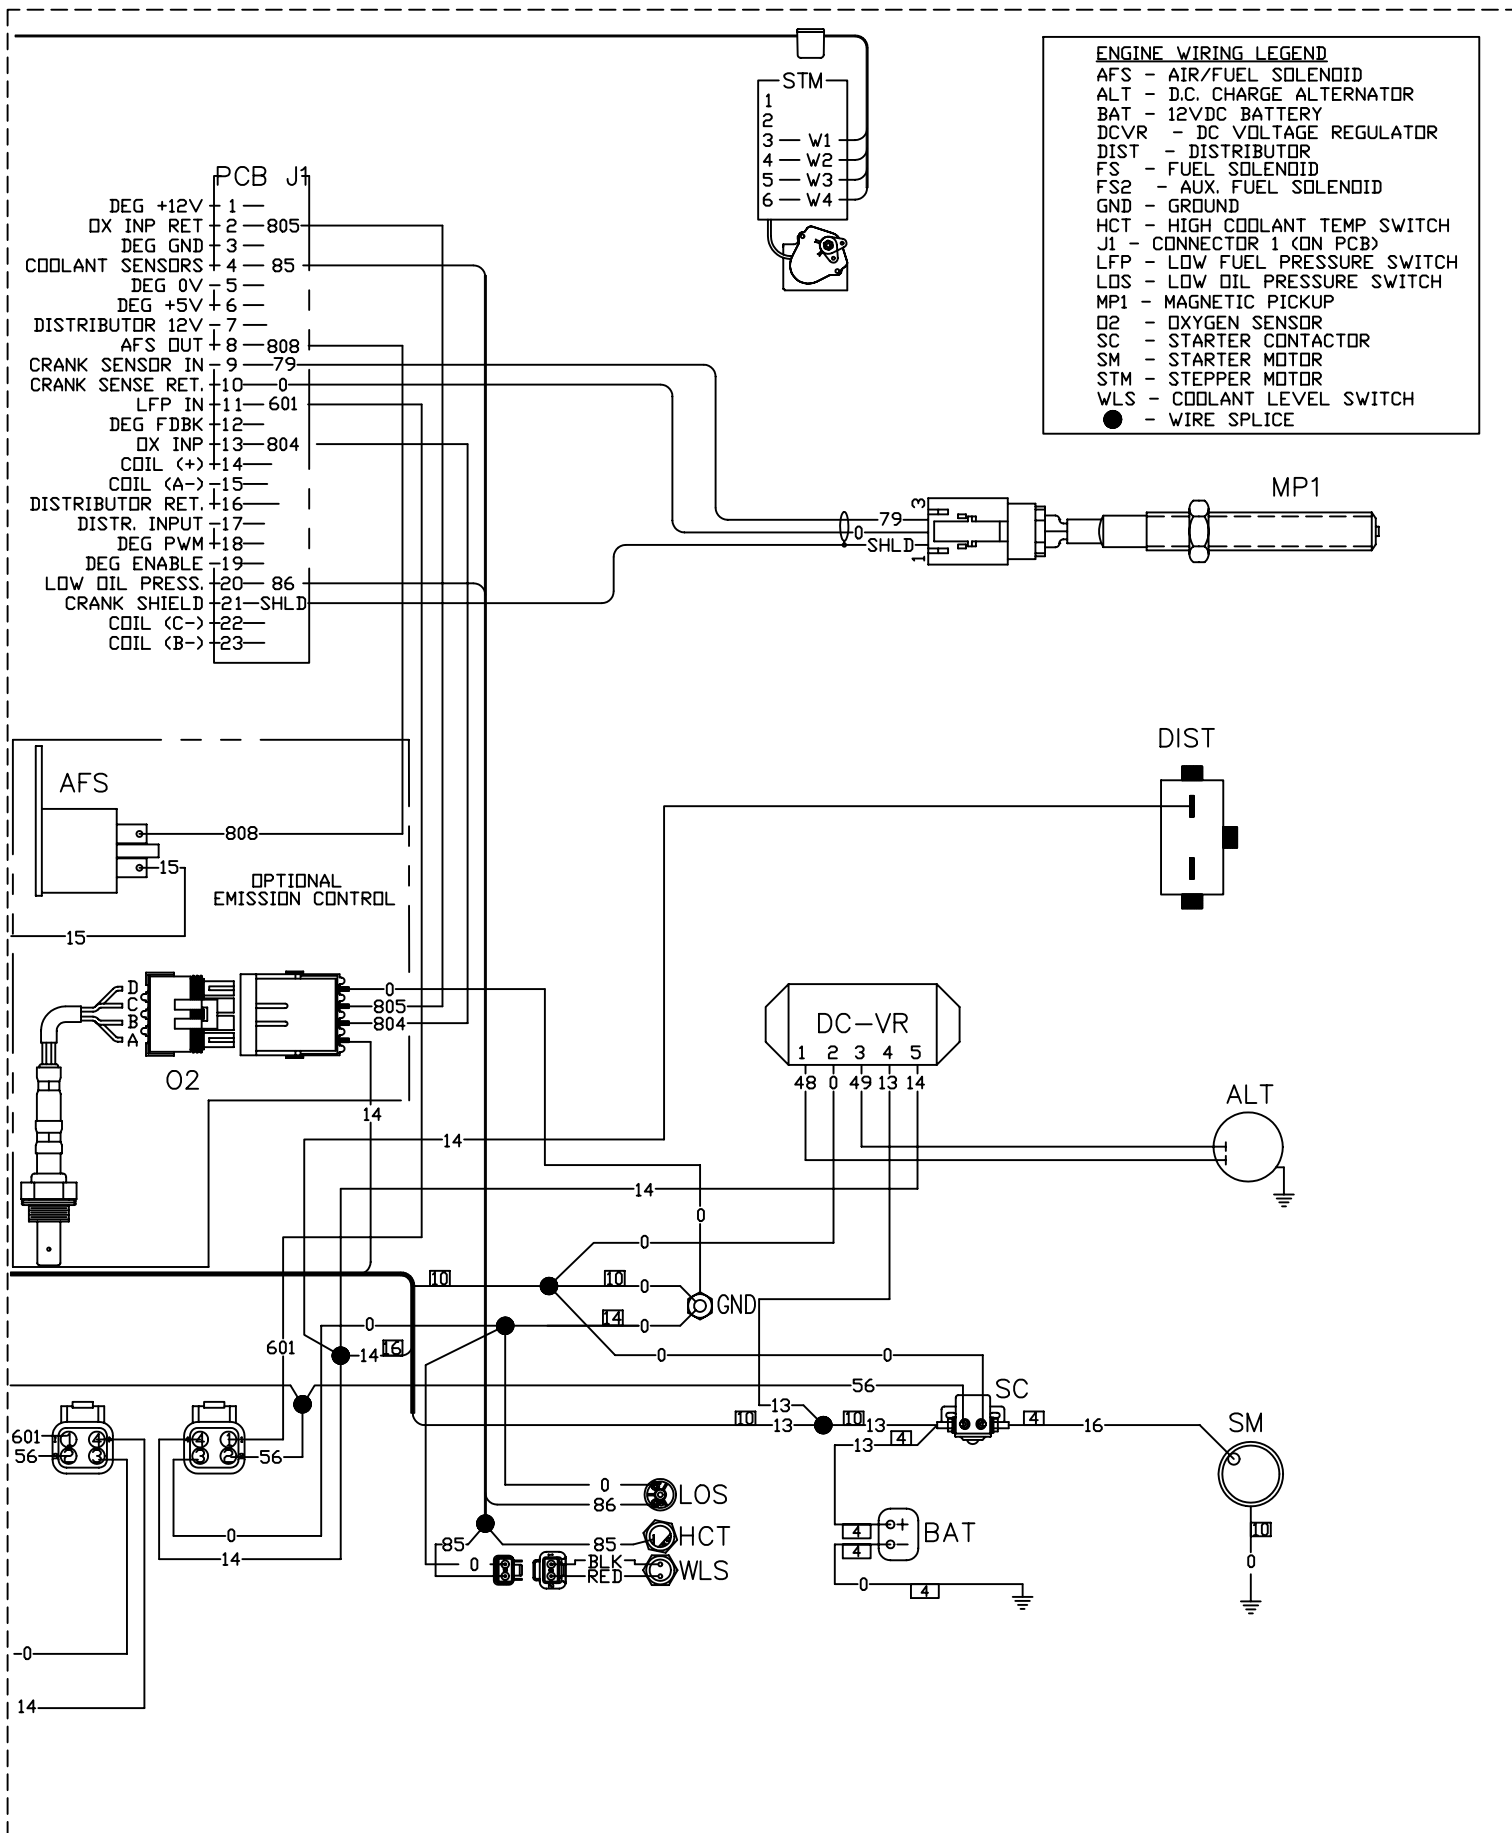


## GROUP G

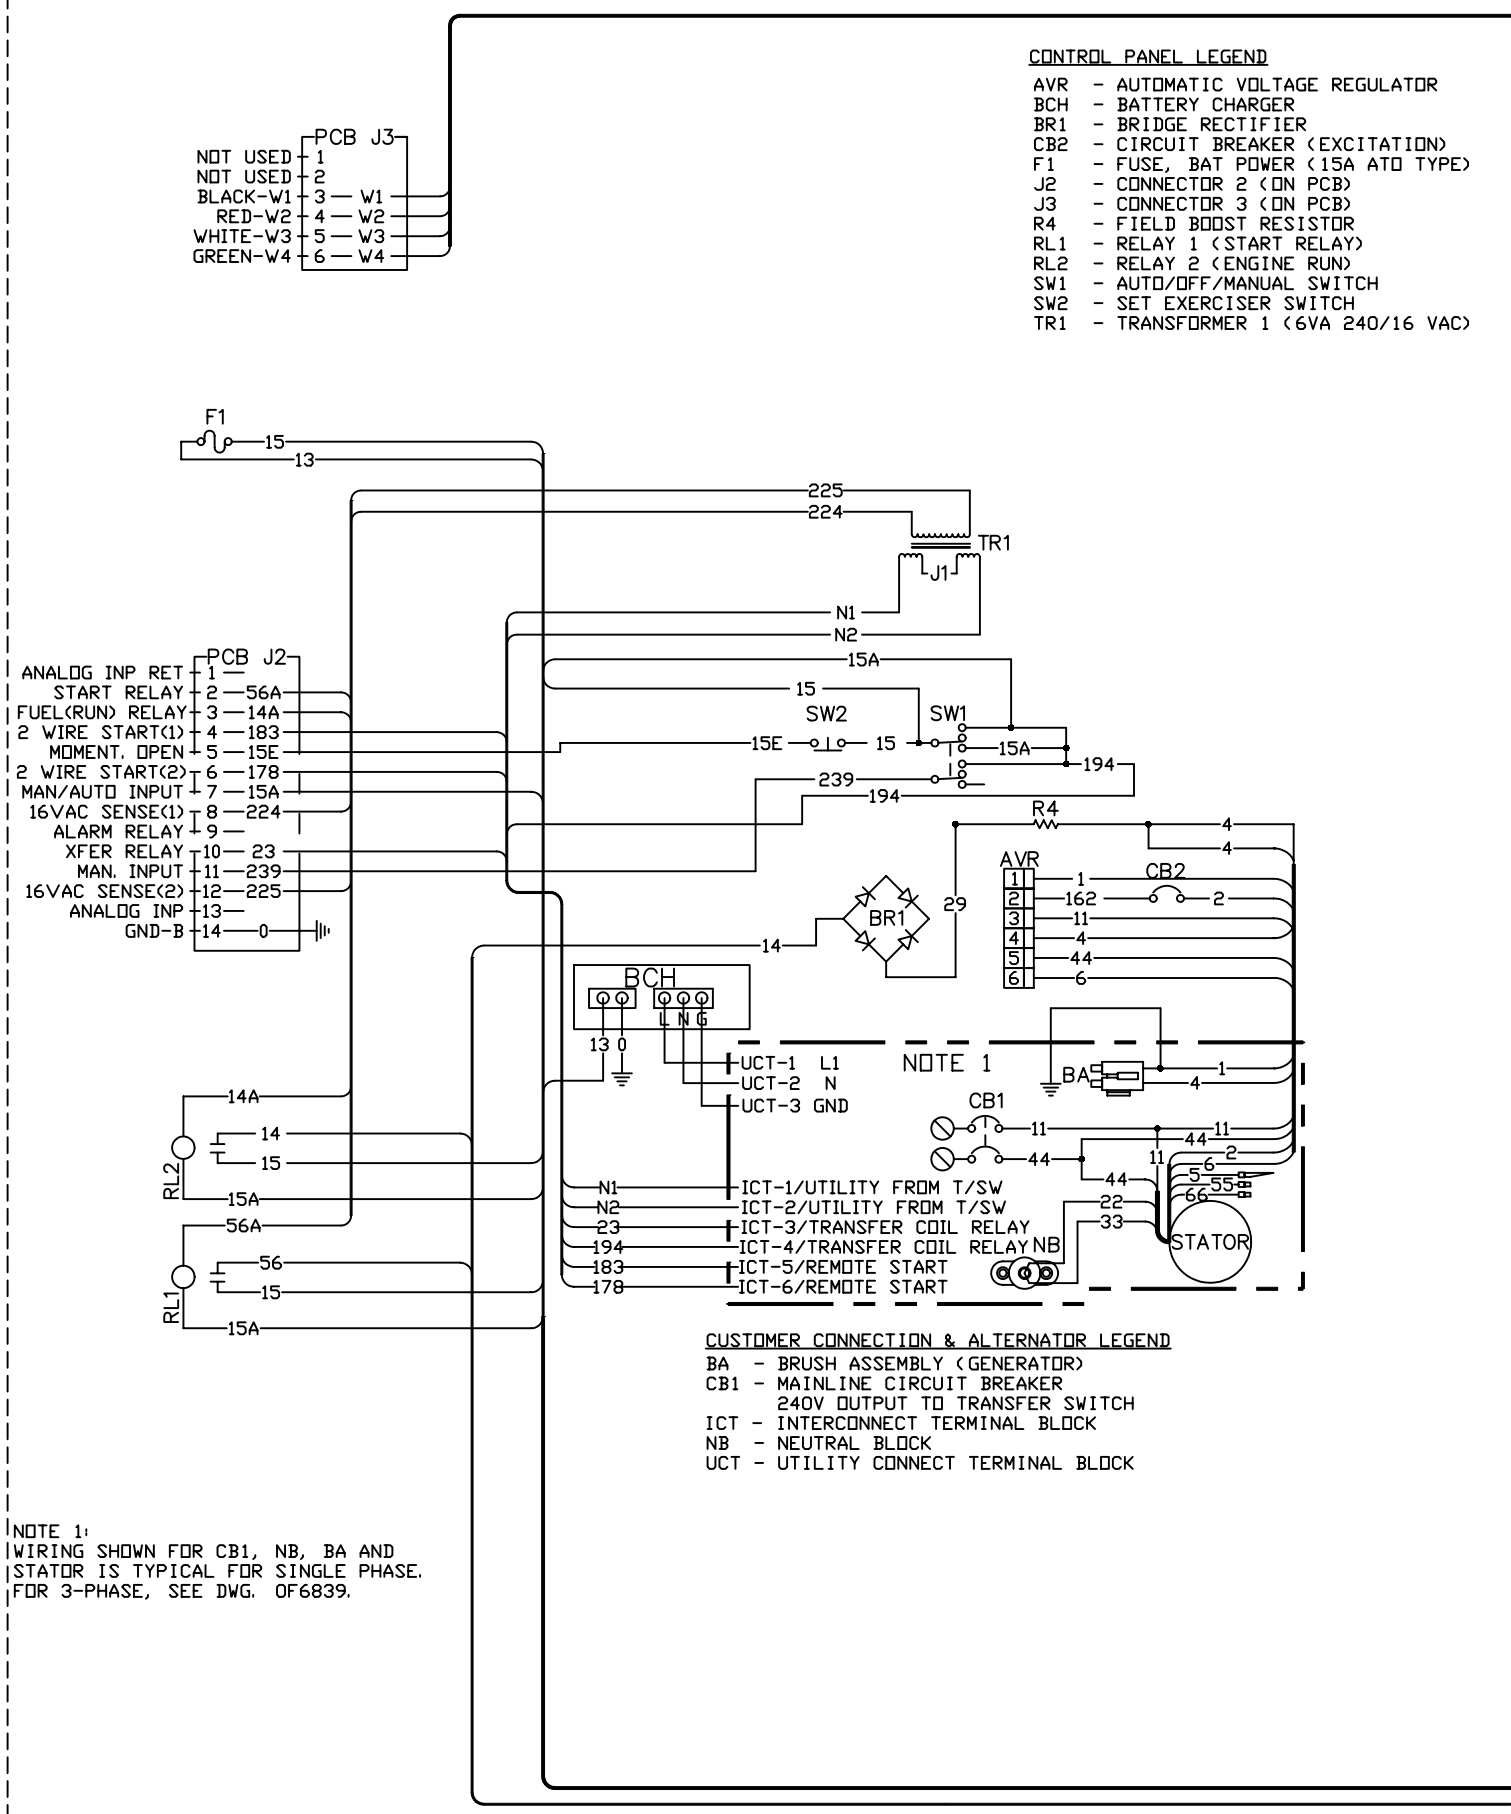



# GROUP G

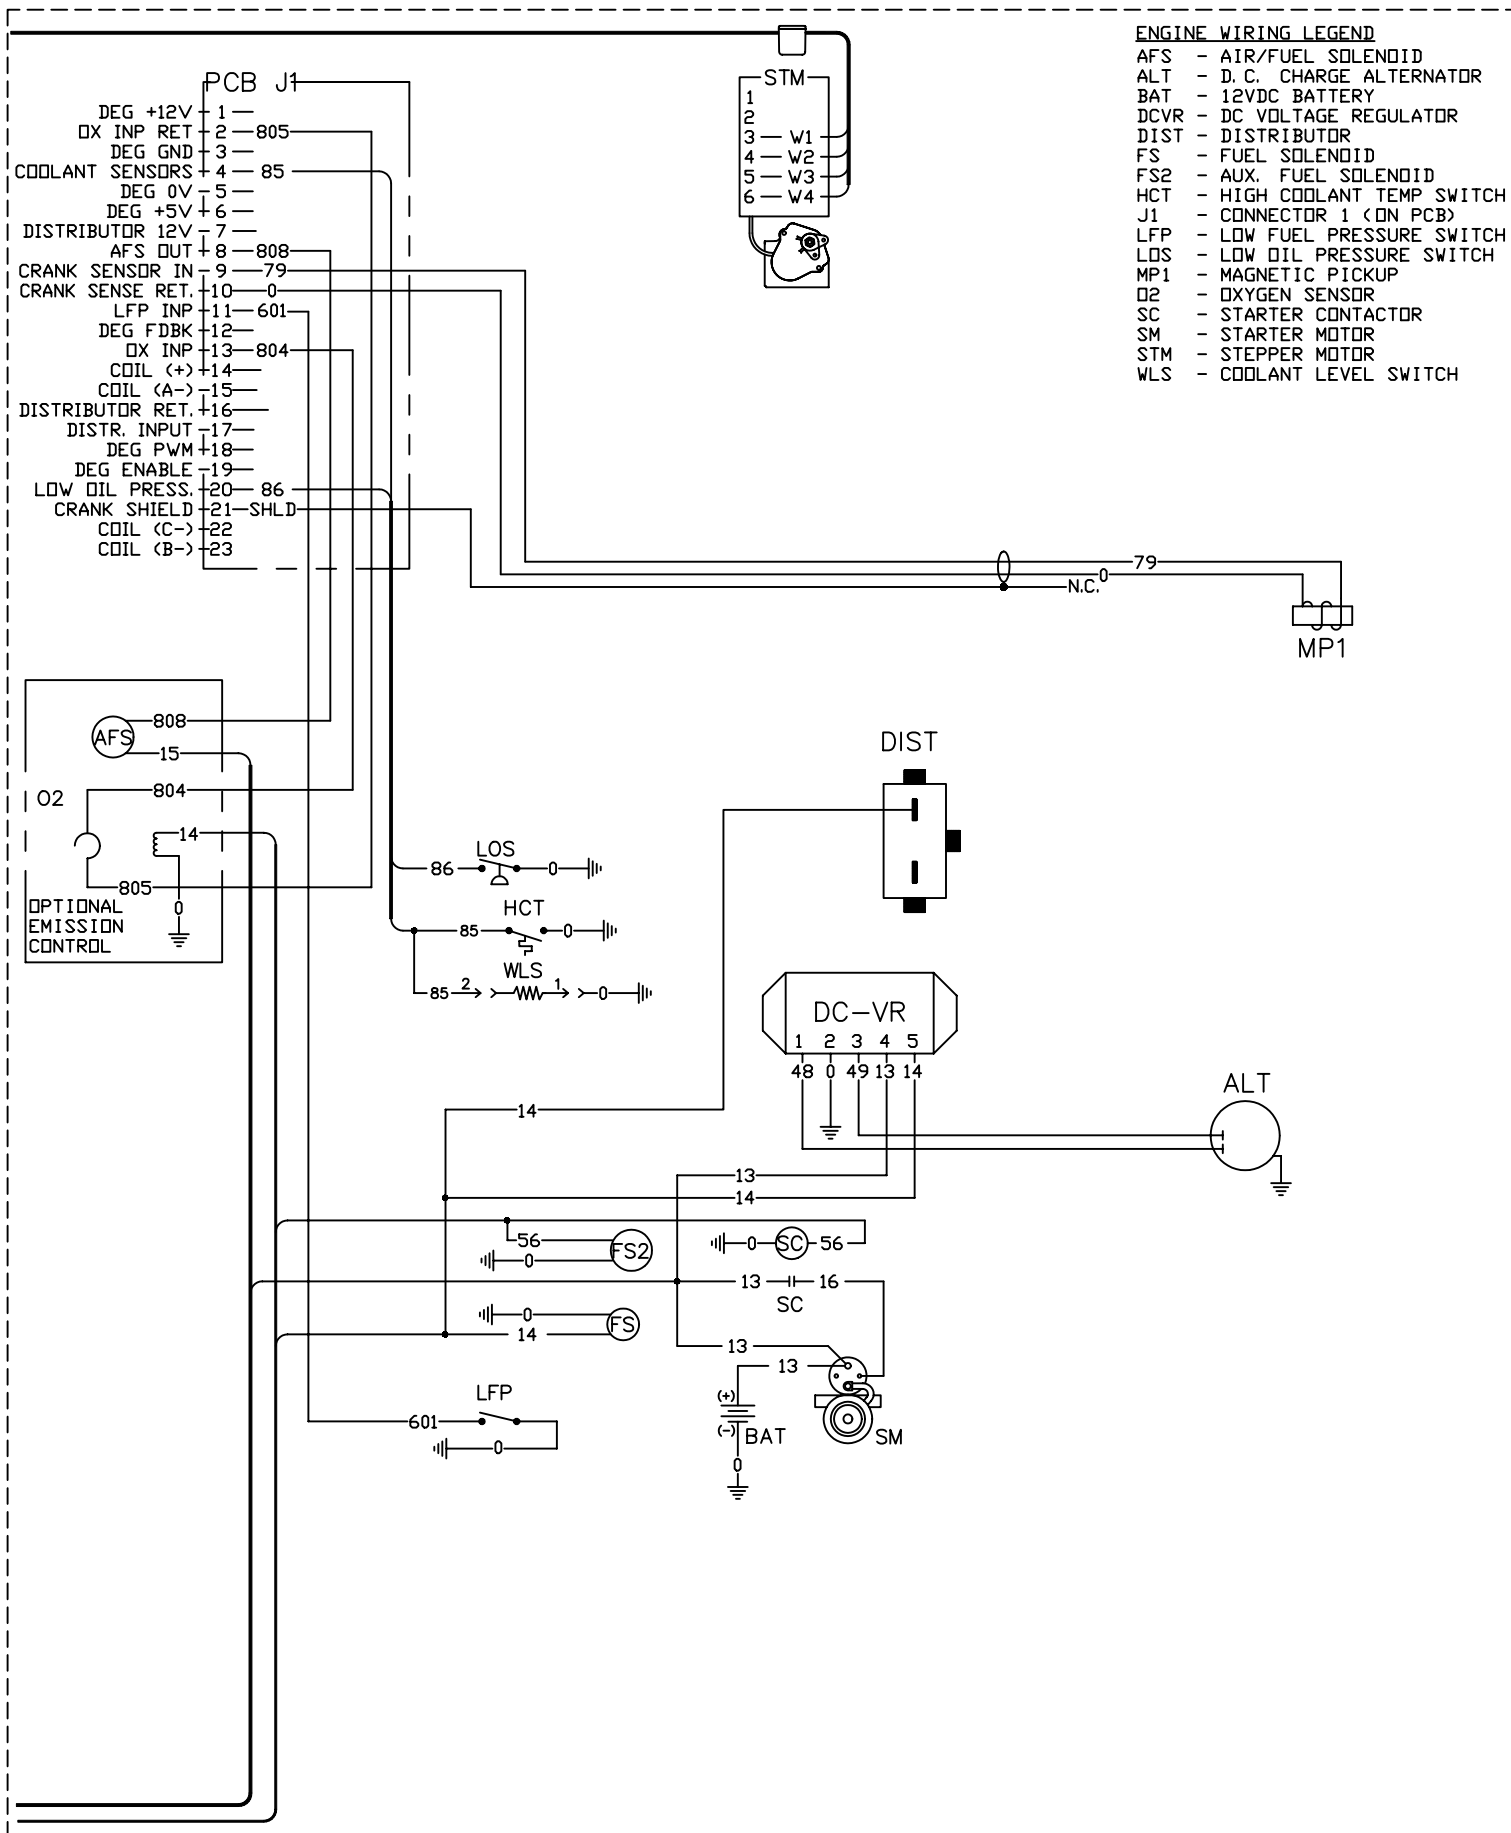

SCHEMATIC - DIAGRAM

1.5L COMM PROD LINE

DRAWING #: 0F7419


REVISION: \*

DATE: 08/04/05

| WEIGHT DATA   |  |
|---|--|
| 1. 5L 20KW - 289KG [774.5lb]                                |  |
| 2. 5L 25KW - 389KG [1043lb]                                 |  |
| WOODEN SHIPPING SKIDS INCREASE<br>OVERALL WEIGHT - T. B. D. |  |

NOTES:



- 1) MINIMUM RECOMMENDED CONCRETE PAD SIZE: 1041 (41.0') WIDE X 2108 (83.0') LONG. REFERENCE INSTALLATION GUIDESUPPLIED WITH UNIT FOR CONCRETE PAD GUIDELINES.
- 2) ALLOW SUFFICIENT ROOM ON ALL SIDES OF THE GENERATOR FOR MAINTENANCE AND SERVICING. THIS UNIT MUST BE INSTALLED IN ACCORDANCE WITH CURRENT APPLICABLE NFPA 37 AND NFPA 70 STANDARDS AS WELL AS ANY OTHER FEDERAL, STATE AND LOCAL CODES FOR MINIMUM DISTANCES FROM OTHER STRUCTURES.
- 3) CIRCUIT BREAKER INFORMATION:  
SEE SPECIFICATION SHEET WITHIN OWNERS MANUAL
- 4) INSIDE STUB-UP AREA FOR AC LOAD LEAD CONDUIT CONNECTION, NEUTRAL CONNECTION, BATTERY CHARGER 120 VOLT AC (.5 AMP MAX.) CONNECTION, AND ACCESS TO TRANSFER SWITCH CONTROL WIRES. REMOVE FRONT COVER FOR ACCESS.
- 4A) FIELD CUT HOLE IS ONLY REQUIRED FOR MOUNTING OF GENERATOR ON AN EXISTING PAD.
- 5) REFERENCE OWNERS MANUAL FOR LIFTING WARNINGS.
- 6) REMOVE LIFT-OFF ENCLOSURE TO ACCESS EXHAUST MUFFLER.

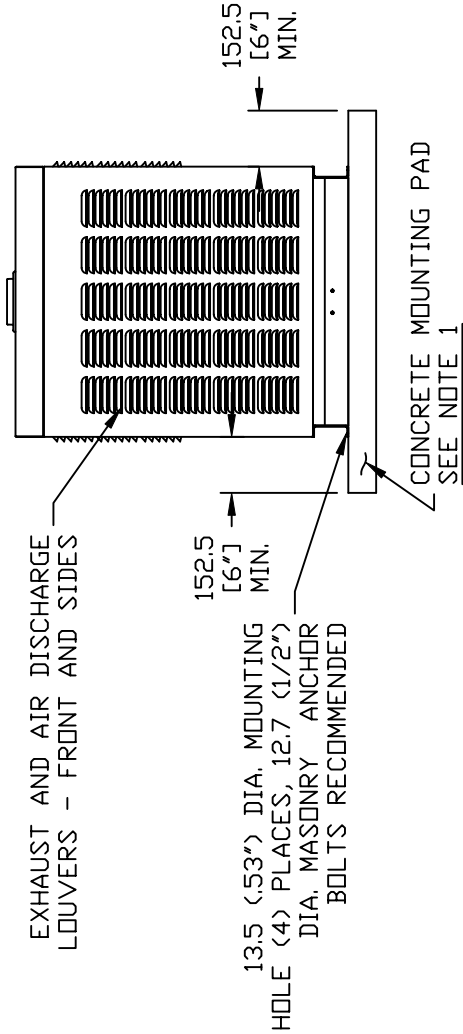

SERVICE ITEM ACCESSIBILITY CHART

| SERVICE ITEM        | 1. 5L 20KW      | 2. 5L 25KW      |
|---------------------|-----------------|-----------------|
| OIL FILL CAP        | EITHER DOOR     | EITHER DOOR     |
| OIL DIP STICK       | THRU LEFT DOOR  | THRU LEFT DOOR  |
| OIL FILTER          | THRU RIGHT DOOR | THRU LEFT DOOR  |
| OIL DRAIN HOSE      | THRU RIGHT DOOR | THRU RIGHT DOOR |
| RADIATOR DRAIN HOSE | THRU LEFT DOOR  | THRU LEFT DOOR  |
| AIR CLEANER ELEMENT | THRU RIGHT DOOR | THRU LEFT DOOR  |
| SPARK PLUGS         | THRU LEFT DOOR  | THRU LEFT DOOR  |
| MUFFLERS            | SEE NOTE 6      | SEE NOTE 6      |
| FAN BELT            | EITHER DOOR     | EITHER DOOR     |
| BATTERY             | THRU RIGHT DOOR | THRU LEFT DOOR  |

REFERENCE OWNERS MANUAL FOR PERIODIC  
REPLACEMENT PART LISTINGS

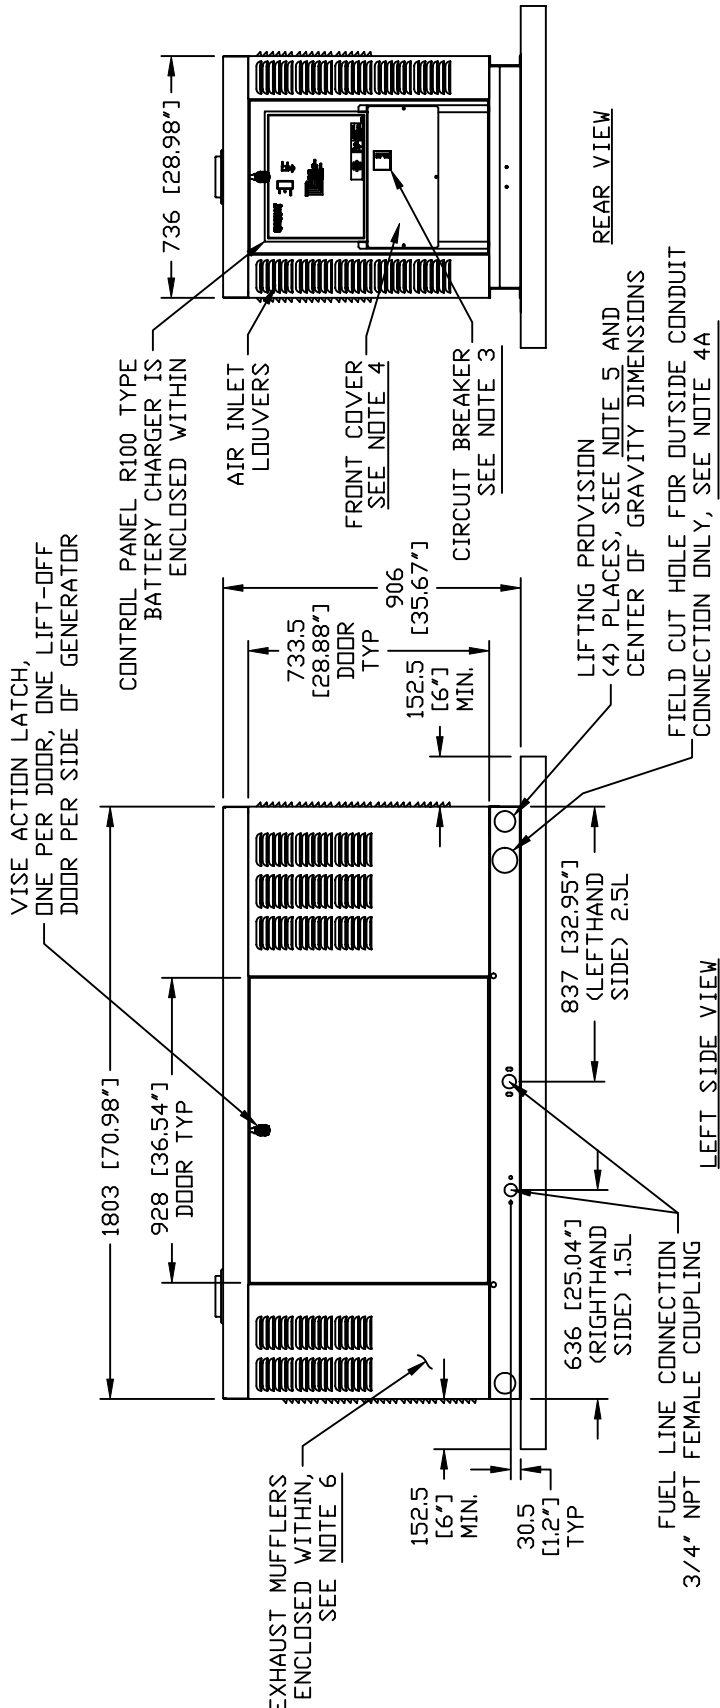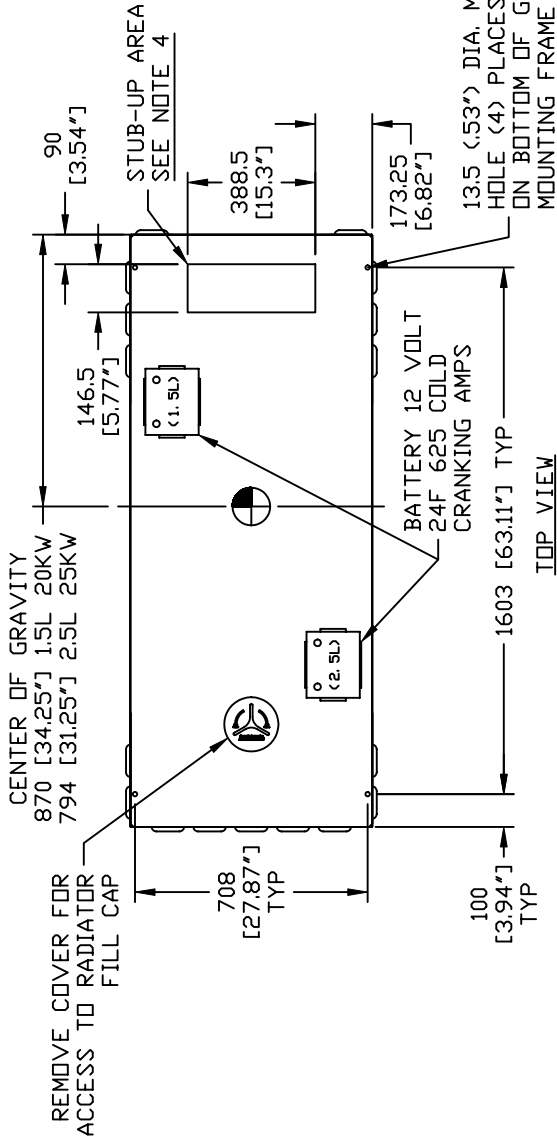



## Standby Generator Sets Warranty



### GENERAC POWER SYSTEMS STANDARD LIMITED WARRANTY FOR HOME STANDBY/LIGHT COMMERCIAL PRODUCT 45kW AND BELOW

For a period of two (2) years from the date of sale, or start-up by Authorized/Certified Generac Power Systems Dealer, or branch thereof, Generac Power Systems, Inc. will, at its option, repair or replace any part(s) which, upon examination, inspection, and testing by Generac Power Systems or an Authorized/Certified Generac Power Systems Dealer, or branch thereof, is found to be defective under normal use and service, in accordance with the warranty schedule set forth below. Any equipment that the purchaser/owner claims to be defective must be examined by the nearest Authorized/Certified Generac Power Systems Dealer, or branch thereof. This warranty applies only to Generac Power Systems Generators used in "Standby" applications, as Generac Power Systems, Inc. has defined Standby, provided said generator has been properly installed and inspected on-site by appropriate personnel. Scheduled maintenance, as outlined by the generator owner's manual, is highly recommended. This should be performed by an Authorized/Certified Generac Power Systems Dealer, or branch thereof. This will verify service has been performed on the unit throughout the warranty period.

#### WARRANTY SCHEDULE

**YEARS ONE and TWO** — Limited comprehensive coverage on mileage, labor, and parts listed.

• - ALL COMPONENTS

\*Start-up and/or On-line Registration, or Registration Card, along with Proof of Purchase, must be performed and/or sent in.

#### Guidelines:

- Any and all warranty repairs and/or concerns, must be performed and/or addressed by an Authorized/Certified Generac Power Systems Dealer, or branch thereof.
- A Generac Power Systems, Inc. Transfer Switch is highly recommended to be used in conjunction with the genset. If a Non - Generac Power Systems, Inc. Transfer Switch is substituted for use and directly causes damage to the genset, no warranty coverage shall apply.
- All warranty expense allowances are subject to the conditions defined in Generac Power Systems Warranty, Policies, and Procedures Flat Rate Manual.
- Units that have been resold are not covered under the Generac Power Systems Warranty, as this Warranty is not transferable.
- Unit enclosure is only covered against rust or corrosion the first year of the warranty provision.
- Use of Non-Generac replacement part(s) will void the warranty in its entirety.
- Engine coolant heaters (block-heaters), heater controls and circulating pumps are only covered during the first year of the warranty provision (If applicable).

#### THIS WARRANTY SHALL NOT APPLY TO THE FOLLOWING:

1. Any unit built/manufactured prior to January 1, 2005.
2. Costs of normal maintenance (i.e. tune-ups, associated part(s), adjustments, loose/leaking clamps, installation and start-up).
3. Any failure caused by contaminated fuels, oils, coolants/antifreeze or lack of proper fuels, oils or coolants/antifreeze.
4. Units sold, rated or used for "Prime Power", "Trailer Mounted" or "Rental Unit" applications as Generac Power Systems have defined Prime Power, Trailer Mounted or Rental Unit. Contact a Generac Power Systems Distributor for Prime Power, Trailer Mounted or Rental Unit definition and warranty.
5. Units used for prime power in place of existing utility power where utility is present or in place of utility power where utility power service does not normally exist.
6. Failures caused by any external cause or act of God such as, but not limited to, collision, fire, theft, freezing, vandalism, riot or wars, lightning, earthquake, windstorm, hail, volcanic eruption, water or flood, tornado, hurricane, terrorist acts or nuclear holocaust.
7. Products that are modified or altered in a manner not authorized by Generac Power Systems in writing.
8. Failures due, but not limited to, normal wear and tear, accident, misuse, abuse, negligence, or improper installation or sizing.
9. Any incidental, consequential or indirect damages caused by defects in materials or workmanship, or any delay in repair or replacement of the defective part(s).
10. Failure due to misapplication, misrepresentation, or bi-fuel conversion.
11. Telephone, facsimile, cell phone, satellite, internet, or any other communication expenses.
12. Rental equipment used while warranty repairs are being performed (i.e. rental generators, cranes, etc.).
13. Overtime, holiday, or emergency labor.
14. Planes, ferries, railroad, busses, helicopters, snowmobiles, snow-cats, off-road vehicle or any other mode of transportation deemed abnormal.
15. Any and all expenses incurred investigating performance complaints unless defective Generac materials and/or workmanship were the direct cause of the problem.
16. Starting batteries, fuses, light bulbs, engine fluids, and overnight freight cost for replacement part(s).

THIS WARRANTY IS IN PLACE OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, SPECIFICALLY, GENERAC POWER SYSTEMS MAKES NO OTHER WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to purchaser/owner.

GENERAC POWER SYSTEMS ONLY LIABILITY SHALL BE THE REPAIR OR REPLACEMENT OF PART(S) AS STATED ABOVE. IN NO EVENT SHALL GENERAC POWER SYSTEMS BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF SUCH DAMAGES ARE A DIRECT RESULT OF GENERAC POWER SYSTEMS, INC. NEGLIGENCE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to purchaser/owner. Purchaser/owner agrees to make no claims against Generac Power Systems, Inc. based on negligence. This warranty gives purchaser/owner specific legal rights. Purchaser/owner also may have other rights that vary from state to state.

**Generac Power Systems, Inc. • P.O. Box 8 • Waukesha, WI 53187**  
**Ph: (262) 544-4811 • Fax: (262) 544-4851**

Bulletin 0171360SVE / Printed in U.S.A. 7.05

Printed in U.S.A.