Honeywell

STANDBY GENERATORS

17 kW

AIR-COOLED GENERATOR SETS

Standby Power Rating

Model G007060-0 (Steel - Dark Gray) - 17 kW 60 Hz - US Model G007061-0 (Steel - Dark Gray) - 17 kW 60 Hz - Canada



INCLUDES

- PrecisionPower[™] Electrical Technology
- Two Line LCD Multilingual Digital Controller (English/Spanish/French/Portuguese)
- Electronic Governor
- 200 amp service rated Sync™ Switch
- System and Status & Maintenance Interval LED Indicators
- Flexible Fuel Line Connector
- WhisperCheck™ Exercise

- Direct-To-Dirt Composite Pad
- Sound Attenuated Enclosure
- Natural Gas or LP Gas Operation
- 3 Year Premium Limited Warranty
- Capability to be installed within 18" (457 mm) of a building*



wise directed by local codes.

** US version is UL listed only

FEATURES

INNOVATIVE ENGINE DESIGN & RIGOROUS TESTING are at the heart of Honeywell's success in providing the most reliable generators possible. Honeywell generators use Generac's industry leading G-Force engine lineup for added peace of mind and reliability for when you need it the most. The G-Force series engines are purpose built and designed to handle the rigors of the extended run times in high temperatures and extreme operating conditions.

O TEST CRITERIA

- PROTOTYPE TESTED
- SYSTEM TORSIONAL TESTED
- ◆ NEMA MG1-22 EVALUATION
- MOTOR STARTING ABILITY

- PRECISIONPOWER™ ELECTRICAL TECHNOLOGY Superior harmonics and sine wave form produce less than 5% Total Harmonic Distortion for utility quality power. This allows confident operation of sensitive electronic equipment and micro-chip based appliances, such as variable speed HVAC.
- COMPENSATED VOLTAGE
 REGULATION This state-of-the-art
 power maximizing regulation system is
 standard on all Honeywell models. It
 provides optimized FAST RESPONSE to
 changing load conditions and MAXIMUM
 MOTOR STARTING CAPABILITY by
 electronically torque-matching the surge
 loads to the engine. Digital voltage
 regulation at +/- 1%.
- SINGLE SOURCE SERVICE
 RESPONSE from our extensive dealer
 network provides parts and service
 know-how for the entire unit, from the
 engine to the smallest electronic
 component.
- HONEYWELL TRANSFER
 SWITCHES The Honeywell generator
 line includes its own transfer systems
 and controls for total system
 compatibility.



17 kW

AIR-COOLED GENERATOR SETS

ENGINE	
WhisperCheck	Greatly reduces sound output and fuel consumption during bi-weekly exercise.
Generac G-Force design	Maximizes engine "breathing" for increased fuel efficiency. Plateau honed cylinder walls and plasma moly rings help the engine run cooler, reducing oil consumption resulting in longer engine life.
"Spiny-lok" cast iron cylinder walls	Rigid construction and added durability provide long engine life.
Electronic ignition/spark advance	These features combine to assure smooth, quick starting every time.
• Full pressure lubrication system	Pressurized lubrication to all vital bearings means better performance, less maintenance and longer engine life. Now featuring up to a 2 year/200 hour oil change interval.
Low oil pressure shutdown system	Shutdown protection prevents catastrophic engine damage due to low oil.
High temperature shutdown	Prevents damage due to overheating.

GENERATOR		
Revolving field	Allows for smaller, light weight unit that operates 25% more efficiently than a revolving armature generator.	
Skewed stator	Produces a smooth output waveform for compatibility with electronic equipment.	
Displaced phase excitation	Maximizes motor starting capability.	
Automatic voltage regulation	Regulates the output voltage to ±1% prevents damaging voltage spikes.	
• UL 2200 listed	For your safety.	

TRANSFER SWITCH		
Fully automatic	Transfers your vital electrical loads to the energized source of power.	
NEMA 3R Can be installed inside or outside for maximum flexibility.		
Remote mounting	Mounts near your existing distribution panel for simple, low-cost installation.	

SYNC™ 2.0 CONTROLS	
Auto/Manual/Off illuminated buttons	Selects the operating mode and provides easy, at-a-glance status indication in any condition.
Two-line LCD multilingual display	Provides homeowners easily visible logs of history, maintenance and events up to 50 occurrences.
Sealed, raised buttons	Smooth, weather-resistant user interface for programming and operations.
Utility voltage sensing	Constantly monitors utility voltage, setpoints 65% dropout, 80% pick-up, of standard voltage.
Generator voltage sensing	Constantly monitors generator voltage to ensure the cleanest power delivered to the home.
Utility interrupt delay	Prevents nuisance start-ups of the engine, adjustable 2-1500 seconds from the factory default setting of 5 seconds by a qualified dealer.
Engine warm-up	Ensures engine is ready to assume the load, setpoint approximately 5 seconds.
Engine cool-down	Allows engine to cool prior to shutdown, setpoint approximately 1 minute.
Programmable exerciser	Operates engine to prevent oil seal drying and damage between power outages by running the generator for 12 minutes every other week. Also offers a selectable setting for weekly or monthly operation providing flexibility and lower fuel costs to the owner.
Smart battery charger	Delivers charge to the battery only when needed at varying rates depending on outdoor air temperature. Compatible with lead acid and AGM-style batteries.
Electronic governor	Maintains constant 60 Hz frequency.

	1 2
UNIT	
·	Sound attenuated enclosures ensure quiet operation and protection against mother nature and can withstand winds up to 150 mph. Hinged key locking roof panel for security. Lift-out front for easy access to all routine maintenance items. Electrostatically applied textured epoxy paint for added durability.
Enclosed critical grade muffler	Quiet, critical grade muffler is mounted inside the unit to prevent injuries.
Small, compact, attractive	Makes for an easy, eye appealing installation, as close as 18" away from a building.

INSTALLATION SYSTEM		
• 1 ft (305 mm) flexible fuel line connector	Absorbs any generator vibration when connected to rigid pipe.	
Direct-to-dirt composite pad	Complex lattice design prevents settling or sinking of the generator system.	
Integral sediment trap	Prevents particles and moisture from entering the fuel regulator and engine, prolonging engine life.	

GENERATOR	Models G007060-0 & G007061-0 (17 kW)
	· ,
Rated Maximum Continuous Power Capacity (LP)	17,000 Watts*
Rated Maximum Continuous Power Capacity (NG)	16,000 Watts*
Rated Voltage	240
Rated Maximum Continuous Load Current – 240 V (LP/NG)	70.8/66.6
Total Harmonic Distortion	Less than 5%
Main Line Circuit Breaker	80 Amp
Phase	1
Number of Rotor Poles	2
Rated AC Frequency	60 Hz
Power Factor	1.0
Battery Requirement (not included)	12 Volts, Group 26R 540 CCA Minimum or Group 35AGM 650 CCA Minimum
Unit Weight (lb/kg)	492/223
Dimensions (L x W x H) in/mm	48 x 25 x 29/1218 x 638 x 732
Sound output in dB(A) at 23 ft (7 m) with generator operating at normal load**	66
Sound output in dB(A) at 23 ft (7 m) with generator in WhisperCheck™ low speed exercise mode**	58
Exercise duration	min
ENGINE	
	OFNEDAO O FODOS 1000 OSDISO
Type of Engine	GENERAC G-FORCE 1000 SERIES
Number of Cylinders	2
Displacement	999 cc
Cylinder Block	Aluminum w/ Cast Iron Sleeve
Valve Arrangement	Overhead Valve
Ignition System	Solid-state w/ Magneto
Governor System	Electronic
Compression Ratio	9.5:1
Starter	12 Vdc
Oil Capacity Including Filter	Approx. 1.9 qt/1.8 L
Operating rpm	3,600
Fuel Consumption	
Natural Gas ft³/hr (m³/hr)	*** ·* ·=
1/2 Load	218 (6.17)
Full Load	309 (8.75)
Liquid Propane ft ³ /hr (gal/hr) [l/hr]	0.1.0.70.70.70
1/2 Load	91.6 (2.52) [9.53]
Full Load	106.8 (2.94) [11.11]
Note: Fuel pipe must be sized for full load. Required fuel pressure to generator fuel inlet - 3.5-7" water of	
for LP gas. For Btu content, multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG).	
for LP gas. For Btu content, multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG). For Megajoule content, multiply ft ³ /hr x 2500 (LP) or ft ³ /hr x 1000 (NG).	
CONTROLS	tiply m ³ /hr x 93.15 (LP) or m ³ /hr x 37.26 (NG)
CONTROLS 2-Line Plain Text Multilingual LCD Display	tiply m³/hr x 93.15 (LP) or m³/hr x 37.26 (NG) Simple user interface for ease of operation.
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto	simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise.
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place.
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate.
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only)
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting)	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons: Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard oprogrammable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration).
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons: Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped.
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard Standard Standard Standard Standard Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard Standard Standard Standard Standard Standard Standard Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard Standard Standard Standard Standard Standard Standard Standard Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection Safety Fused/Fuse Problem Protection	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection Safety Fused/Fuse Problem Protection Automatic Low Oil Pressure/High Oil Temperature Shutdown	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection Safety Fused/Fuse Problem Protection Automatic Low Oil Pressure/High Oil Temperature Shutdown Overcrank/Overspeed (@ 72 Hz)/rpm Sense Loss Shutdown	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection Safety Fused/Fuse Problem Protection Automatic Low Oil Pressure/High Oil Temperature Shutdown Overcrank/Overspeed (@ 72 Hz)/rpm Sense Loss Shutdown High Engine Temperature Shutdown	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection Safety Fused/Fuse Problem Protection Automatic Low Oil Pressure/High Oil Temperature Shutdown Overcrank/Overspeed (@ 72 Hz)/rpm Sense Loss Shutdown High Engine Temperature Shutdown Internal Fault/Incorrect Wiring Protection	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection Safety Fused/Fuse Problem Protection Automatic Low Oil Pressure/High Oil Temperature Shutdown Overcrank/Overspeed (@ 72 Hz)/rpm Sense Loss Shutdown High Engine Temperature Shutdown Internal Fault/Incorrect Wiring Protection Common External Fault Capability	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard
CONTROLS 2-Line Plain Text Multilingual LCD Display Mode Buttons:Auto Manual Off Ready to Run/Maintenance Messages Engine Run Hours Indication Programmable start delay between 2-1500 seconds Utility Voltage Loss/Return to Utility Adjustable (Brownout Setting) Future Set Capable Exerciser/Exercise Set Error Warning Run/Alarm/Maintenance Logs Engine Start Sequence Starter Lock-out Smart Battery Charger Charger Fault/Missing AC Warning Low Battery/Battery Problem Protection and Battery Condition Indication Automatic Voltage Regulation with Over and Under Voltage Protection Under-Frequency/Overload/Stepper Overcurrent Protection Safety Fused/Fuse Problem Protection Automatic Low Oil Pressure/High Oil Temperature Shutdown Overcrank/Overspeed (@ 72 Hz)/rpm Sense Loss Shutdown High Engine Temperature Shutdown Internal Fault/Incorrect Wiring Protection	Simple user interface for ease of operation. Automatic Start on Utility failure. Programmable exercise. Start with starter control, unit stays on. If utility fails, transfer to load takes place. Stops unit. Power is removed. Control and charger still operate. Standard Standard Standard (programmable by dealer only) From 140-171 V/190-216 V Standard 50 Events Each Cyclic cranking: 16 sec on, 7 rest (90 sec maximum duration). Starter cannot re-engage until 5 sec after engine has stopped. Standard Standard

^{**}Sound levels are taken from the front of the generator. Sound levels taken from other sides of the generator may be higher depending on installation parameters. Rating definitions - Standby: Applicable for supplying emergency power for the duration of the utility power outage. No overload capability is available for this rating. (All ratings in accordance with BS5514, ISO3046 and DIN6271). * Maximum wattage and current are subject to and limited by such factors as fuel Btu/megajoule content, ambient temperature, altitude, engine power and condition, etc. Maximum power decreases about 3.5 percent for each 1,000 feet (304.8 meters) above sea level; and also will decrease about 1 percent for each 6 °C (10 °F).

17 kW

AIR-COOLED GENERATOR SETS

Service Rated Smart Switch Features (US)

- Includes Digital Power Management Technology standard (DPM).
- Intelligently manages up to four air conditioner loads with no additional hardware.
- Up to eight more large (240 VAC) loads can be managed when used in conjunction with Smart Management Modules (SMMs).
- Electrically operated, mechanically-held contacts for fast, clean connections
- Rated for all classes of load, 100% equipment rated, both inductive and resistive.
- 2 pole, 250 VAC contactors.
- Service equipment rated, dual coil design.
- Rated for both aluminum and copper conductors.
- NEMA/UL 3R (indoor/outdoor rated) aluminum enclosure is standard.
- Main contacts are silver plated or silver alloy to resist welding and sticking.

Dimensions

	200 Amps 120/240, 1ø Open Transition Service Rated				
	Height Width			dth	Donth
	H1	H2	W1	W2	Depth
in	27.24	30.0	11.4	13.5	7.09
mm	692.0	762.4	289.0	343.0	180.0

CSA Switch Features (Canada)


- Electrically operated, mechanically-held contacts for fast, positive connections.
- Rated for all classes of load, 100% equipment rated, both inductive and resistive
- 2 pole, 250 VAC contactors.
- 160 millisecond transfer time.
- Dual coil design.
- Main contacts are silver plated or silver alloy to resist welding and sticking.
- NEMA/UL 3R (indoor/outdoor rated) aluminum enclosure is standard.

Dimensions

	200 Amps 120/240, 1ø Open Transition Service Rated				
	Height Width				Danth
	H1	H2	W1	W2	Depth
in	26.0	30.0	12.5	16.0	7.1
mm	660.4	762.0	317.5	406.4	180.3


No. of Poles	2
Current Rating (Amps)	200
Voltage Rating (VAC)	120/240, 1Ø
Utility Voltage Monitor (Fixed)* -Pick-up -Dropout	80% 65%
Return to Utility*	approx. 13 sec.
Exercise weekly for 5 minutes*†	Standard
UL Listed	Standard
Enclosure Type	NEMA/UL 3R
Withstand Rating (Amps)	22,000
Lug Range	250 MCM - #6

*Function of Evolution Controller

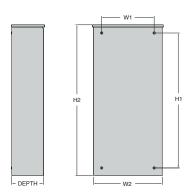

No. of Poles	2
Current Rating (Amps)	200
Voltage Rating (VAC)	250
Utility Voltage Monitor (Fixed)* -Pick-up -Dropout	80% 65%
Return to Utility*	approx. 13 sec
Exerciser weekly for 12 minutes*	Standard
UL Listed	Standard
Enclosure Type	NEMA/UL 3R
Circuit Breaker Protected	22,000
Lug Range	250 MCM - #6


^{*}Function of Evolution Controller

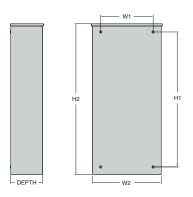


AVAILABLE ACCESSORIES

Model #	Product	Description
G005819-0	26R Wet Cell Battery	Every standby generator requires a battery to start the system. The recommended 26R wet cell battery is for use with all air-cooled standby product.
G007101-0	Battery Pad Warmer	The pad warmer rests under the battery. Recommended for use if the temperature regularly falls below 0°F. (Not necessary for use with AGM-style batteries.)
G007102-0	Oil Warmer	Oil warmer slips directly over the oil filter. Recommended for use if the temperature regularly falls below 0°F .
G007103-0	Breather Warmer	The breather warmer is for use in extreme cold weather applications. For use with Sync 2.0 controllers only in climates where heavy icing occurs.
G005621-0	Auxiliary Transfer Switch Contact Kit	The auxiliary transfer switch contact kit allows the transfer switch to lock out a single large electrical load you may not need.
G006160-0	Paint Kit	If the generator enclosure is scratched or damaged, it is important to touch-up the paint to protect from future corrosion. The paint kit includes the necessary paint to properly maintain or touch-up a generator enclosure.
G006485-0	Scheduled Maintenance Kit	Scheduled maintenance kits provide all the hardware necessary to perform complete routine maintenance on a Honeywell automatic standby generator.
G006463-4	Mobile Link™	Generac's Mobile Link allows you to check the status of your generator from anywhere that you have access to an Internet connection from a PC or any smart device. You will even be notified via e-mail or text message when a change in the generator's status occurs. Available in the U.S. only.

DIMENSIONS & UPCs

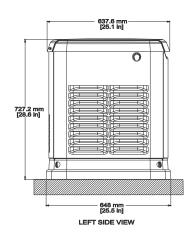

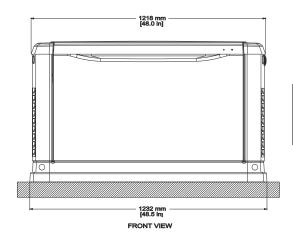

Model	UPC
G007060-0	696471070606
G007061-0	696471070613

Generac Power Systems, Inc.

S45 W29290 Hwy. 59 Waukesha, WI 53187 Tel: 1-855-GEN-INFO honeywellgenerators.com 10000000223-C

August 2016

© Generac Power Systems, Inc. All rights reserved. Specifications subject to change without notice.

The Honeywell Trademark is used under license from Honeywell International Inc.

Honeywell International Inc. makes no representation or warranties with respect to this product.

This product is manufactured by Generac Power Systems, Inc.

