


B

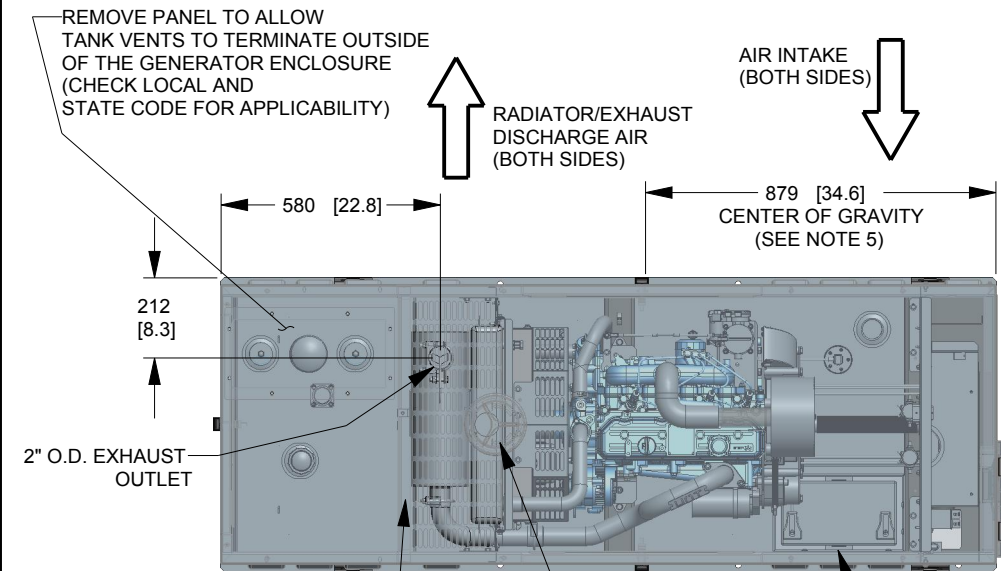

TOP VIEW

| SERVICE ITEM | 2.3L |
|--------------------------|-------------|
| OIL FILL CAP | RIGHT SIDE |
| OIL DIP STICK | RIGHT SIDE |
| OIL FILTER | RIGHT SIDE |
| OIL DRAIN HOSE | RIGHT SIDE |
| RADIATOR DRAIN HOSE | LEFT SIDE |
| COOLANT RECOVERY BOTTLE | LEFT SIDE |
| RADIATOR FILL CAP ACCESS | ROOF TOP |
| AIR CLEANER ELEMENT | EITHER SIDE |
| MUFFLER | FRONT |
| FAN BELT | EITHER SIDE |
| BATTERY | LEFT SIDE |

REFERENCE OWNERS MANUAL FOR PERIODIC REPLACEMENT PART LISTINGS.

| WEIGHT DATA WITH EMPTY BASETANK (SEE NOTE 5) | |
|--|------------|
| GENERATOR AS SHOWN | 626 [1380] |
| WITH WODDEN SHIPPING SKID | 665 [1465] |


WEIGHT: KG [LBS]
DIMENSIONS: MM [INCH]

NOTES:


1. MINIMUM RECOMMENDED CONCRETE PAD SIZE: 1092 (43") WIDE X 2355 (93") LONG. REFERENCE INSTALLATION GUIDE SUPPLIED WITH UNIT FOR CONCRETE PAD GUIDELINES.
2. ALLOW SUFFICIENT ROOM ON ALL SIDES OF THE GENERATOR FOR MAINTENANCE AND SERVICING. THIS UNIT MUST BE INSTALLED IN ACCORDANCE WITH CURRENT APPLICABLE NFPA 37 AND NFPA 70 STANDARDS AS WELL AS ANY OTHER FEDERAL, STATE, AND LOCAL CODES.
3. CONTROL PANEL / CIRCUIT BREAKER INFORMATION:
 - SEE SPECIFICATION SHEET OR OWNERS MANUAL
 - ACCESSIBLE THROUGH CUSTOMER ACCESS ASSEMBLY DOOR ON REAR OF GENERATOR.
4. REMOVE THE REAR STUB-UP AND REAR ENCLOSURE COVER PANEL TO ACCESS THE STUB-UP AREAS AS FOLLOWS:
 - HIGH VOLTAGE CONNECTION INCLUDING AC LOAD LEAD CONDUIT CONNECTION, NEUTRAL CONNECTION, AND BATTERY CHARGER 120 VOLT AC (0.5 AMP MAX) CONNECTION.
 - LOW VOLTAGE CONNECTION INCLUDING TRANSFER SWITCH CONTROL WIRES AND ACCESSORY RELAY CONNECTION (QTY 4)
5. CENTER OF GRAVITY AND WEIGHT MAY CHANGE DUE TO UNIT OPTIONS.
6. BOTTOM OF GENERATOR SET MUST BE ENCLOSED TO PREVENT PEST INTRUSION AND RECIRCULATION OF DISCHARGE AIR AND/OR IMPROPER COOLING AIR FLOW.
7. EXHAUST SYSTEM MAXIMUM BACK PRESSURE: 24 INCHES H2O.
8. REFERENCE OWNERS MANUAL FOR LIFTING WARNINGS.
9. MOUNTING BOLTS OR STUDS TO MOUNTING SURFACE SHALL BE 5/8-11 GRADE 5 (USE STANDARD SAE TORQUE SPECS)
10. MUST ALLOW FREE FLOW OF INTAKE AIR, DISCHARGE AIR AND EXHAUST. SEE SPEC SHEET FOR MINIMUM AIR FLOW RESTRICTION REQUIREMENTS.
11. GENERATOR MUST BE INSTALLED SUCH THAT FRESH COOLING AIR IS AVAILABLE AND THAT DISCHARGE AIR FROM RADIATOR IS NOT RECIRCULATED.

B


A

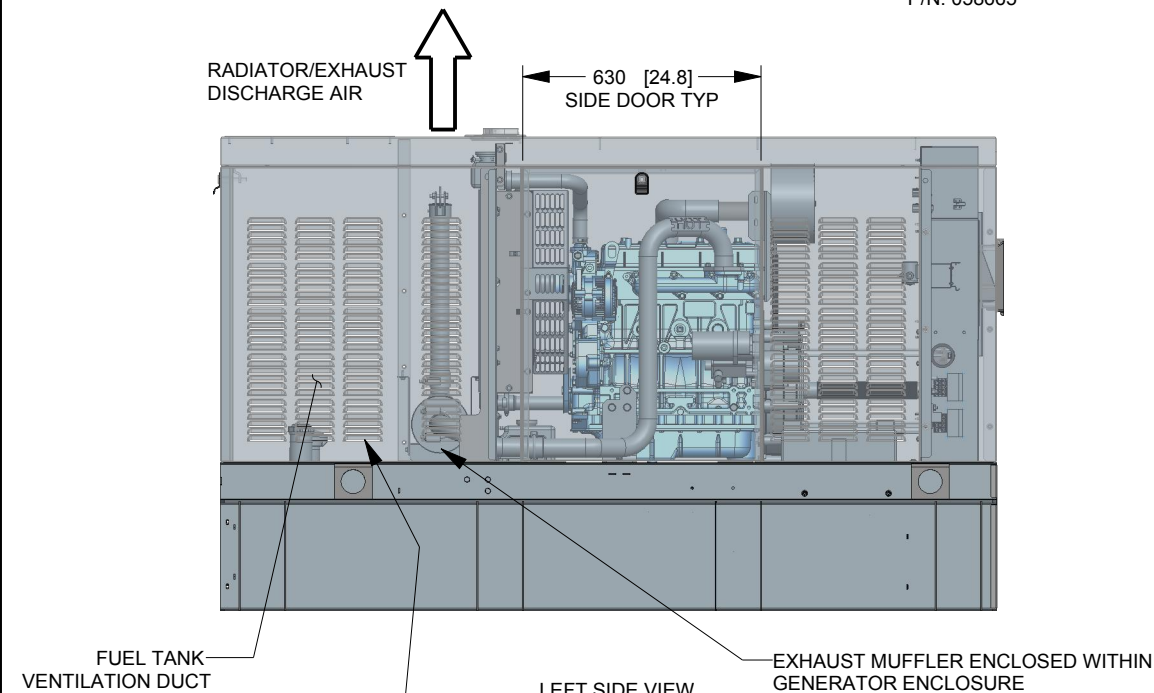

LEFT SIDE VIEW

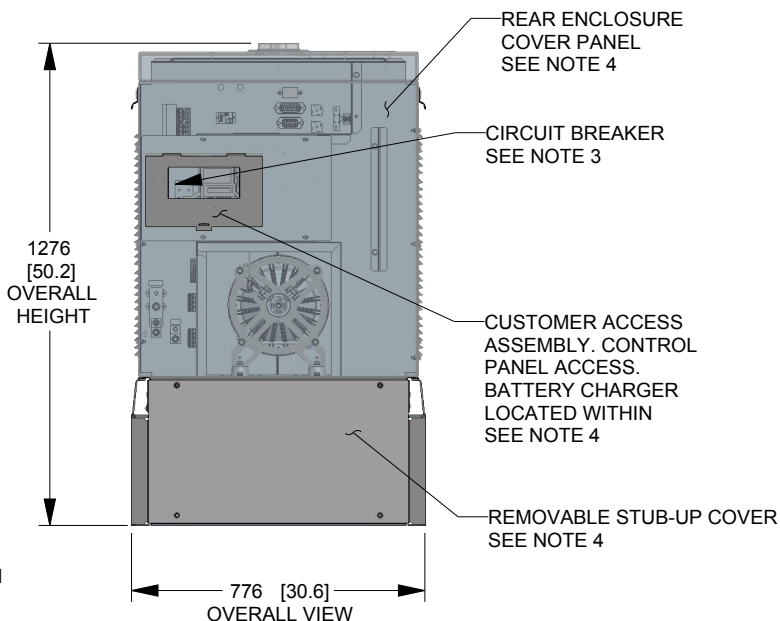

REAR VIEW

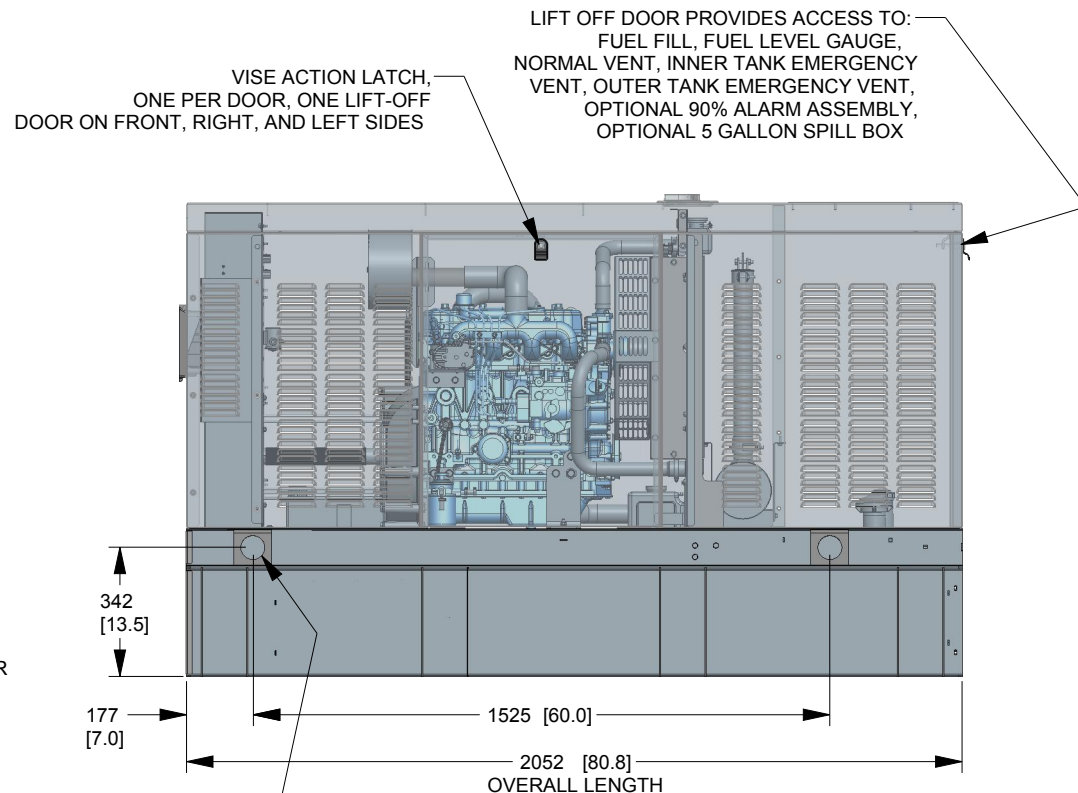

RIGHT SIDE VIEW

A

DRAWING CREATED FROM PRO/ENGINEER 3D FILE. ECO MODIFICATION TO BE APPLIED TO SOLID MODEL ONLY.

INSTALLATION DRAWING

GENERAC POWER SYSTEMS OWNS THE COPYRIGHT OF THIS DRAWING WHICH IS SUPPLIED IN CONFIDENCE AND MUST NOT BE USED FOR ANY PURPOSE OTHER THAN FOR WHICH IT IS SUPPLIED WITHOUT THE EXPRESS WRITTEN CONSENT OF GENERAC POWER SYSTEMS. ©GENERAC POWER SYSTEMS 2013

ELECTRONICALLY APPROVED
INSIDE WINDCHILL



TITLE

INSTALL PROTECTOR D2.3L G16
EXT TANK

ISSUE DATE: 06/2014

SIZE

CAGE NO

DWG NO

OK7025

REV

A

SCALE

0.050

WT-KG


SEE ABOVE

SHEET

1 of 2

B

B

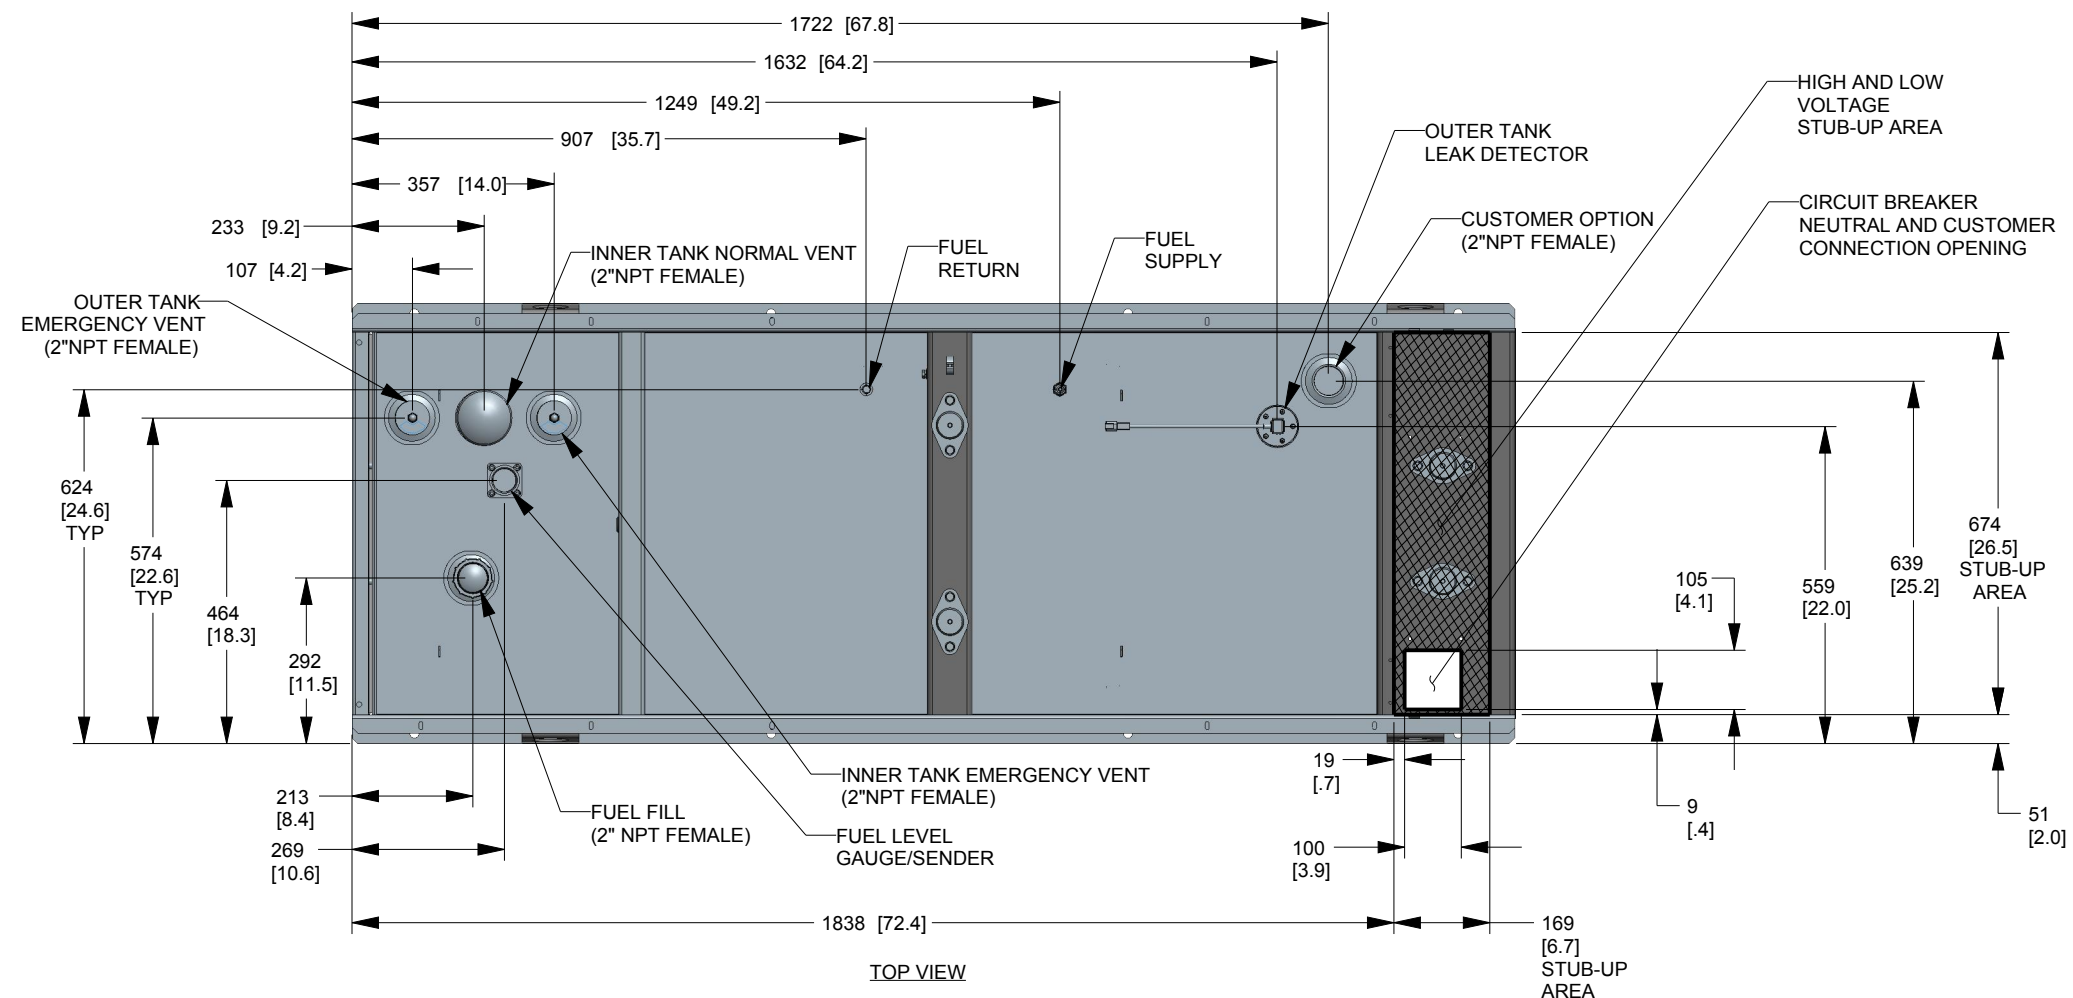



| FUEL TANK | |
|-----------------|------------|
| TOTAL CAPACITY | 127 [33.5] |
| USABLE CAPACITY | 121 [32] |

CAPACITY: LITER [GALLON]
DIMENSIONS: MM [INCH]

TANK IS LISTED TO UL142 AND ULC/ORD-C142.18

A

A

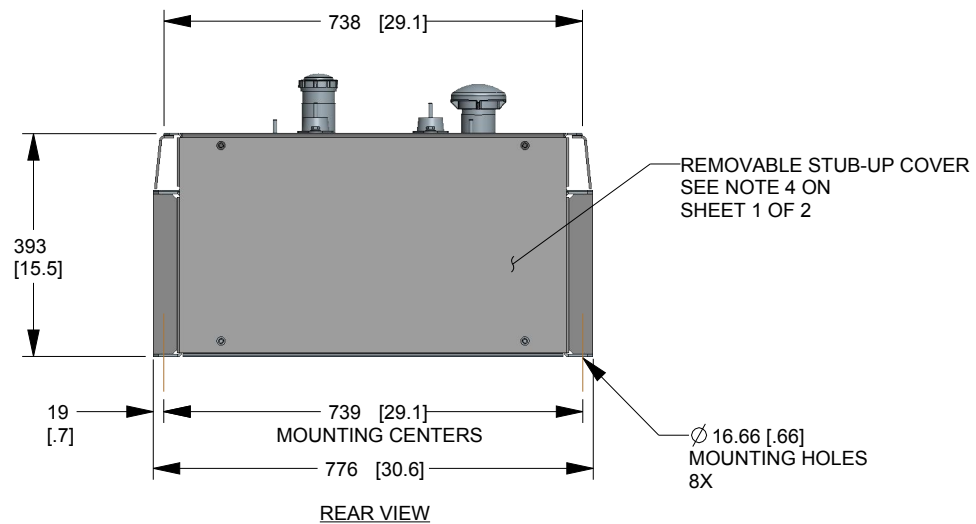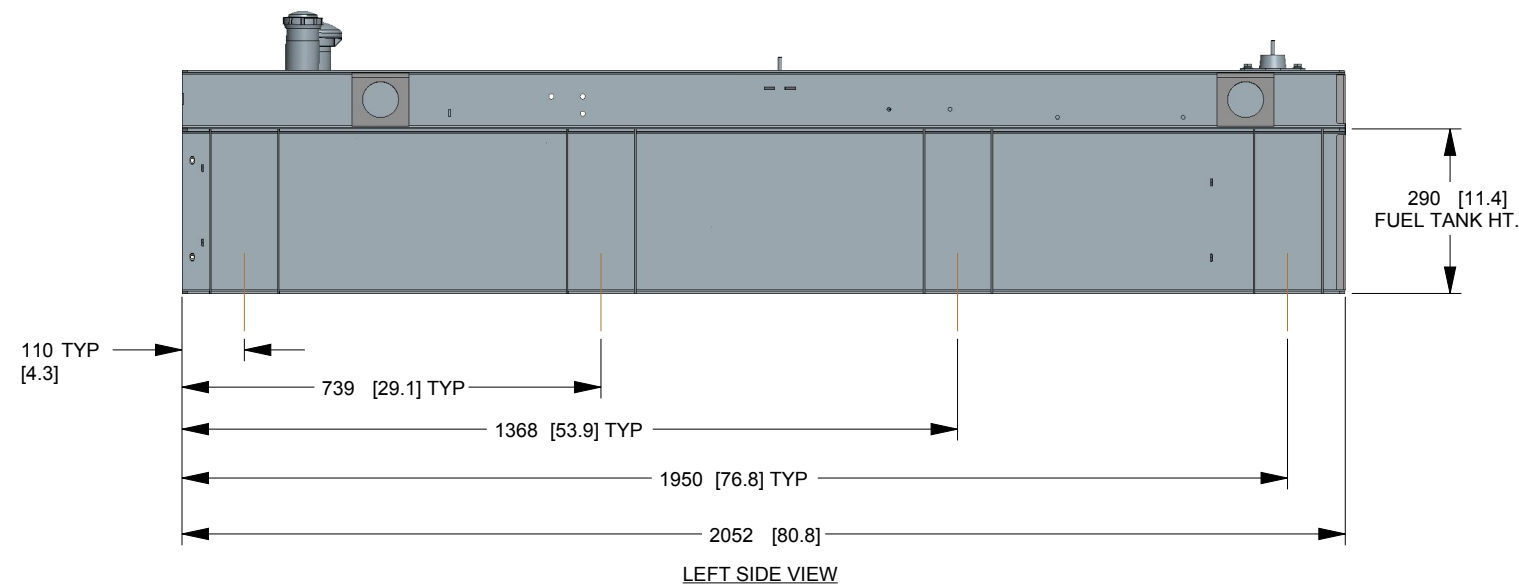

DRAWING CREATED FROM PRO/ENGINEER 3D FILE. ECO MODIFICATION TO BE APPLIED TO SOLID MODEL ONLY.

INSTALLATION DRAWING

GENERAC POWER SYSTEMS OWNS THE COPYRIGHT OF THIS DRAWING WHICH IS SUPPLIED IN CONFIDENCE AND MUST NOT BE USED FOR ANY PURPOSE OTHER THAN FOR WHICH IT IS SUPPLIED WITHOUT THE EXPRESS WRITTEN CONSENT OF GENERAC POWER SYSTEMS. ©GENERAC POWER SYSTEMS 2013

ELECTRONICALLY APPROVED
INSIDE WINDCHILL



TITLE
INSTALL STUB-UP VIEW PROTECTOR D2.3L
EXTENDED TANK

ISSUE DATE: 06/2014

| | | | |
|----------------|----------------------|------------------|----------|
| SIZE B | CAGE NO N/A | DWG NO 0K7025 | REV A |
| SCALE 0.075 | WT-KG SEE SHEET 1 | SHEET 2 of 2 | |